



Position of Parts in Instrument Panel <LHD>

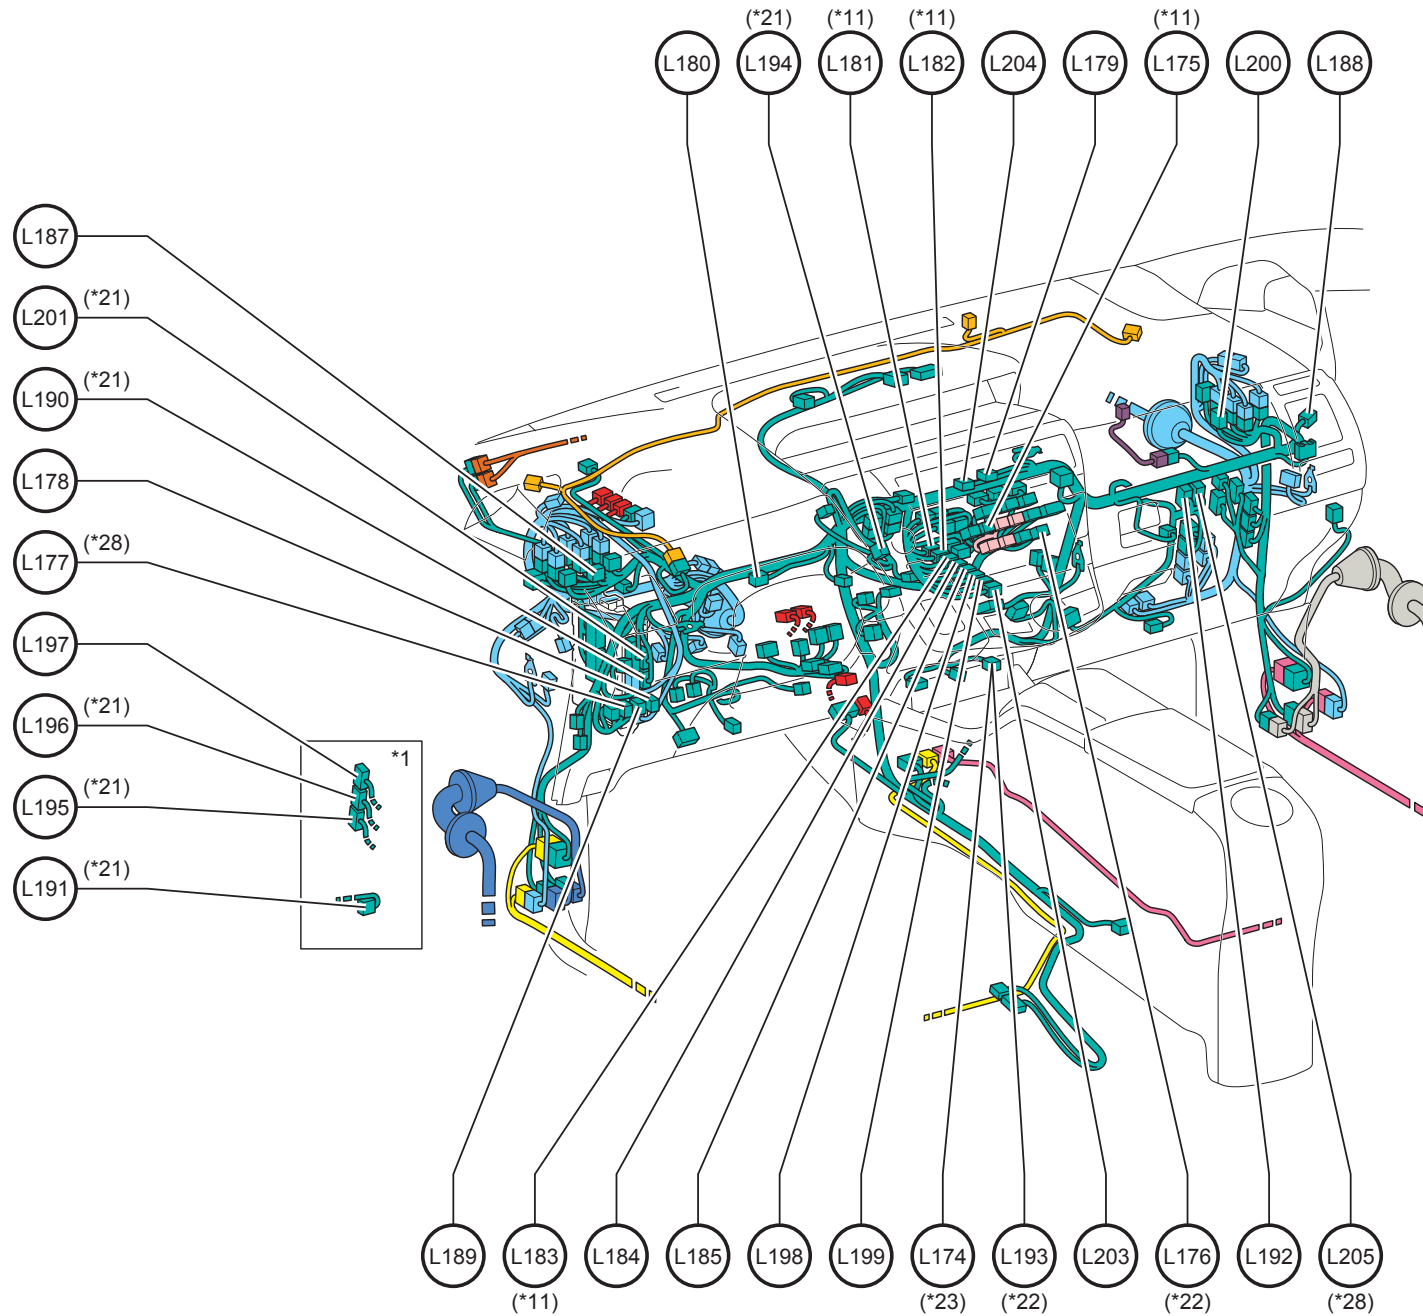


- L 174 No. 1 Stereo Jack Adapter Assembly
- L 175 Radio & Display Receiver Assembly
- L 176 Navigation Receiver Assembly
- L 177 Integration Control & Panel Assembly
- L 178 Pre-Crash Safety System Cancel Switch Assembly
- L 179 Junction Connector
- L 180 Junction Terminal
- L 181 Junction Connector
- L 182 Junction Connector
- L 183 Junction Connector
- L 184 Junction Connector
- L 185 Junction Connector
- L 187 Dome Light Cut Relay
- L 188 Vehicle Approaching Speaker Controller
- L 189 Vehicle Approaching Speaker Switch
- L 190 Main Body ECU
- L 191 ID Code Box
- L 192 Network Gateway ECU
- L 193 No. 1 Stereo Jack Adapter Assembly
- L 194 Power Switch
- L 195 Certification ECU Assembly
- L 196 Certification ECU Assembly
- L 197 Certification ECU Assembly
- L 198 Junction Connector
- L 199 Junction Connector
- L 200 Junction Connector
- L 201 Main Body ECU
- L 203 Junction Connector
- L 204 Junction Connector
- L 205 Driving Support ECU Assembly

Position of Parts in Instrument Panel <LHD>

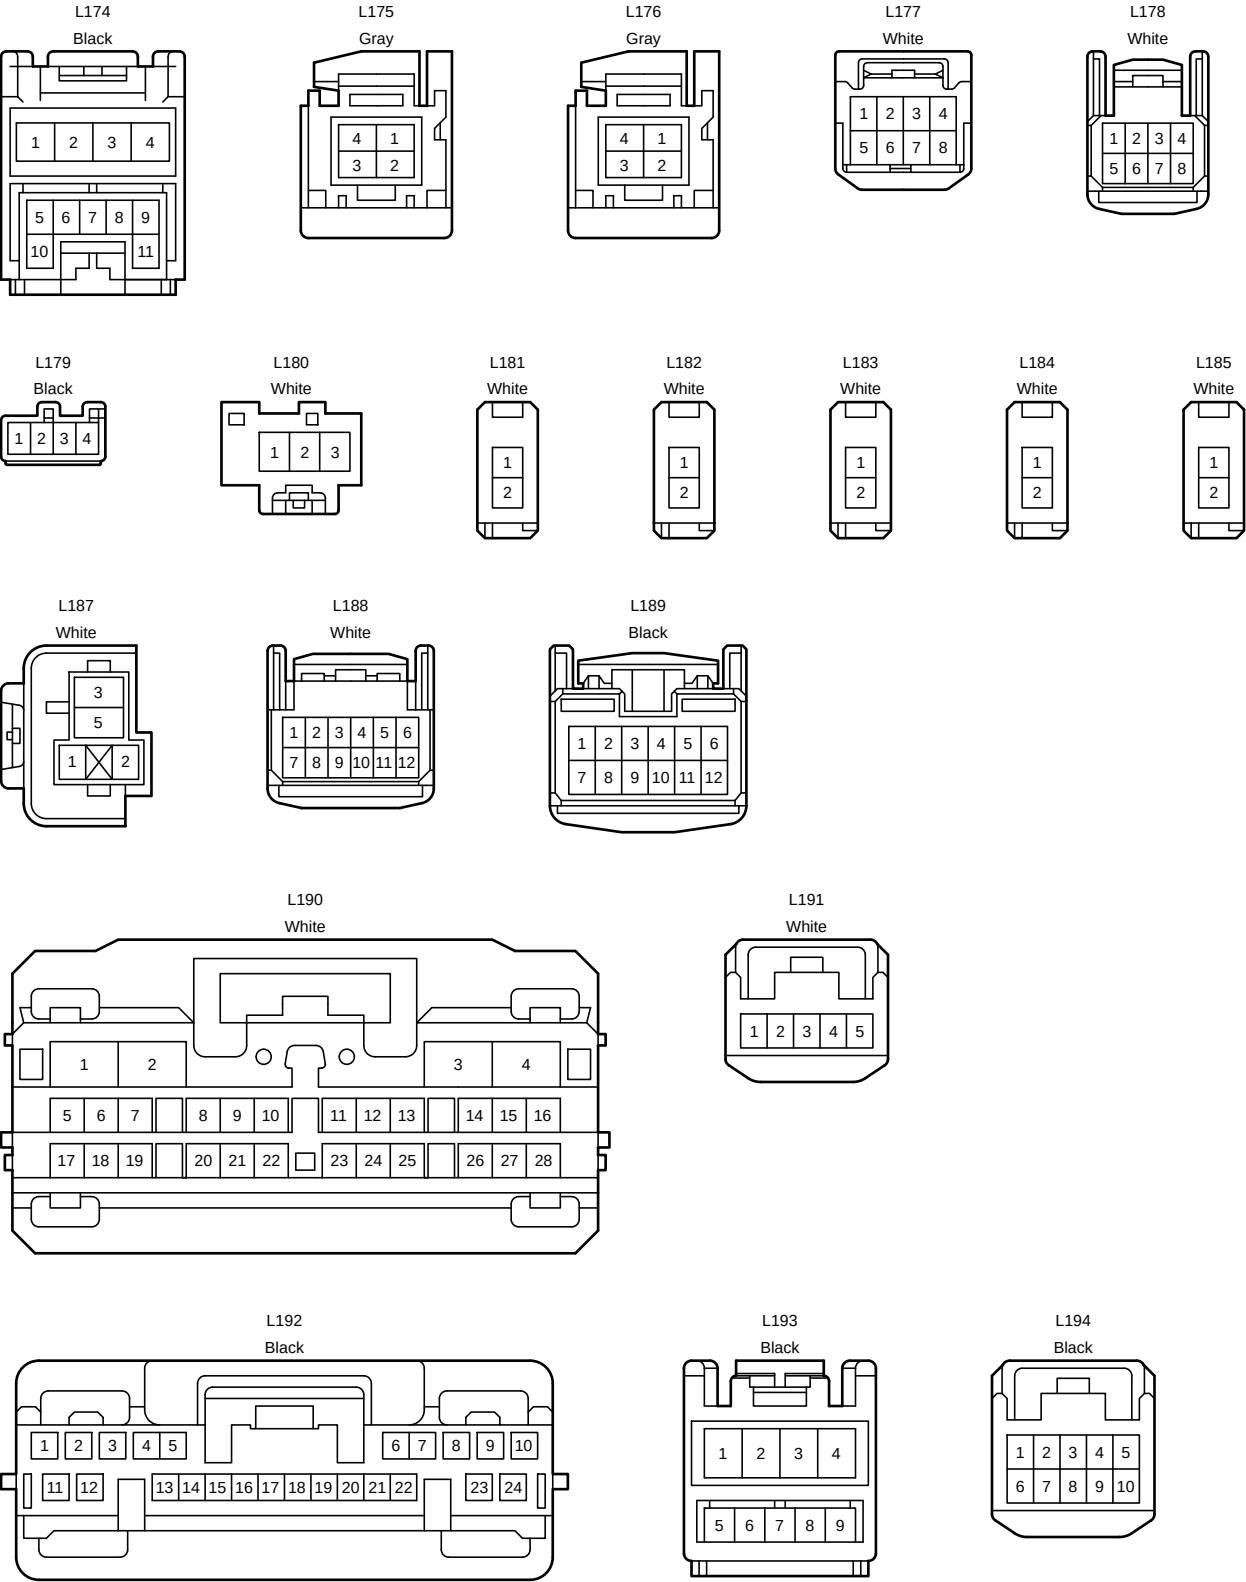


Position of Parts in Instrument Panel <LHD>


L195
White

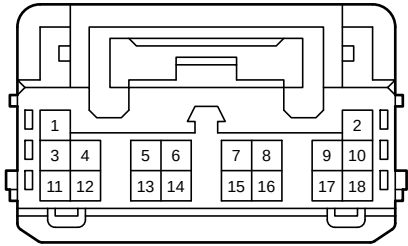


L196
White

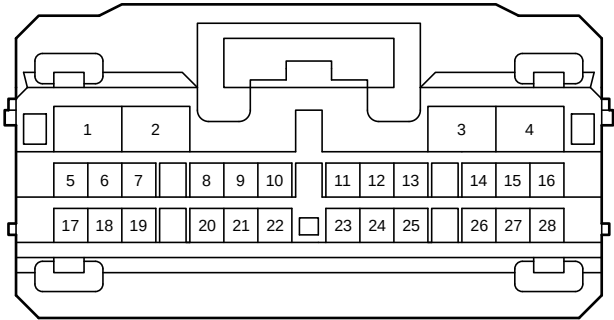


L197
White

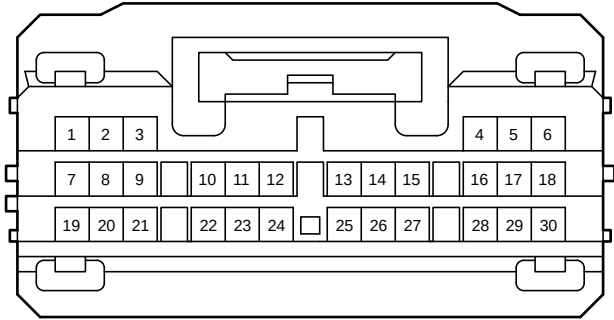


L198
White

 


L199
White

 


L200
Black

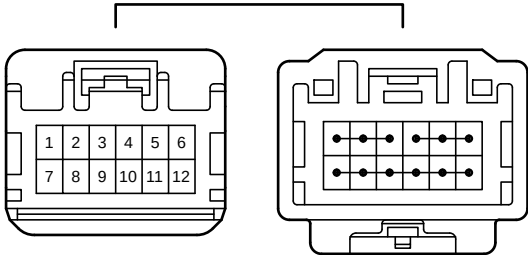


L201
White

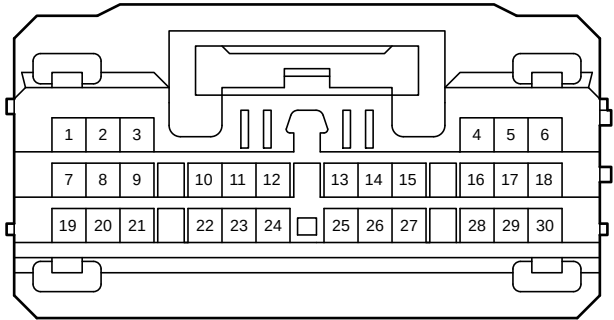

L203
White

 

L204
Blue

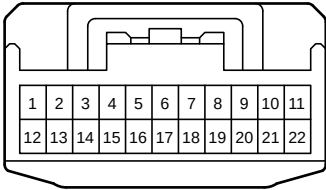

L205
White

