


Position of Parts in Instrument Panel <LHD>

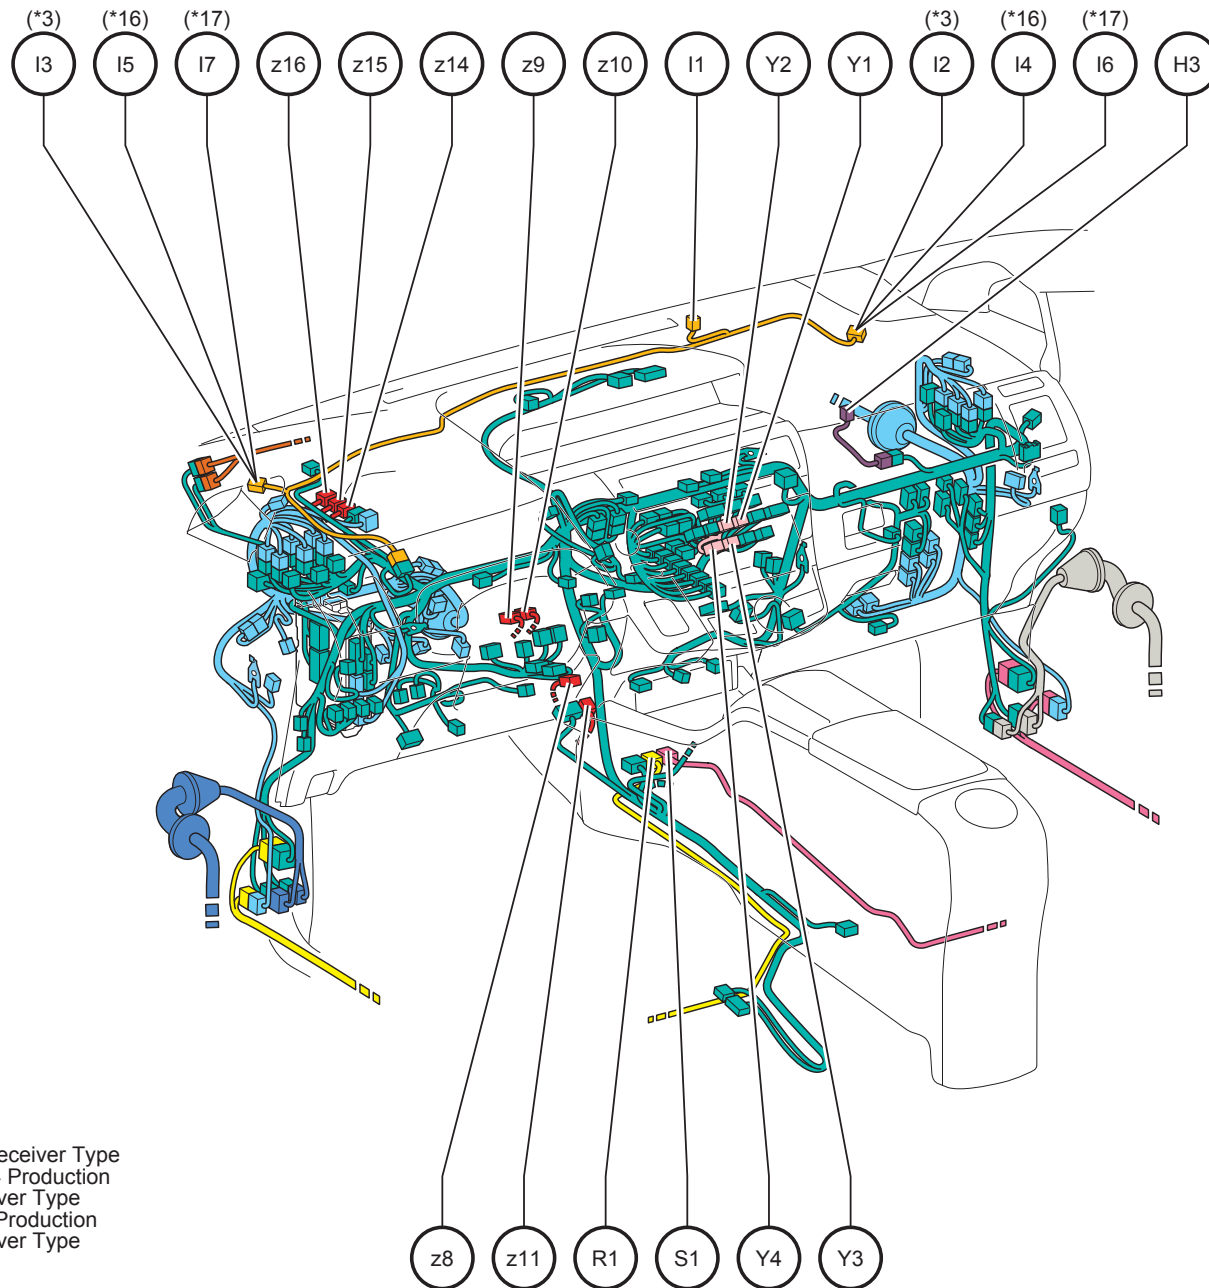

- * 3:Radio & Display Receiver Type
- * 16:Before Nov. 2014 Production
Navigation Receiver Type
- * 17:From Nov. 2014 Production
Navigation Receiver Type

- H 3 Front Passenger Side Squib Circuit (Instrument Panel Passenger without Door Airbag Assembly)
- I 1 Automatic Light Control Sensor
- I 2 Front No. 2 Speaker Assembly RH
- I 3 Front No. 2 Speaker Assembly LH
- I 4 Instrument Panel Speaker RH (No. 1 Instrument Panel Speaker Panel Sub-Assembly)
- I 5 Instrument Panel Speaker LH (No. 2 Instrument Panel Speaker Panel Sub-Assembly)
- I 6 Instrument Panel Speaker RH (No. 1 Instrument Panel Speaker Panel Sub-Assembly)
- I 7 Instrument Panel Speaker LH (No. 2 Instrument Panel Speaker Panel Sub-Assembly)
- R 1 Airbag ECU Assembly
- S 1 Airbag ECU Assembly
- Y 1 Radio & Display Receiver Assembly
- Y 2 Radio & Display Receiver Assembly
- Y 3 Extension Module Assembly
- Y 4 Extension Module Assembly
- z 8 Driver Side Squib Circuit (Horn Button Assembly) , Spiral with Sensor Cable Sub-Assembly
- z 9 Spiral with Sensor Cable Sub-Assembly , Steering Pad Switch Assembly
- z 10 Cruise Control Main Switch , Spiral with Sensor Cable Sub-Assembly
- z 11 A/C Amplifier Assembly , A/C Blower Assembly
- z 14 Power Steering ECU Assembly , Power Steering Torque Sensor
- z 15 Power Steering ECU Assembly , Power Steering Motor Assembly
- z 16 Power Steering ECU Assembly , Power Steering Motor Assembly

Position of Parts in Instrument Panel <LHD>

