


















Position of Parts in Instrument Panel <RHD>

* 11: Before Aug. 2013 Production
 * 13: Before Nov. 2014 Production

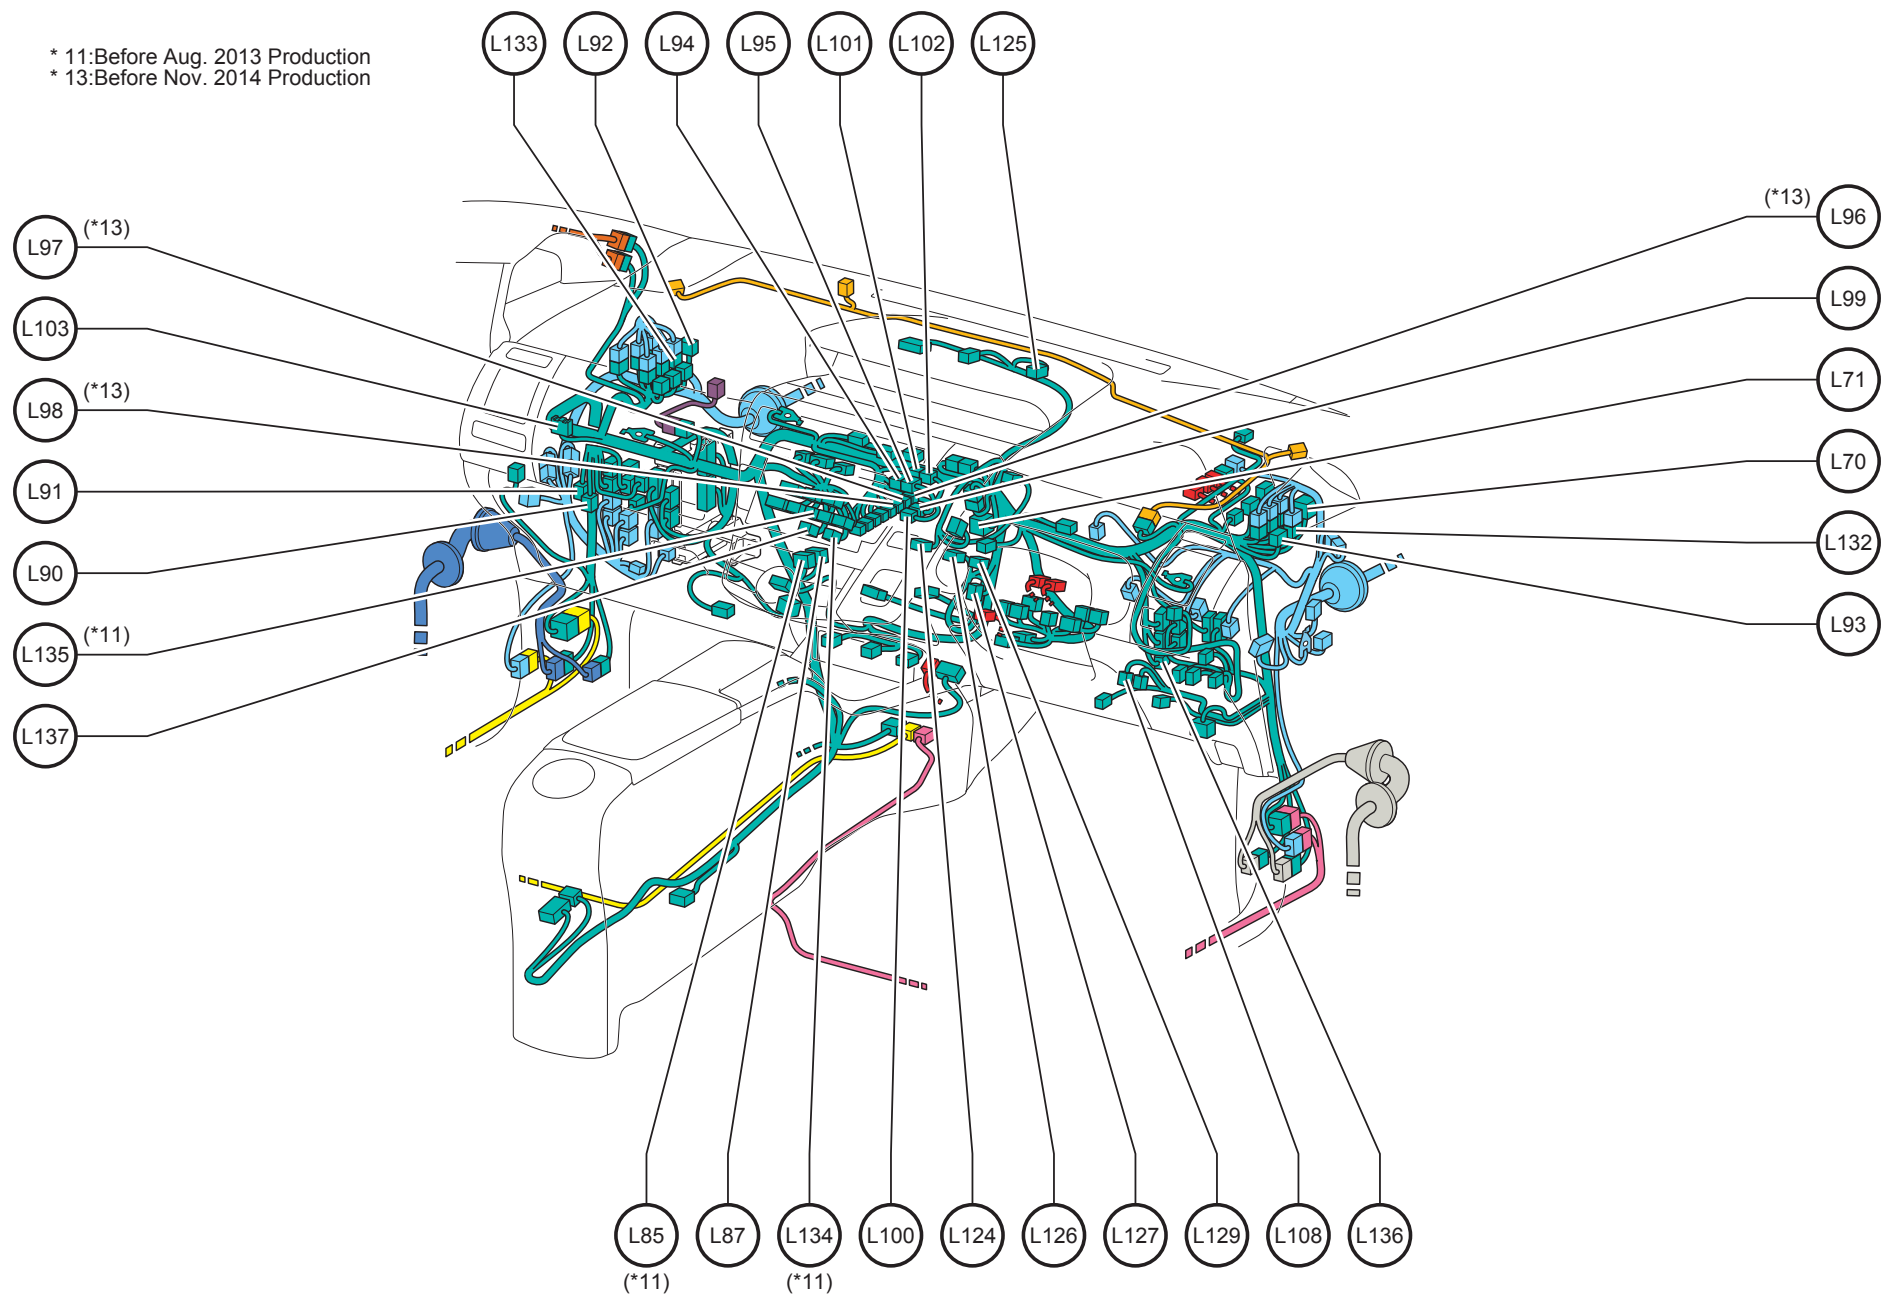

- L 70 Junction Connector
- L 71 Junction Connector
- L 85 Junction Connector
- L 87 Junction Connector
- L 90 Diode (Front Courtesy Light RH)
- L 91 Diode (Front Courtesy Light LH)
- L 92 Junction Connector
- L 93 Junction Connector
- L 94 Junction Connector
- L 95 Junction Connector
- L 96 Junction Connector
- L 97 Junction Connector
- L 98 Junction Connector
- L 99 Junction Connector
- L 100 Junction Connector
- L 101 Junction Connector
- L 102 Junction Connector
- L 103 Fuse Block
- L 108 Pre-Crash Safety System Cancel Switch Assembly
- L 124 Transmission Shift Main Switch
- L 125 Combination Meter Assembly
- L 126 Shift Lever Position Sensor (Shift Lock Control Unit Assembly)
- L 127 No. 2 Shift Lever Position Sensor (Shift Lock Control Unit Assembly)
- L 129 Shift Position Indicator Light (Shift Lock Control Unit Assembly)
- L 132 Junction Connector
- L 133 Junction Connector
- L 134 Navigation Receiver Assembly
- L 135 Radio & Display Receiver Assembly
- L 136 Parking Assist ECU
- L 137 Navigation Receiver Assembly

      Position of Parts in Instrument Panel <RHD>

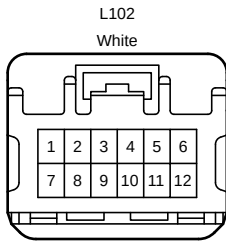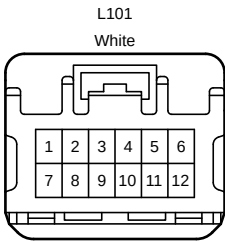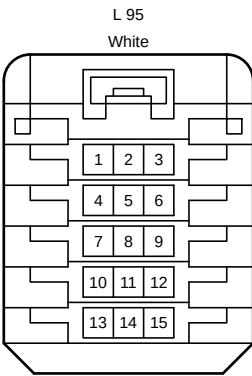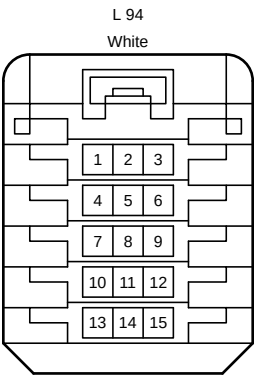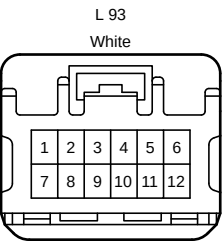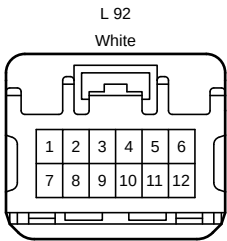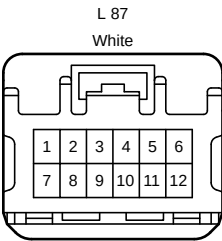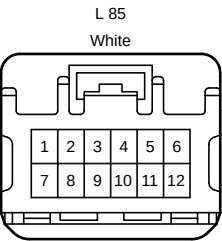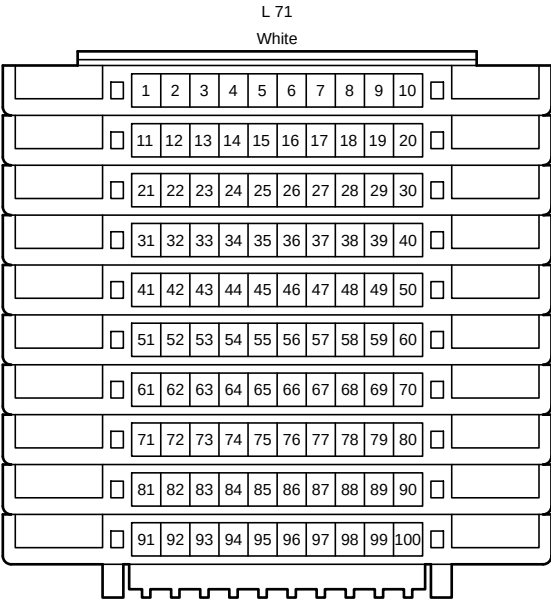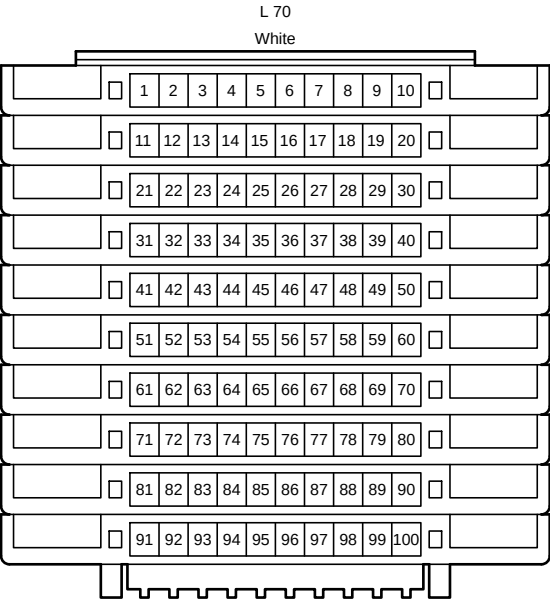

Position of Parts in Instrument Panel <RHD>

