

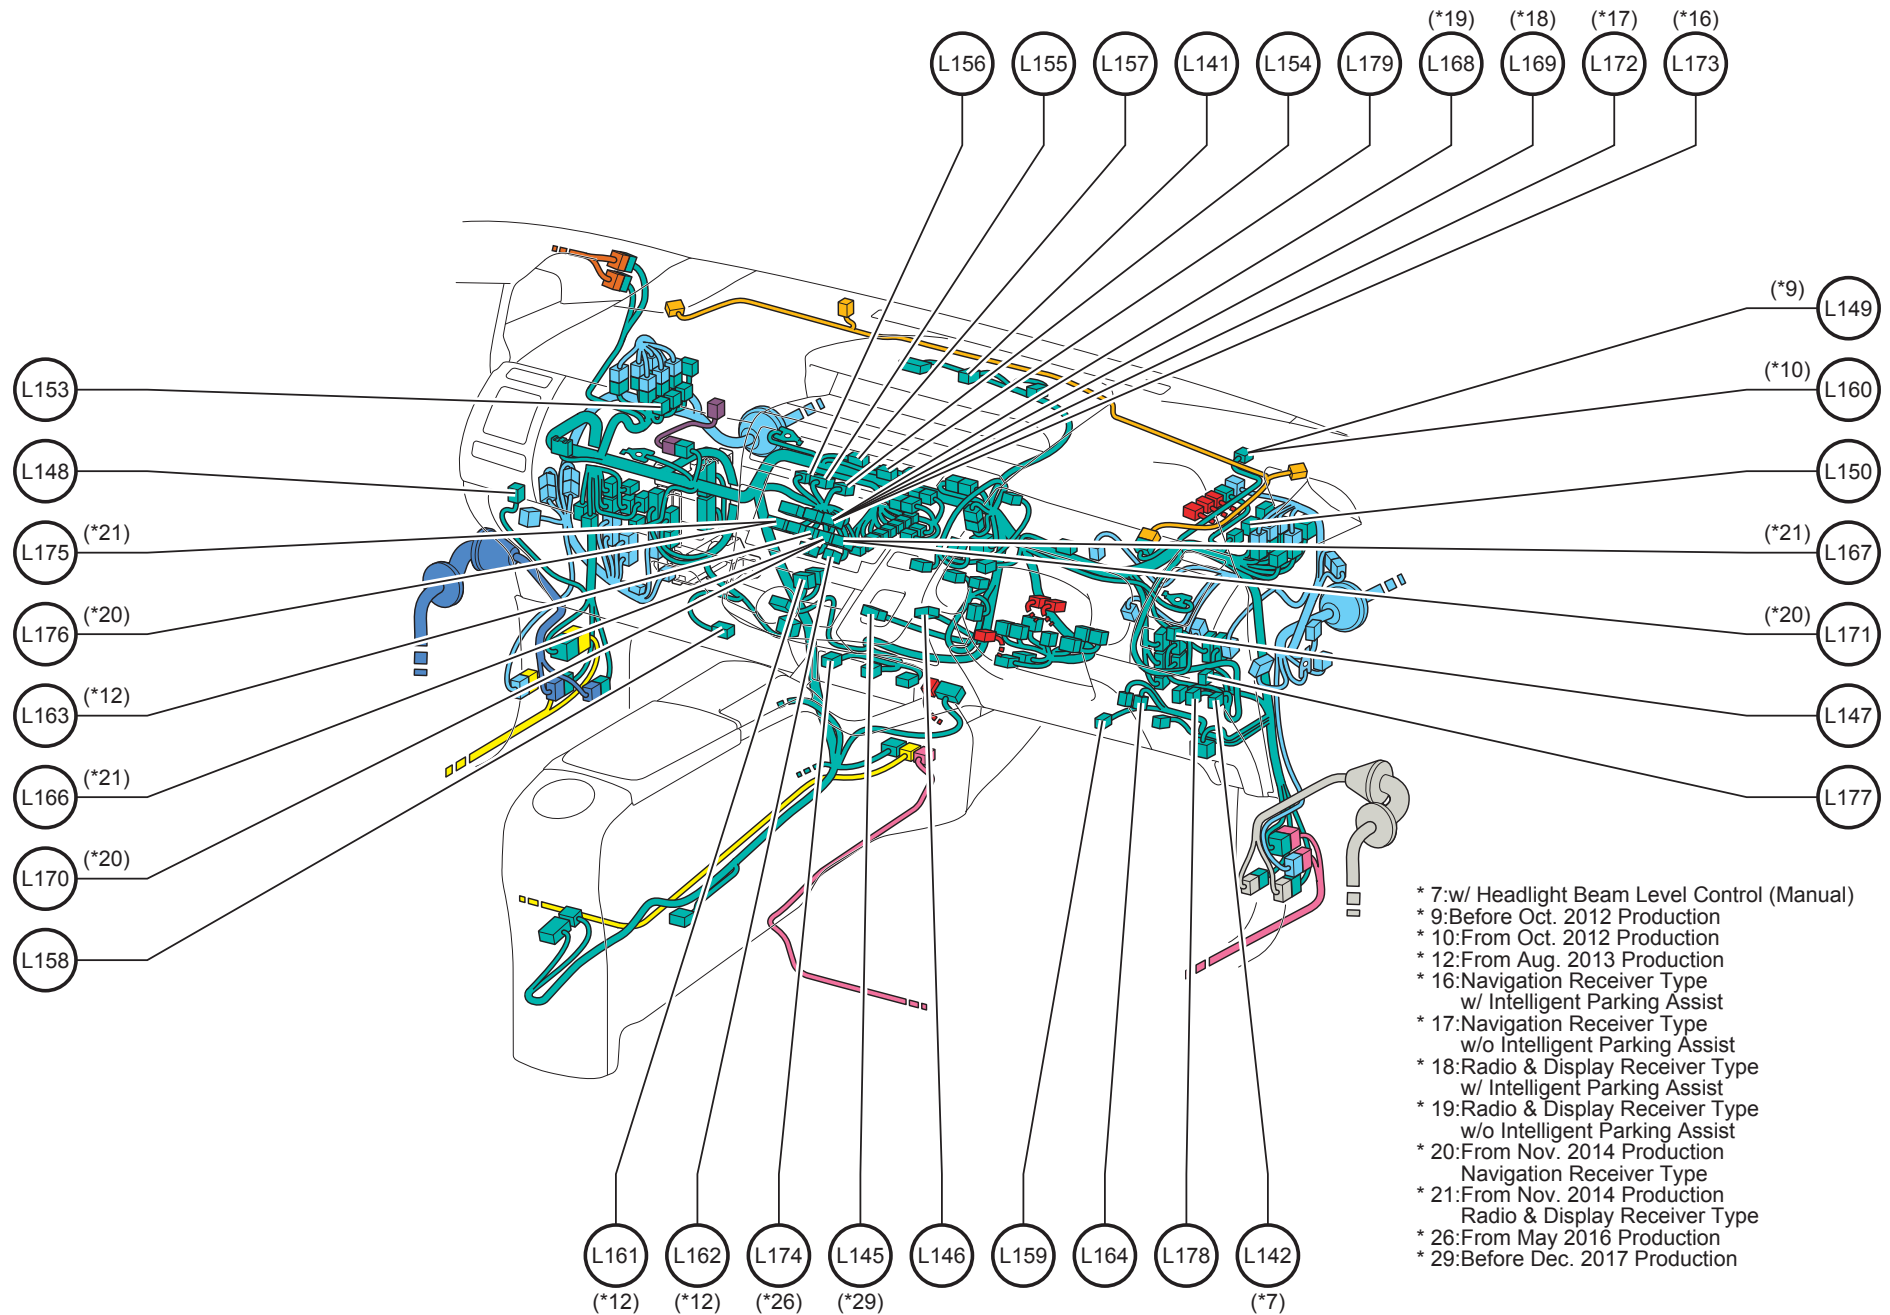
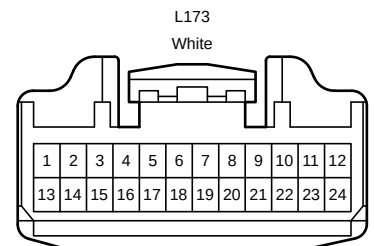
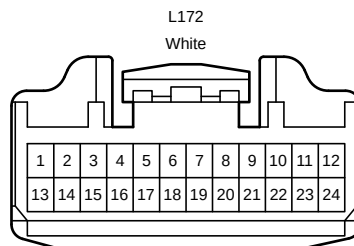
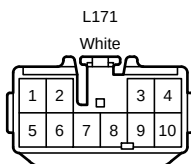
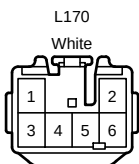
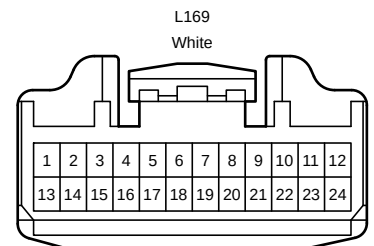
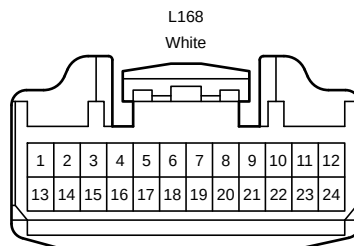
 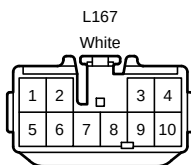
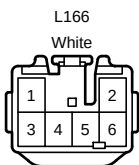

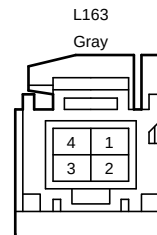
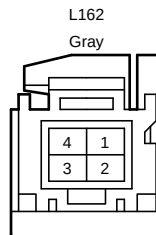
 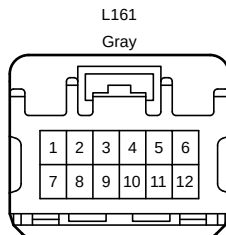
 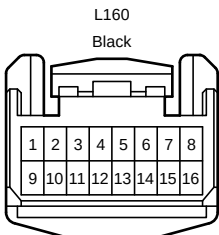
 


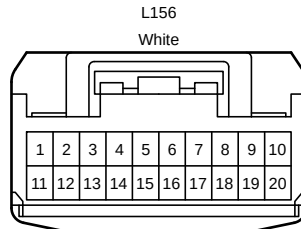
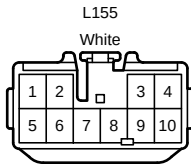
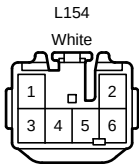
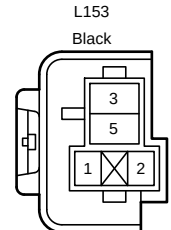
 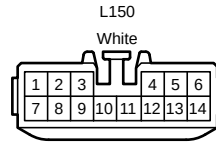
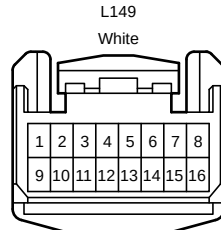

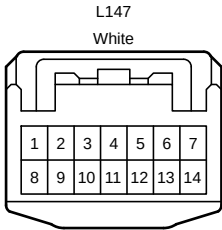
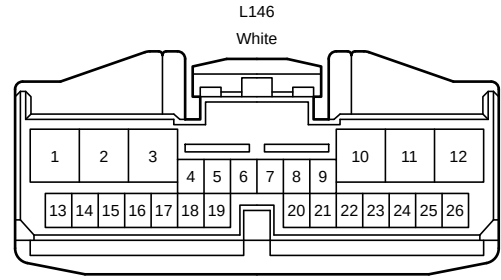
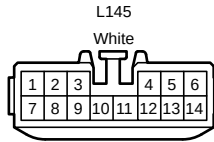


Position of Parts in Instrument Panel <RHD>

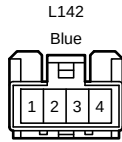

- L 141 Combination Meter Assembly
- L 142 Headlight Leveling Switch
- L 145 Double Lock Door Control Relay Assembly
- L 146 Windshield Wiper Relay Assembly
- L 147 Head-Up Display Switch Assembly
- L 148 Airbag Cut Off Switch Cylinder Sub-Assembly
- L 149 Head-Up Display Assembly
- L 150 Junction Connector
- L 153 Rear Fog Light Relay
- L 154 Radio Receiver Assembly
- L 155 Radio Receiver Assembly
- L 156 Radio Receiver Assembly
- L 157 Amplifier Antenna Assembly
- L 158 No. 1 Interior Illumination Light Assembly LH
- L 159 No. 1 Interior Illumination Light Assembly RH
- L 160 Head-Up Display Assembly
- L 161 Junction Connector
- L 162 Navigation Receiver Assembly
- L 163 Radio & Display Receiver Assembly
- L 164 Tire Pressure Warning Reset Switch (No. 1 Tire Pressure Warning Switch)
- L 166 Radio & Display Receiver Assembly
- L 167 Radio & Display Receiver Assembly
- L 168 Radio & Display Receiver Assembly
- L 169 Radio & Display Receiver Assembly
- L 170 Navigation Receiver Assembly
- L 171 Navigation Receiver Assembly
- L 172 Navigation Receiver Assembly
- L 173 Navigation Receiver Assembly
- L 174 No. 1 Stereo Jack Adapter Assembly
- L 175 Radio & Display Receiver Assembly
- L 176 Navigation Receiver Assembly
- L 177 Integration Control & Panel Assembly
- L 178 Pre-Crash Safety System Cancel Switch Assembly
- L 179 Junction Connector

Position of Parts in Instrument Panel <RHD>

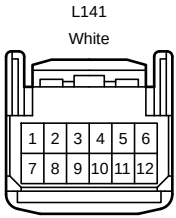

Position of Parts in Instrument Panel <RHD>

