


Position of Parts in Seat <LHD>

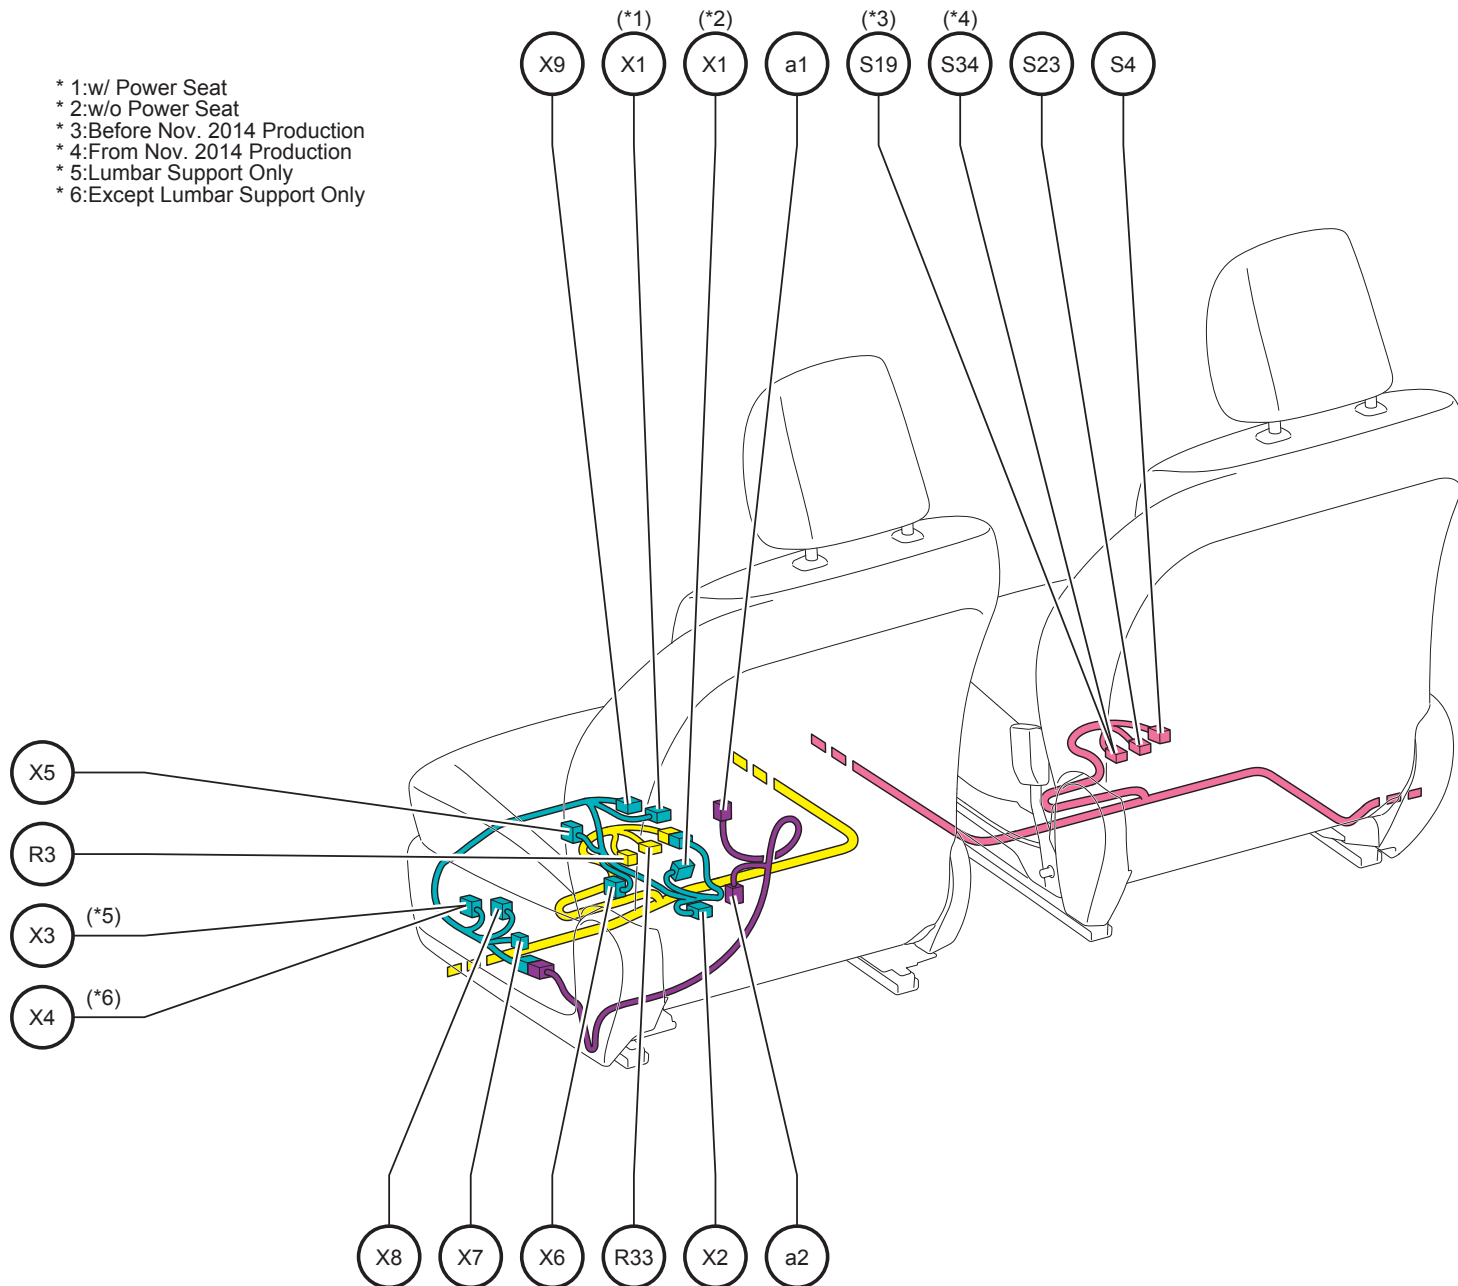

R 3 Front Seat Airbag Assembly LH
R 33 Front Seat Inner Belt Assembly LH

S 4 Front Seat Airbag Assembly RH
S 19 Seat Heater Control Sub-Assembly RH
S 23 Front Seat Inner Belt Assembly RH
S 34 Seat Heater Control Sub-Assembly RH

X 1 Seat Heater Control Sub-Assembly LH
X 2 Junction Connector
X 3 Lumbar Support Switch LH (Power Seat Switch Assembly LH)
X 4 Lumbar Support Switch LH (Power Seat Switch LH)
X 5 Front Power Seat Slide Position Motor Assembly LH
X 6 Front Power Seat Vertical Position Motor Assembly LH
X 7 Front Power Seat Lift Position Motor Assembly LH
X 8 Front Power Seat Switch LH
X 9 Junction Connector

a 1 Lumbar Support Motor LH (Front Separate Type Seat Back Spring Assembly LH)
a 2 Front Power Seat Reclining Position Motor Assembly LH

Position of Parts in Seat <LHD>

