


Position of Parts in Seat <RHD>

- * 1:w/ Power Seat
- * 2:w/o Power Seat
- * 3:Before Nov. 2014 Production
- * 4:From Nov. 2014 Production
- * 5:Lumbar Support Only
- * 6:Except Lumbar Support Only

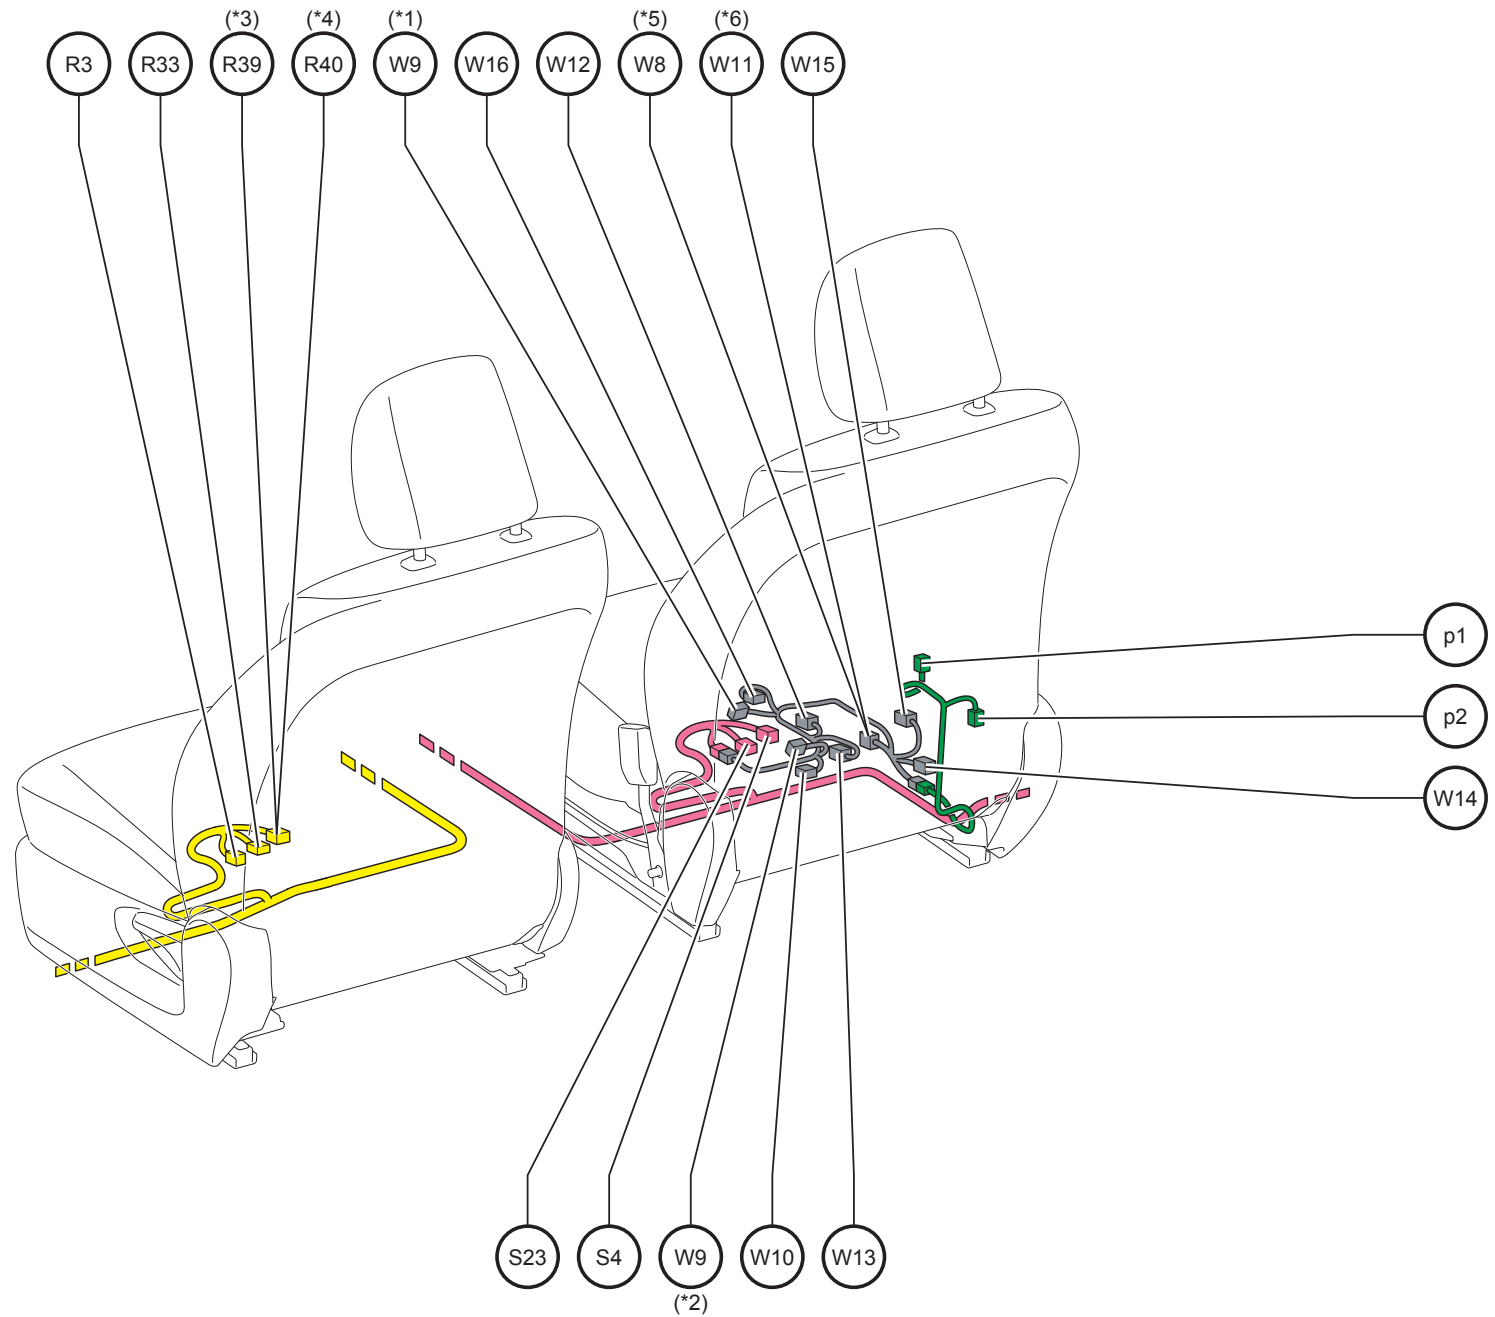

R 3 Front Seat Airbag Assembly LH
R 33 Front Seat Inner Belt Assembly LH
R 39 Seat Heater Control Sub-Assembly LH
R 40 Seat Heater Control Sub-Assembly LH

S 4 Front Seat Airbag Assembly RH
S 23 Front Seat Inner Belt Assembly RH

W 8 Lumbar Support Switch RH (Power Seat Switch Assembly RH)
W 9 Seat Heater Control Sub-Assembly RH
W 10 Junction Connector
W 11 Lumbar Support Switch RH (Power Seat Switch RH)
W 12 Front Power Seat Slide Position Motor Assembly RH
W 13 Front Power Seat Vertical Position Motor Assembly RH
W 14 Front Power Seat Lift Position Motor Assembly RH
W 15 Front Power Seat Switch RH
W 16 Junction Connector

p 1 Lumbar Support Motor RH (Front Separate Type Seat Back Spring Assembly RH)
p 2 Front Power Seat Reclining Position Motor Assembly RH

Position of Parts in Seat <RHD>

