


















Position of Parts in Engine Compartment (RHD)

- * 1:w/ Grille Shutter System
- * 2:w/o Grille Shutter System

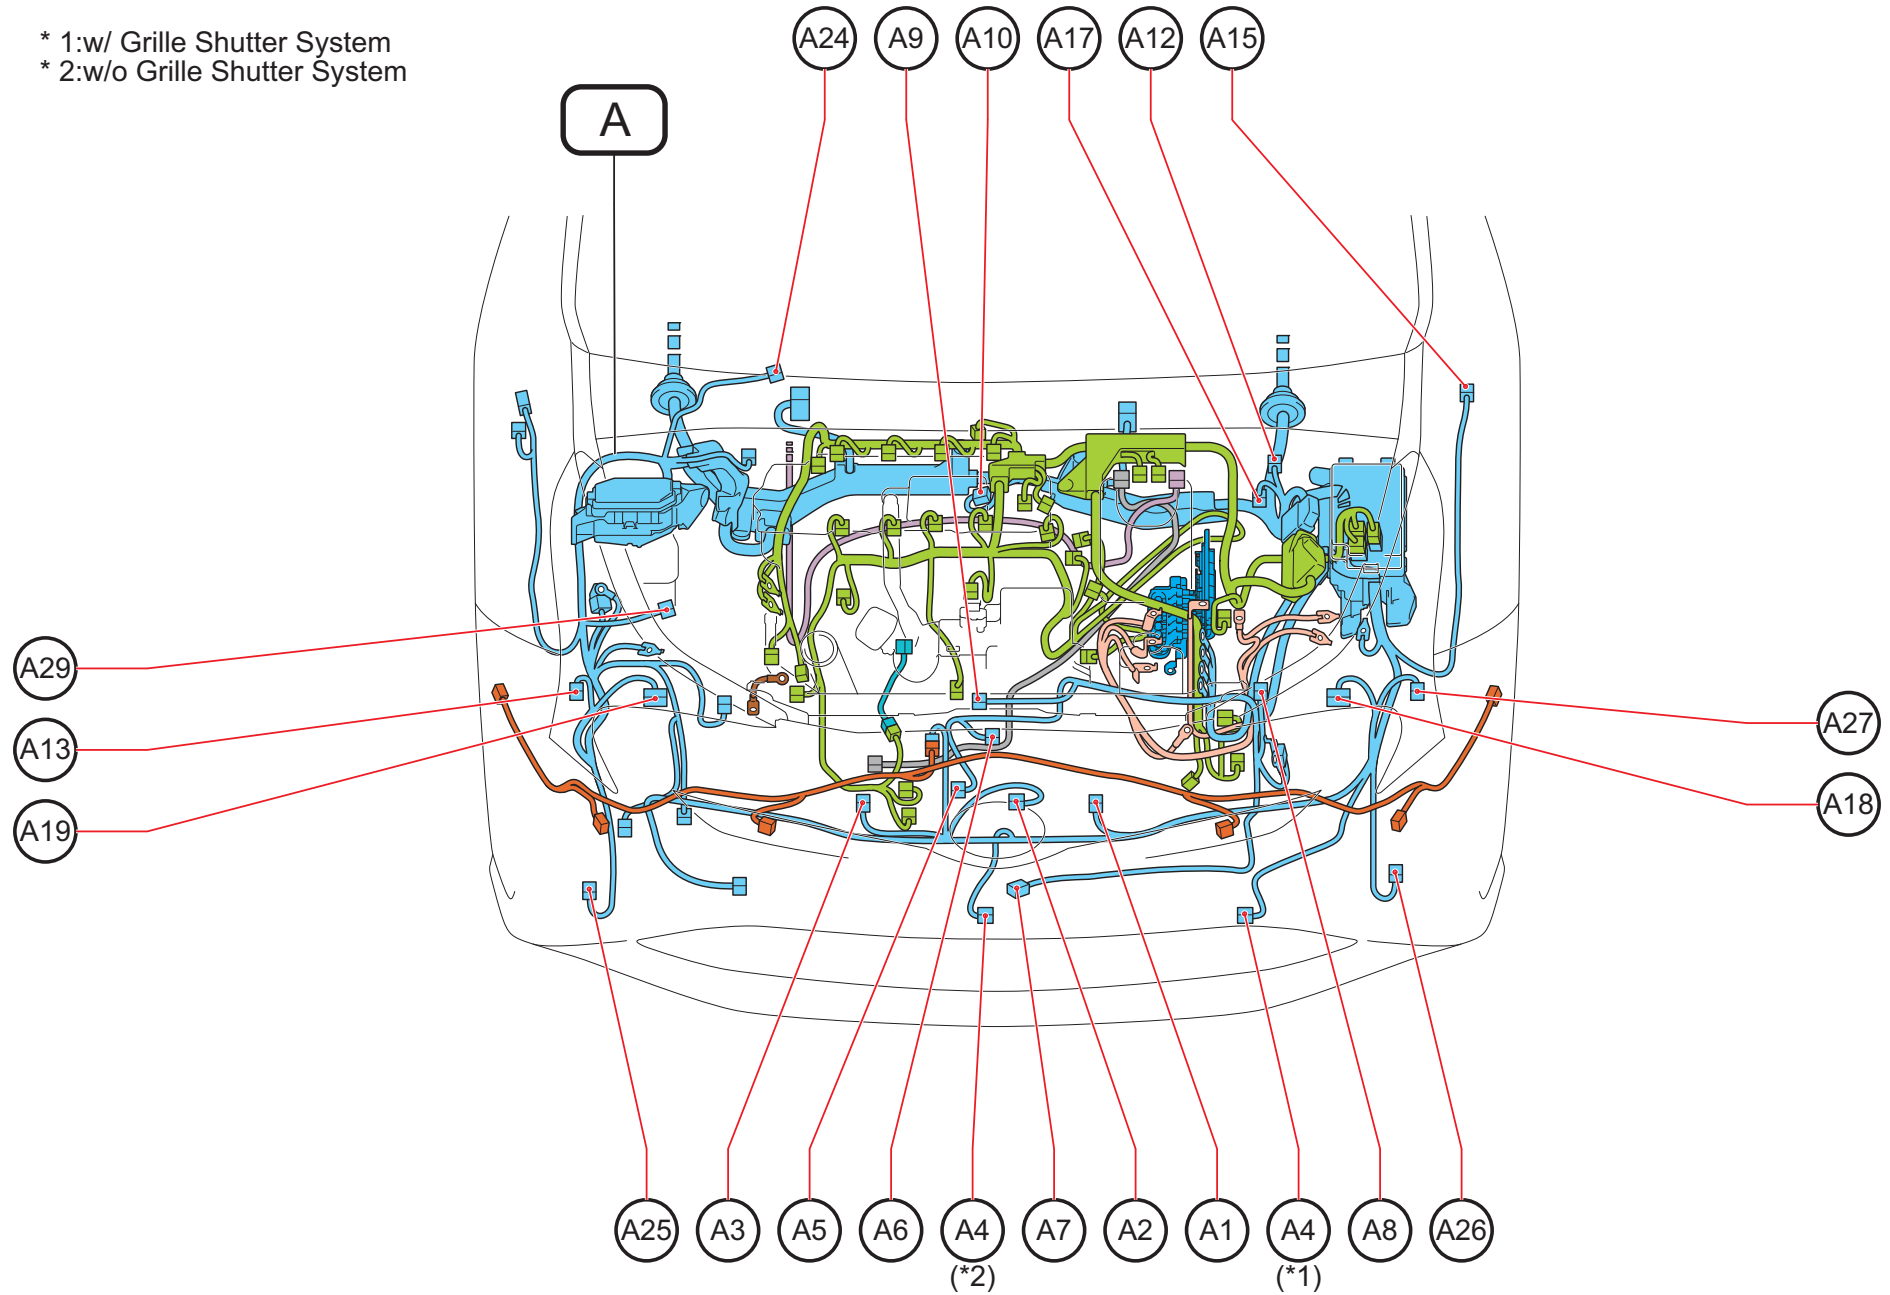

A1	Low Pitched Horn Assembly
A2	Millimeter Wave Radar Sensor Assembly
A3	High Pitched Horn Assembly
A4	No. 1 Cooler Thermistor
A5	Cooling Fan Motor RH
A6	Cooling Fan Motor LH
A7	Inverter Water Pump Assembly (with Motor)
A8	Front Airbag Sensor LH
A9	Hood Courtesy Switch (Hood Lock Assembly)
A10	Engine Coolant Temperature Sensor (for Exhaust Heat Recirculation System)
A12	Brake Booster Pump Assembly
A13	Front Turn Signal Light Assembly RH (Headlight Assembly RH)
A15	Front Speed Sensor LH
A17	Security Horn Assembly
A18	Headlight Light Control ECU Assembly LH (Headlight Assembly LH)
A19	Headlight Light Control ECU Assembly RH (Headlight Assembly RH)
A24	Windshield Wiper Motor Assembly
A25	Fog Light Assembly RH
A26	Fog Light Assembly LH
A27	Front Turn Signal Light Assembly LH (Headlight Assembly LH)
A29	A/C Tube & Accessory Assembly

  Position of Parts in Engine Compartment (RHD)

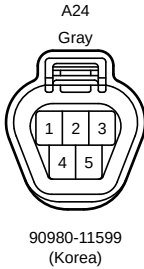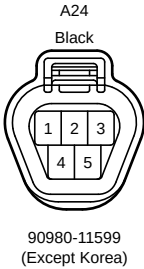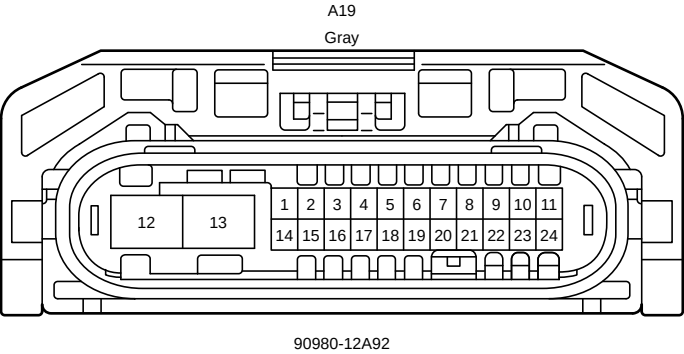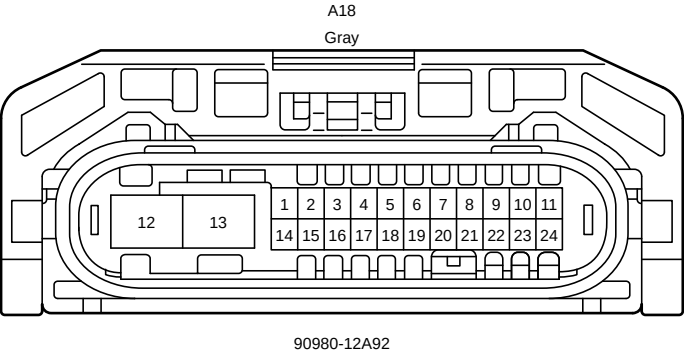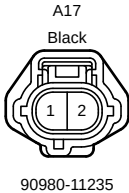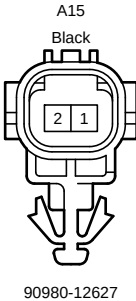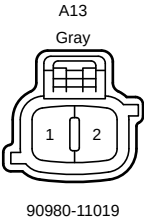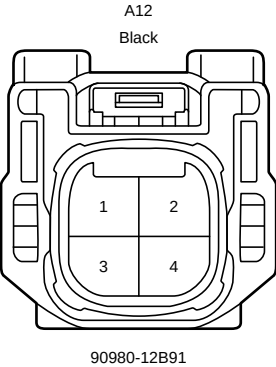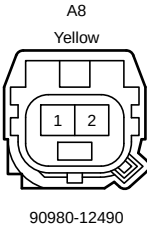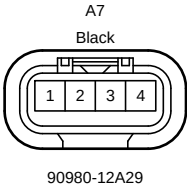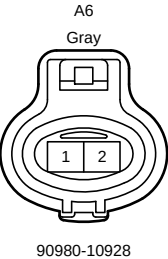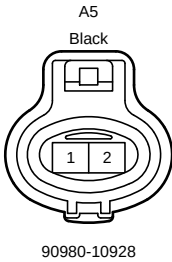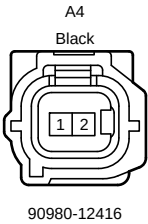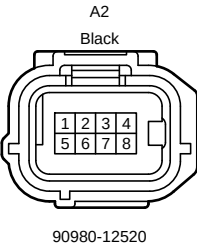

Position of Parts in Engine Compartment (RHD)

