


Position of Parts in Engine Compartment (RHD)

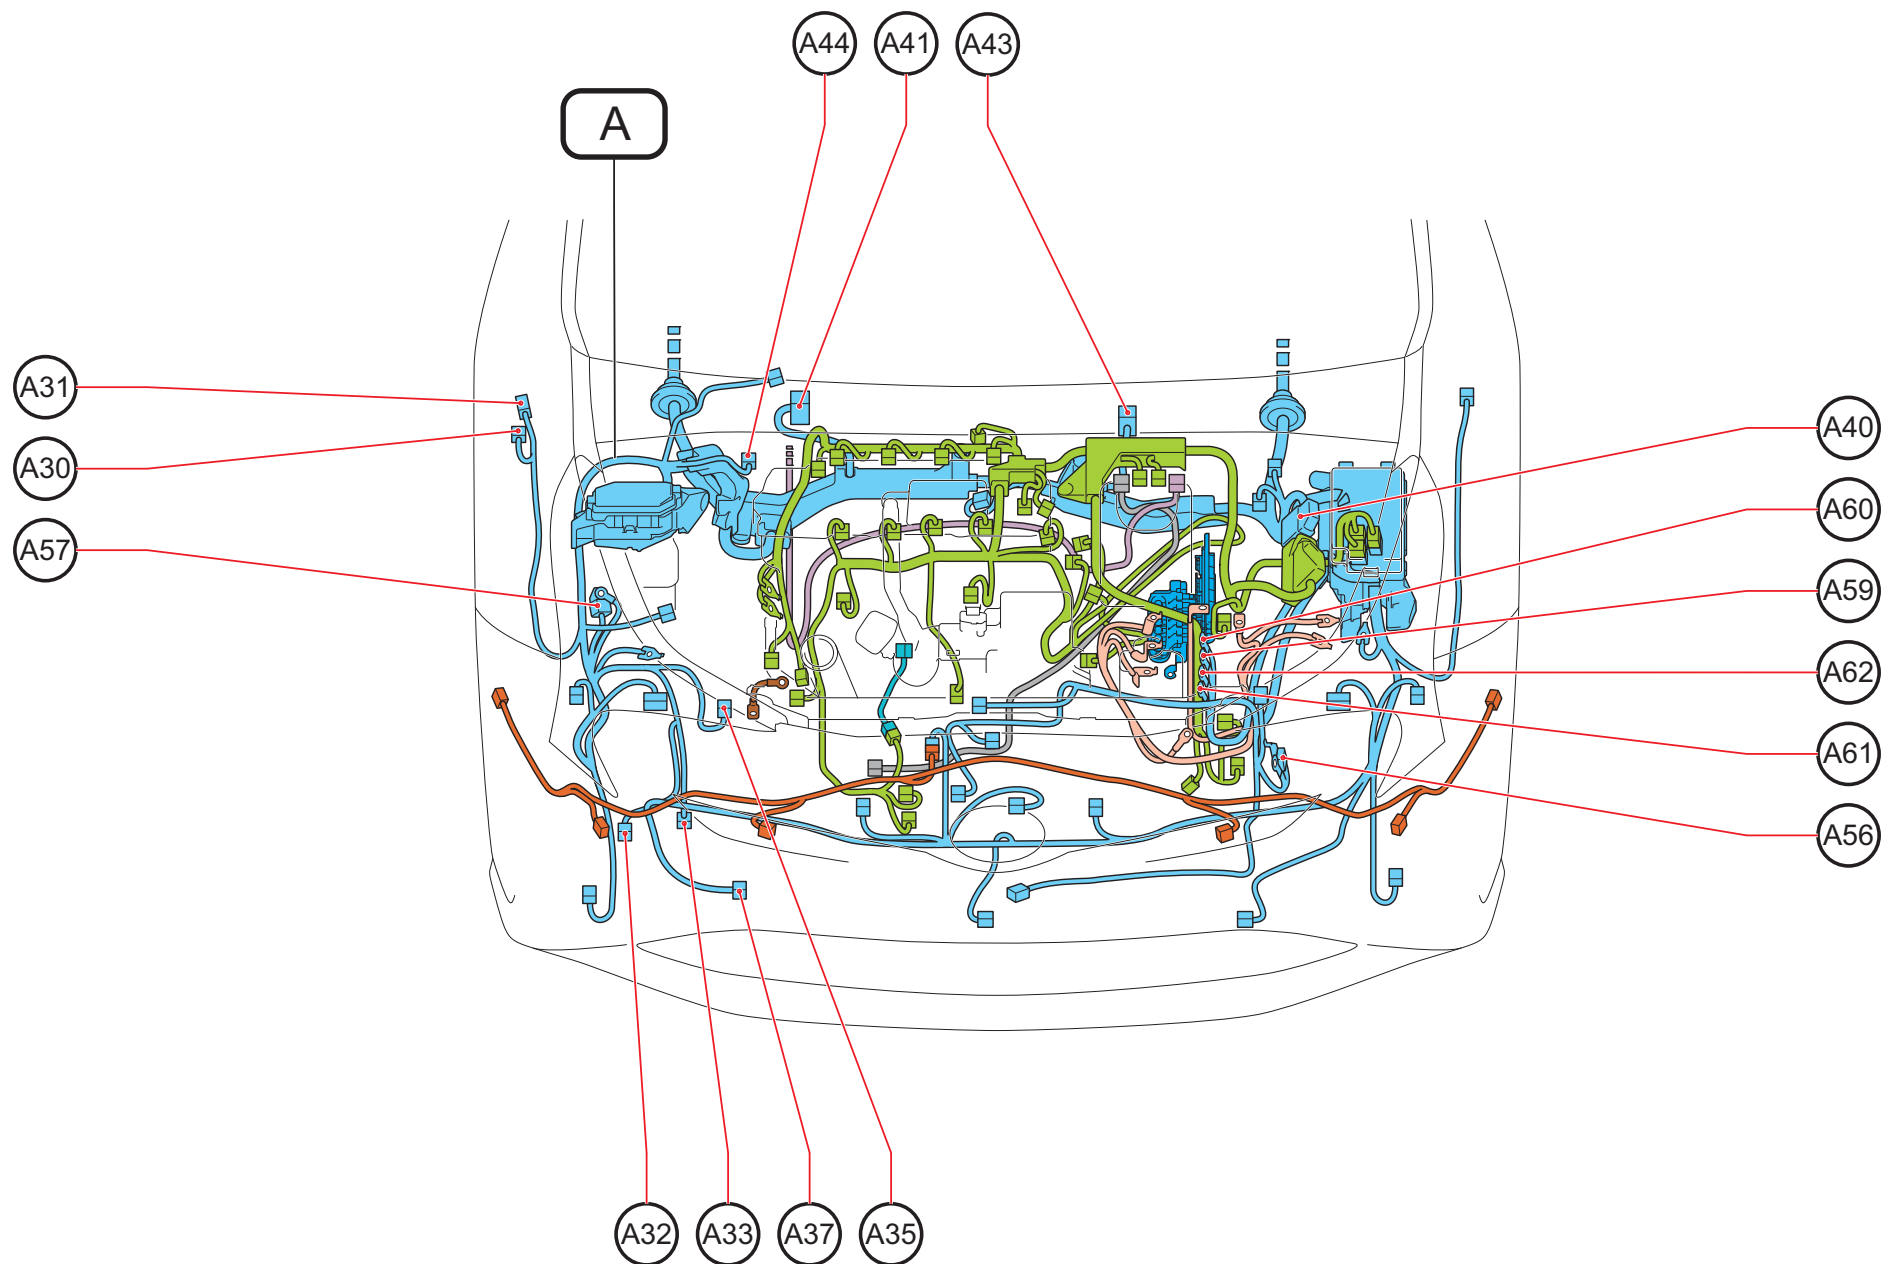

A30	Wireless Door Lock Buzzer
A31	Front Speed Sensor RH
A32	Level Warning Switch Assembly
A33	Windshield Washer Motor and Pump Assembly
A35	Front Airbag Sensor RH
A37	Swing Grille Actuator Assembly
A40	ECM
A41	Brake Booster with Master Cylinder Assembly
A43	Brake Actuator Assembly
A44	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A56	No. 1 Ground Junction Connector
A57	No. 2 Ground Junction Connector
A59	Fusible Link Block Assembly
A60	Fusible Link Block Assembly
A61	Fusible Link Block Assembly
A62	Fusible Link Block Assembly

Position of Parts in Engine Compartment (RHD)

