


Position of Parts in Instrument Panel (LHD)

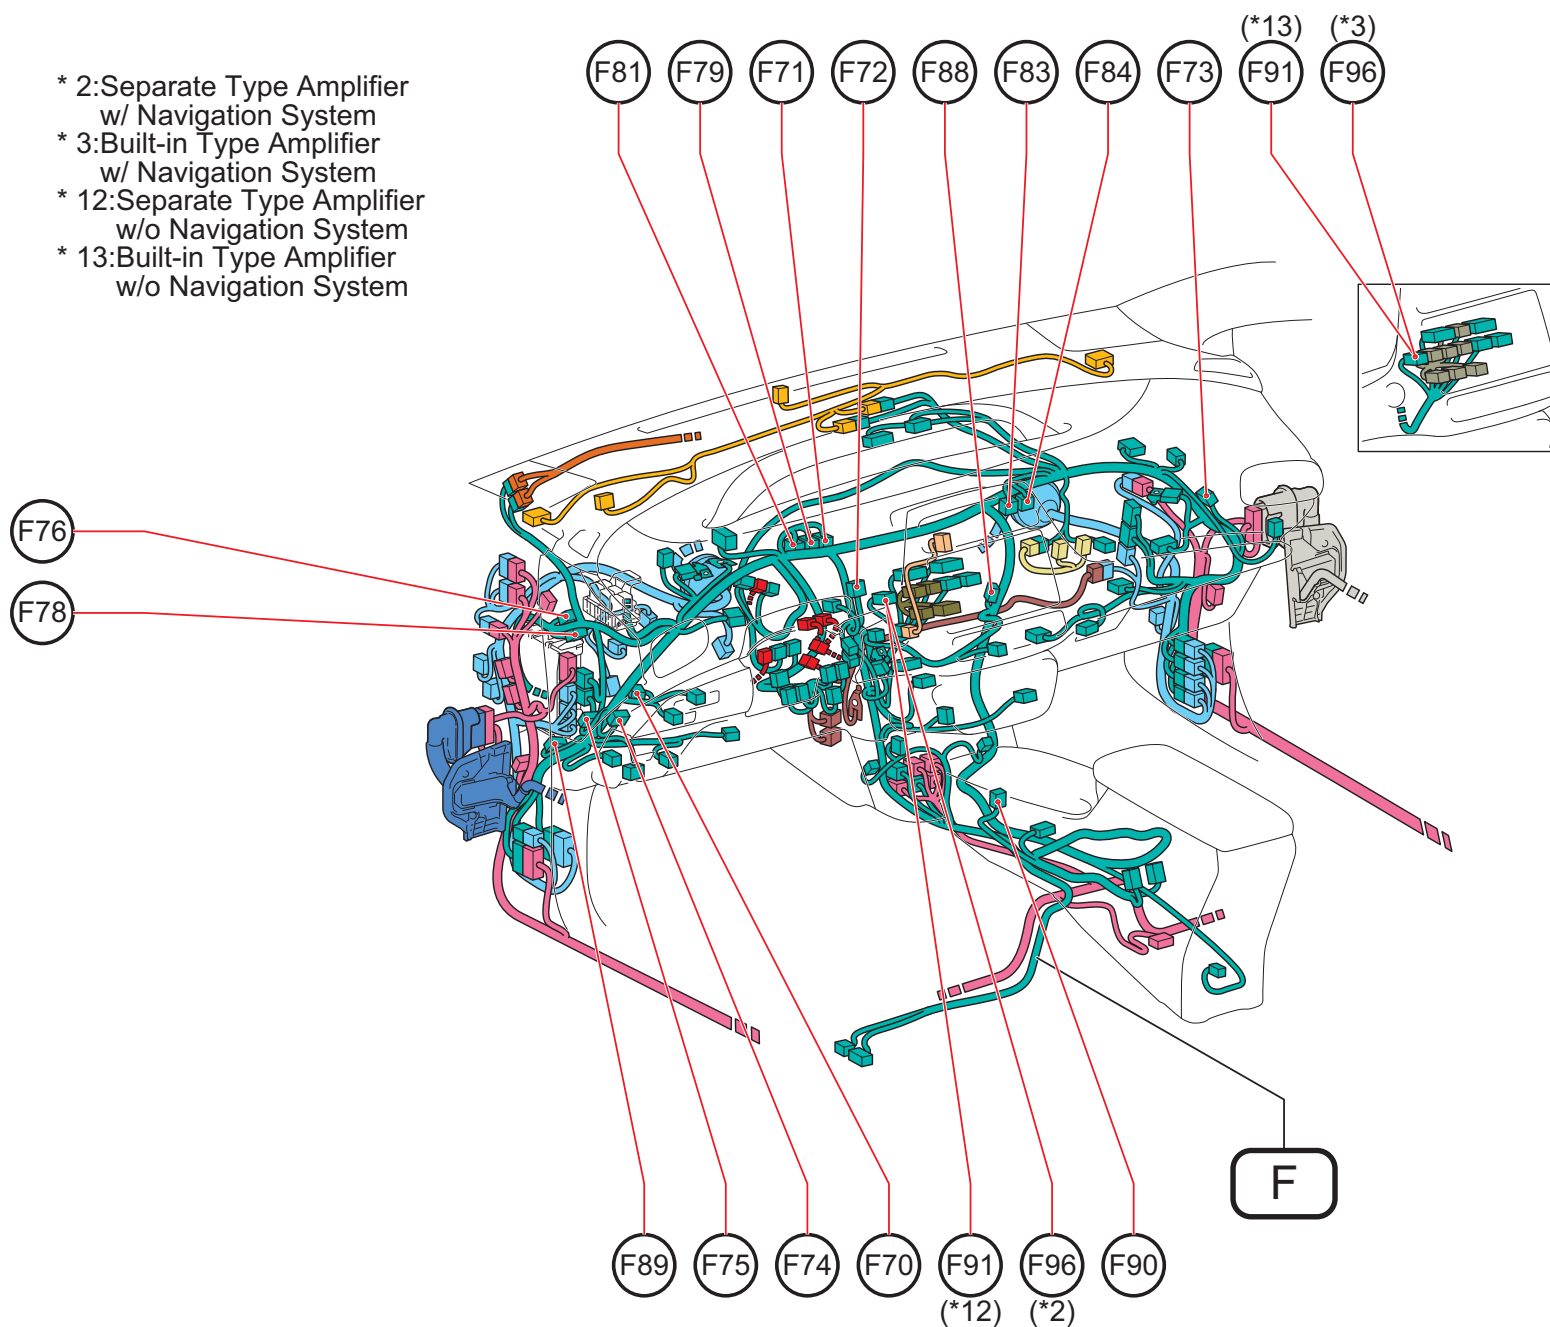


Position of Parts in Instrument Panel (LHD)

F70	No. 2 CAN Junction Connector
F71	No. 3 CAN Junction Connector
F72	No. 4 CAN Junction Connector
F73	No. 5 CAN Junction Connector
F74	No. 6 Junction Connector
F75	No. 7 Junction Connector
F76	No. 8 Junction Connector
F78	No. 10 Junction Connector
F79	No. 11 Junction Connector
F81	No. 13 Junction Connector
F83	No. 15 Junction Connector
F84	No. 16 Junction Connector
F88	No. 20 Junction Connector
F89	No. 21 Junction Connector
F90	Mobile Wireless Charger Cradle Assembly
F91	Radio & Display Receiver Assembly
F96	Navigation Receiver Assembly


Position of Parts in Instrument Panel (LHD)

F70
Black

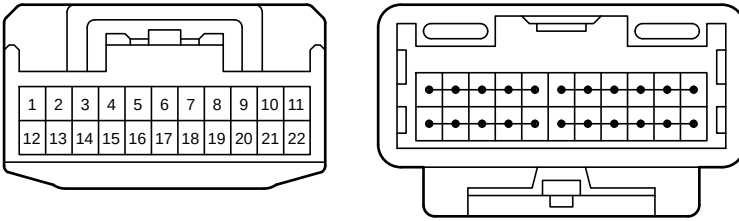


90980-12372

F71
Gray

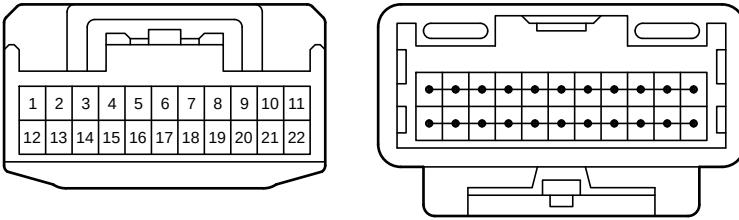


90980-12372

F72
Black

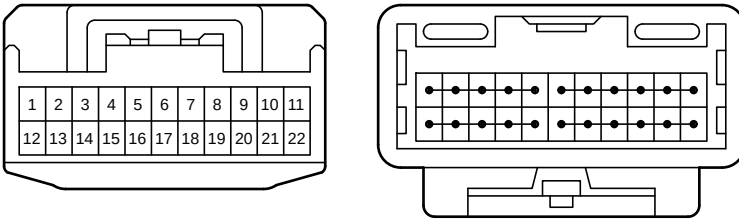

90980-12372


F73
Gray

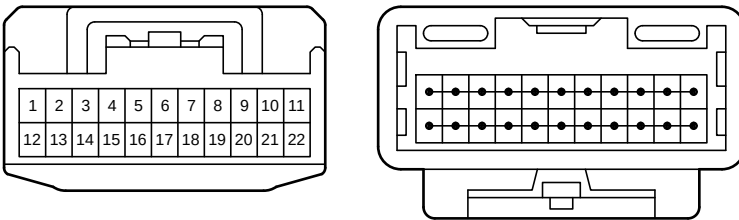

90980-12372


Position of Parts in Instrument Panel (LHD)

F74
Gray

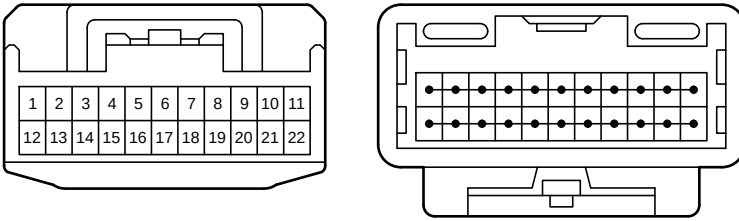


90980-12372
(RHD)

F74
White

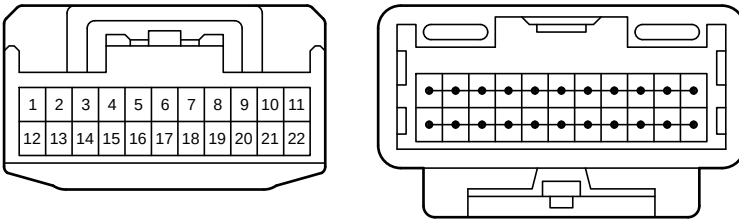


90980-12372
(LHD)

F75
Gray

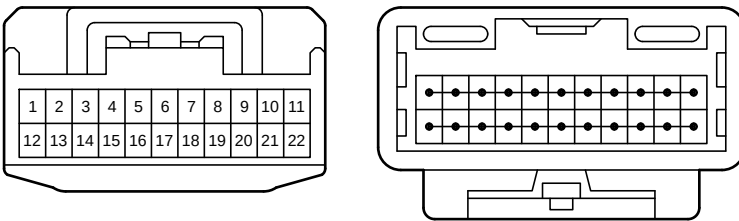

90980-12372


F76
Gray

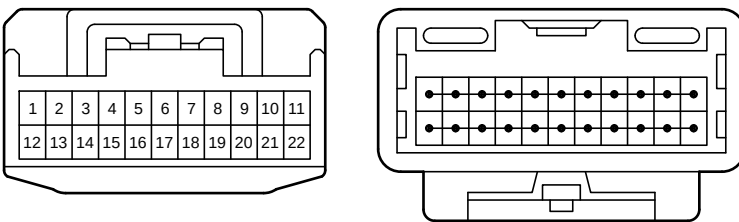

90980-12372


Position of Parts in Instrument Panel (LHD)

F78
Gray

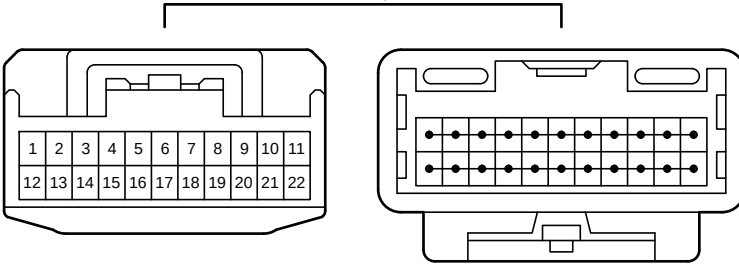


90980-12372

F79
White

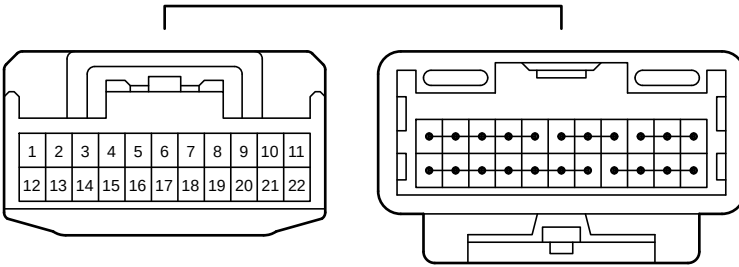


90980-12372

F81
Black

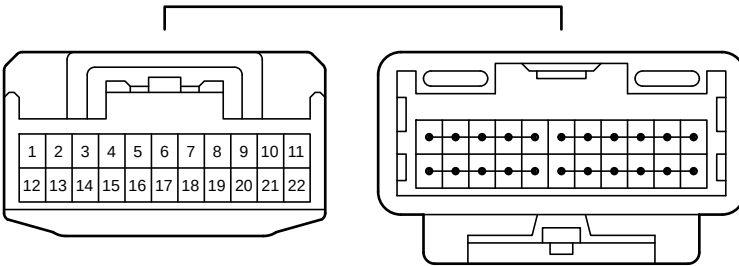

90980-12372


F83
Gray

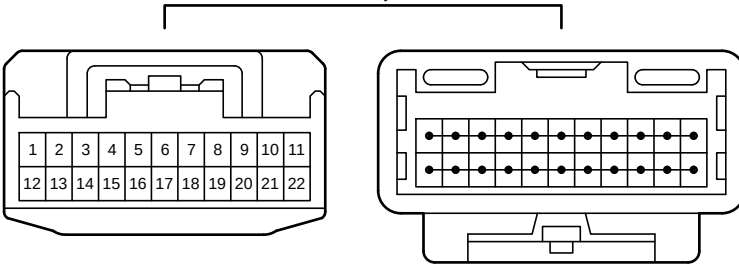

90980-12372


Position of Parts in Instrument Panel (LHD)

F84
Black

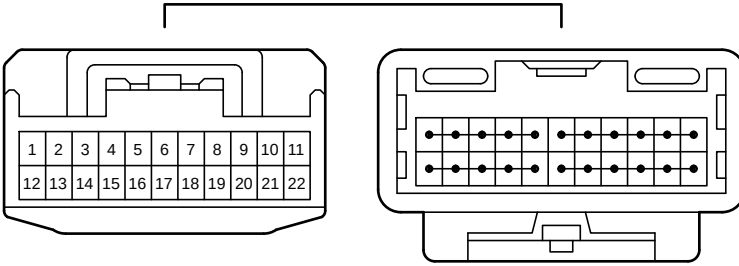


90980-12372

F88
Blue

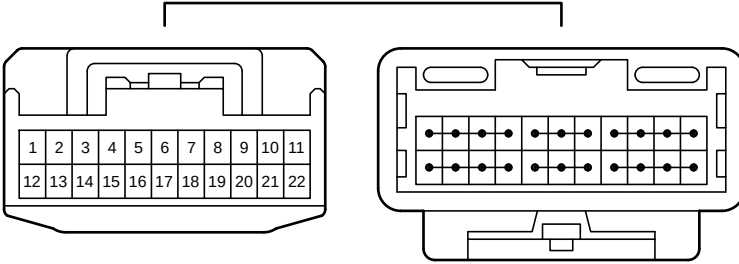


90980-12372

F89
Gray

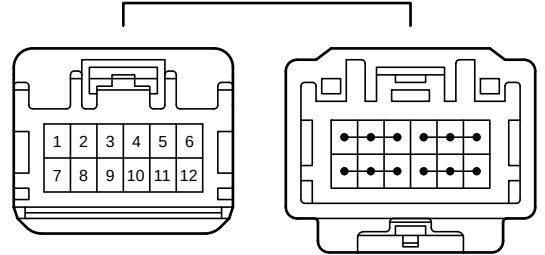


90980-12737

F90
White

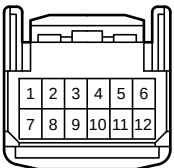


90980-12552

F91
Gray

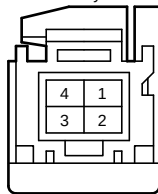

90980-12A52

F96
Gray

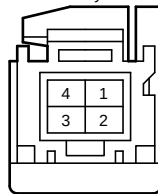

90980-12A52