



Position of Parts in Instrument Panel (LHD)

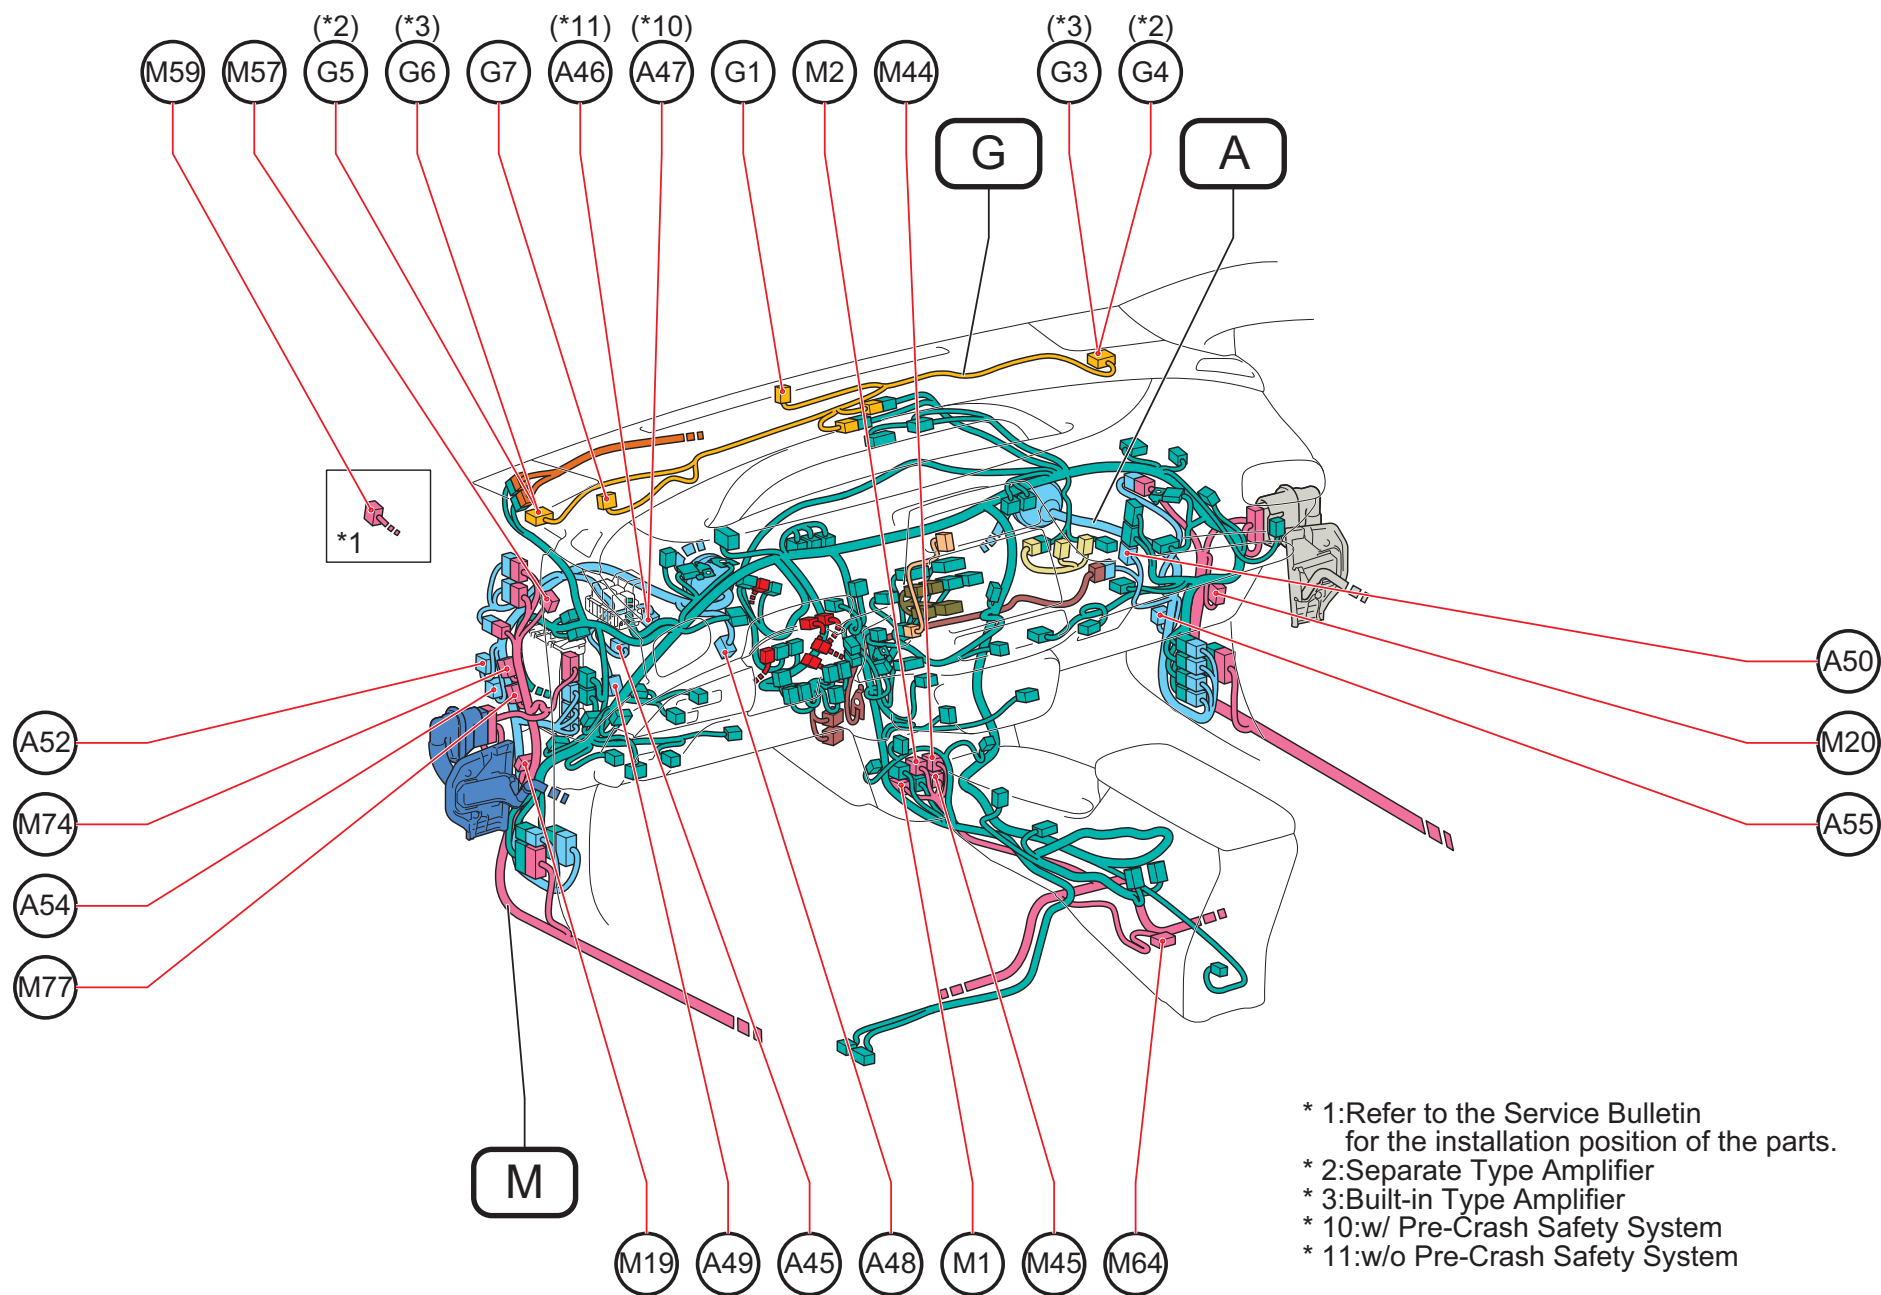


A45	Brake Pedal Stroke Sensor Assembly
A46	Stop Light Switch Assembly
A47	Stop Light Switch Assembly
A48	Accelerator Pedal Sensor Assembly
A49	Parking Brake Switch Assembly
A50	Hybrid Vehicle Control ECU
A52	No. 2 Junction Connector
A54	No. 4 Junction Connector
A55	No. 5 Junction Connector
G1	Automatic Light Control Sensor
G3	Front No. 2 Speaker Assembly RH
G4	Front No. 2 Speaker Assembly RH
G5	Front No. 2 Speaker Assembly LH
G6	Front No. 2 Speaker Assembly LH
G7	Combination Meter Mirror ECU
M1	Airbag ECU Assembly
M2	Airbag ECU Assembly
M19	Diode (Front Courtesy Light LH)
M20	Diode (Front Courtesy Light RH)
M44	Airbag ECU Assembly
M45	Airbag ECU Assembly
M57	Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
M59	Certification ECU
M64	Inverter Battery
M74	No. 22 Junction Connector
M77	No. 25 Junction Connector


Position of Parts in Instrument Panel (LHD)

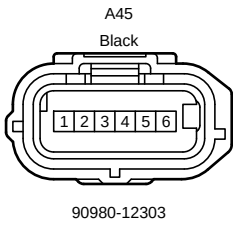


90980-12303

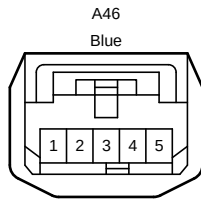


90980-12954

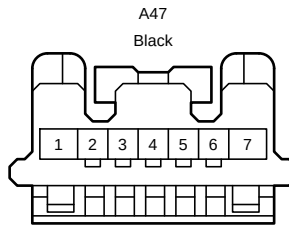


90980-12092

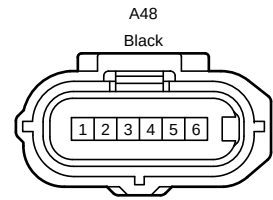


90980-12831

 


90980-10871

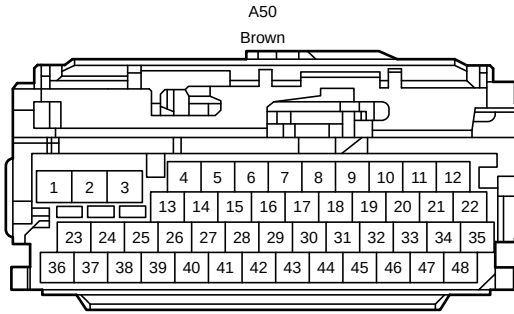


90980-12C24

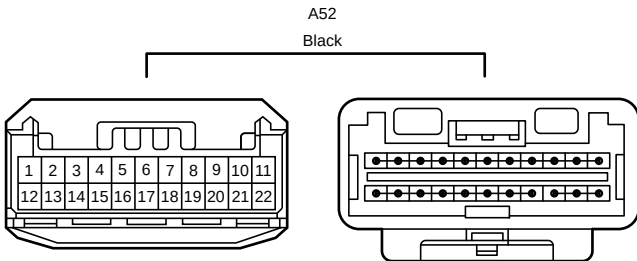


90980-12B54

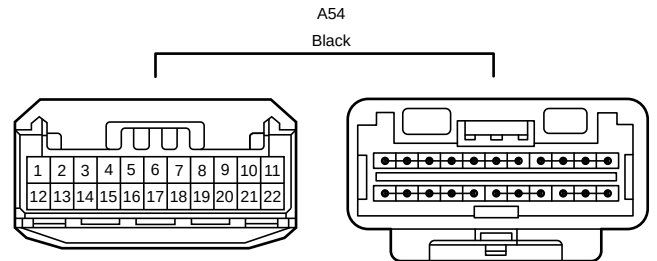


90980-12B54

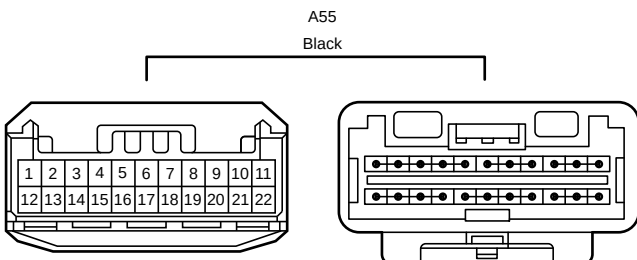


90980-12B54

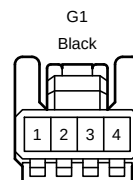


82824-50130

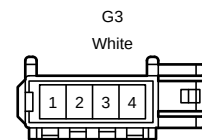


90980-12304

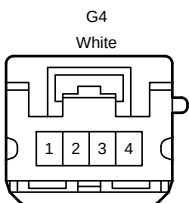


90980-12733

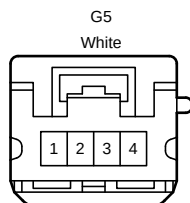

90980-12733

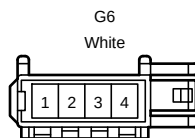

90980-12304

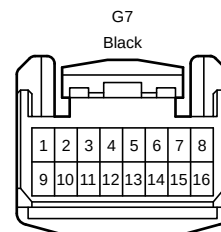

90980-12553

Position of Parts in Instrument Panel (LHD)

