



Position of Parts in Instrument Panel (LHD)

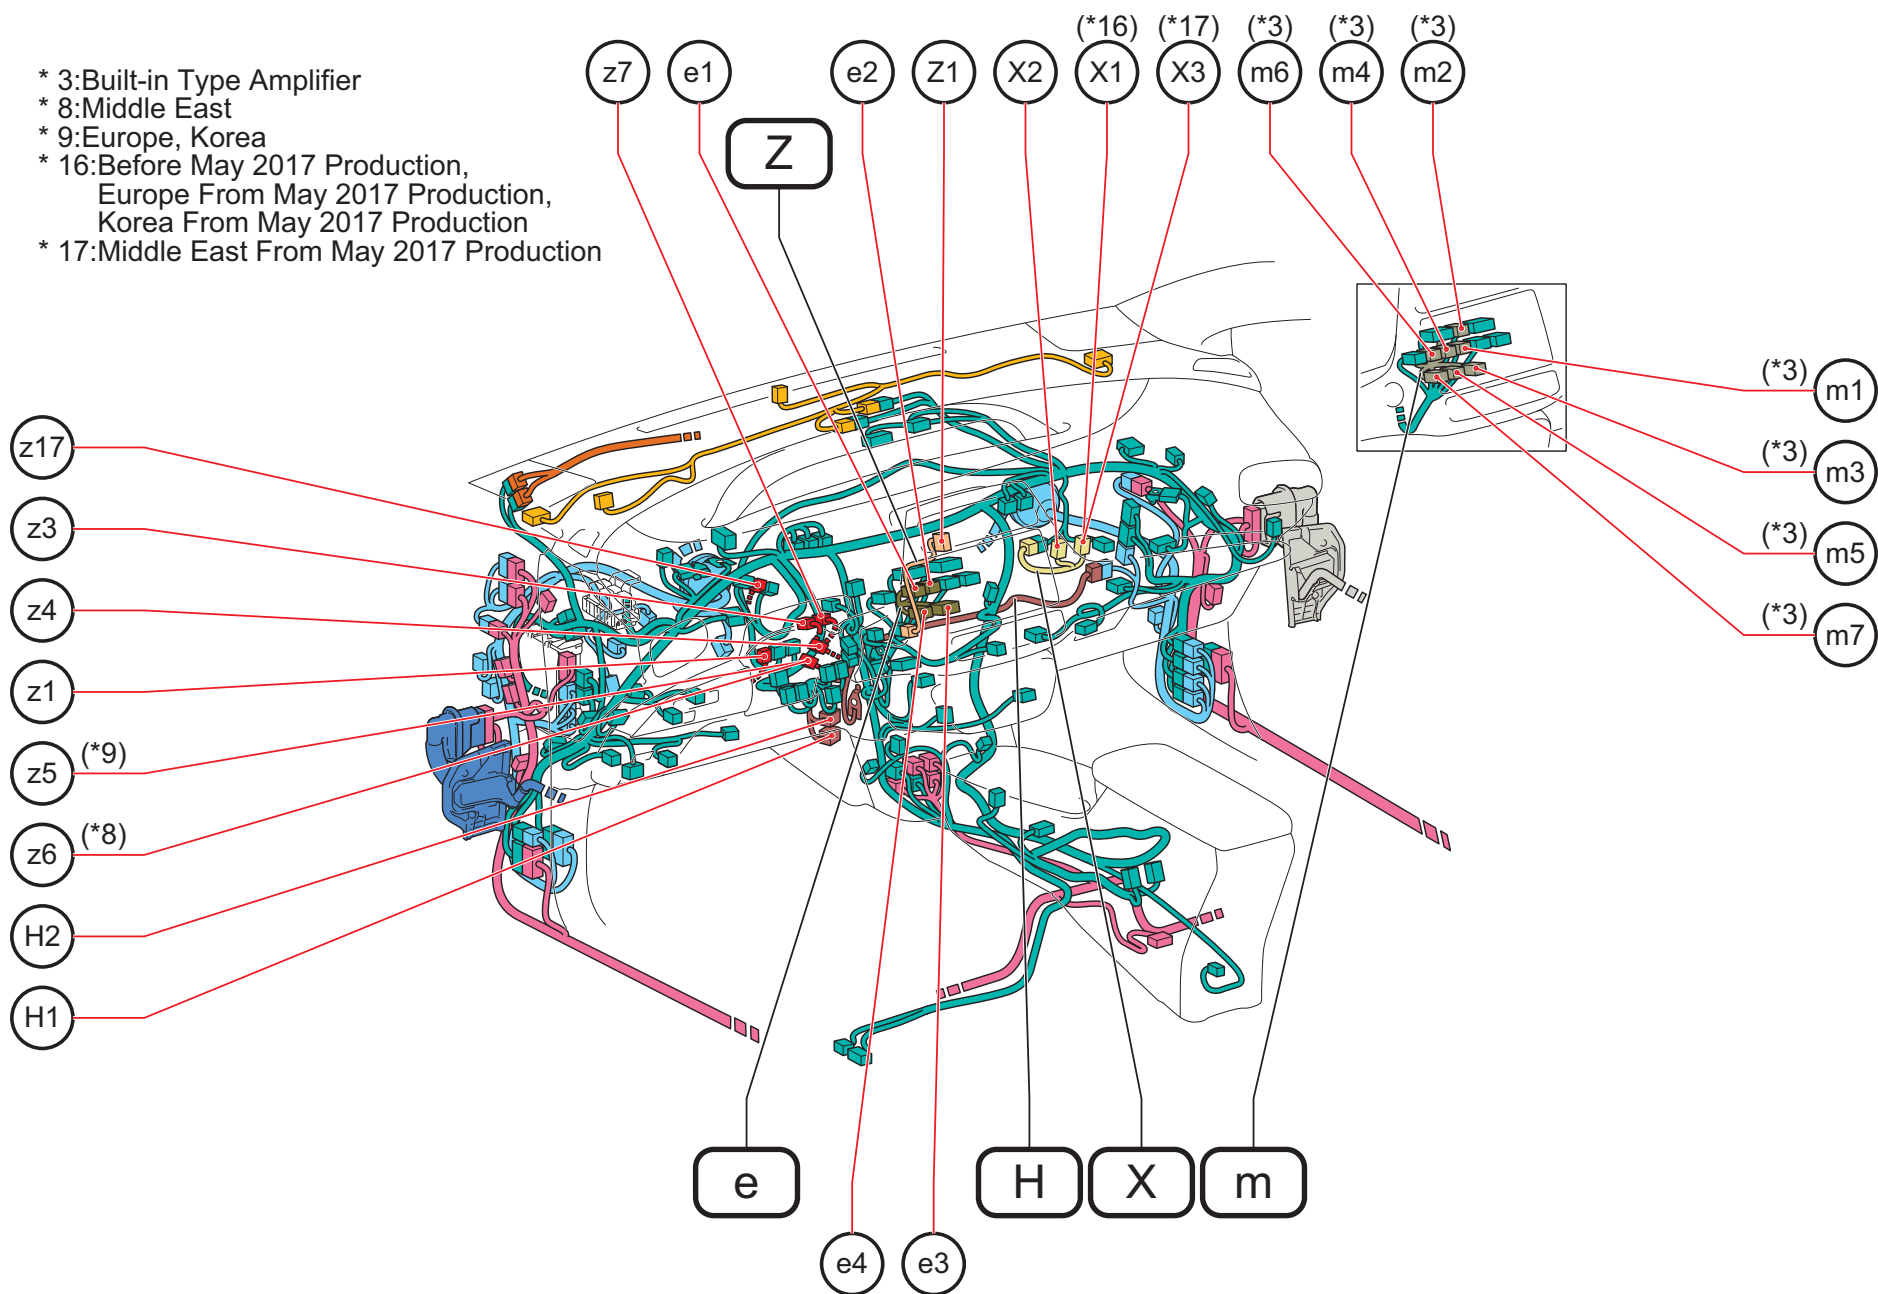


Position of Parts in Instrument Panel (LHD)

H1	Quick Heater Assembly
H2	Quick Heater Assembly
X1	Instrument Panel Passenger Airbag without Door Assembly
X2	Instrument Panel Passenger Airbag without Door Assembly
X3	Instrument Panel Passenger Airbag without Door Assembly
Z1	Hazard Warning Signal Switch Assembly
e1	Radio & Display Receiver Assembly
e2	Radio & Display Receiver Assembly
e3	Navigation ECU
e4	Navigation ECU
m1	Radio & Display Receiver Assembly
m2	Radio & Display Receiver Assembly
m3	Navigation ECU
m4	Radio & Display Receiver Assembly
m5	Navigation ECU
m6	Radio & Display Receiver Assembly
m7	Navigation ECU
z1	A/C Harness Assembly , A/C Amplifier Assembly
z3	Steering Pad Switch Assembly , Spiral Cable with Sensor Sub-Assembly
z4	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z5	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z6	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z7	Cruise Control Switch Wire , Spiral Cable with Sensor Sub-Assembly
z17	Electric Power Steering Column Sub-Assembly , Power Steering ECU Assembly


Position of Parts in Instrument Panel (LHD)

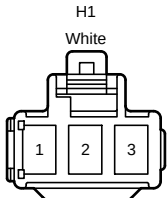


90980-10956

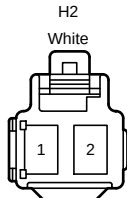


90980-10903

 


90980-12224

 


90980-12219

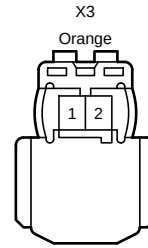


90980-12576

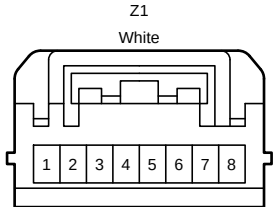


90980-12550

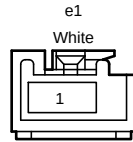


90980-12960

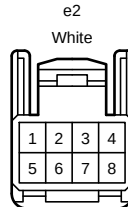


90980-12221

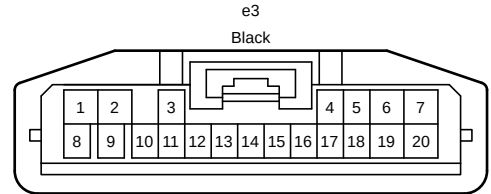


90980-12976

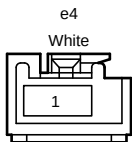


90980-12960

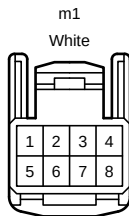


90980-12221

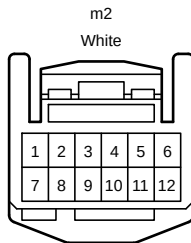


90980-12183

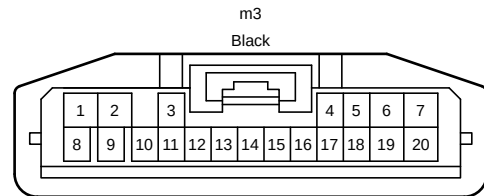


90980-12976

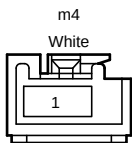


90980-12960

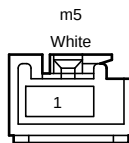


90980-12960

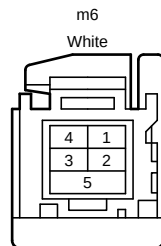


90980-12A81

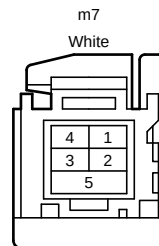


90980-12A81

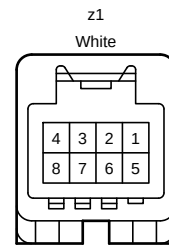


90980-12619

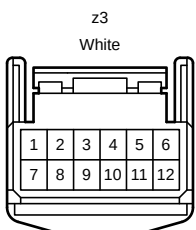


90980-12559

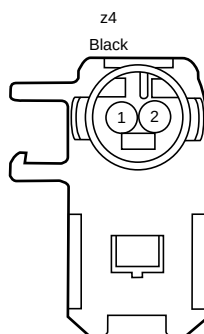


82824-47B50

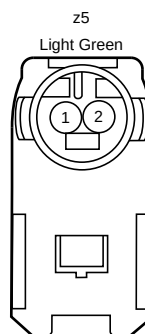


82824-47B80

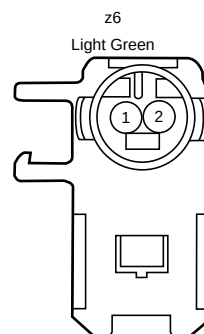

82824-47B40

 

90980-12360

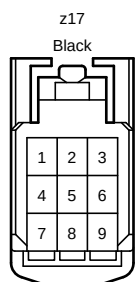

90980-12899