


Position of Parts in Engine Compartment (LHD)

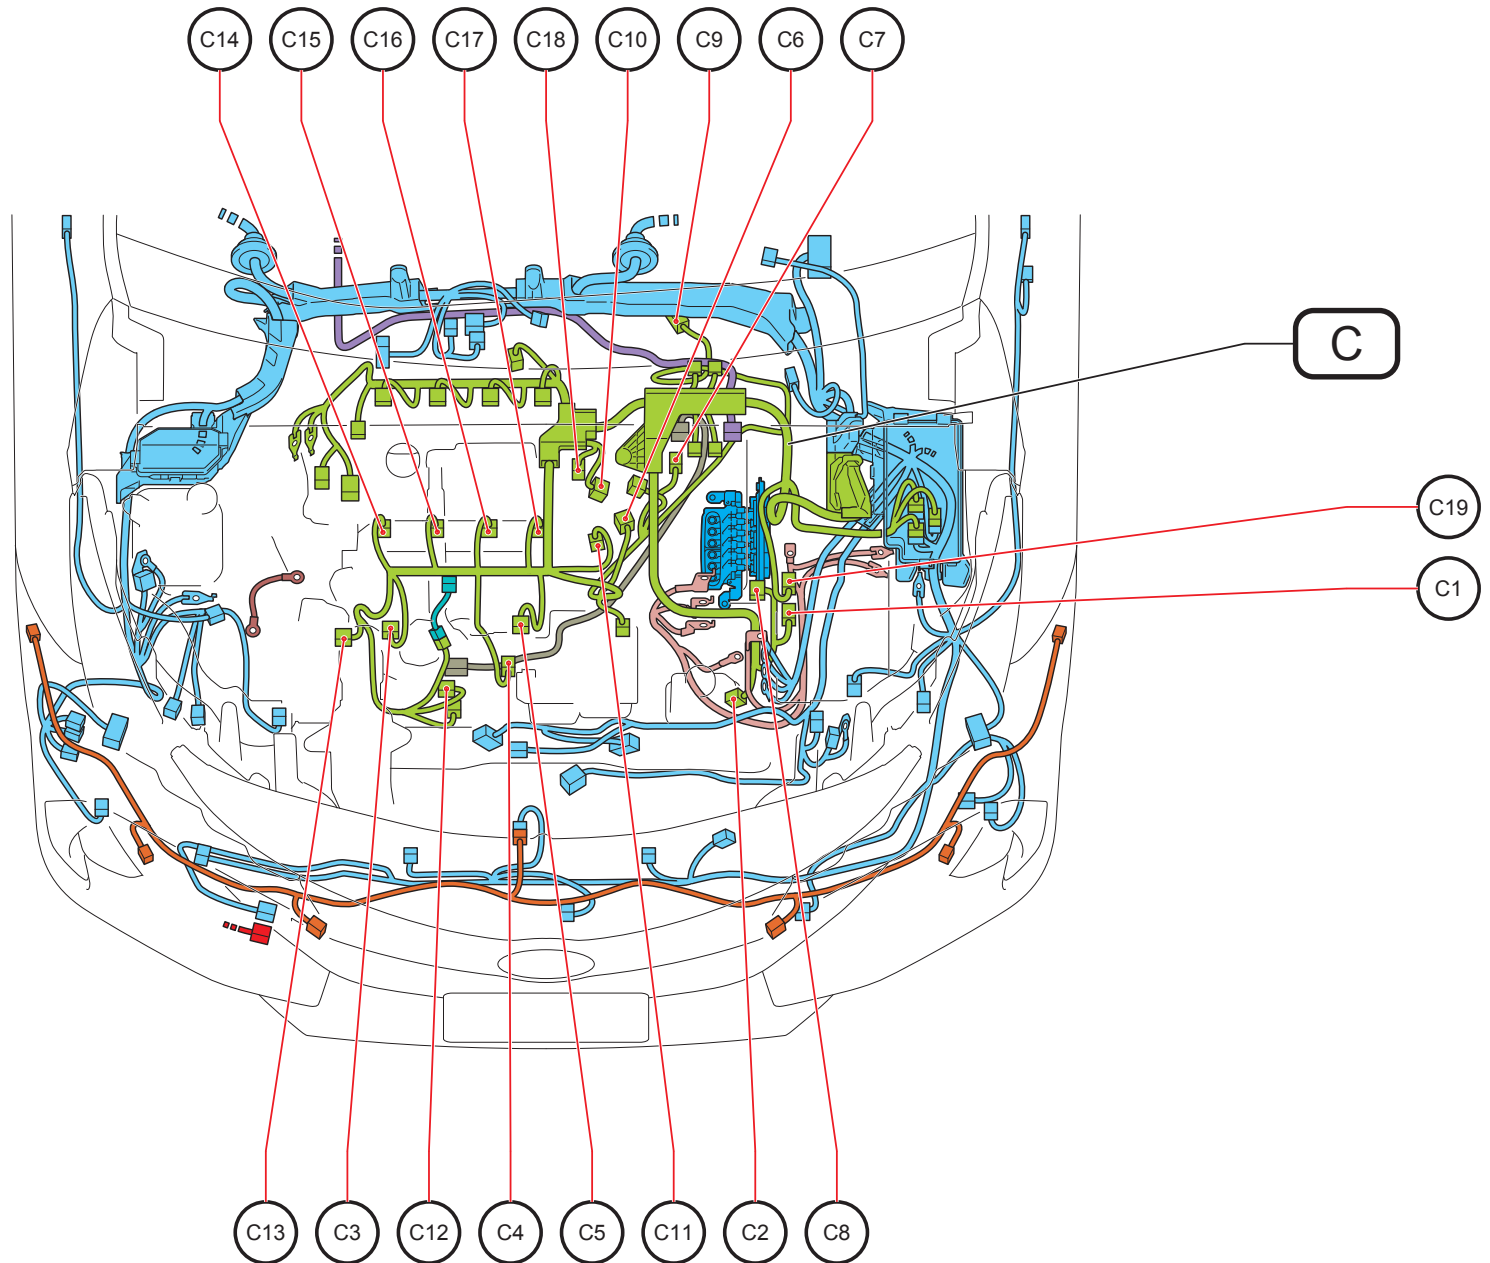

C1	Hybrid Vehicle Transaxle Assembly
C2	Shift Control Actuator Assembly
C3	E.F.I. Vacuum Sensor Assembly
C4	Throttle Body Assembly
C5	Intake Mass Air Flow Meter Sub-Assembly
C6	E.F.I. Engine Coolant Temperature Sensor
C7	Engine Coolant Temperature Sensor
C8	Hybrid Vehicle Transaxle Assembly
C9	Oxygen Sensor (Bank 1 Sensor 2)
C10	EGR Valve Assembly
C11	Purge VSV
C12	Compressor with Motor Assembly
C13	Engine Water Pump Assembly
C14	Fuel Injector Assembly No. 1
C15	Fuel Injector Assembly No. 2
C16	Fuel Injector Assembly No. 3
C17	Fuel Injector Assembly No. 4
C18	Cam Position Sensor
C19	Battery State Sensor Assembly

Position of Parts in Engine Compartment (LHD)

