



Position of Parts in Engine Compartment (RHD)










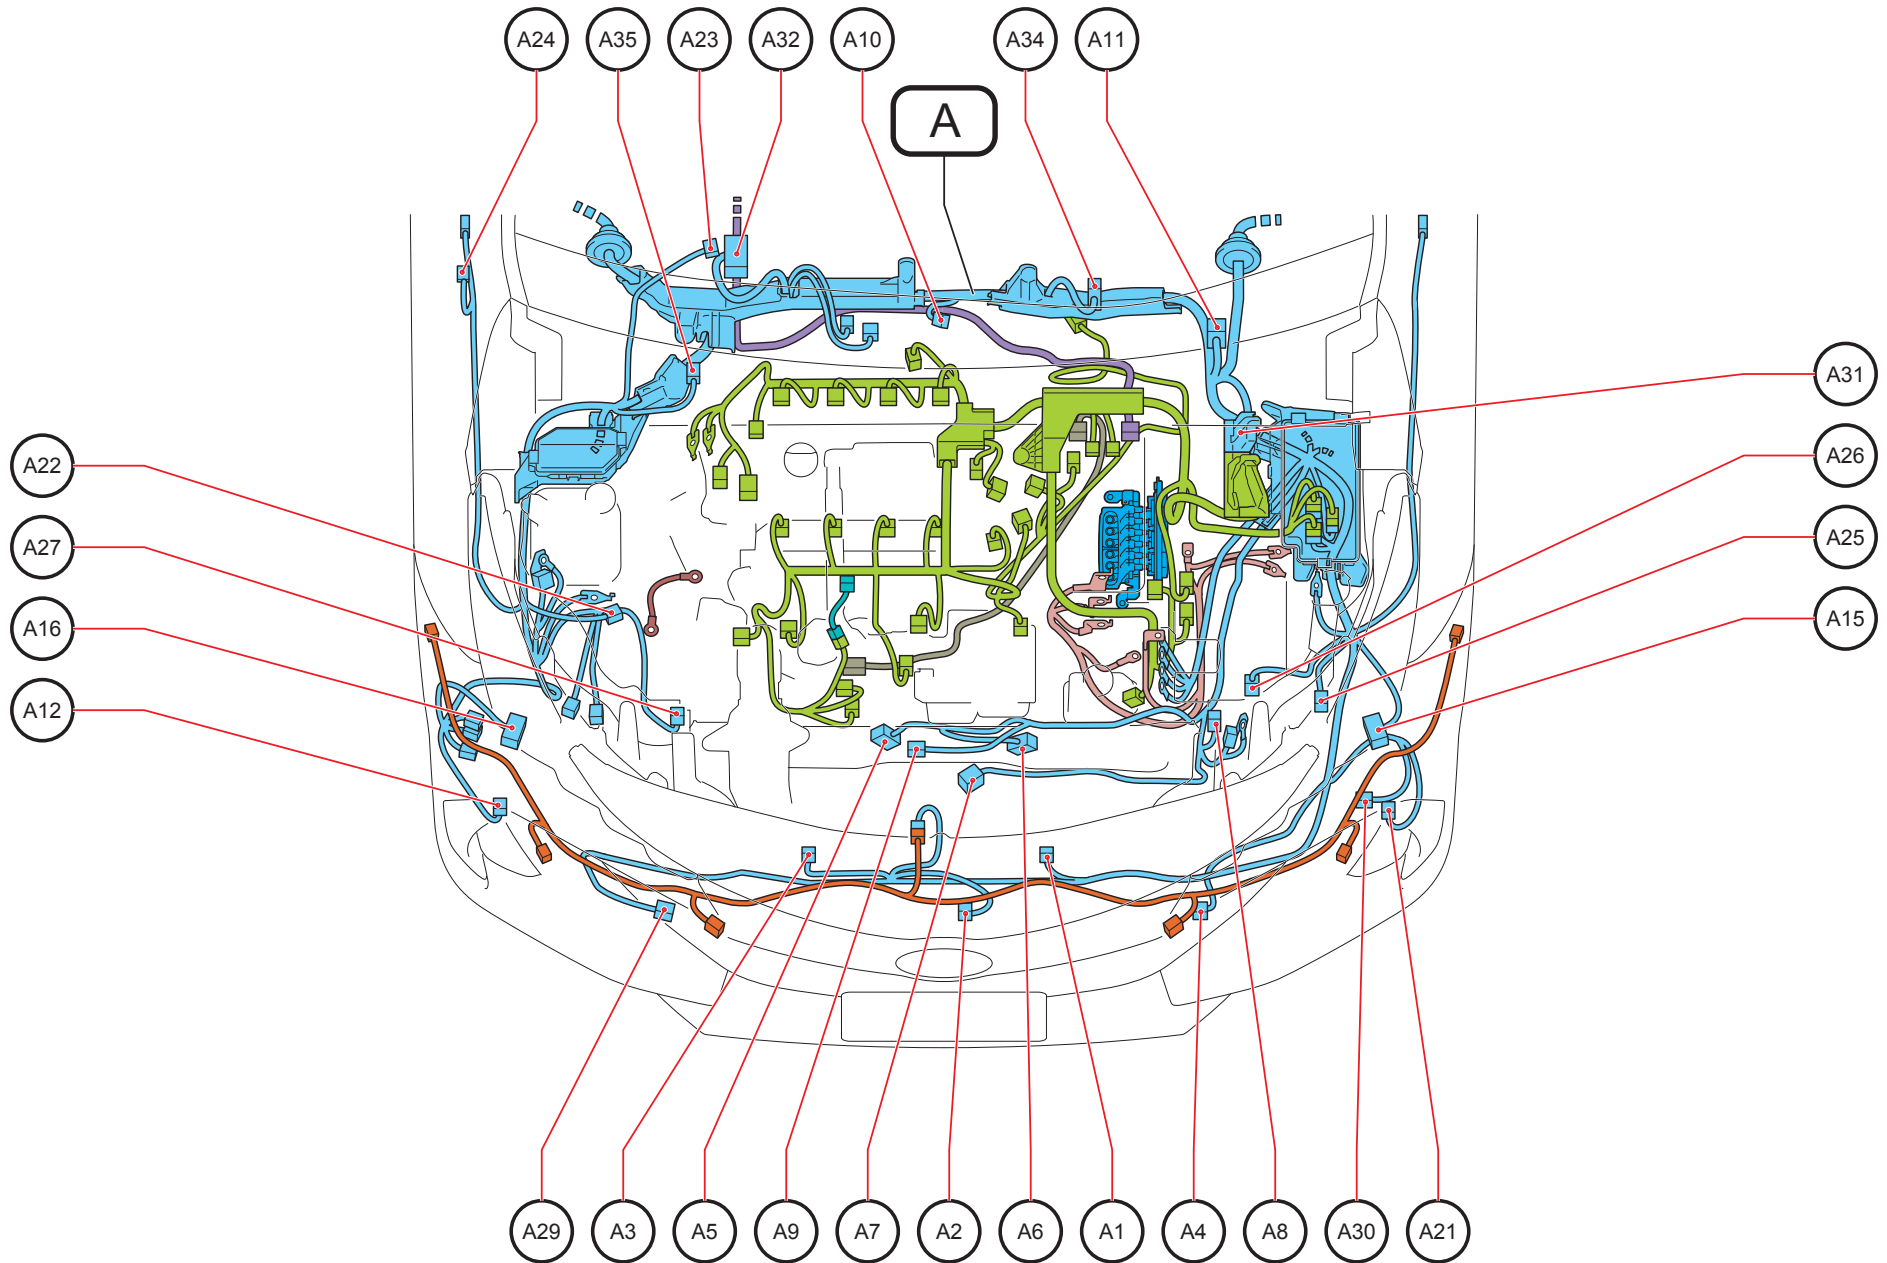


A1	Low Pitched Horn Assembly
A2	Millimeter Wave Radar Sensor Assembly
A3	High Pitched Horn Assembly
A4	Ambient Temperature Sensor (Thermistor Assembly)
A5	Cooling Fan Motor RH
A6	Cooling Fan Motor LH
A7	Inverter Water Pump with Motor Assembly
A8	Front Airbag Sensor LH
A9	Hood Curtesy Switch (Hood Lock Assembly)
A10	Engine Coolant Temperature Sensor (for Exhaust Heat Recirculation System)
A11	Brake Booster Pump Assembly
A12	Front Turn Signal Light Assembly RH
A15	Headlight Light Control ECU Assembly LH (Headlight Assembly LH)
A16	Headlight Light Control ECU Assembly RH (Headlight Assembly RH)
A21	Front Turn Signal Light Assembly LH
A22	A/C Pressure Sensor
A23	Windshield Wiper Motor Assembly
A24	Wireless Door Lock Buzzer
A25	Level Warning Switch Assembly
A26	Windshield Washer Motor and Pump Assembly
A27	Front Airbag Sensor RH
A29	Swing Grill Actuator Assembly
A30	Oil Pump with Motor Assembly
A31	ECM
A32	Brake Booster with Master Cylinder Assembly
A34	Brake Actuator Assembly
A35	Brake Booster with Master Cylinder Assembly

Position of Parts in Engine Compartment (RHD)

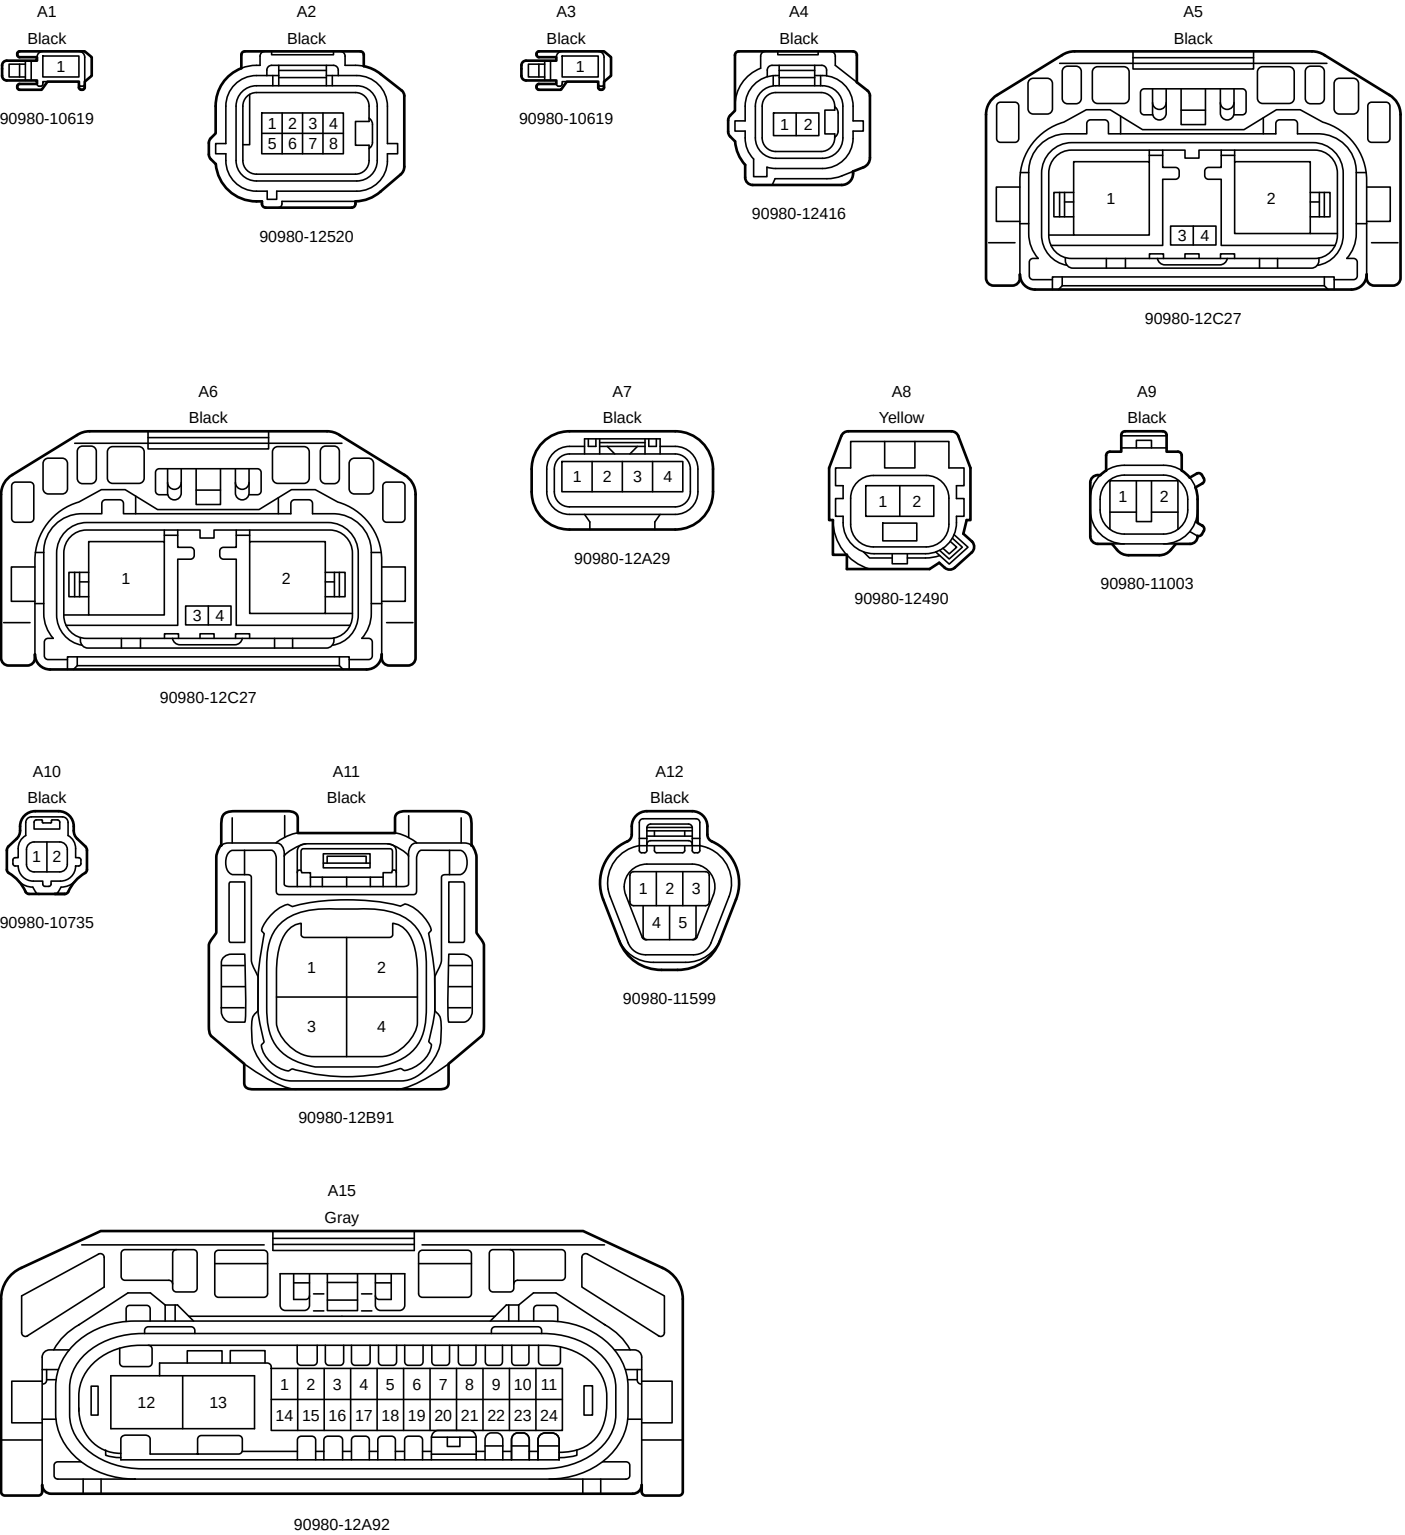

Position of Parts in Engine Compartment (RHD)

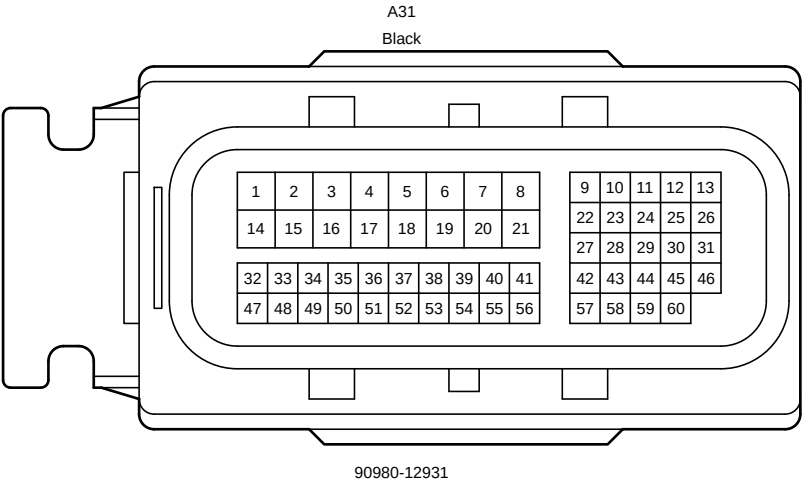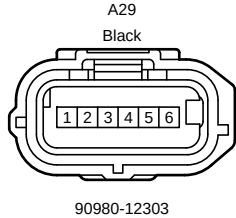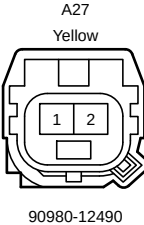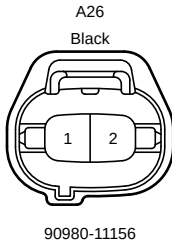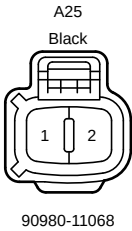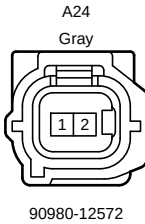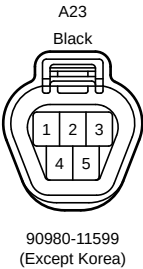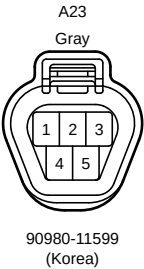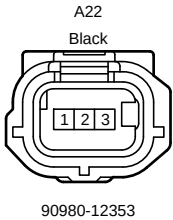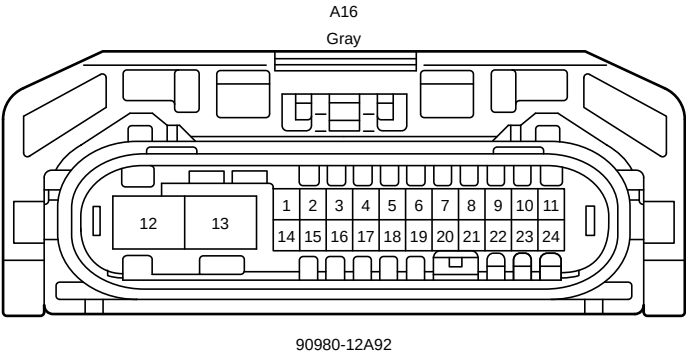

Position of Parts in Engine Compartment (RHD)

