



Position of Parts in Instrument Panel (LHD)

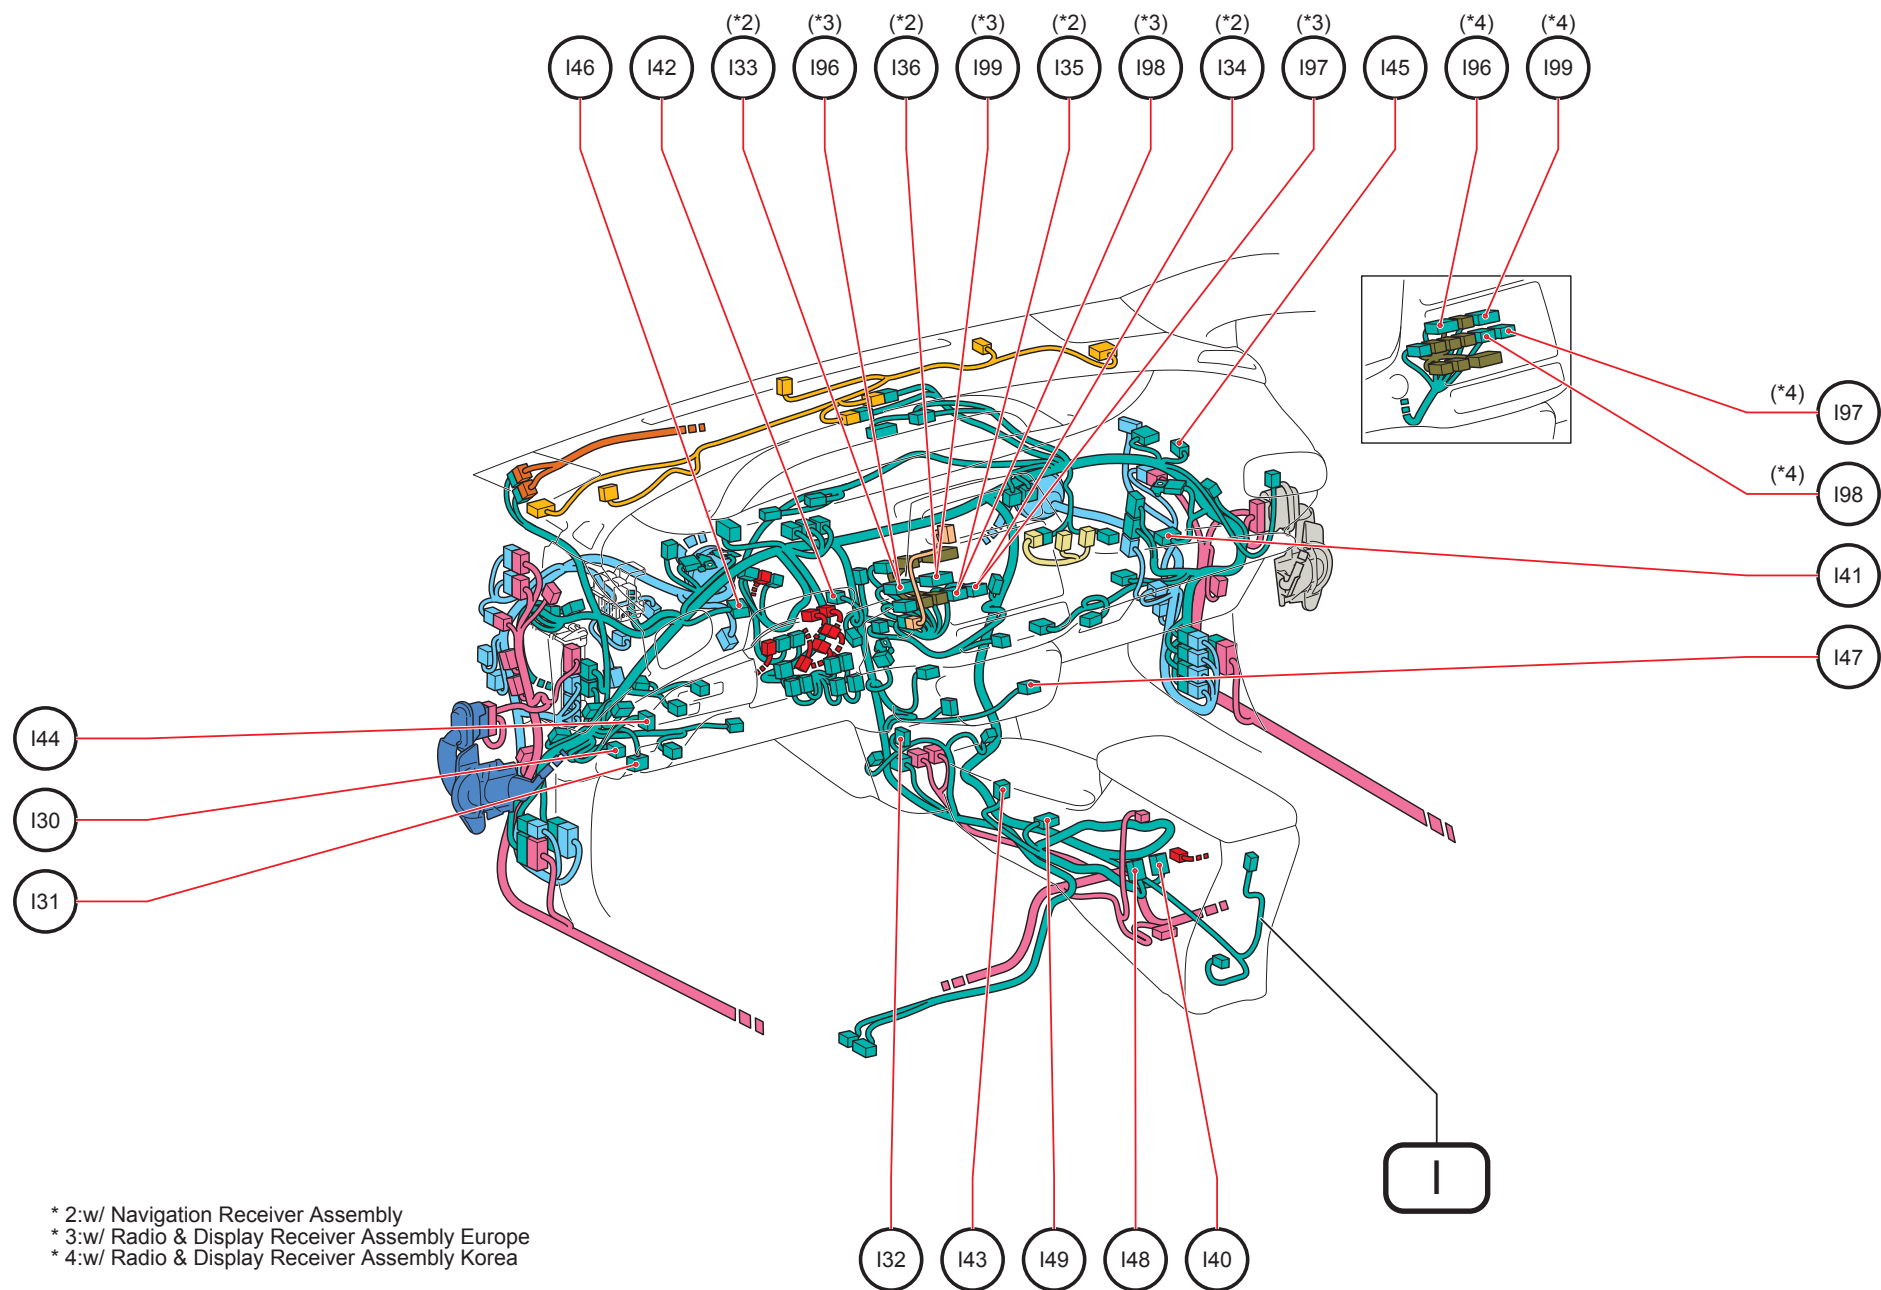


Position of Parts in Instrument Panel (LHD)

I30	Fuel Lid Opener Switch
I31	DLC3
I32	No. 2 Indicator Light Assembly
I33	Navigation Receiver Assembly
I34	Navigation Receiver Assembly
I35	Navigation Receiver Assembly
I36	Navigation Receiver Assembly
I40	No. 1 Stereo Jack Adapter Assembly
I41	Driving Support ECU Assembly
I42	Skid Control Buzzer
I43	Mobile Wireless Charger Cradle Assembly
I44	Fuel Control Switch
I45	No. 2 Clearance Warning Buzzer
I46	Windshield Wiper Relay Assembly
I47	Pattern Select Switch Assembly
I48	No. 1 Power Outlet Socket Assembly
I49	No. 1 Indoor Electrical Key Antenna Assembly
I96	Radio & Display Receiver Assembly
I97	Radio & Display Receiver Assembly
I98	Radio & Display Receiver Assembly
I99	Radio & Display Receiver Assembly


Position of Parts in Instrument Panel (LHD)

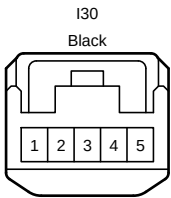


90980-12366

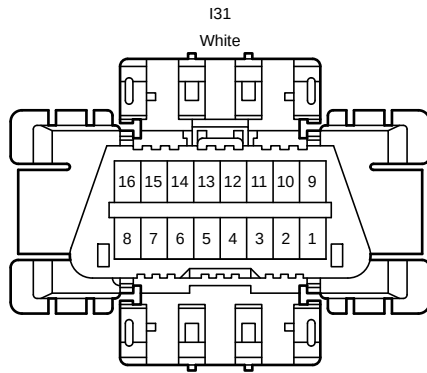


90980-11665

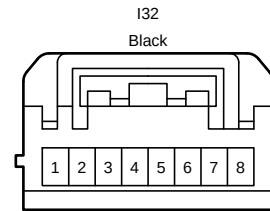


90980-12550

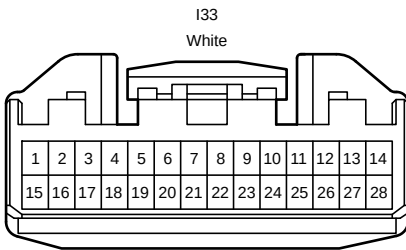


90980-12555

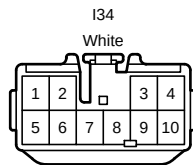


90980-10997

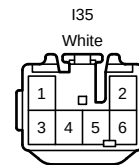


90980-10996

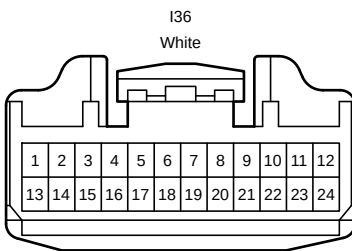


90980-12554

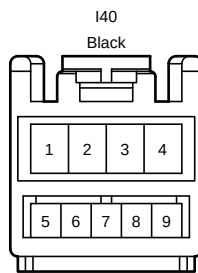


90980-12849

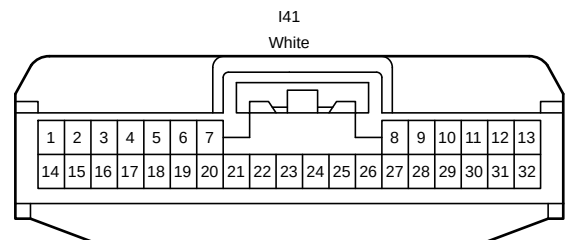


90980-12422

 


90980-10860

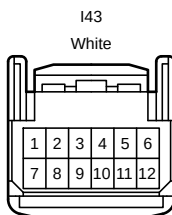


90980-12552

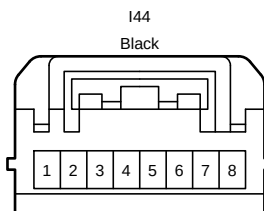


90980-12550

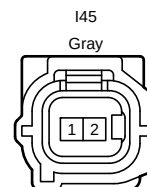


90980-12572

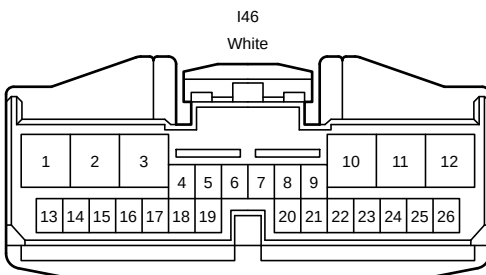


90980-12444

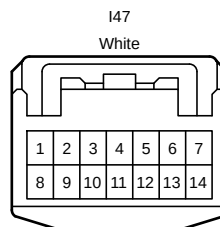

90980-12370

 


90980-12498

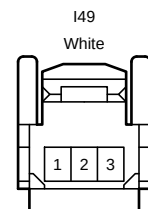


90980-12795


Position of Parts in Instrument Panel (LHD)

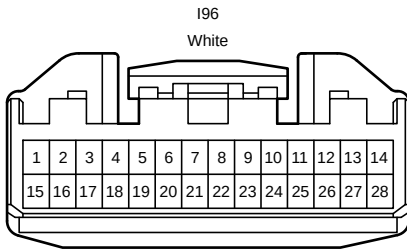


90980-12555

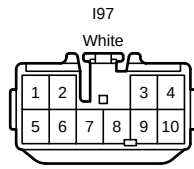

90980-10997

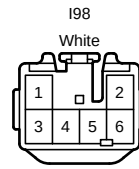

90980-10996

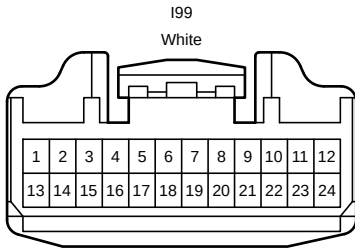

90980-12554