


Position of Parts in Instrument Panel (LHD)




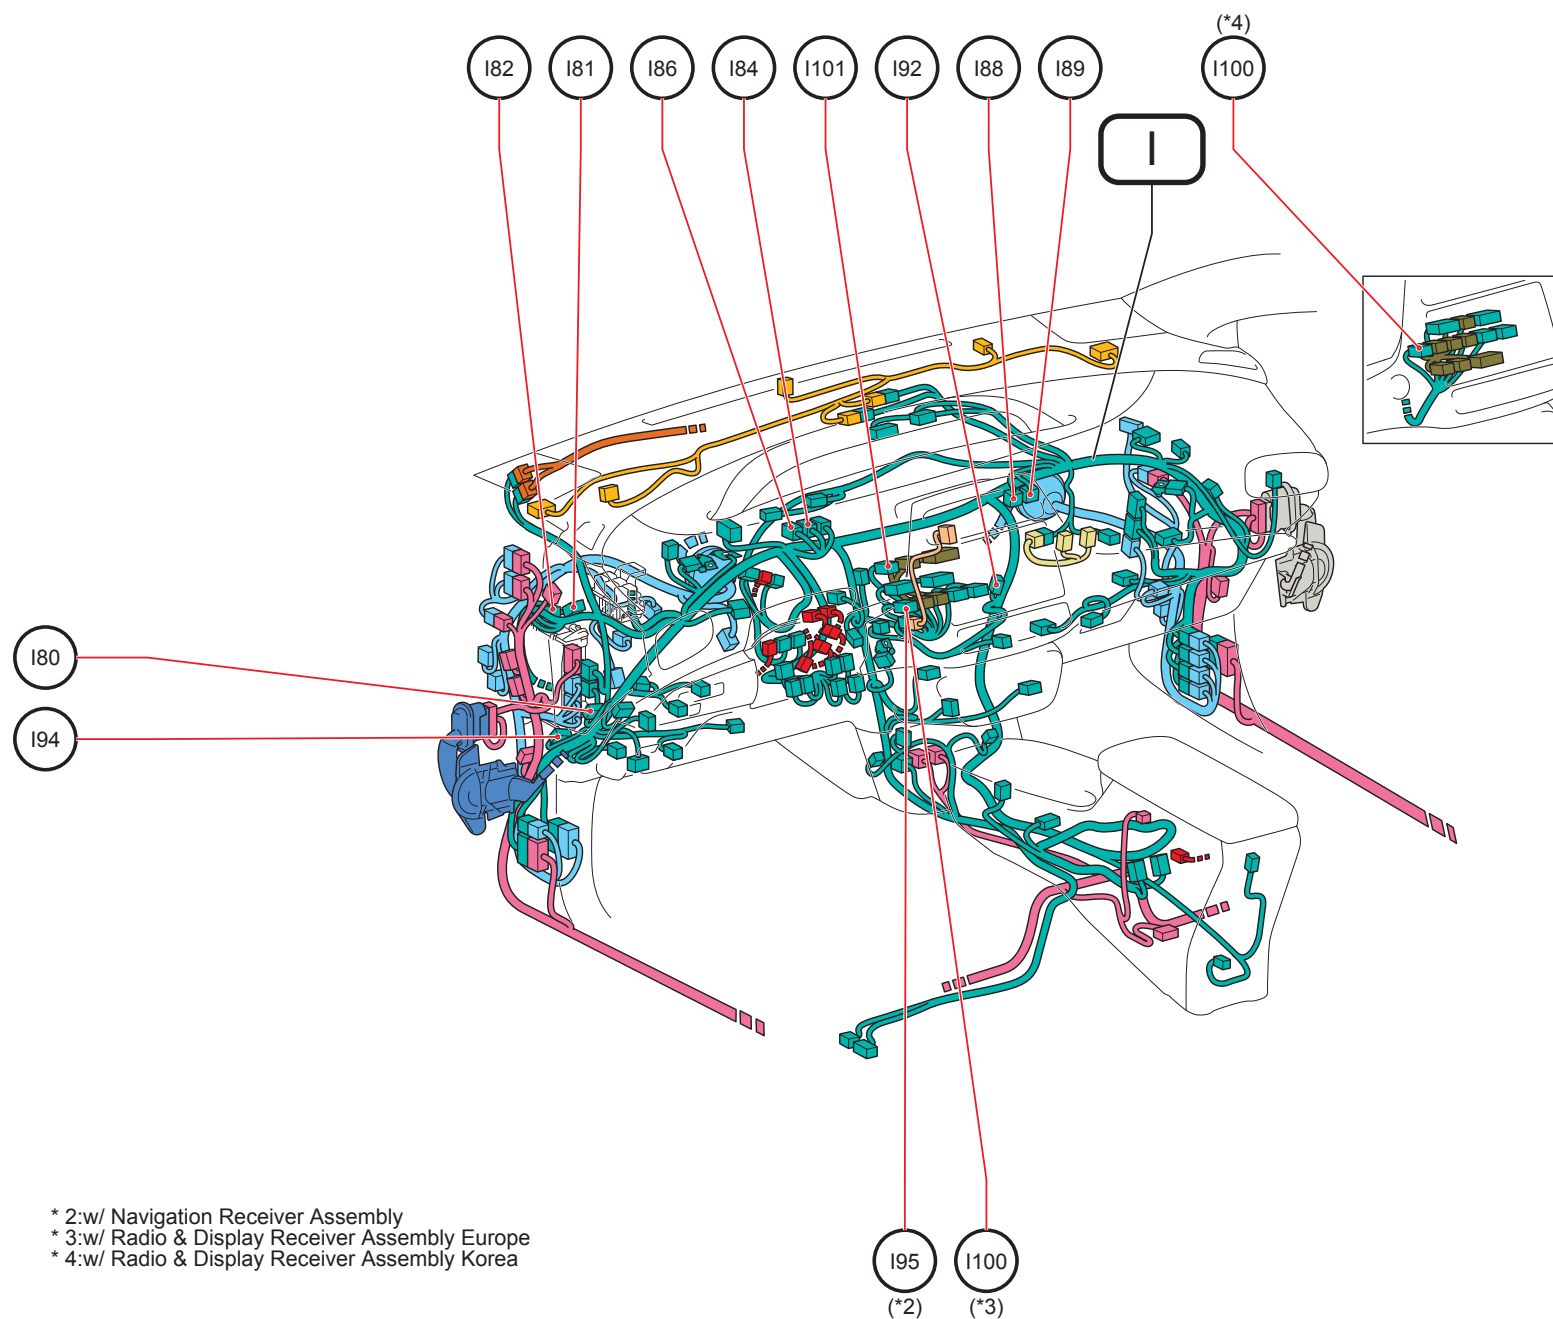


* 2:w/ Navigation Receiver Assembly
 * 3:w/ Radio & Display Receiver Assembly Europe
 * 4:w/ Radio & Display Receiver Assembly Korea





Position of Parts in Instrument Panel (LHD)

I80	No. 7 Junction Connector
I81	No. 8 Junction Connector
I82	No. 10 Junction Connector
I84	No. 12 Junction Connector
I86	No. 13 Junction Connector
I88	No. 15 Junction Connector
I89	No. 17 Junction Connector
I92	No. 19 Junction Connector
I94	No. 21 Junction Connector
I95	Navigation Receiver Assembly
I100	Radio & Display Receiver Assembly
I101	Navigation ECU

Position of Parts in Instrument Panel (LHD)

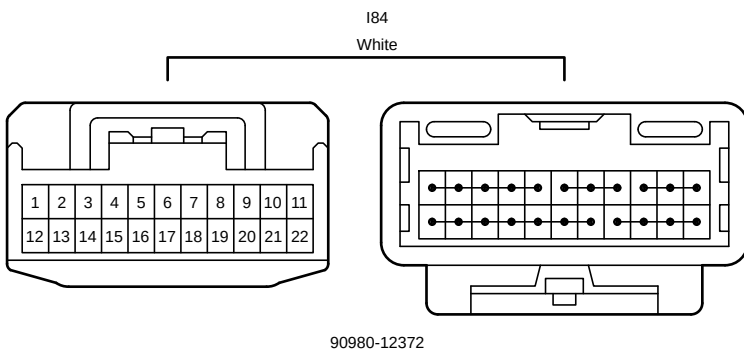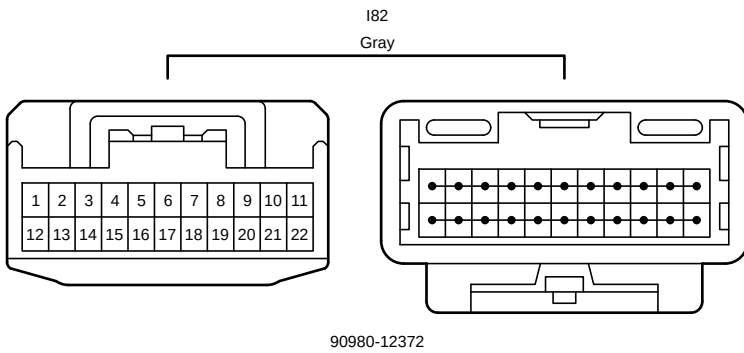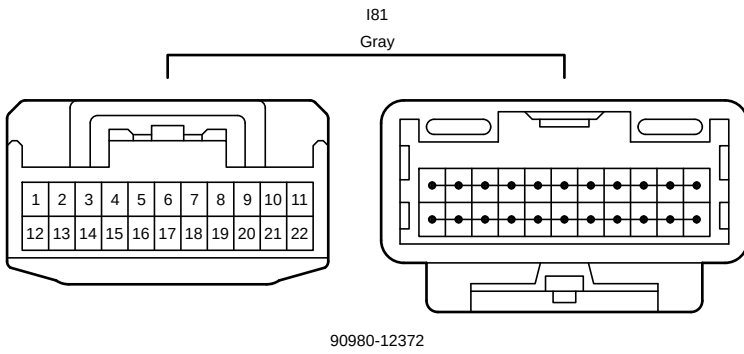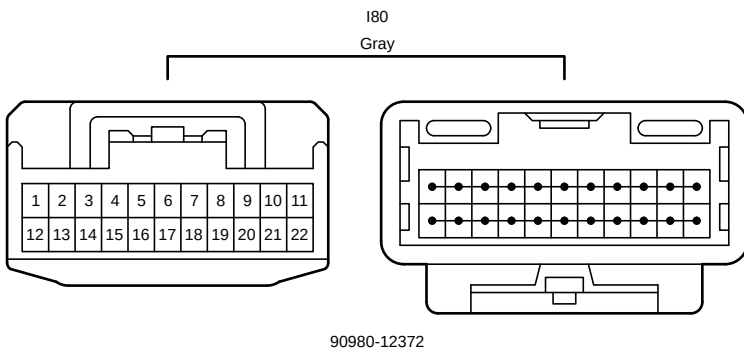

Position of Parts in Instrument Panel (LHD)

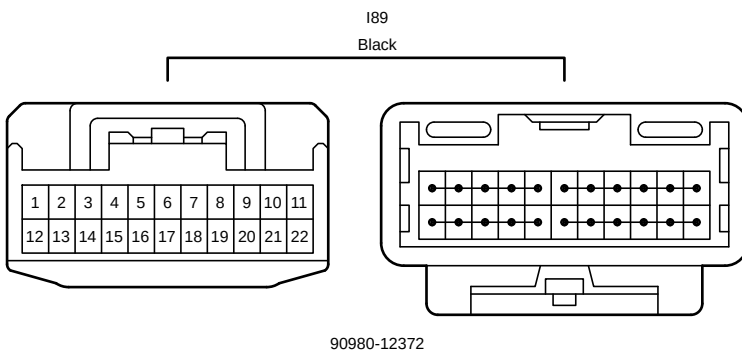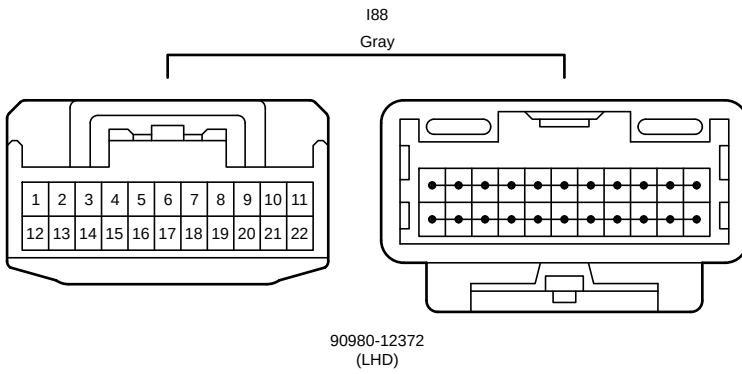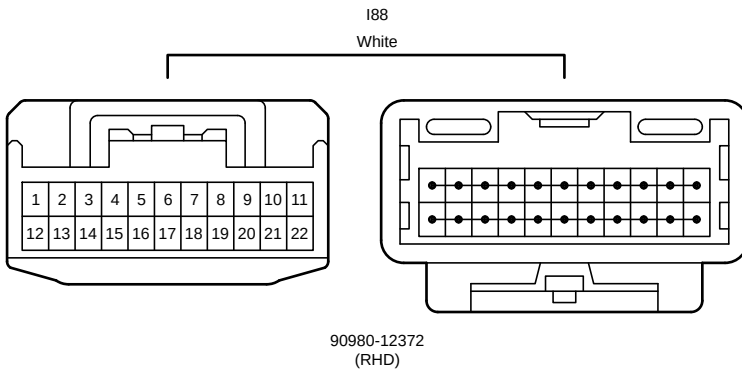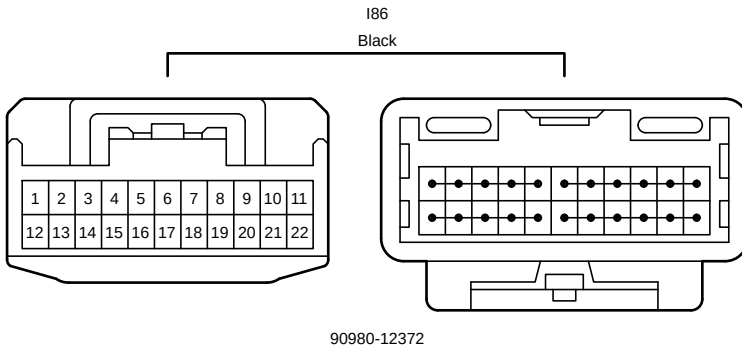

Position of Parts in Instrument Panel (LHD)

