



Position of Parts in Instrument Panel (LHD)

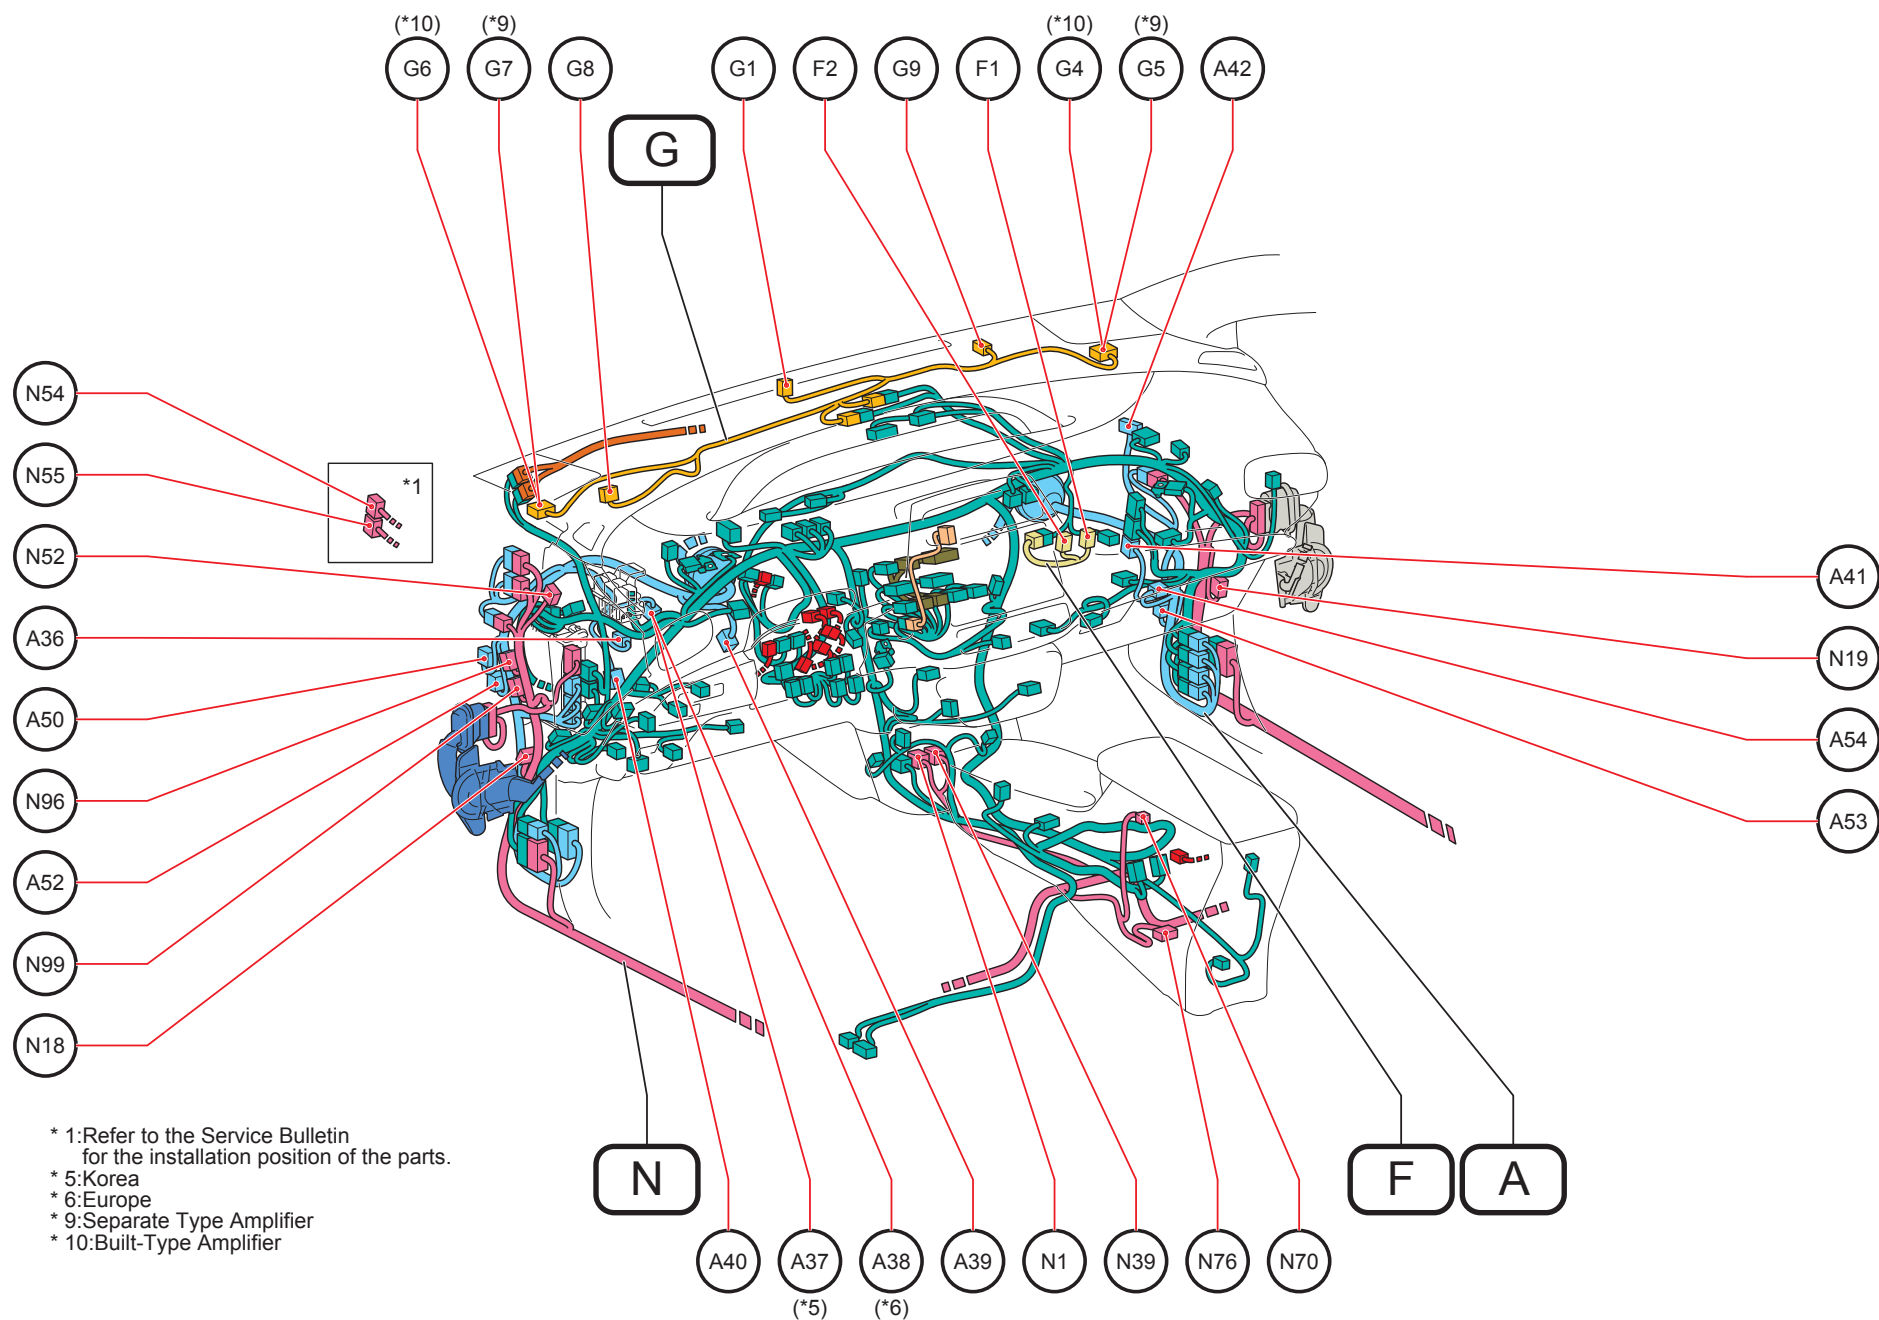


A36	Brake Pedal Stroke Sensor Assembly
A37	Stop Light Switch Assembly
A38	Stop Light Switch Assembly
A39	Accelerator Pedal Sensor Assembly
A40	Parking Brake Switch Assembly
A41	Hybrid Vehicle Control ECU
A42	Heat Pump ECU Assembly
A50	No. 1 Junction Connector
A52	No. 3 Junction Connector
A53	No. 4 Junction Connector
A54	No. 5 Junction Connector
F1	Instrument Panel Passenger Airbag without Door Assembly
F2	Instrument Panel Passenger Airbag without Door Assembly
G1	Automatic Light Control Sensor
G4	Front No. 2 Speaker Assembly RH
G5	Front No. 2 Speaker Assembly RH
G6	Front No. 2 Speaker Assembly LH
G7	Front No. 2 Speaker Assembly LH
G8	Combination Meter Mirror ECU
G9	No. 1 Indicator Light Assembly
N1	Airbag Sensor Assembly
N18	Diode (Front Courtesy Light LH)
N19	Diode (Front Courtesy Light RH)
N39	Airbag Sensor Assembly
N52	Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
N54	Certification ECU
N55	Certification ECU
N70	Rechargeable Battery Assembly
N76	Inverter Battery
N96	No. 22 Junction Connector
N99	No. 25 Junction Connector


Position of Parts in Instrument Panel (LHD)

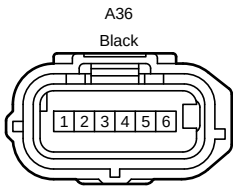


90980-12303

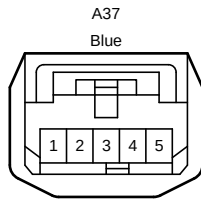


90980-12954

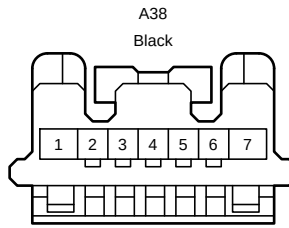


90980-12092

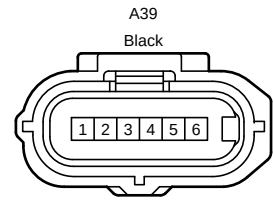


90980-12831

 


90980-10871

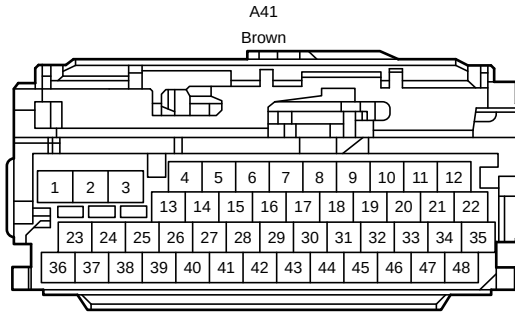


90980-12C24

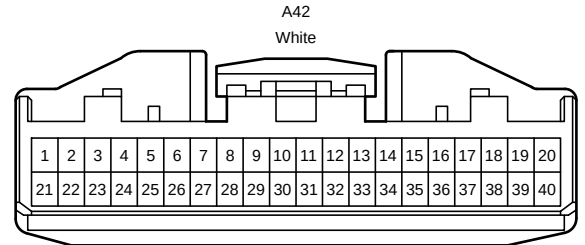


90980-12557

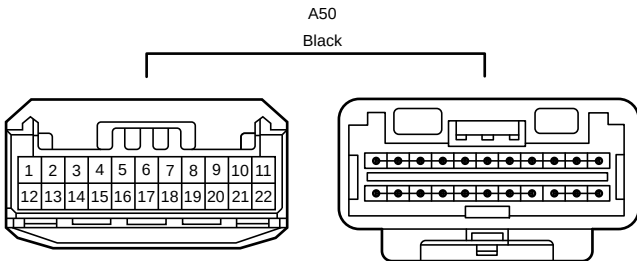


90980-12B54

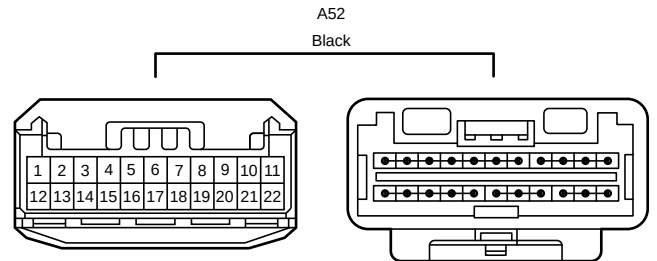


90980-12B54

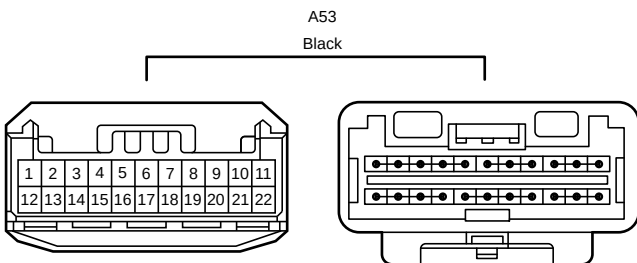


90980-12B54

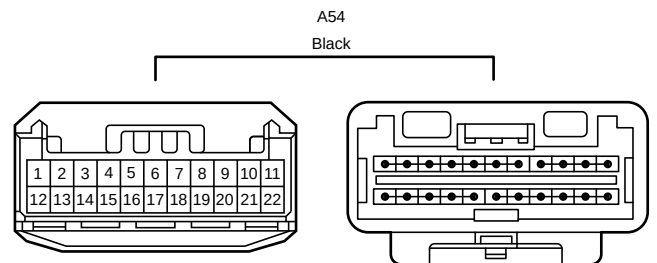


90980-12B54

 


90980-12224

 


90980-12219

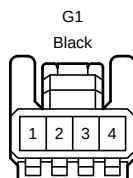

82824-50130

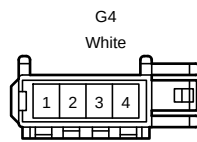

90980-12304

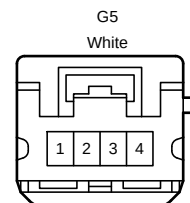

90980-12733

Position of Parts in Instrument Panel (LHD)

