



Position of Parts in Instrument Panel (RHD)

* 1: Refer to the Service Bulletin for the installation position of the parts.

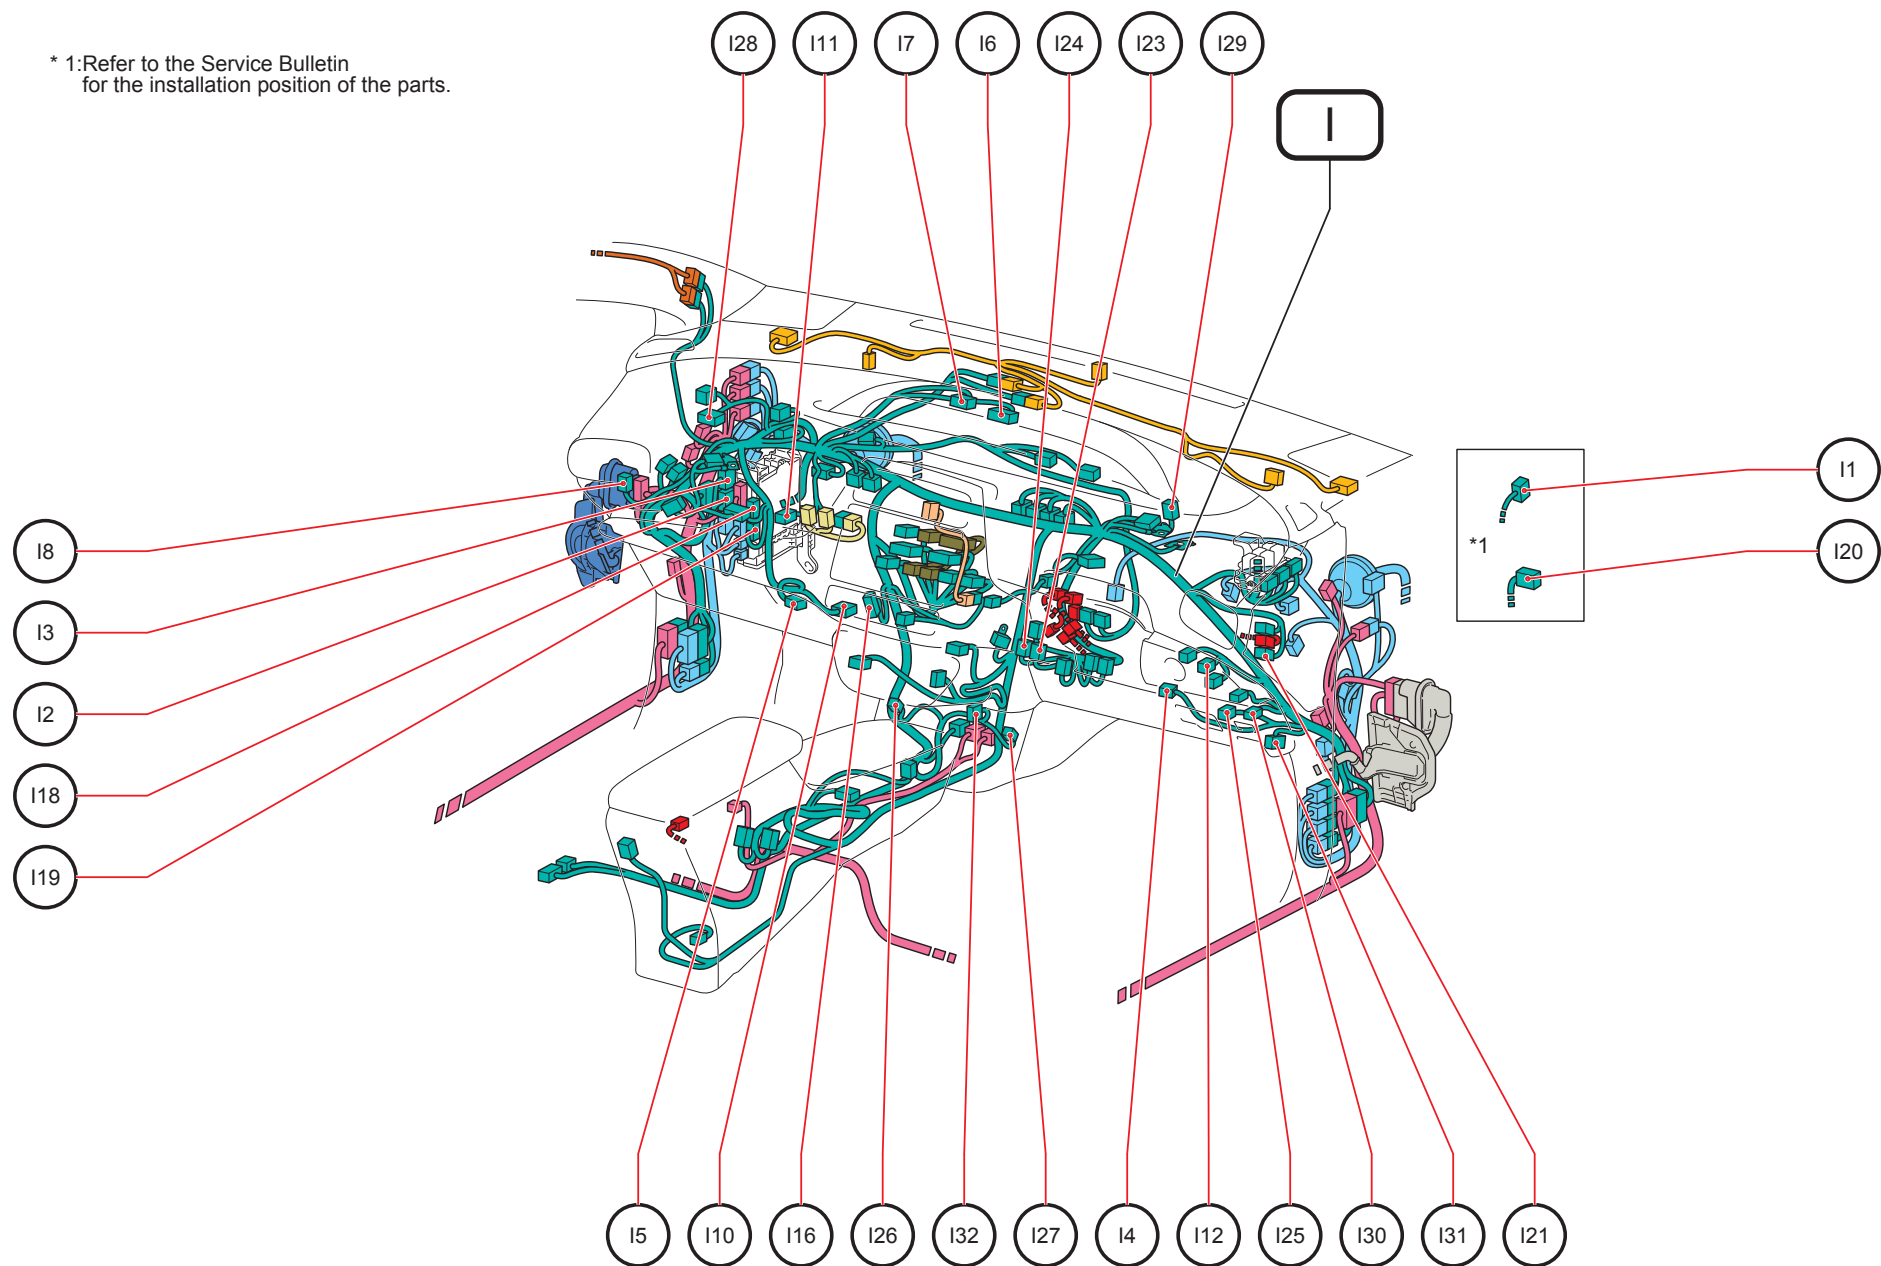


I1	Certification ECU
I2	Hybrid Vehicle Control ECU
I3	Hybrid Vehicle Control ECU
I4	No. 1 Interior Illumination Light Assembly RH
I5	No. 1 Interior Illumination Light Assembly LH
I6	Combination Meter Assembly
I7	Combination Meter Assembly
I8	Airbag Cut Off Switch Cylinder Sub-Assembly
I10	Blower Motor with Fan Sub-Assembly
I11	Glove Box Light Assembly
I12	Combination Switch Assembly
I16	Double Lock Door Control Relay Assembly
I18	Main Body ECU
I19	Main Body ECU
I20	ID Code Box
I21	Power Steering ECU Assembly
I23	Spiral Cable with Sensor Sub-Assembly
I24	Spiral Cable with Sensor Sub-Assembly
I25	No. 1 Instrument Panel Airbag Assembly Lower
I26	Seat Heater Switch LH
I27	Seat Heater Switch RH
I28	Clearance Warning ECU Assembly
I29	No. 1 Clearance Warning Buzzer
I30	Fuel Lid Opener Switch
I31	DLC3
I32	No. 2 Indicator Light Assembly


Position of Parts in Instrument Panel (RHD)

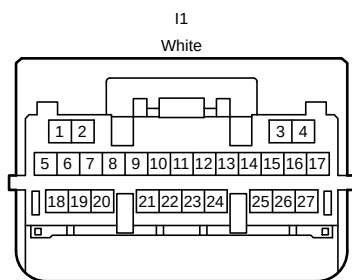

90980-12B78

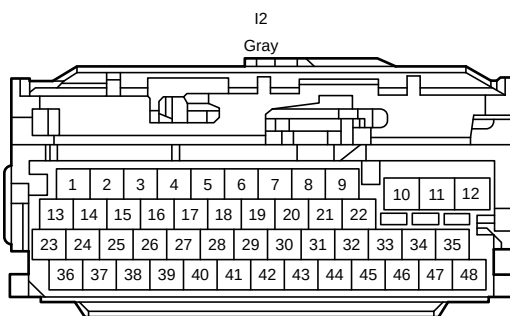

90980-12C23

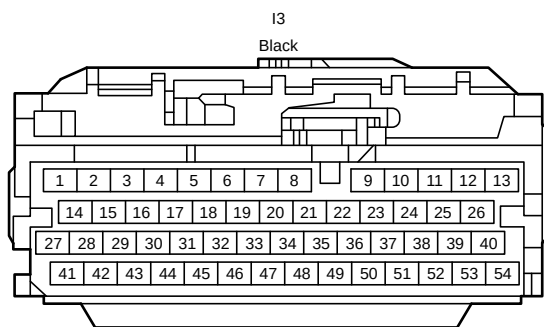


90980-12B96




90980-11918




90980-11918

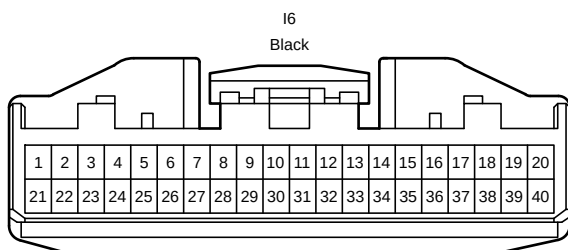


90980-12557

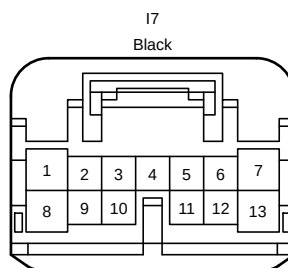


90980-12767

 


90980-12063

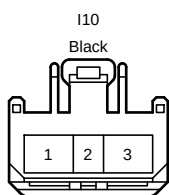


90980-11667

 

90980-11918

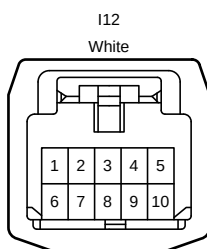


82824-78040

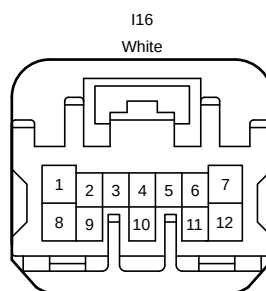

90980-12812


Position of Parts in Instrument Panel (RHD)

I18
White

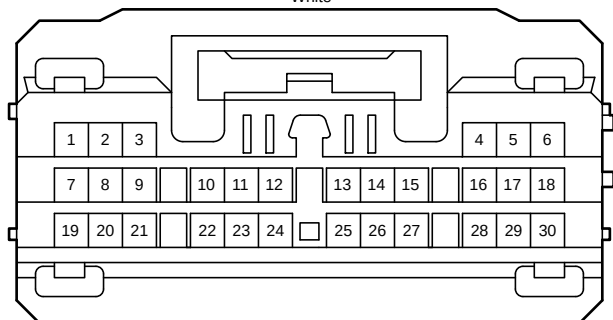


90980-12909

I19
White

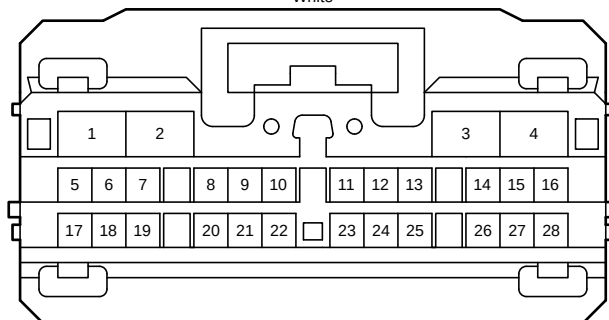


90980-12908

I20
White

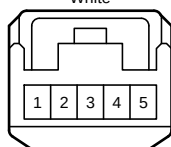


90980-12366

I21
Black

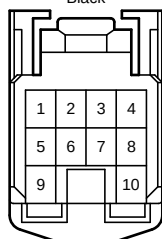


90980-12898

I23
Black

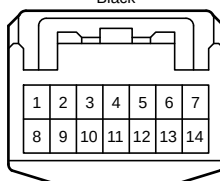


90980-12370

I24
Yellow

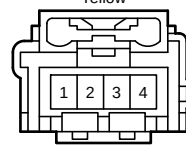


90980-12160

I25
Yellow

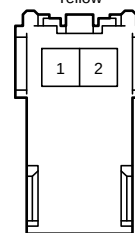


90980-12253

 I26
Blue




90980-12012

I27
White

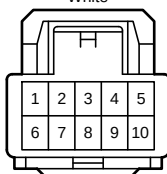


90980-12135

I28
Black

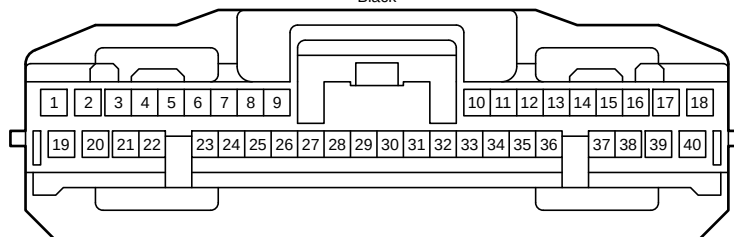


90980-12924

 I29
Black




90980-10825

I30
Black

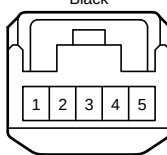


90980-12366

I31
White

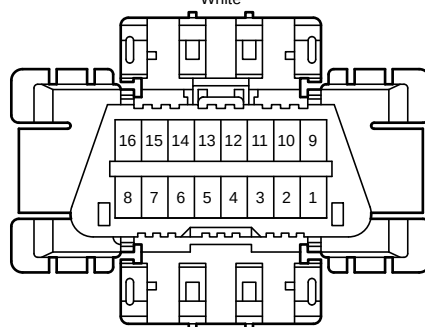

90980-11665

I32
Black

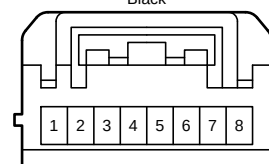

90980-12550