

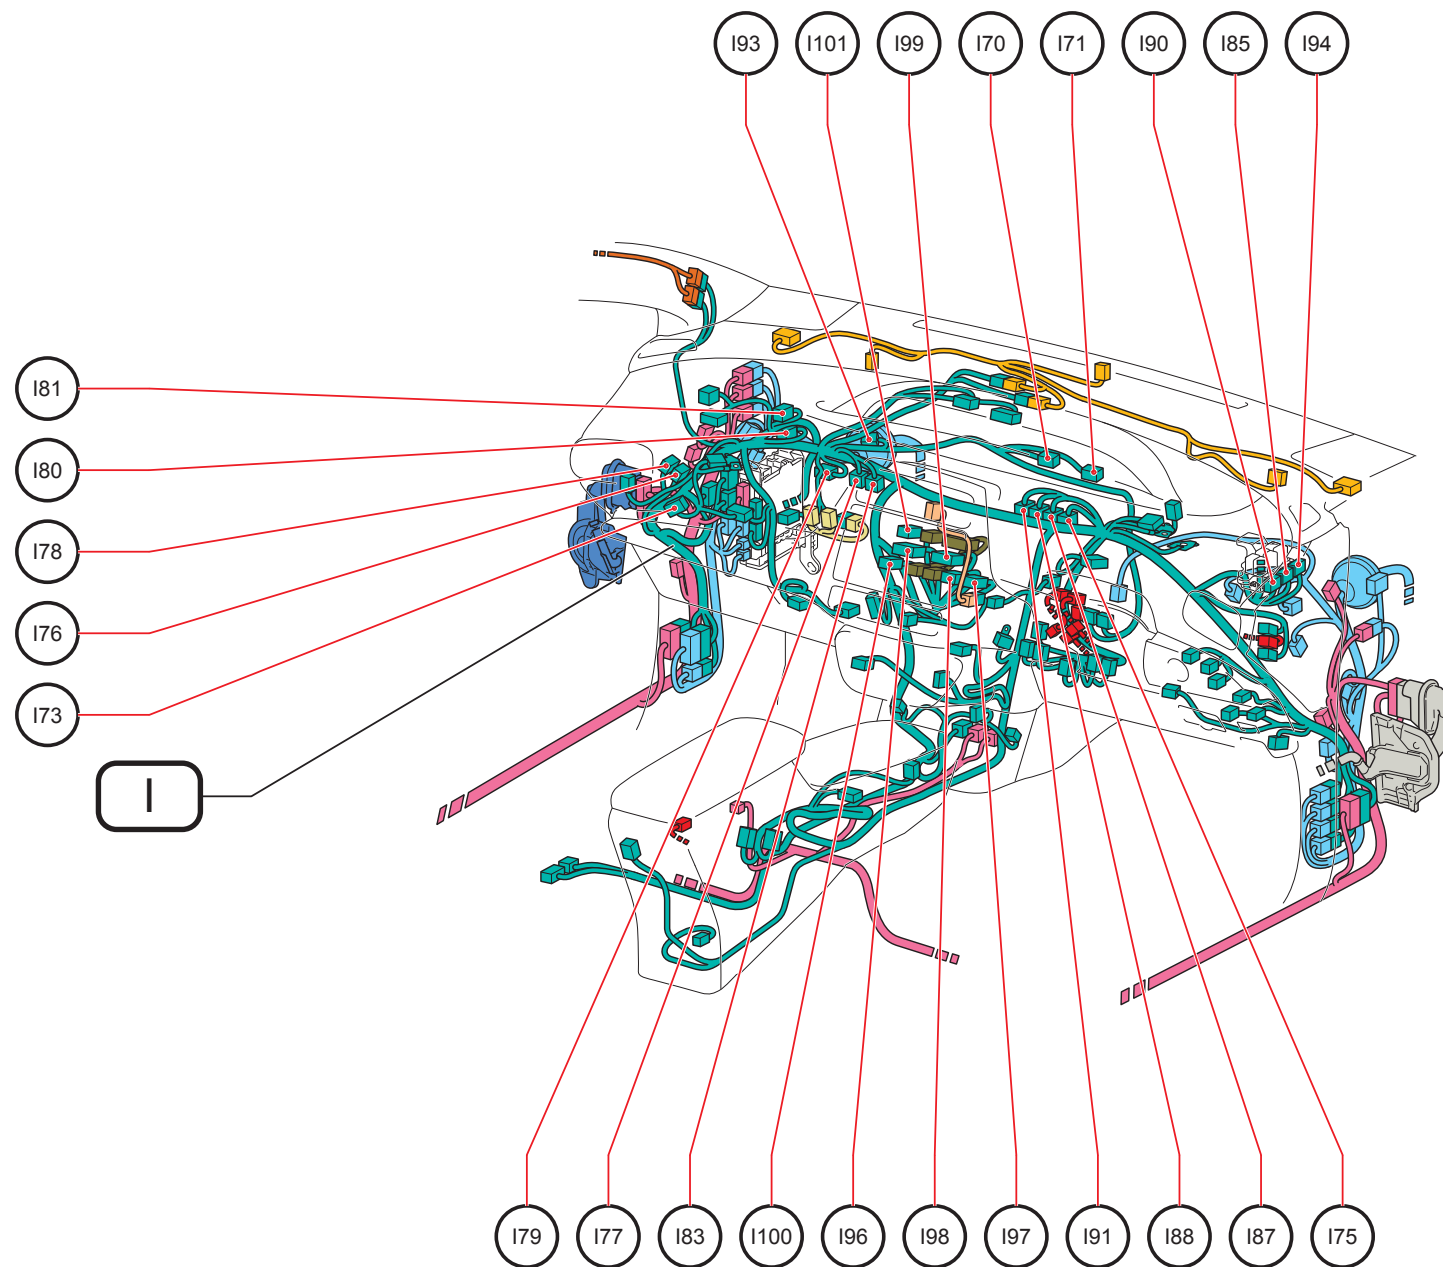
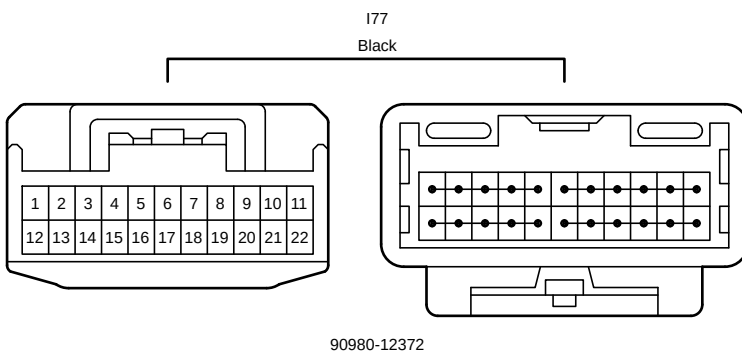
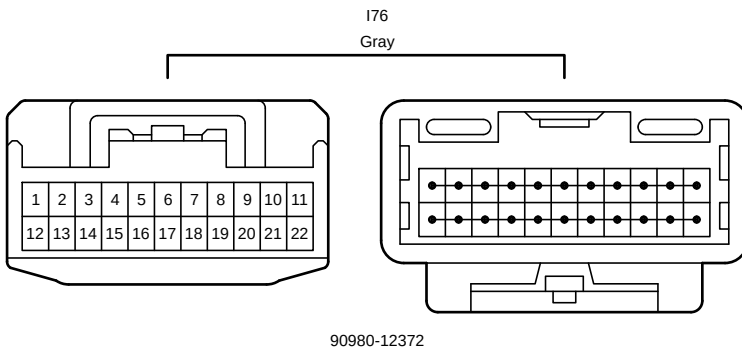
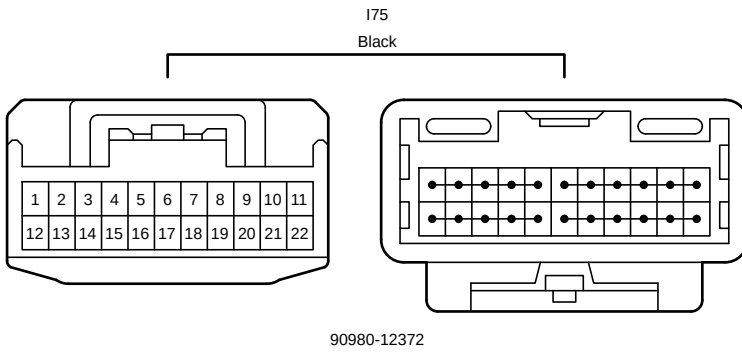
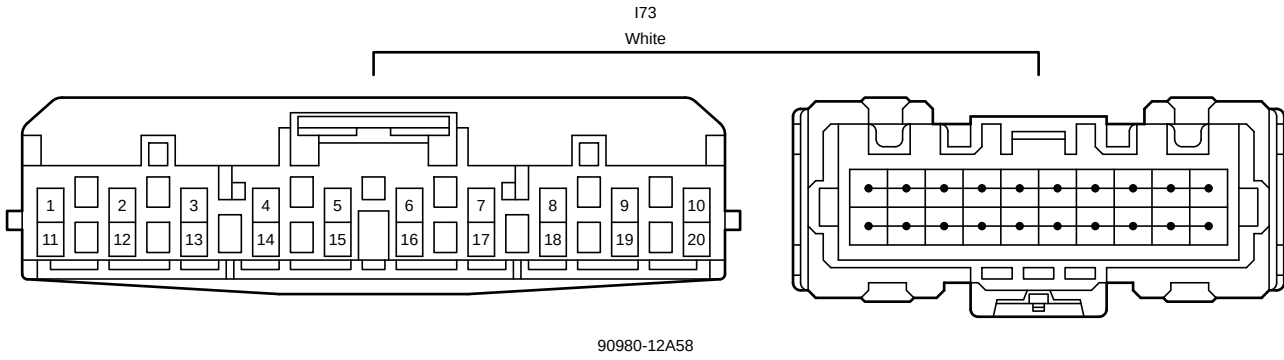


Position of Parts in Instrument Panel (RHD)

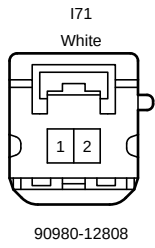

I70	No. 2 Cooler Thermistor
I71	No. 3 Cooler Thermistor
I73	No. 1 CAN Junction Connector
I75	No. 2 CAN Junction Connector
I76	No. 3 CAN Junction Connector
I77	No. 4 CAN Junction Connector
I78	No. 5 CAN Junction Connector
I79	No. 6 Junction Connector
I80	No. 7 Junction Connector
I81	No. 8 Junction Connector
I83	No. 9 Junction Connector
I85	No. 11 Junction Connector
I87	No. 14 Junction Connector
I88	No. 15 Junction Connector
I90	No. 16 Junction Connector
I91	No. 18 Junction Connector
I93	No. 20 Junction Connector
I94	No. 21 Junction Connector
I96	Radio & Display Receiver Assembly
I97	Radio & Display Receiver Assembly
I98	Radio & Display Receiver Assembly
I99	Radio & Display Receiver Assembly
I100	Radio & Display Receiver Assembly
I101	Navigation ECU


Position of Parts in Instrument Panel (RHD)

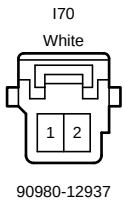

Position of Parts in Instrument Panel (RHD)

I78


Gray

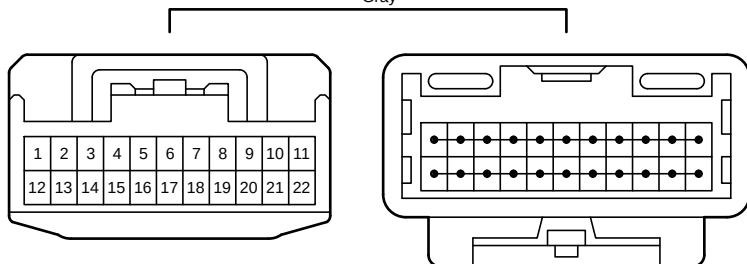

90980-12372

I79


Gray

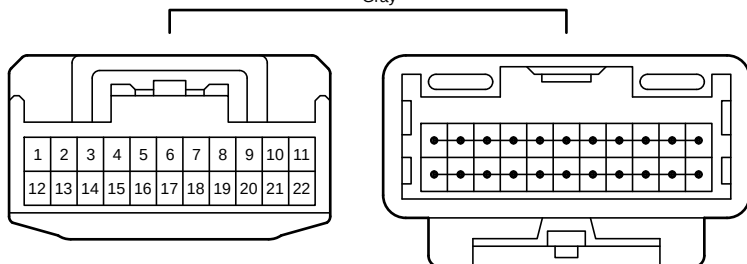

90980-12372
(RHD)

I79


White

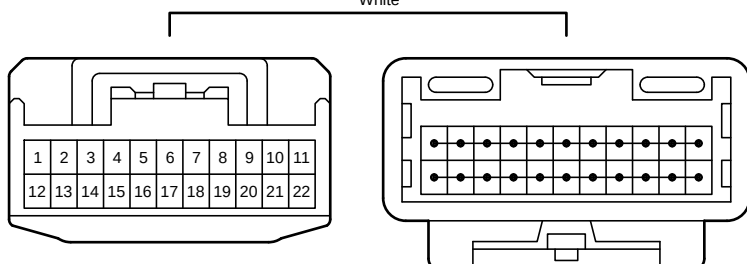

90980-12372
(LHD)

I80


Gray

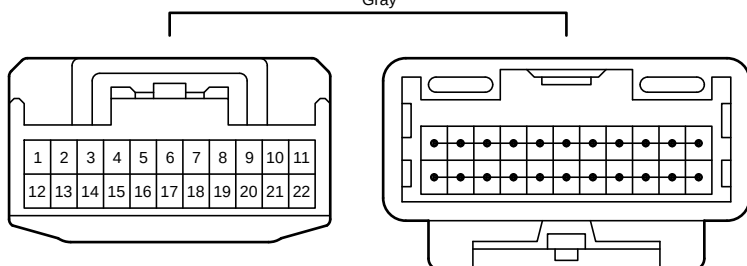

90980-12372


Position of Parts in Instrument Panel (RHD)

I81
Gray

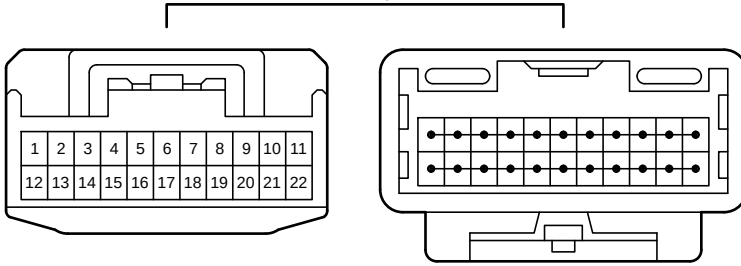


90980-12372

I83
Blue

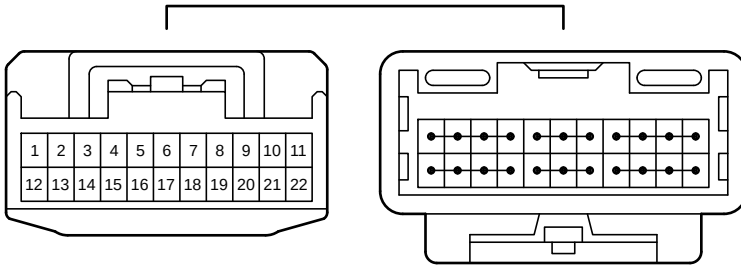


90980-12372

I85
Gray

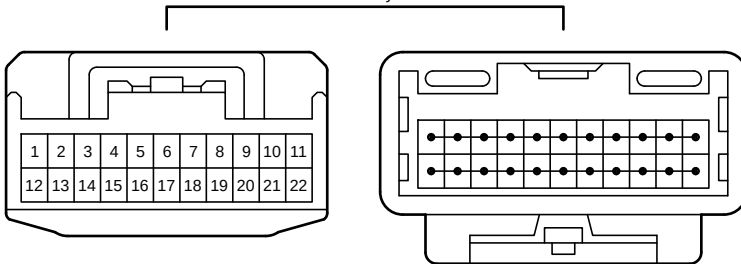

90980-12372



I87
Gray

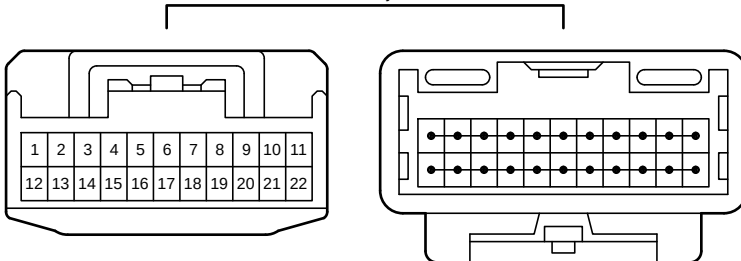

90980-12372



Position of Parts in Instrument Panel (RHD)

I88
White

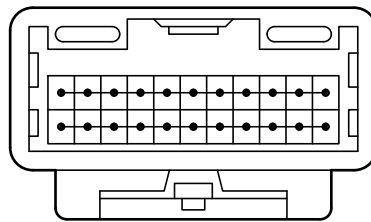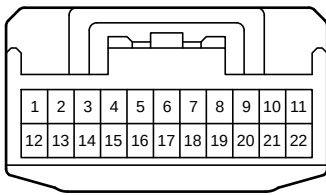



90980-12372
(RHD)

I88
Gray

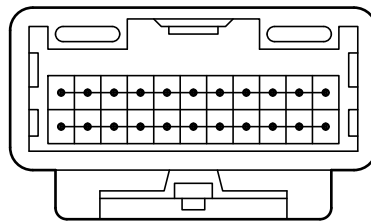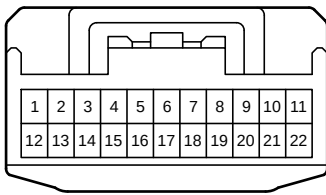



90980-12372
(LHD)

I90
White

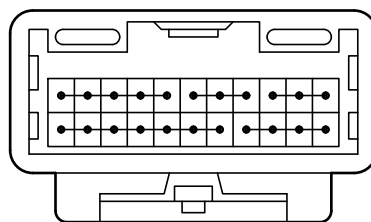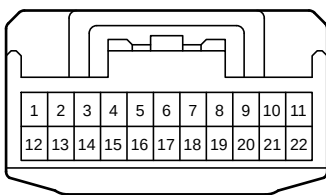

90980-12372

I91
Blue

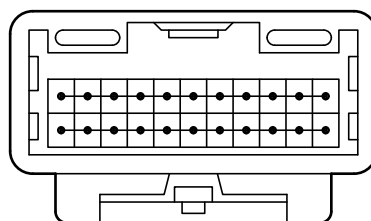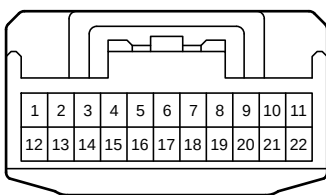

90980-12372

Position of Parts in Instrument Panel (RHD)

