


Position of Parts in Seat (LHD)


* 1:Korea
* 2:Europe

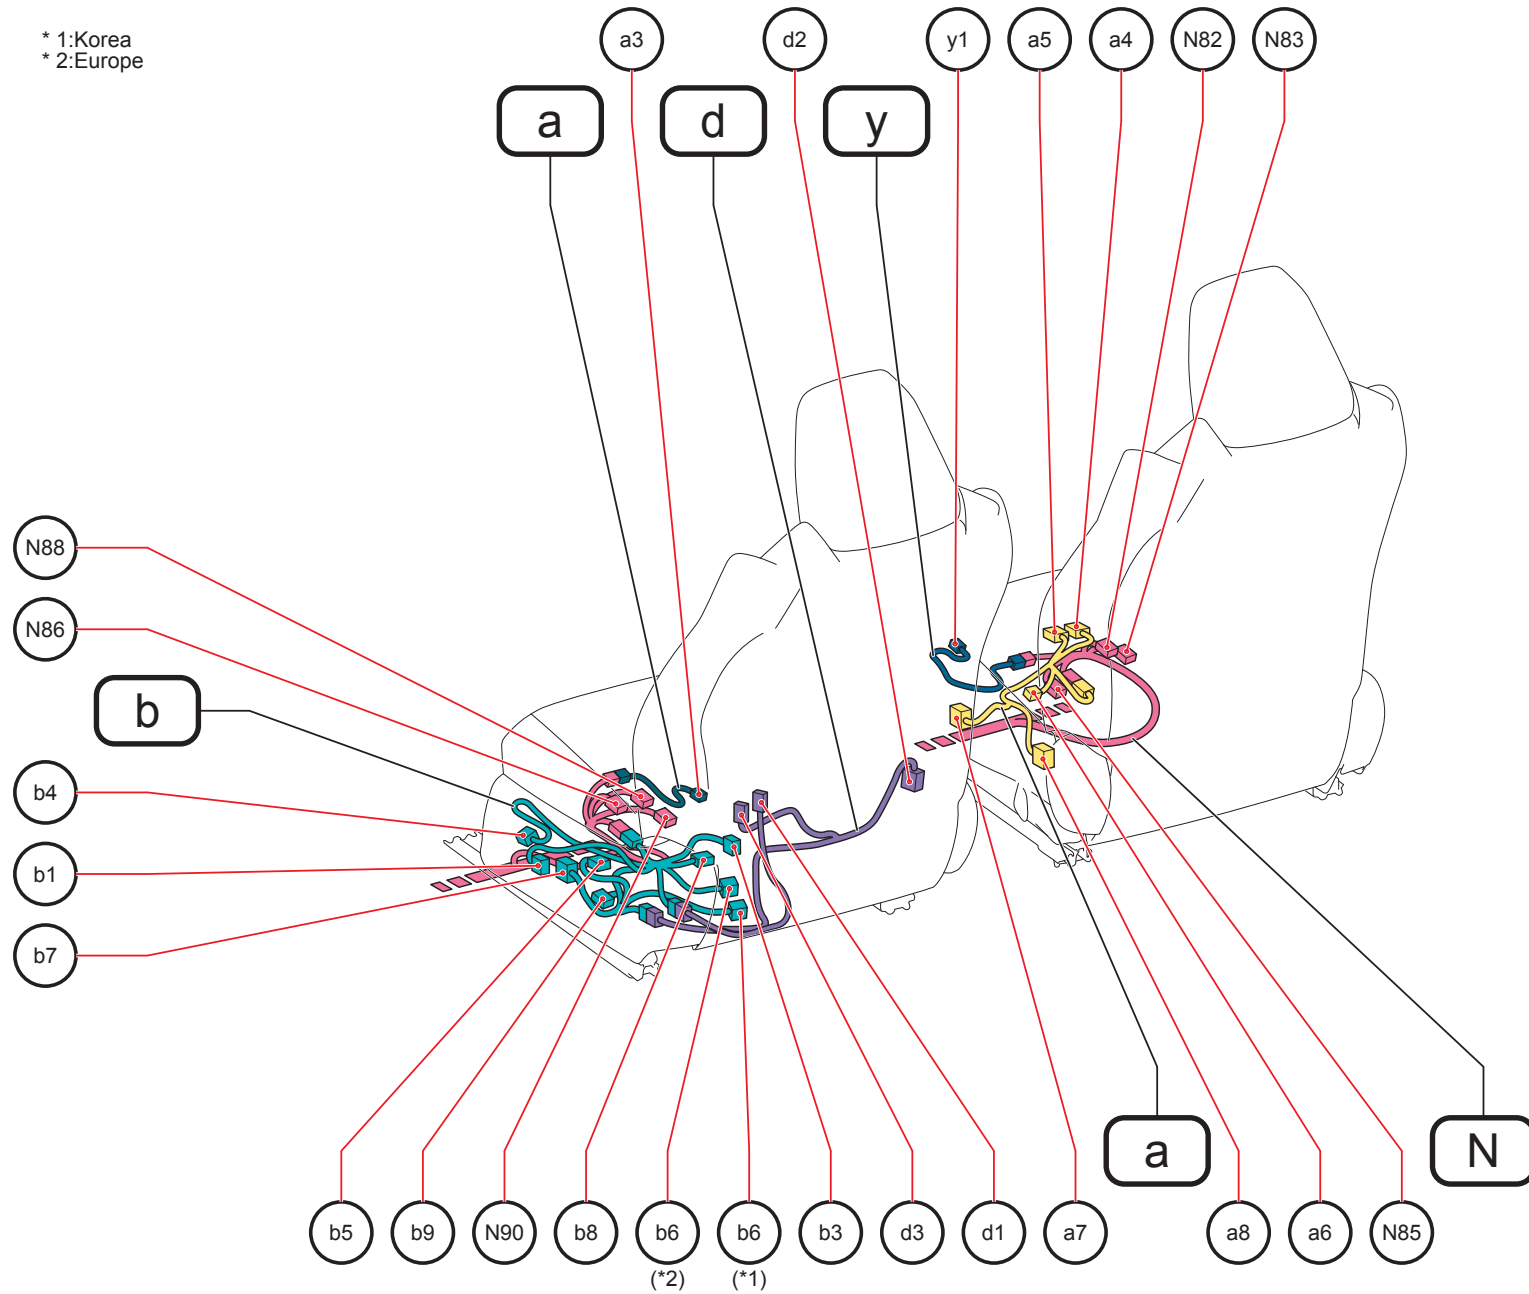


Position of Parts in Seat (LHD)

N82	Front Seat Airbag Assembly RH
N83	Front Seat Cushion Heater Assembly RH
N85	Front Seat Inner Belt Assembly RH
N86	Front Seat Airbag Assembly LH
N88	Front Seat Inner Belt Assembly LH
N90	Front Seat Inner Belt Assembly LH
a3	Seat Position Airbag Sensor
a4	Occupant Detection ECU
a5	Occupant Detection ECU
a6	Front Seat Inner Belt Assembly RH
a7	Front in Weight Detection Sensor Sub-Assembly
a8	Rear in Weight Detection Sensor Sub-Assembly
b1	Front Lumbar Power Seat Switch LH
b3	Front Power Seat Slide Position Motor LH (Front Seat Adjuster Assembly LH)
b4	Front Power Seat Tilt Position Motor LH (Front Seat Adjuster Assembly LH)
b5	Front Power Seat Lift Position Motor LH (Front Seat Adjuster Assembly LH)
b6	Front Seat Cushion Heater Assembly LH
b7	Front Power Seat Switch LH
b8	Condenser
b9	No. 31 Junction Connector
d1	Front Power Seat Lumbar Support Motor LH (Lumbar Support Adjuster Assembly LH)
d2	Front Power Seat Reclining Position Motor LH (Front Seat Back Frame Sub-Assembly LH)
d3	Front Power Seat Lumbar Support Motor LH (Lumbar Support Adjuster Assembly LH)
y1	Front Seat Cushion Airbag Assembly RH


Position of Parts in Seat (LHD)

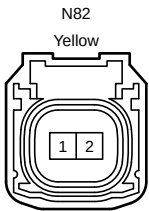


90980-12698

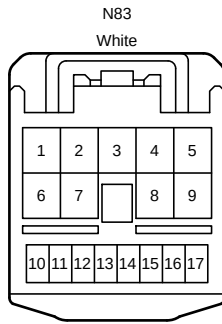


90980-12374

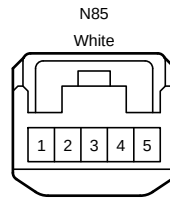

90980-12366

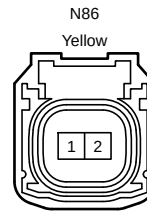


90980-12698

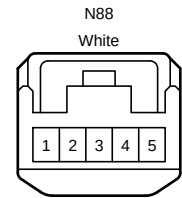


90980-12366




90980-10942

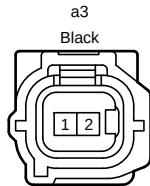


90980-12416

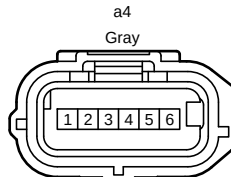


90980-12303

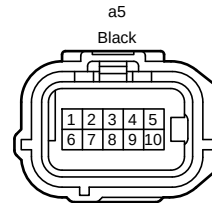


90980-12380

 


90980-11155

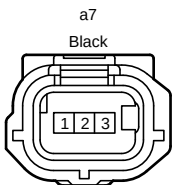


90980-12353

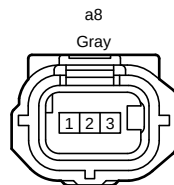


90980-12354

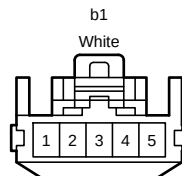


90980-12348

 


90980-12341

 


90980-12341

 


90980-12341

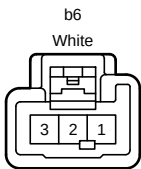


90980-11763

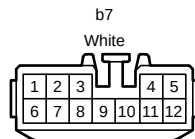


90980-10803

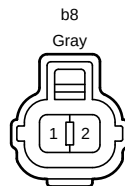


90980-10843

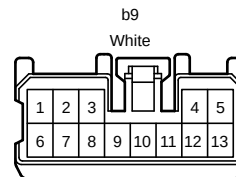


90980-12346

 


90980-12341

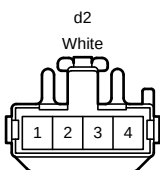

90980-12335

 

90980-12341

 

90980-12452