



Engine Control (3ZR-FAE)

- * 1 : w/ Entry & Start System
- * 3 : w/ Hood Molding
- * 4 : w/o Hood Molding

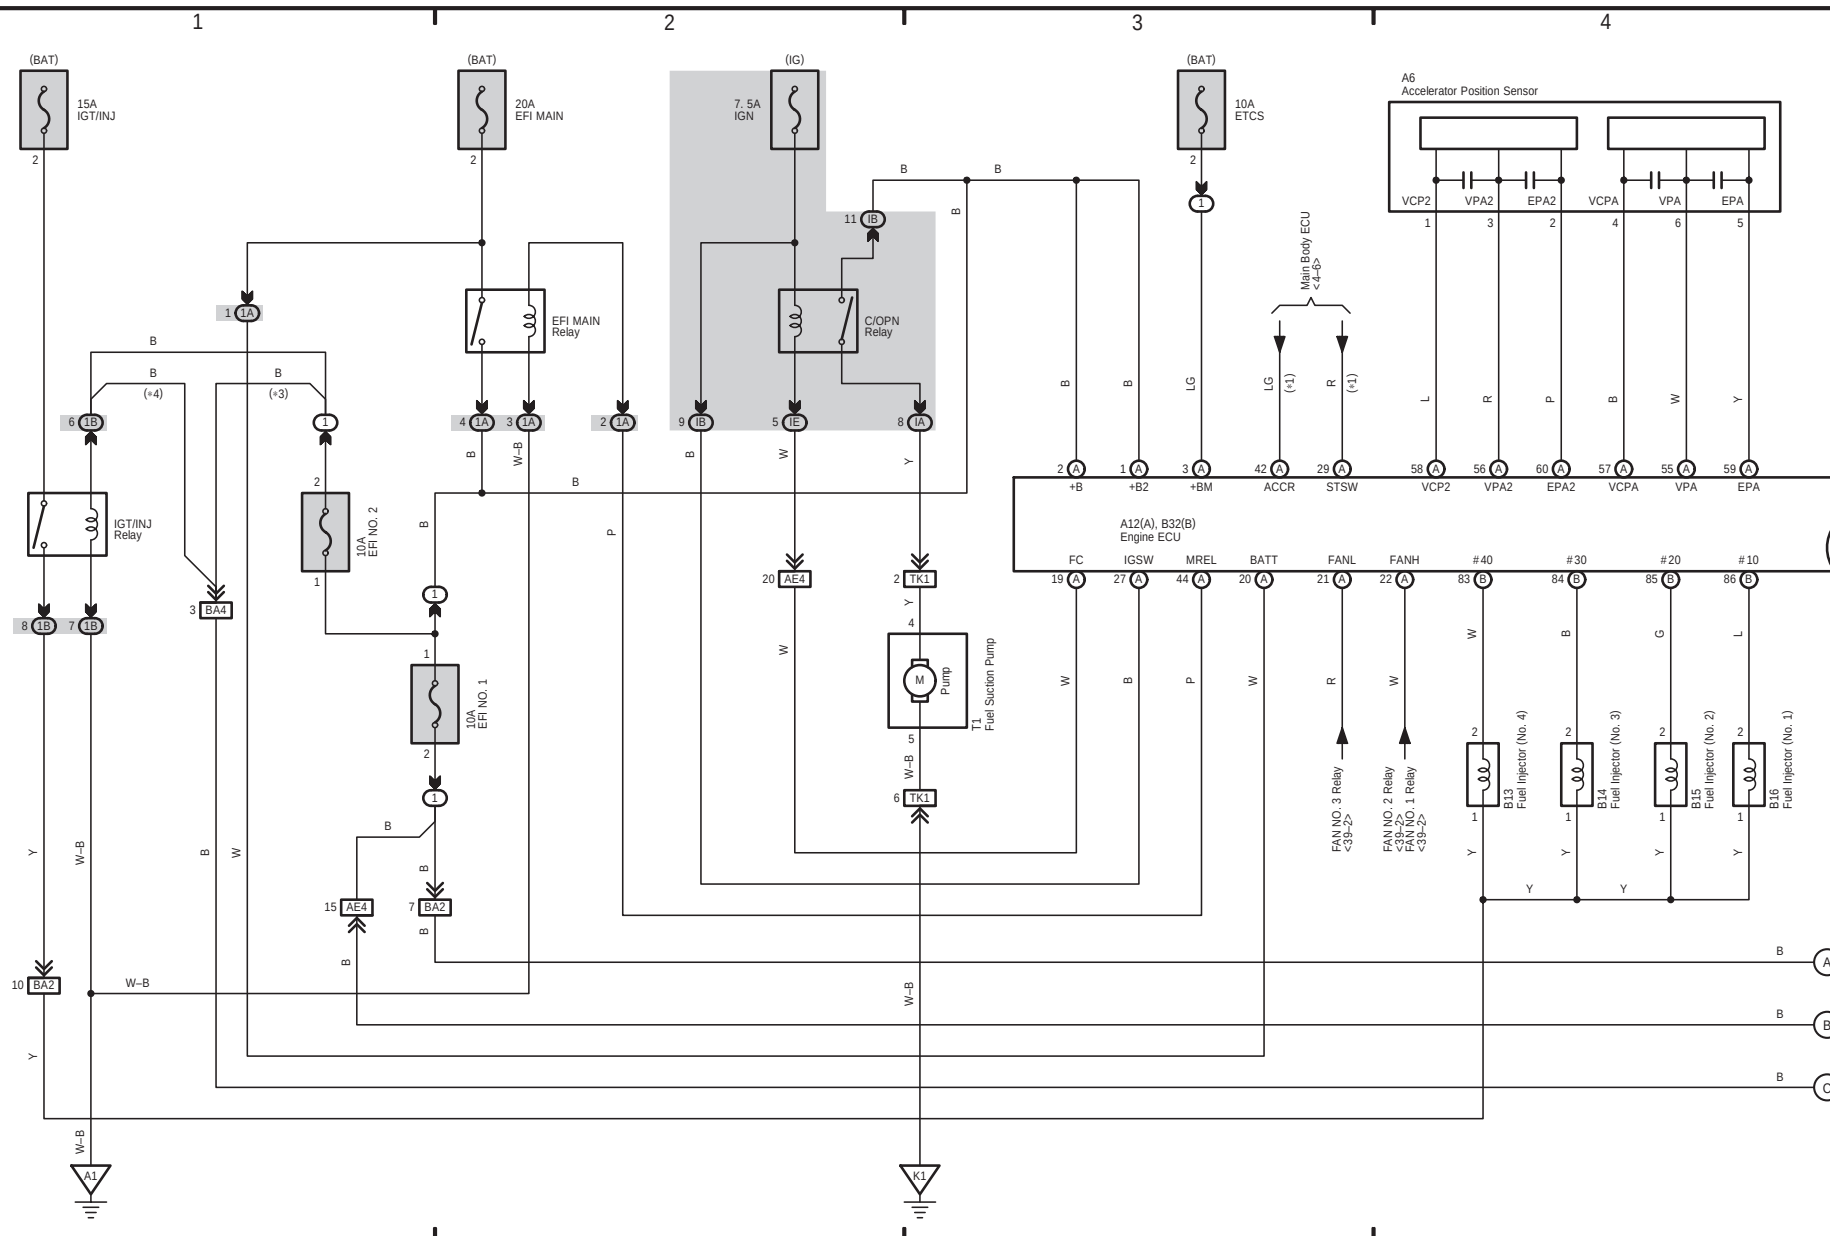


Engine Control (3ZR-FAE)

* 1 : w/ Entry & Start System
* 2 : w/o Entry & Start System

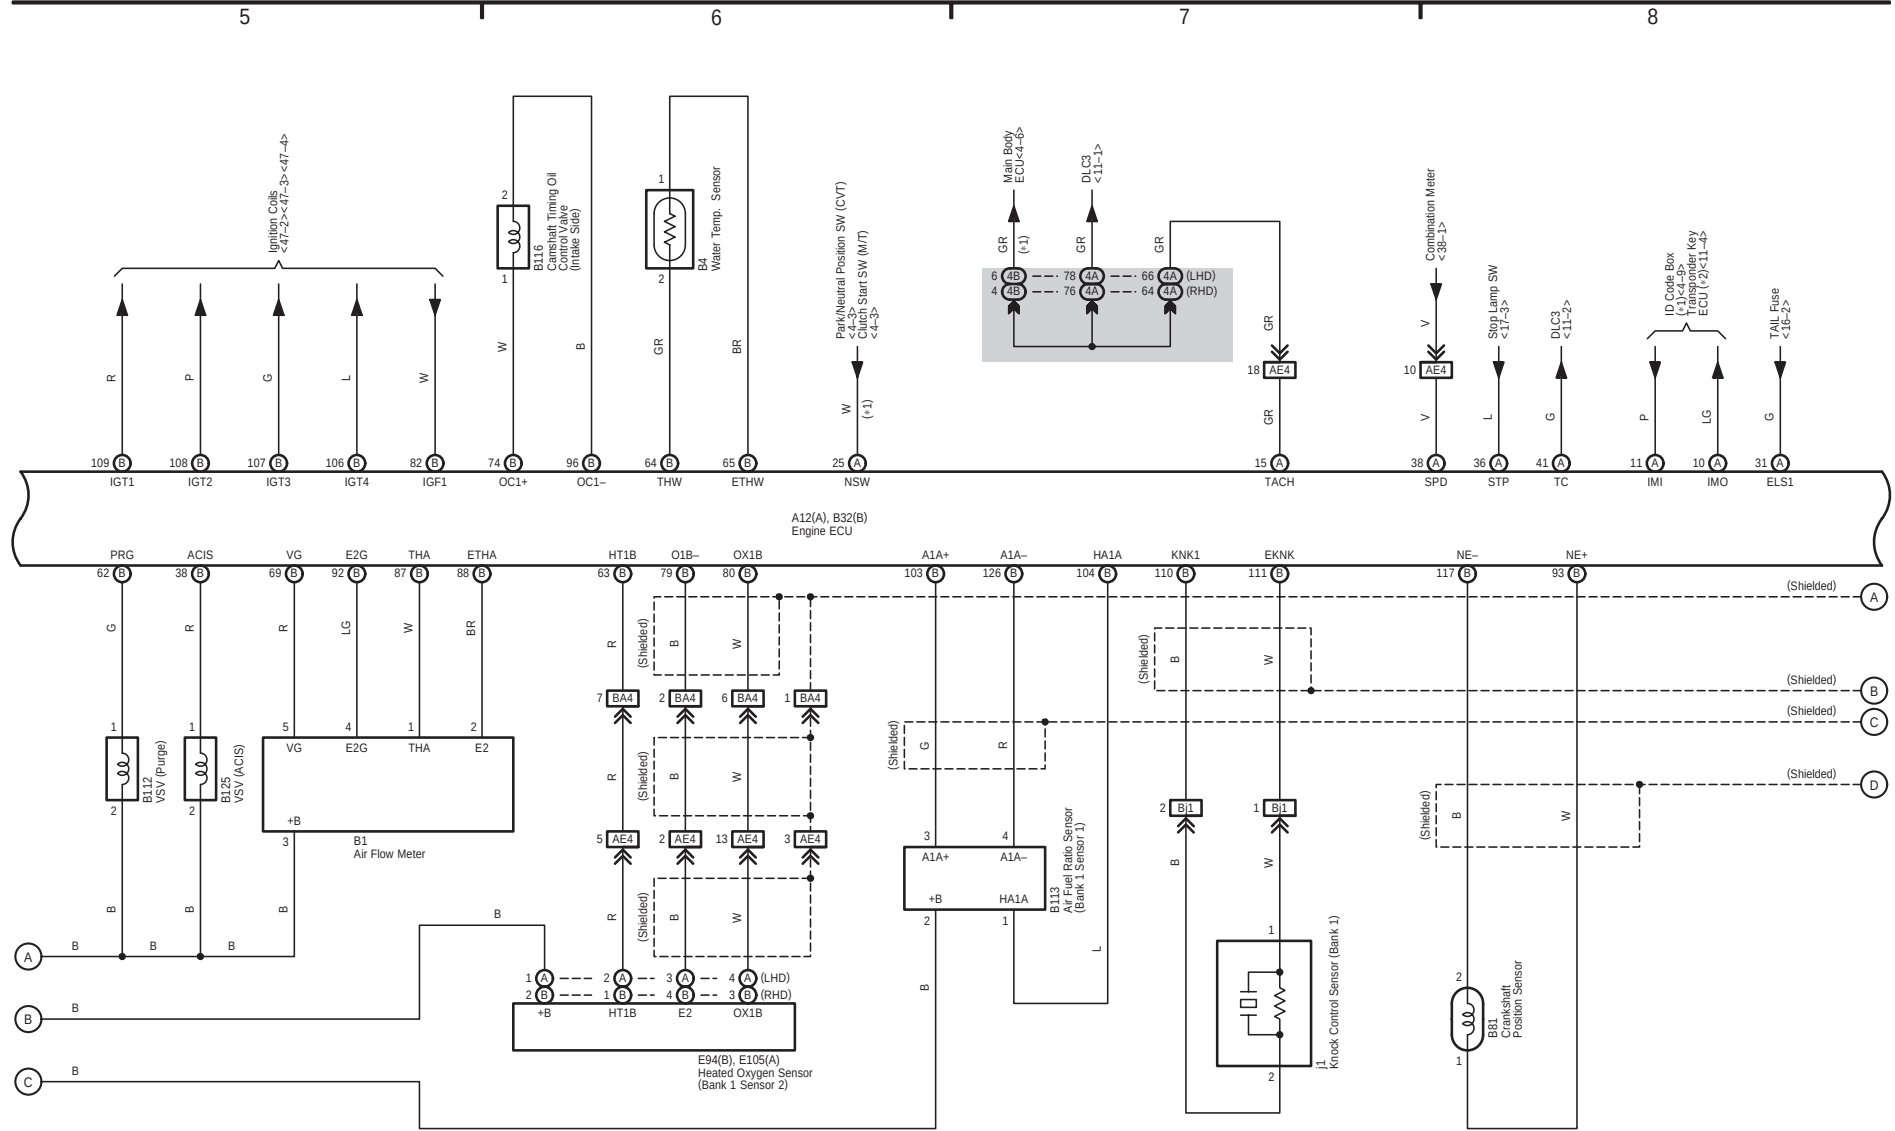



Engine Control (3ZR-FAE)

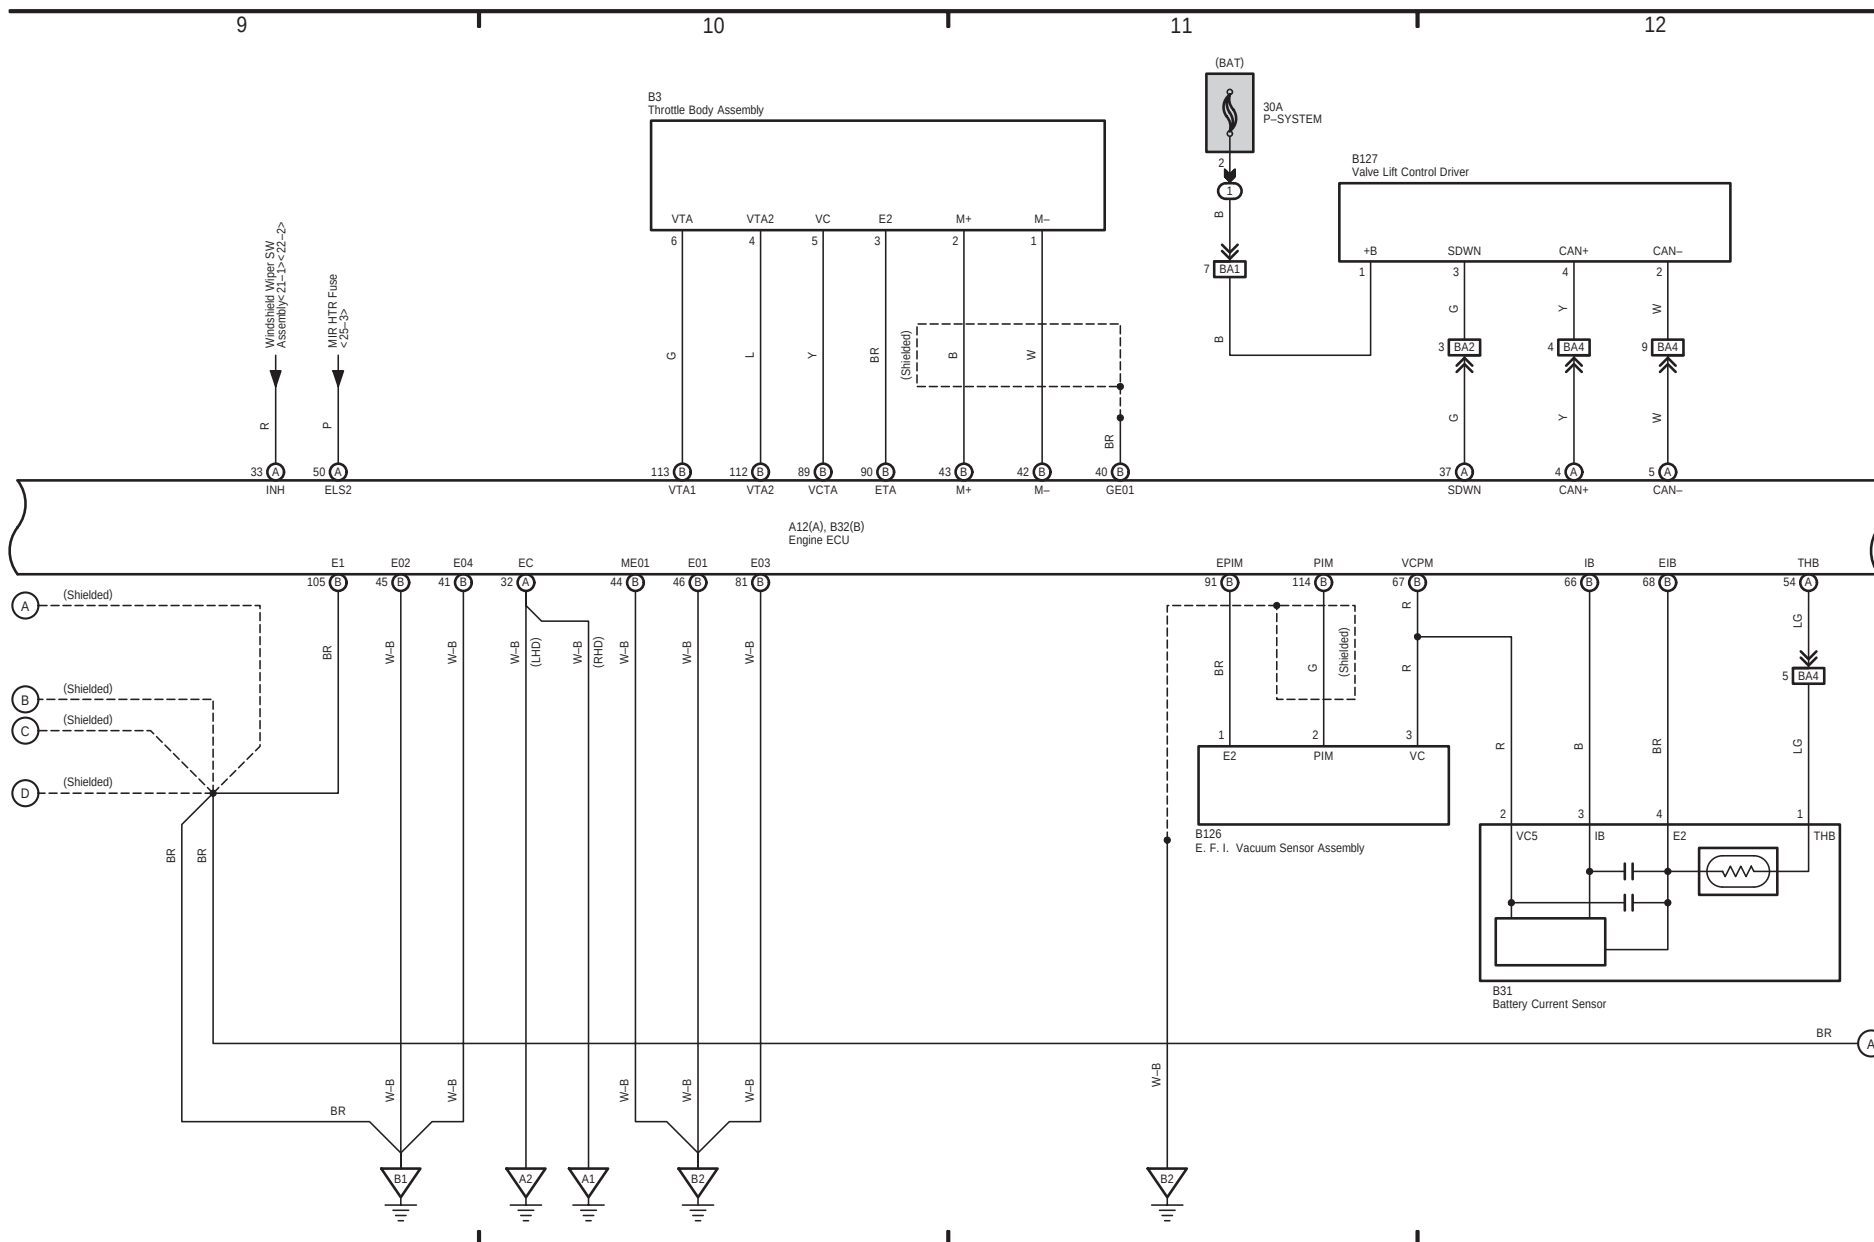

Engine Control (3ZR-FAE)

Cruise Control (3ZR-FAE)

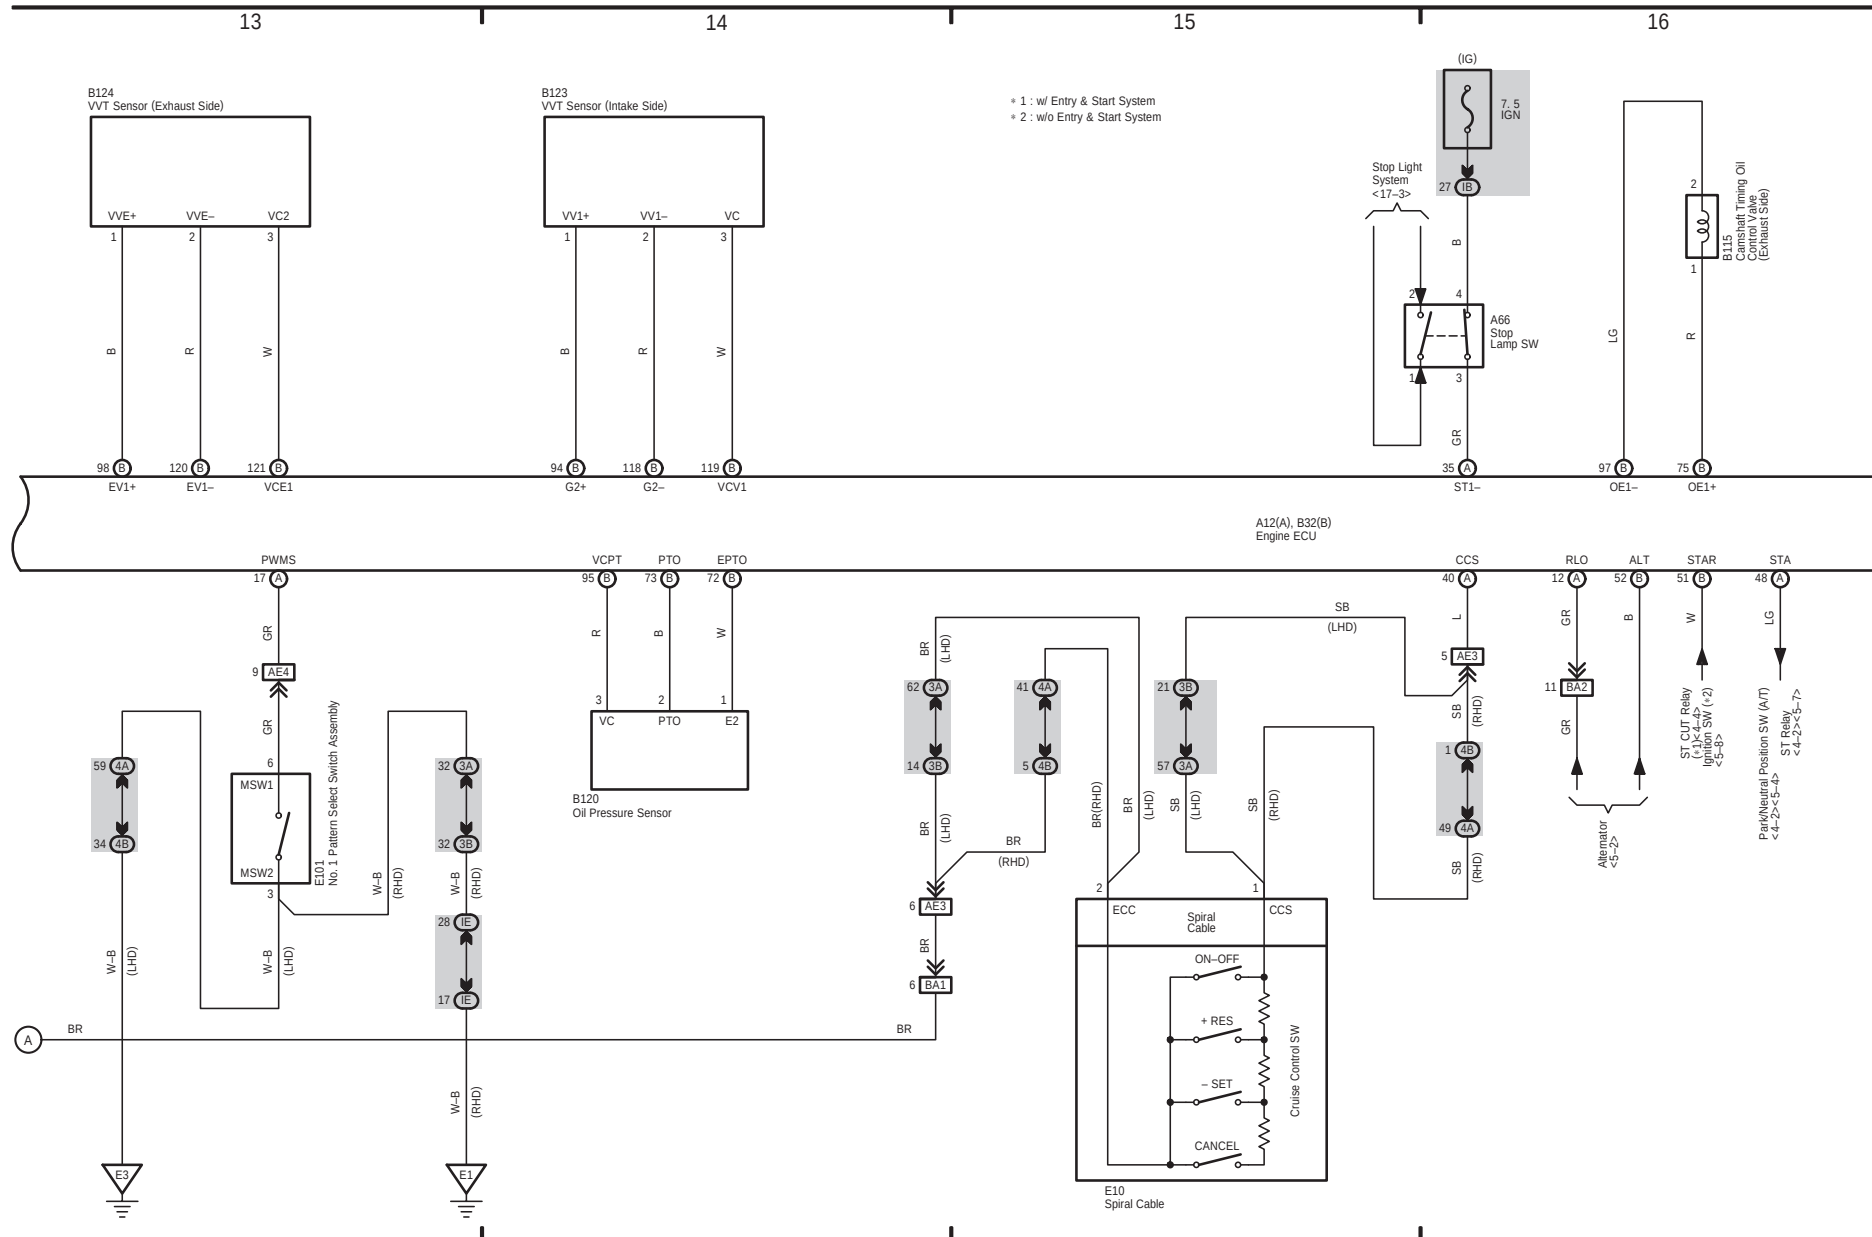

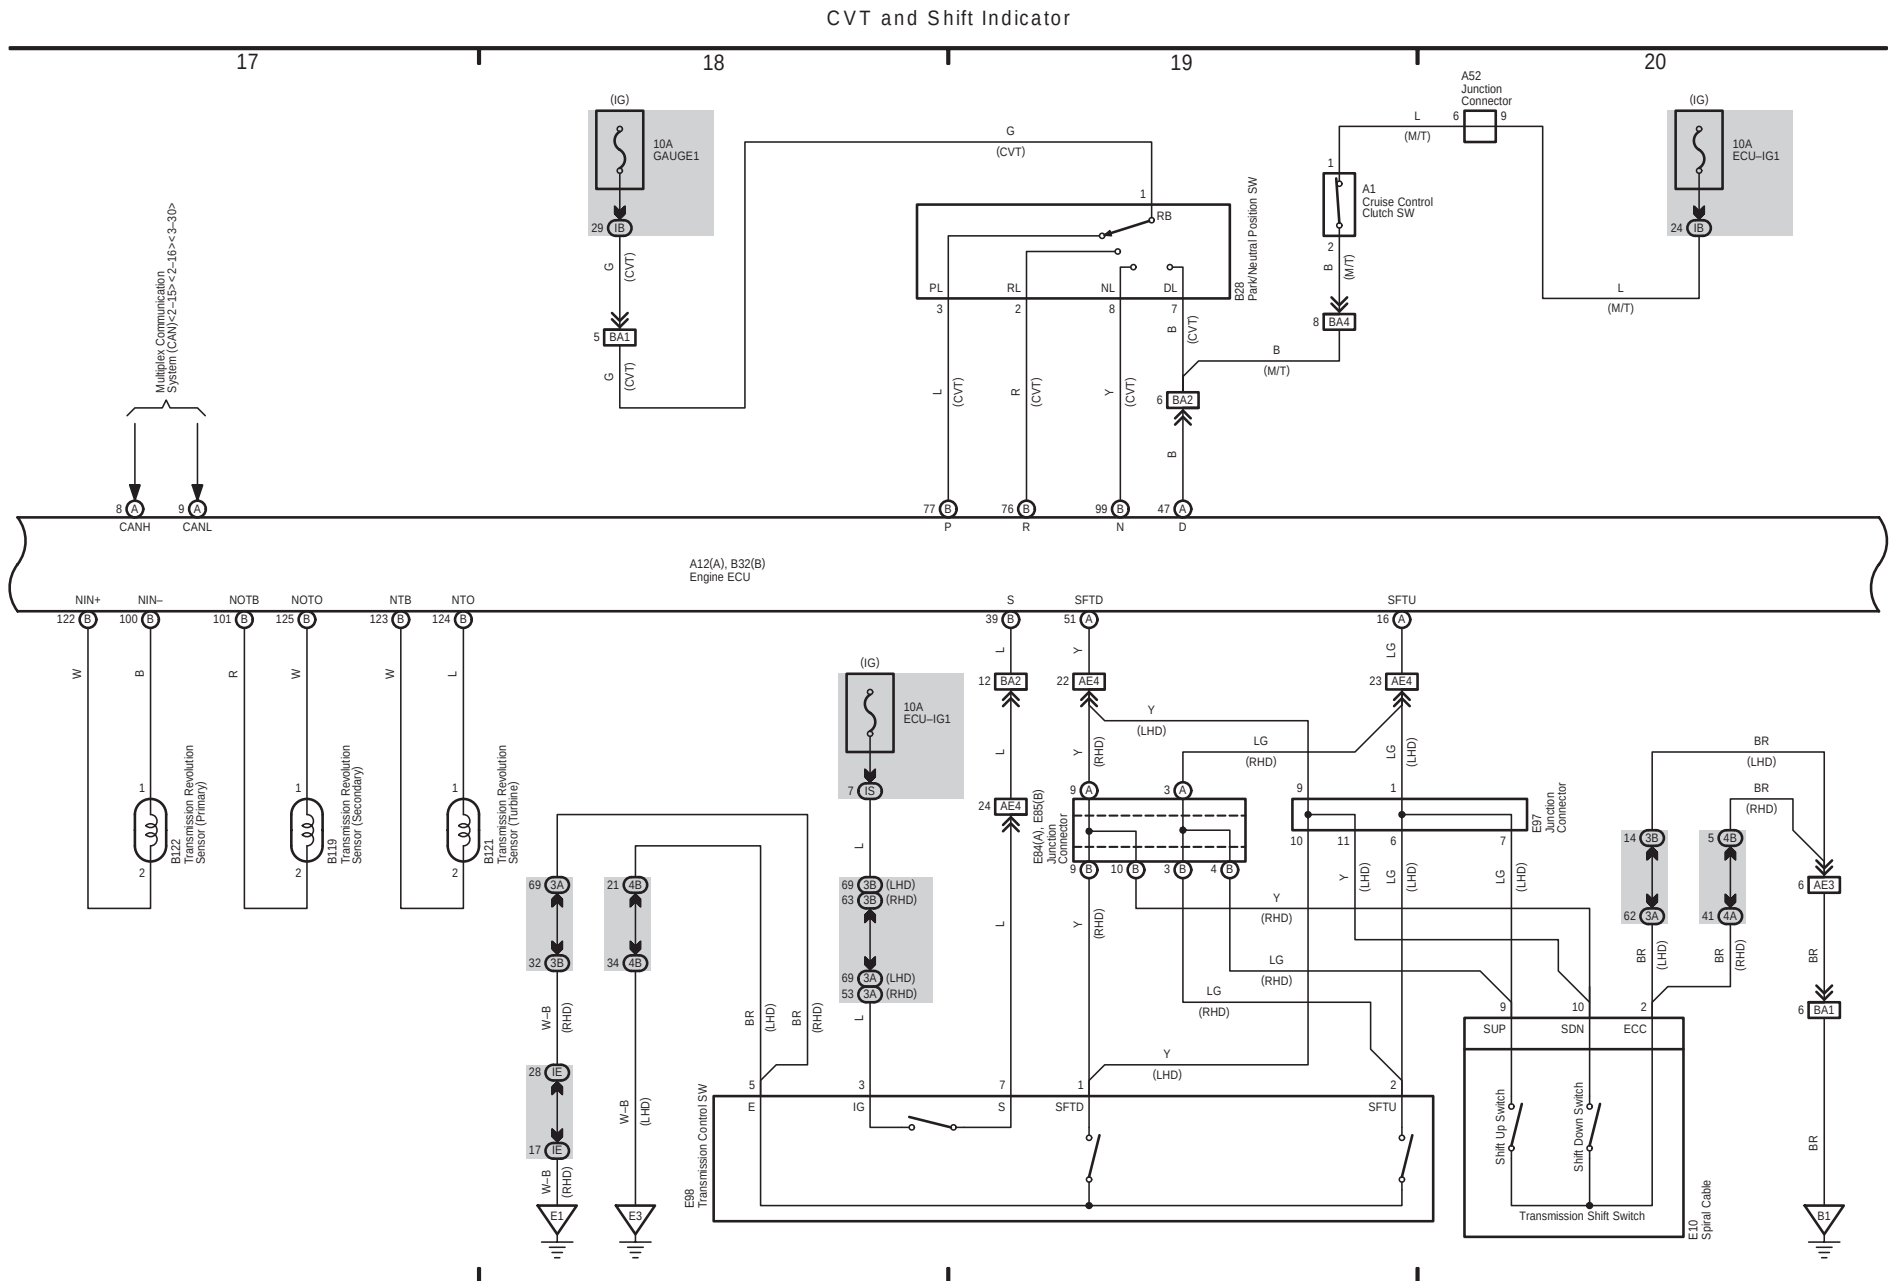

CVT and Shift Indicator

TOYOTA RAV4 (EM01NAE)

