



Engine Control (Diesel) (Before Oct. 2015 Production)

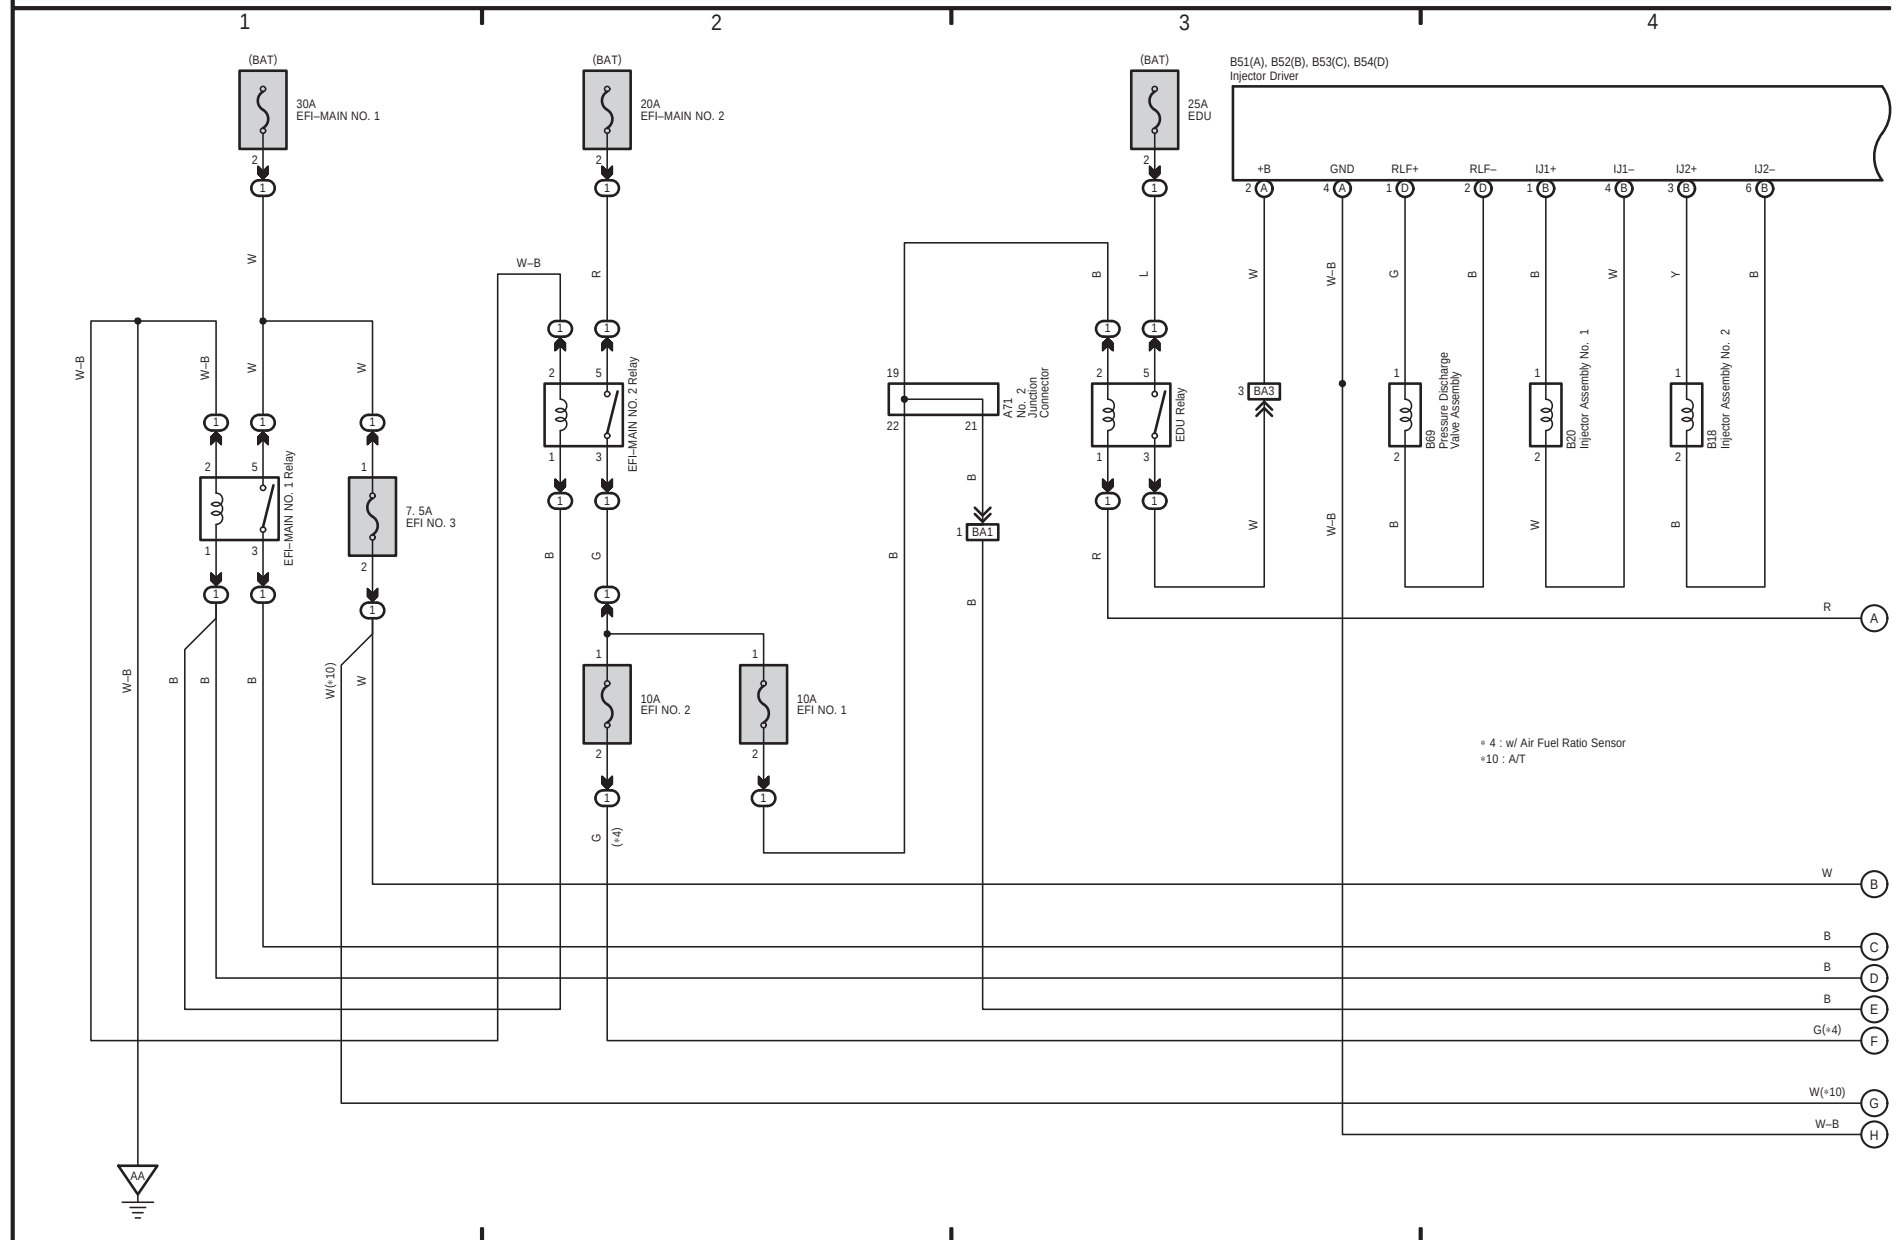


Engine Control (Diesel) (Before Oct. 2015 Production)

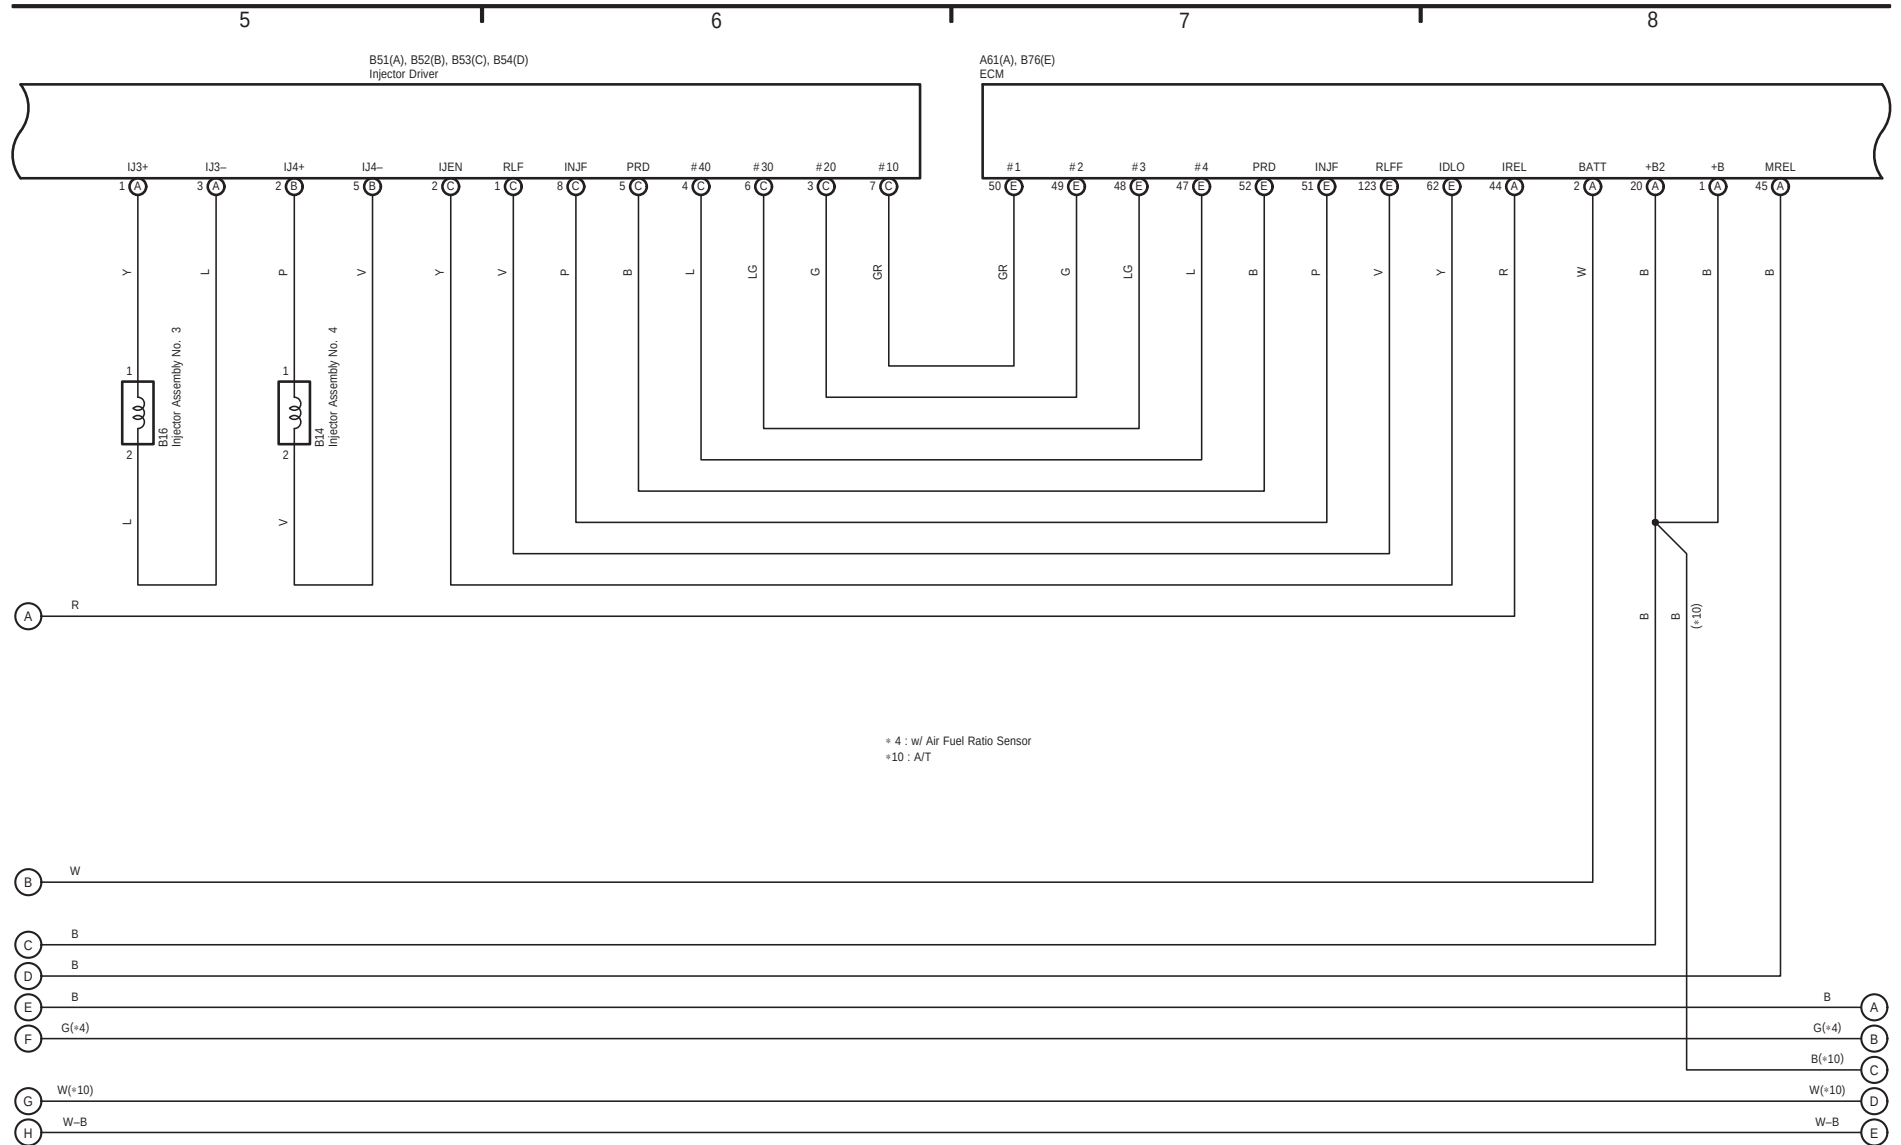


Engine Control (Diesel) (Before Oct. 2015 Production)

* 1 : 1AD-FTV
 * 2 : Except 1AD-FTV
 * 4 : w/ Air Fuel Ratio Sensor
 *10 : A/T

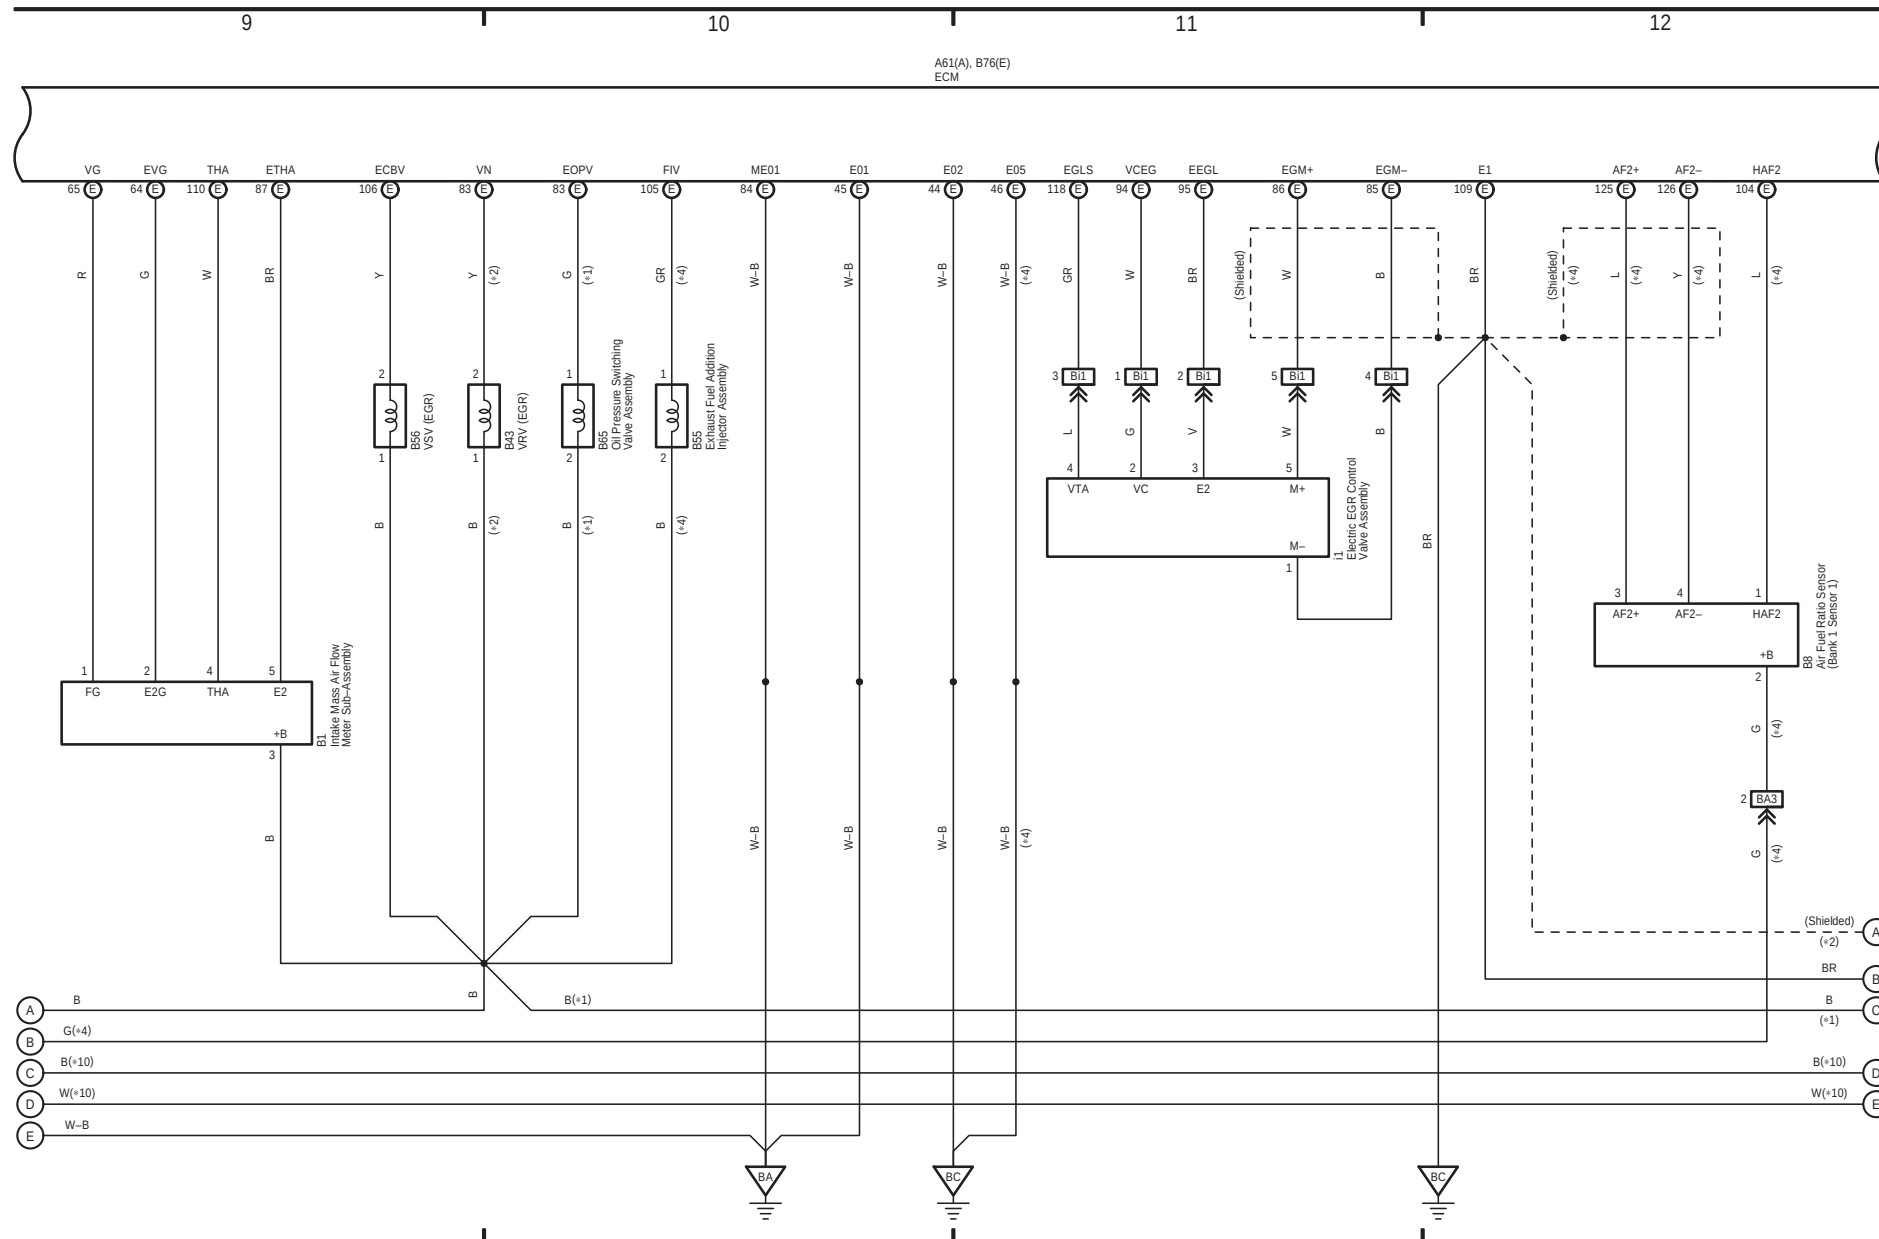


Engine Control (Diesel) (Before Oct. 2015 Production)


* 1 : 1AD-FTV
 * 2 : Except 1AD-FTV
 *10 : A/T

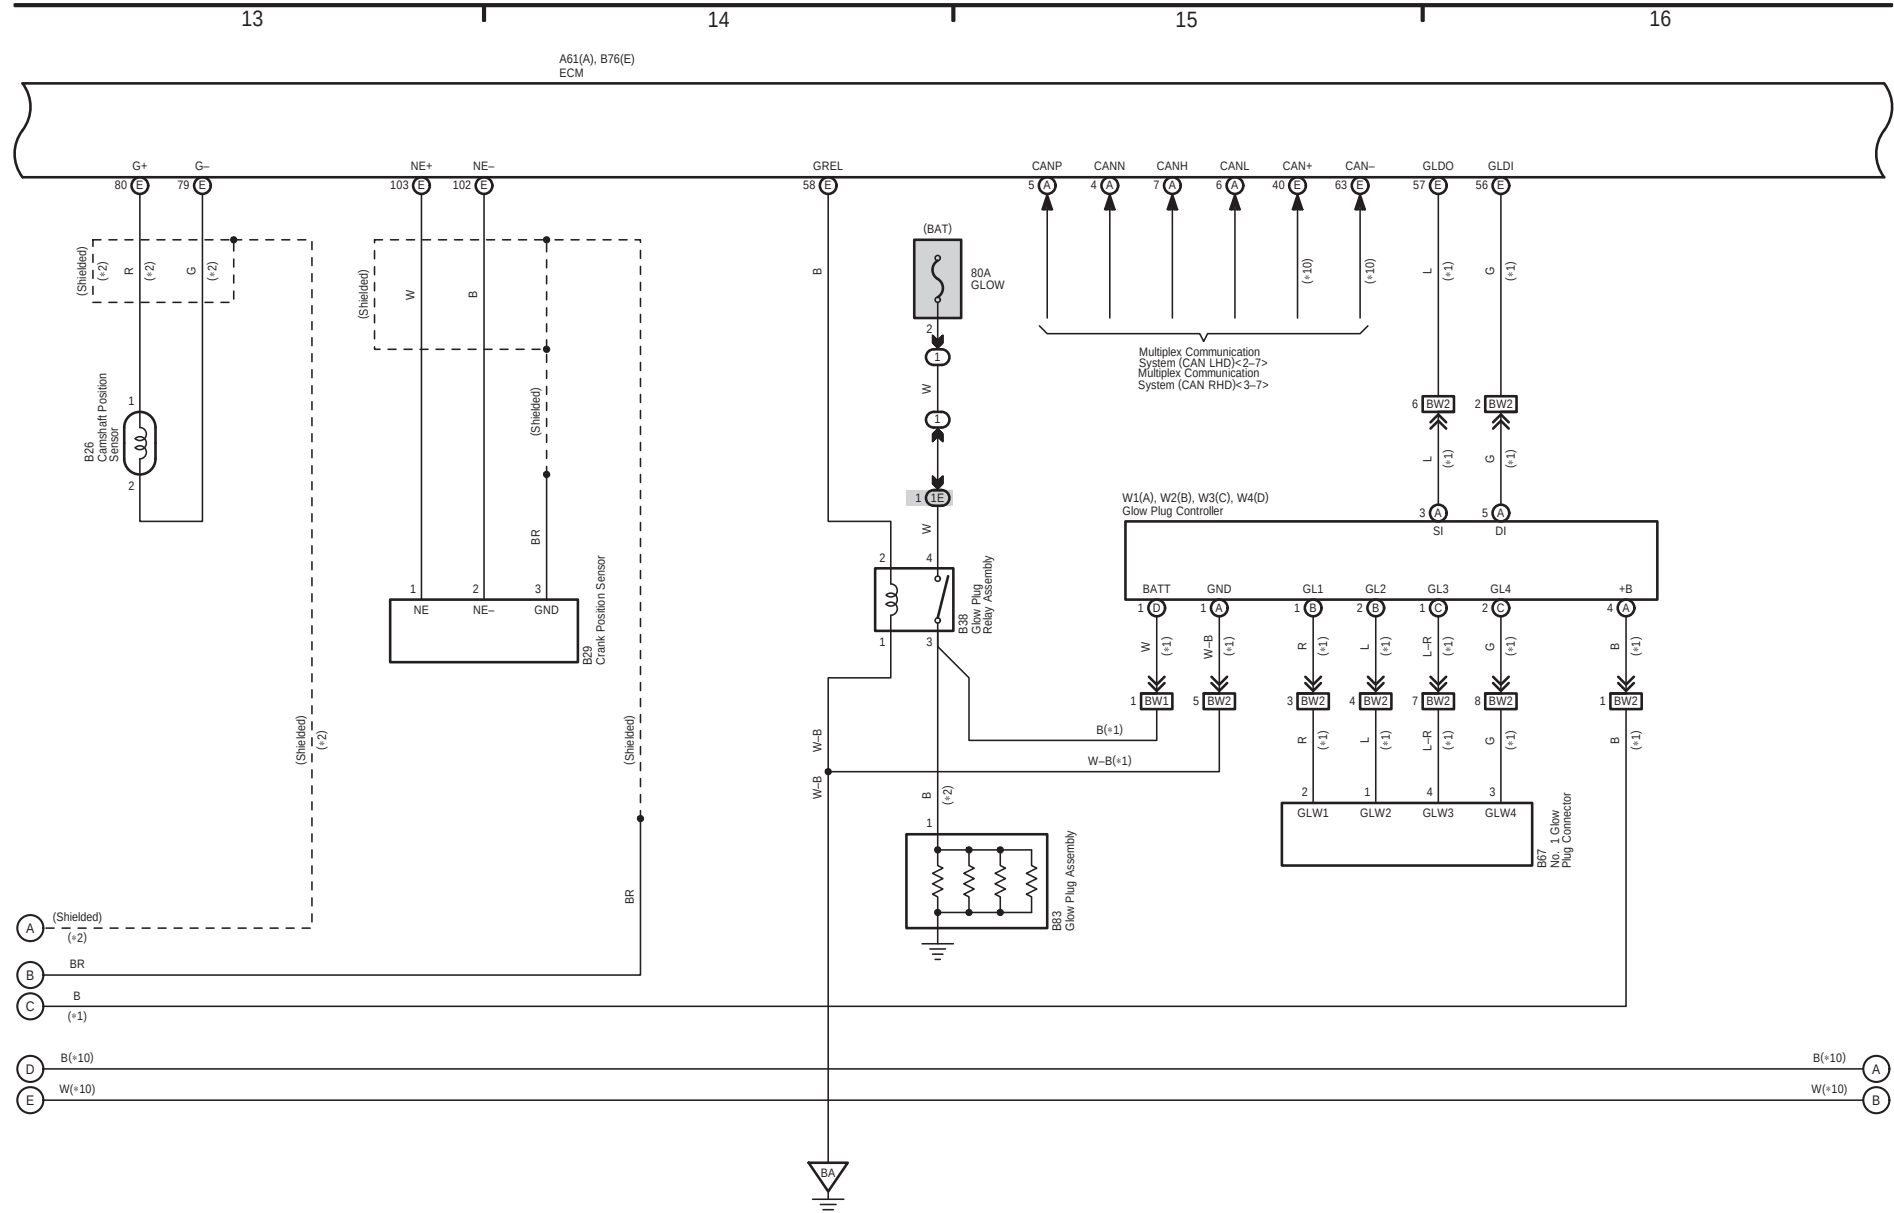

- * 1 : 1AD-FTV
- * 2 : Except 1AD-FTV
- * 5 : M/T
- * 10 : A/T
- * 13 : w/ Entry & Start System

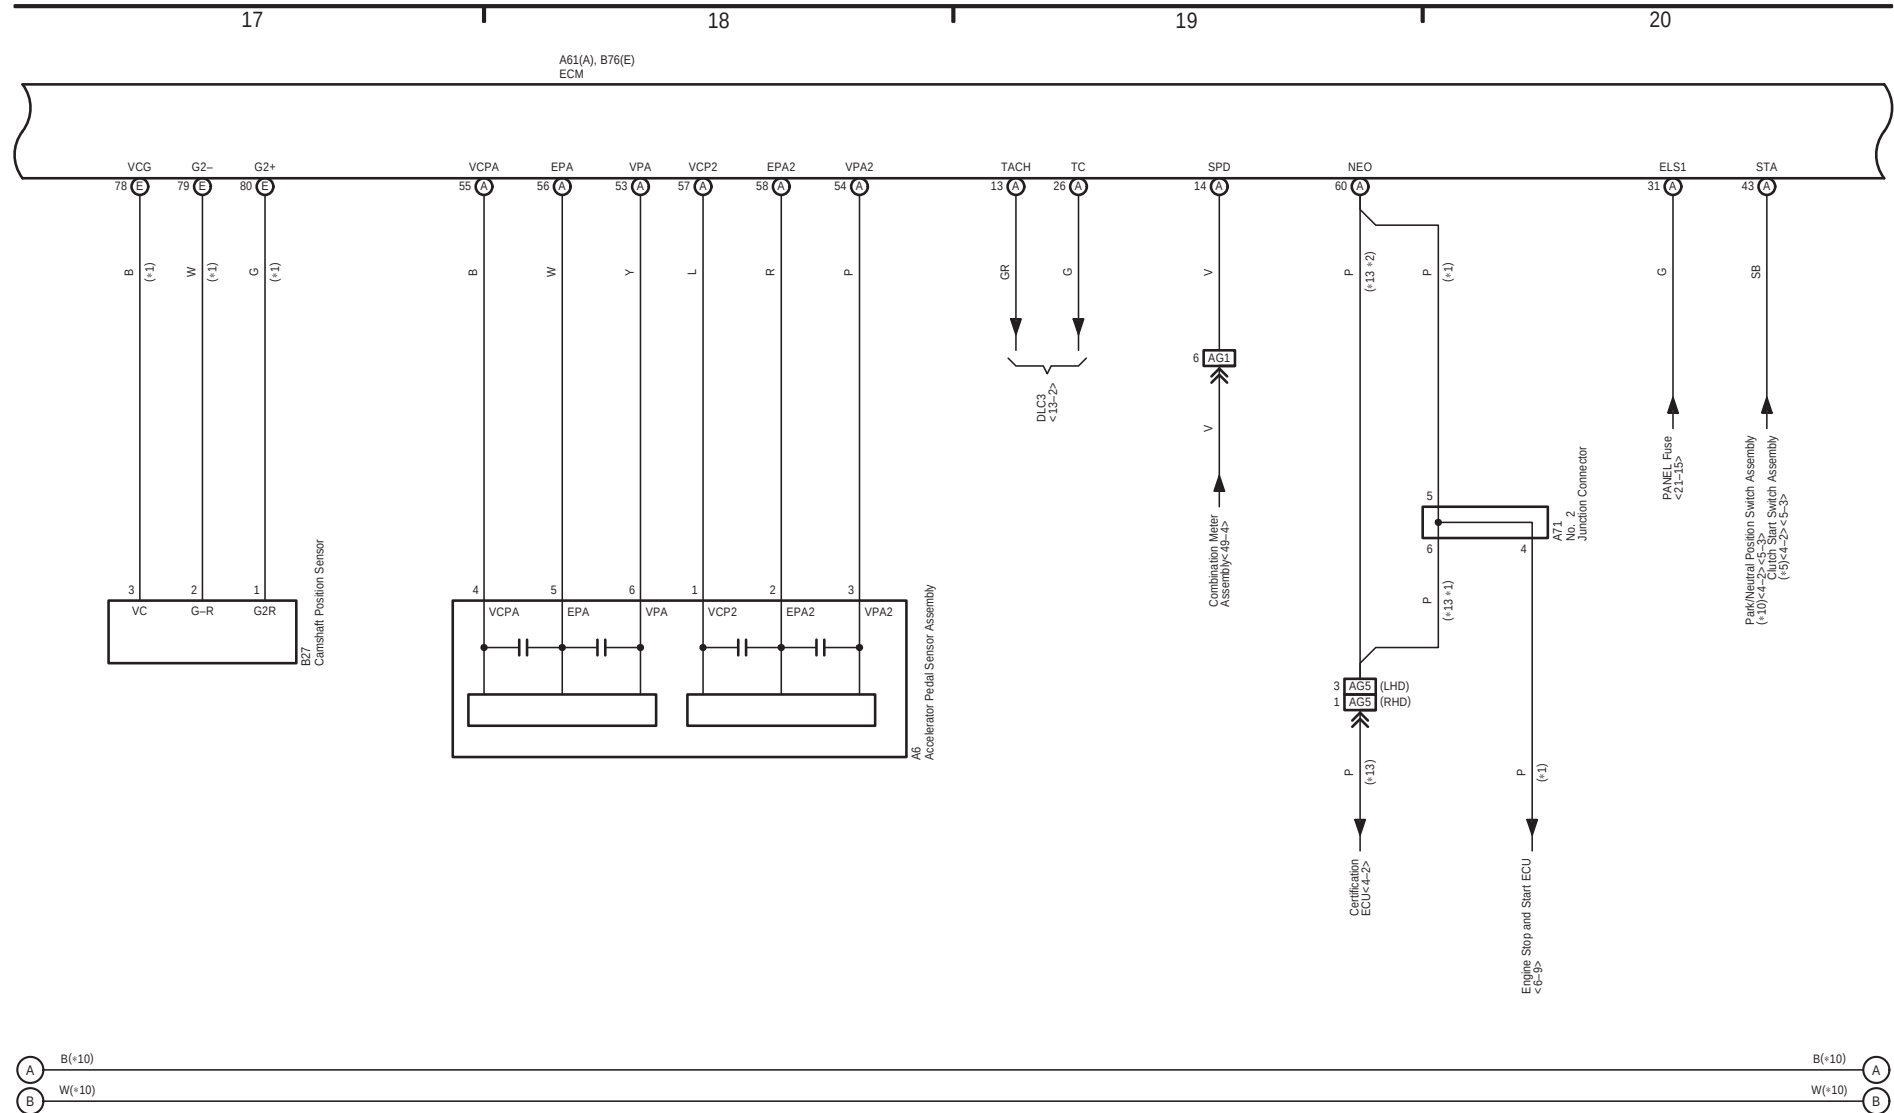


Engine Control (Diesel) (Before Oct. 2015 Production)

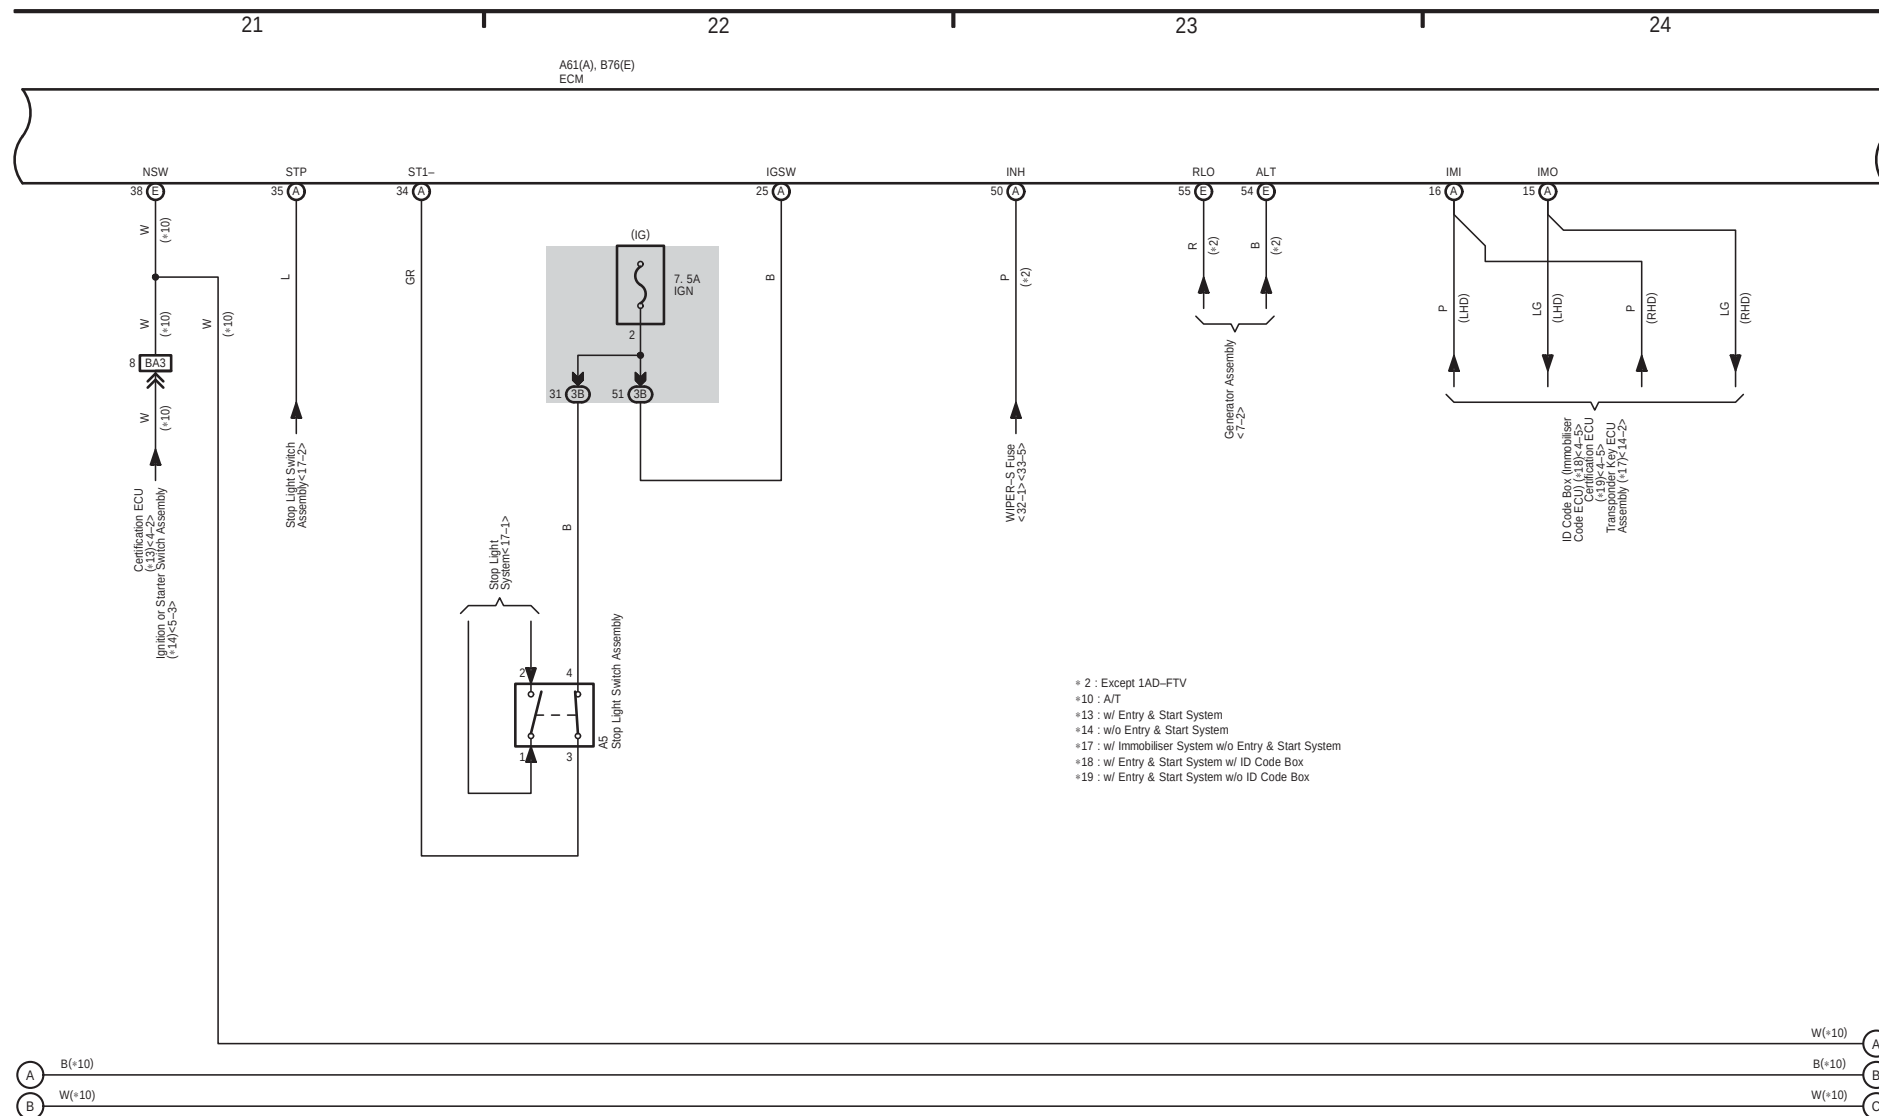



Engine Control (Diesel) (Before Oct. 2015 Production)

* 1 : 1AD-FTV
 * 4 : w/ Air Fuel Ratio Sensor
 *10 : A/T
 *15 : w/ Sport Switch

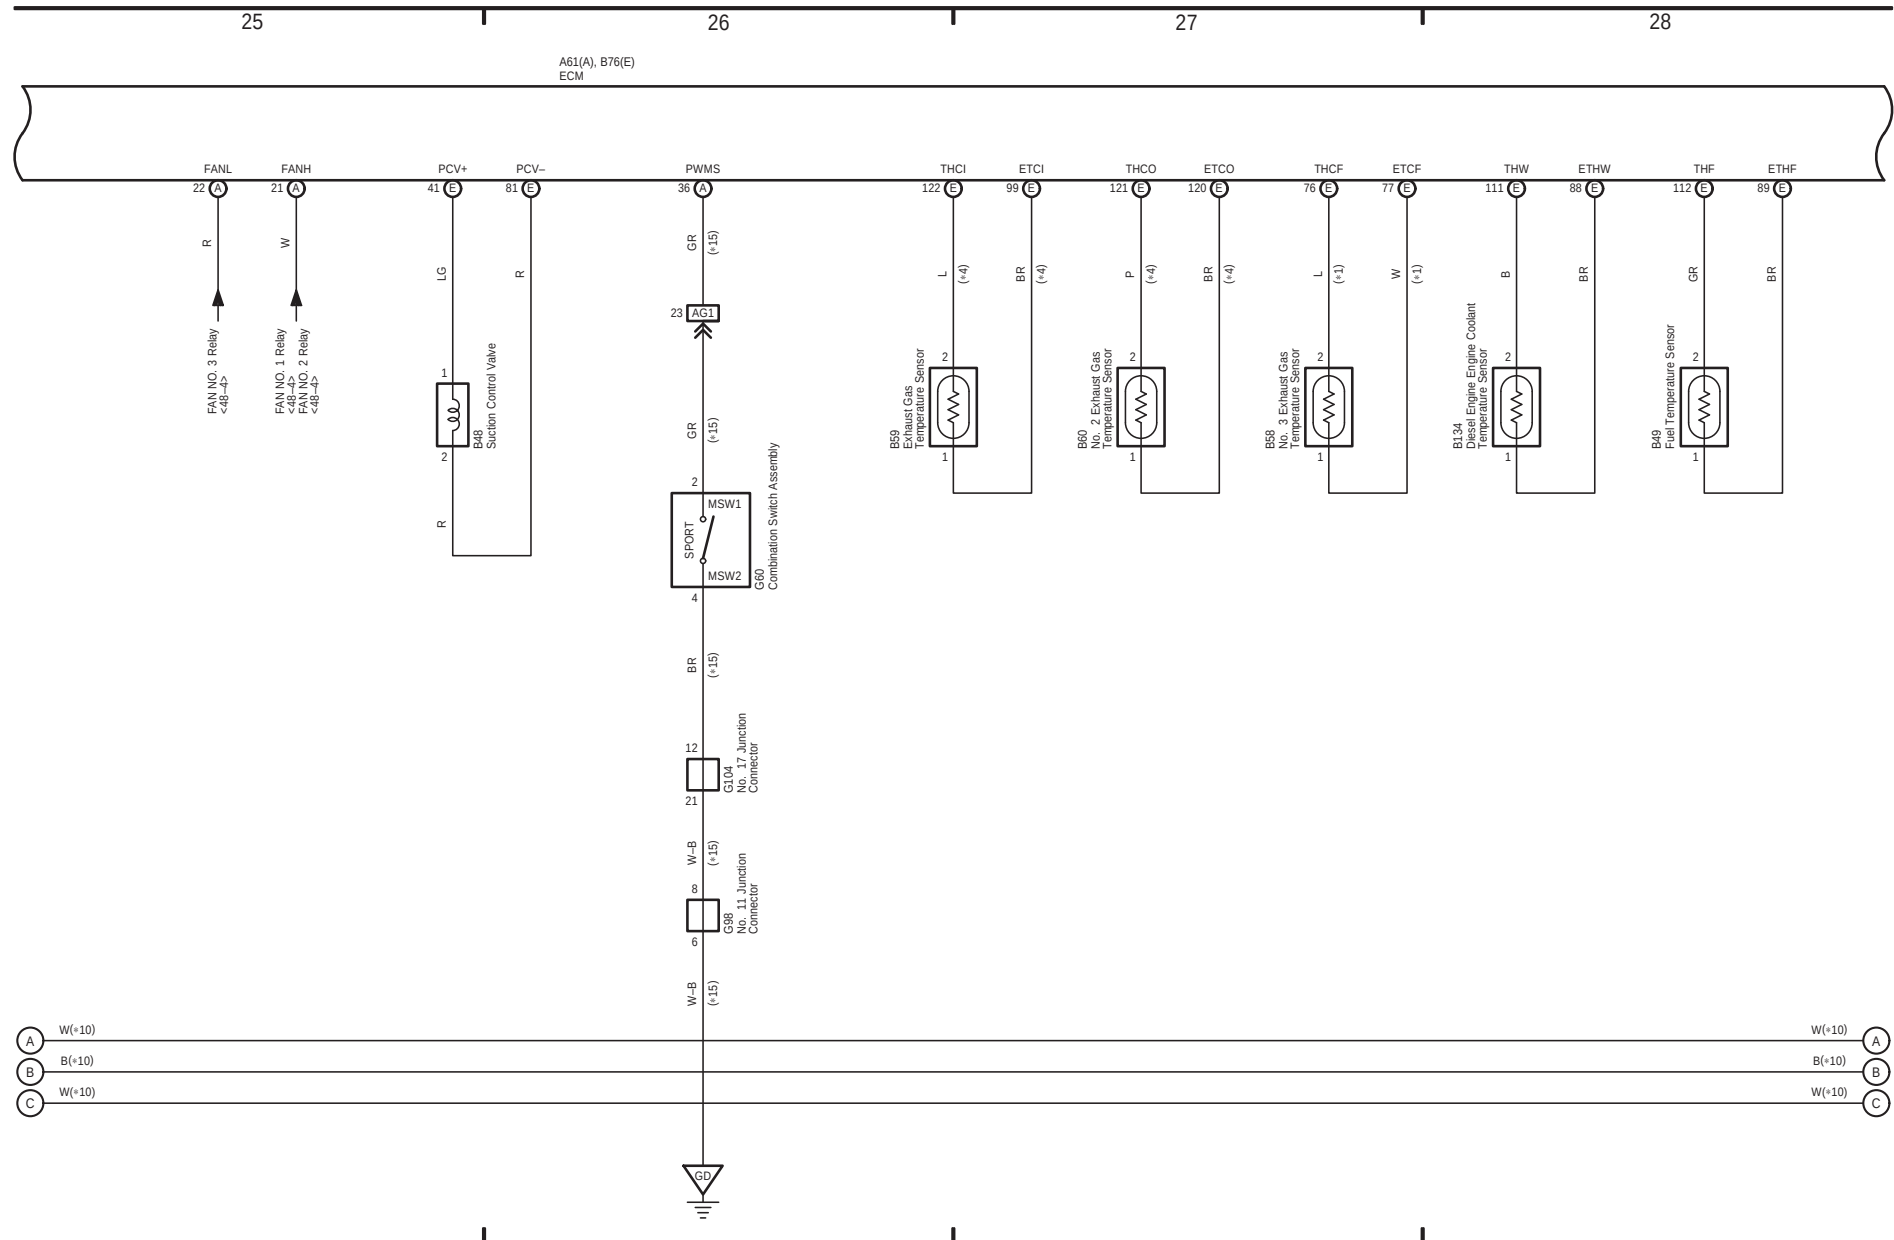

Engine Control (Diesel) (Before Oct. 2015 Production)

 * 1 : 1AD-FTV
* 2 : Except 1AD-FTV
*10 : A/T

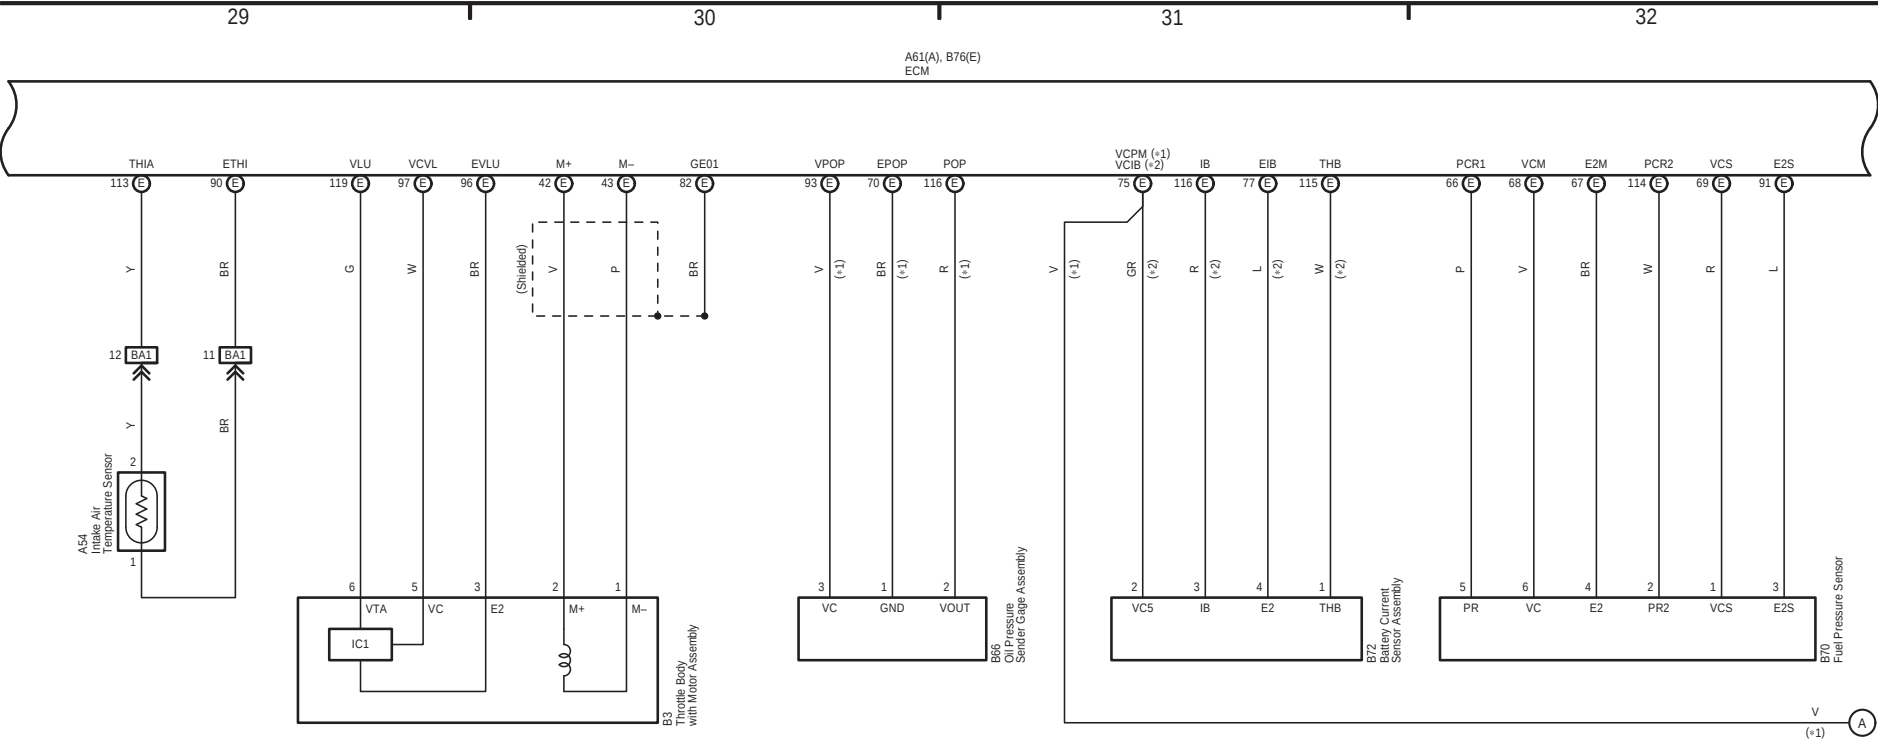

Engine Control (Diesel) (Before Oct. 2015 Production)


Cruise Control (Diesel)
(Before Oct.
2015 Production)ECT and A/T Indicator (Diesel)
(Before Oct. 2015 Production)

33


34

35


36

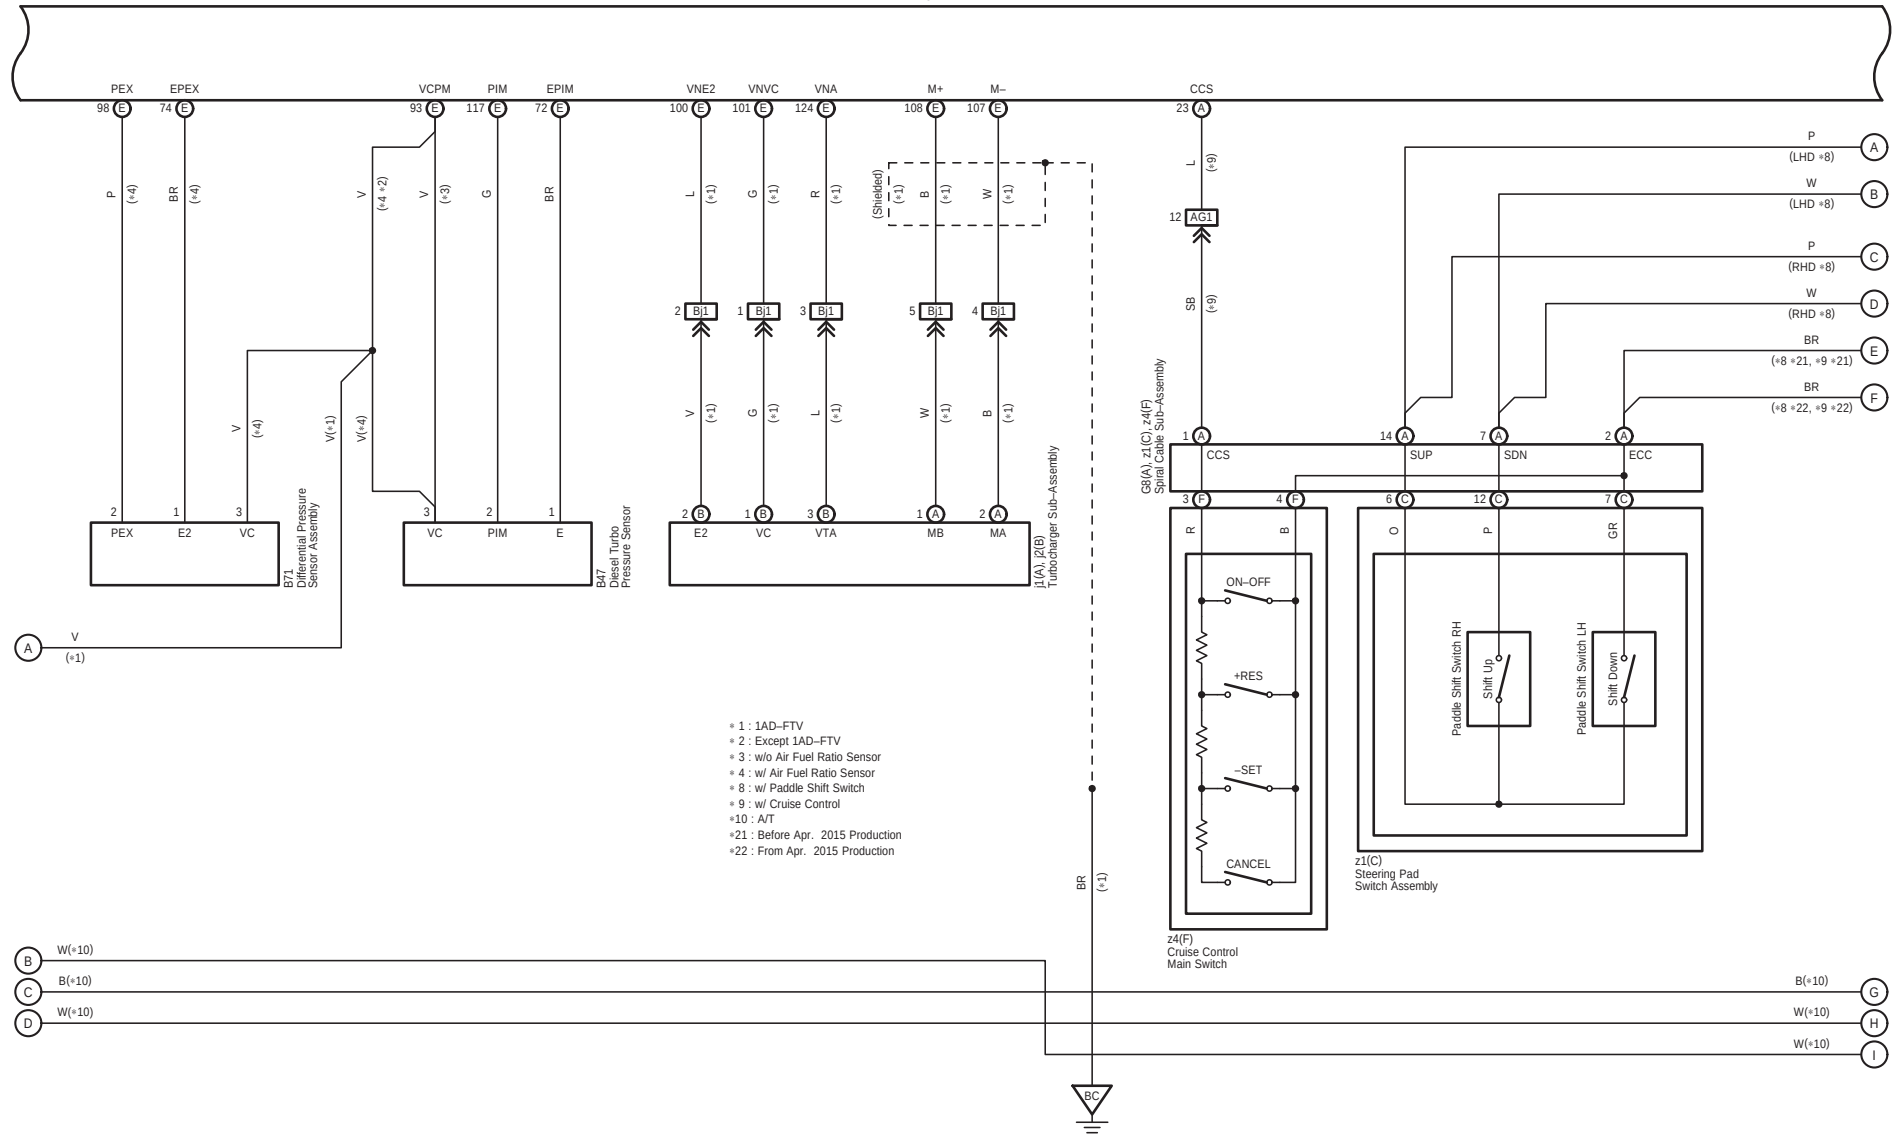A61(A), B76(E)
ECM

ECT and A/T Indicator (Diesel) (Before Oct. 2015 Production)

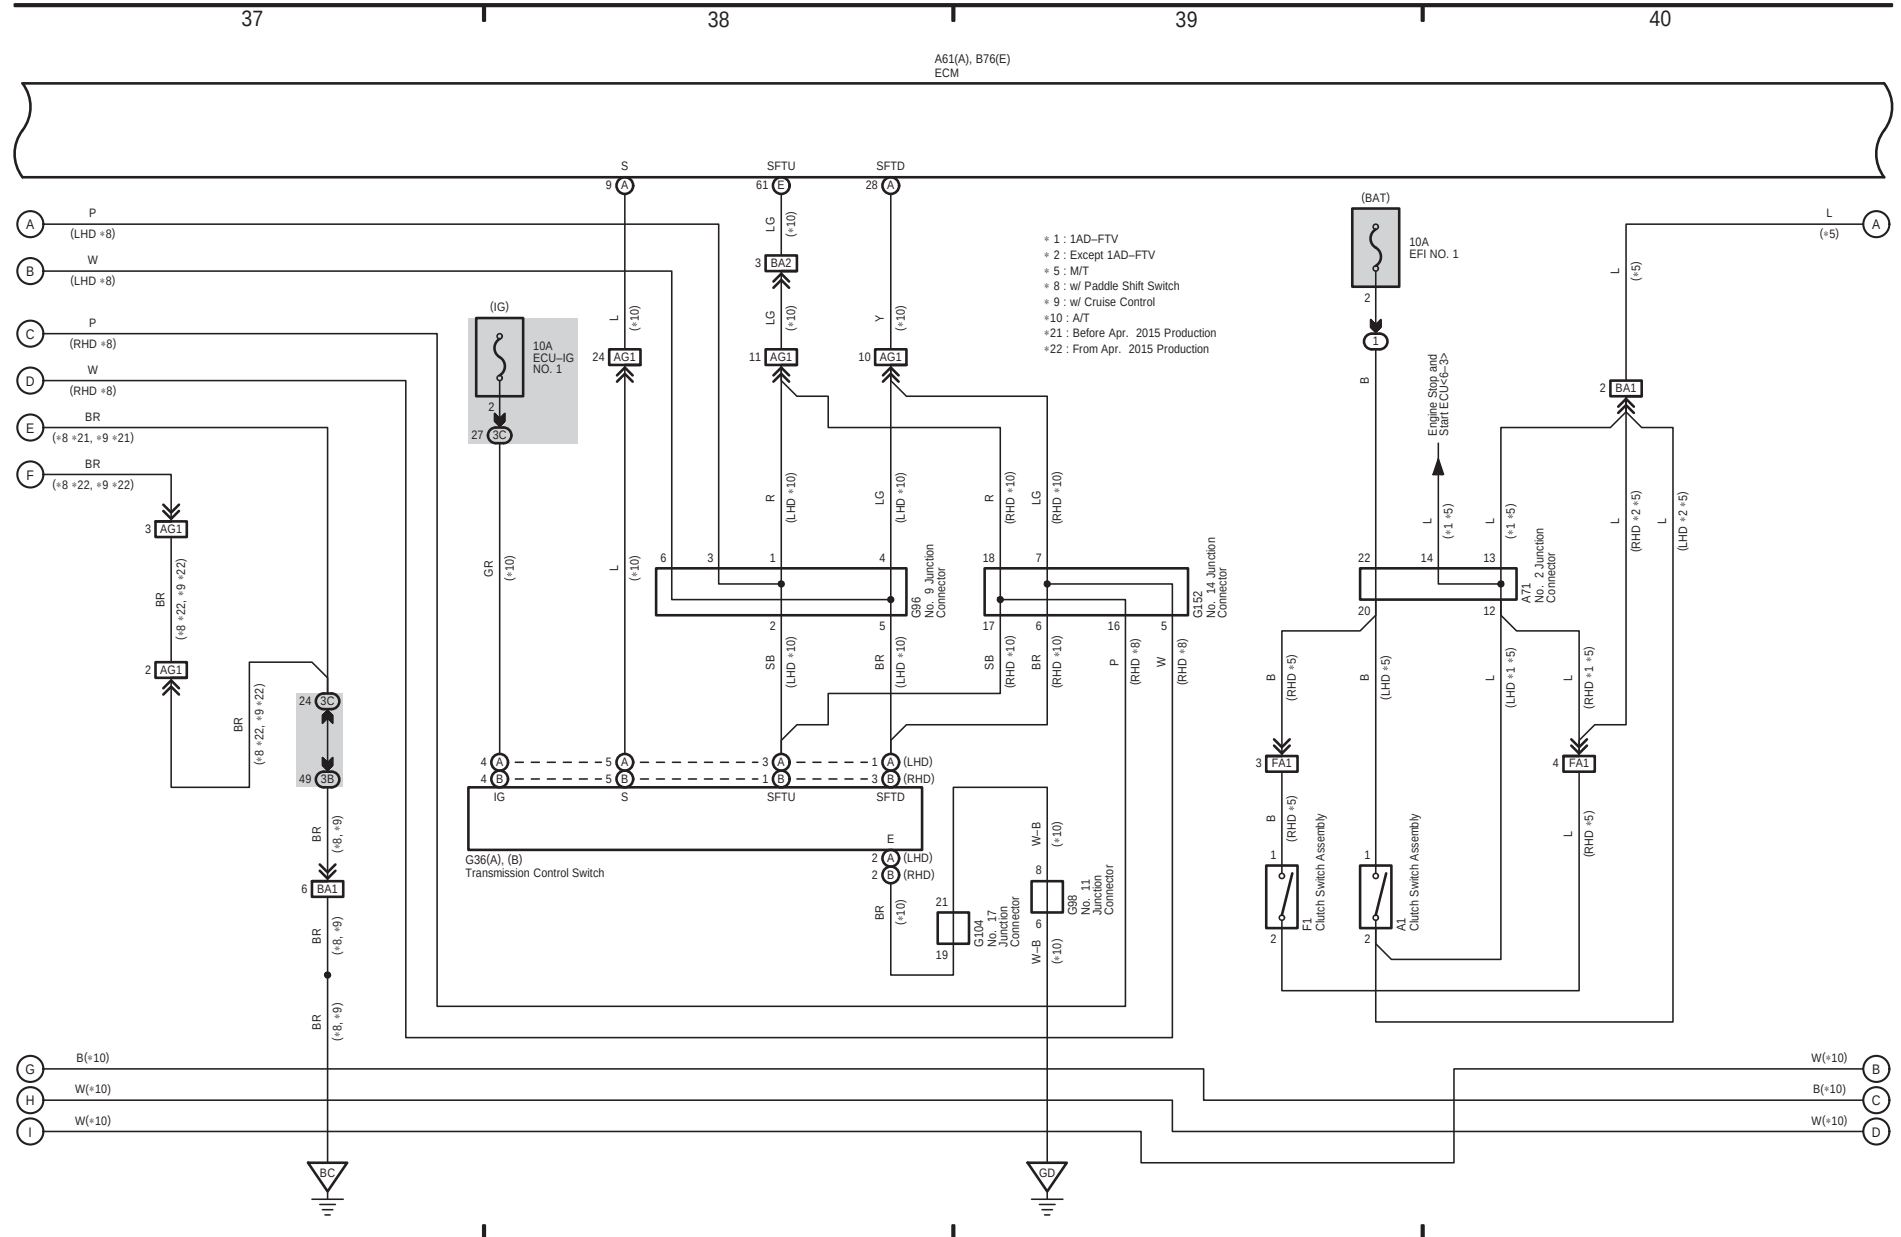

ECT and A/T Indicator (Diesel) (Before Oct. 2015 Production)

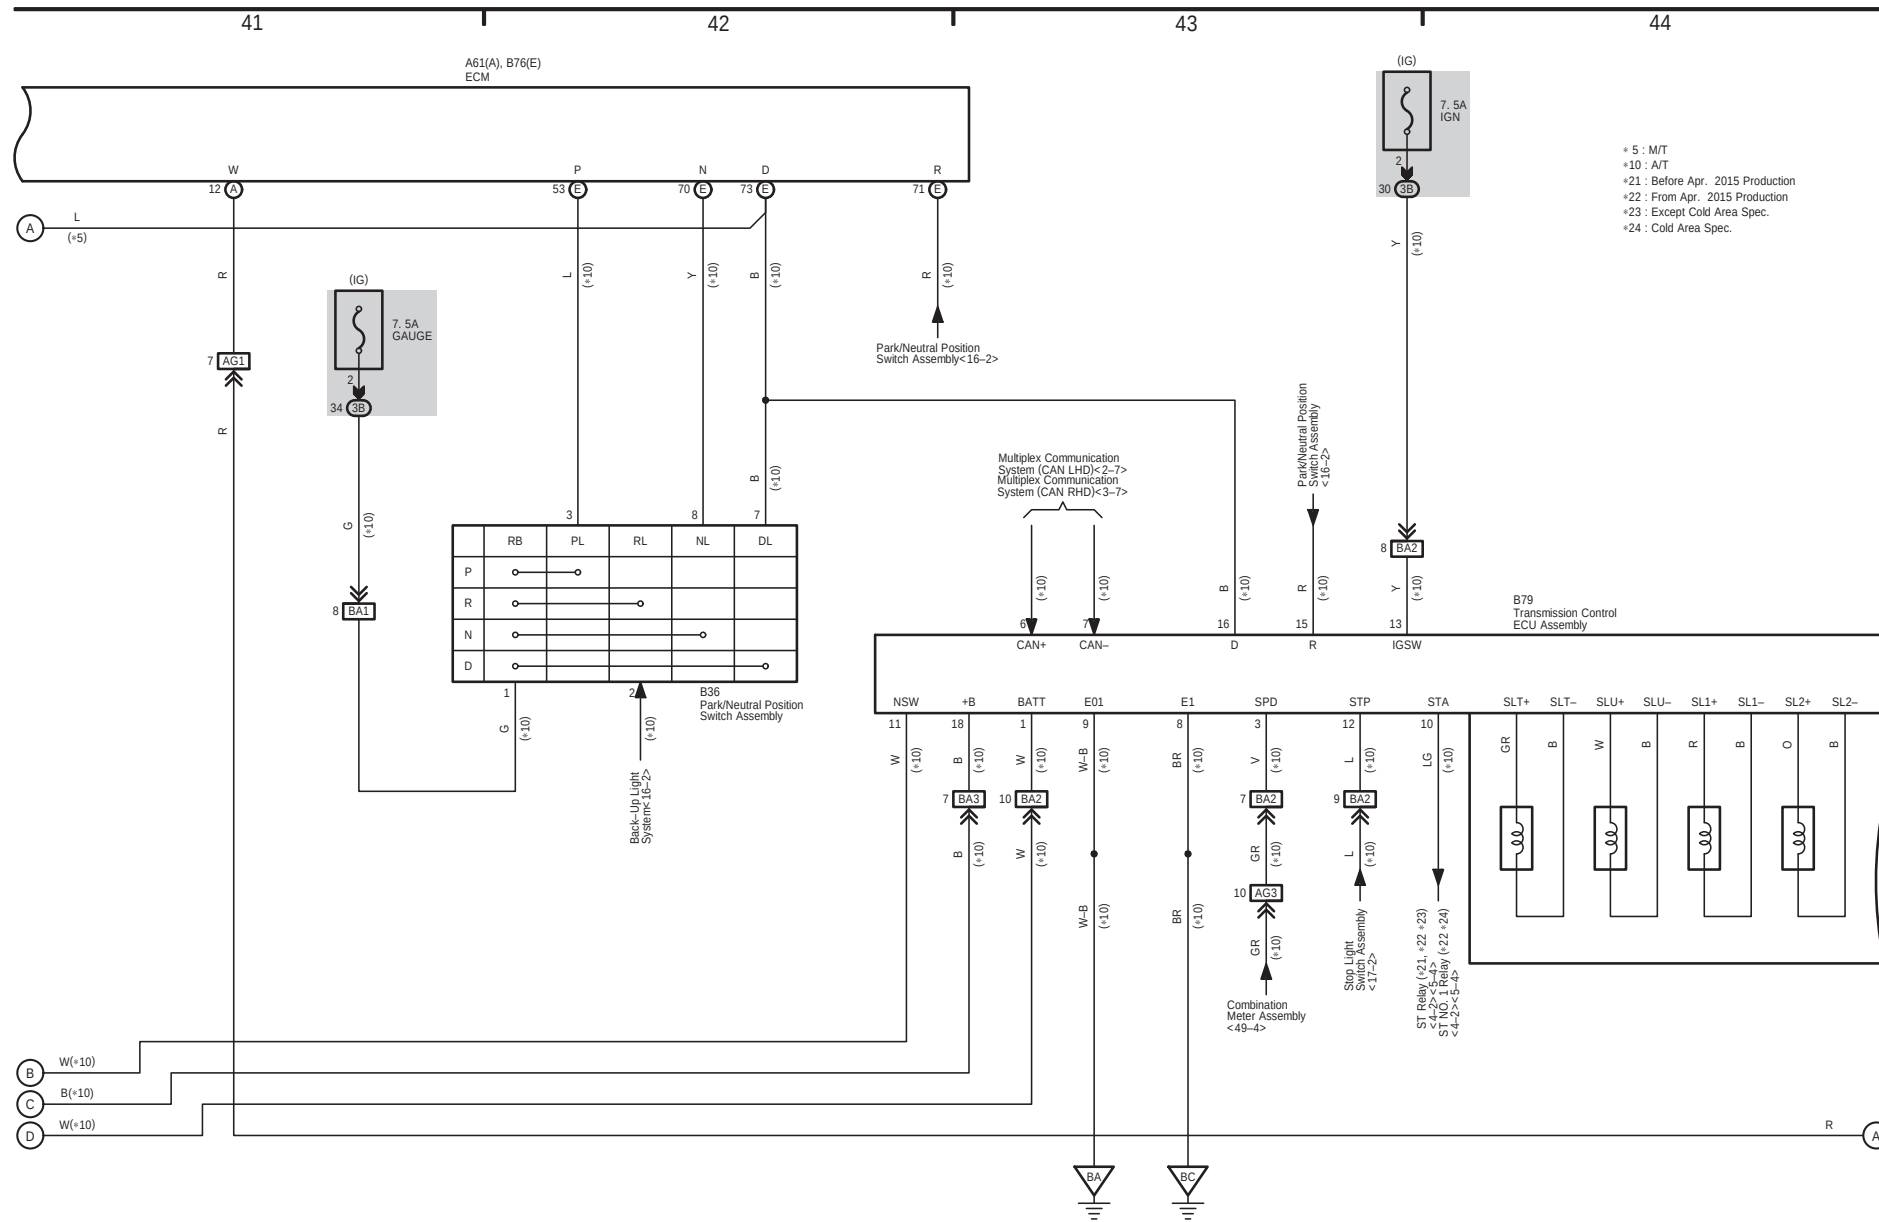

12 TOYOTA RAV4 (Cont' d)

ECT and A/T Indicator (Diesel) (Before Oct. 2015 Production)

*11 : w/ Stop & Start System
 *12 : w/o Stop & Start System
 *20 : w/ Gear Shift Indicator

