



Position of Parts in Engine Compartment (LHD 2WW)

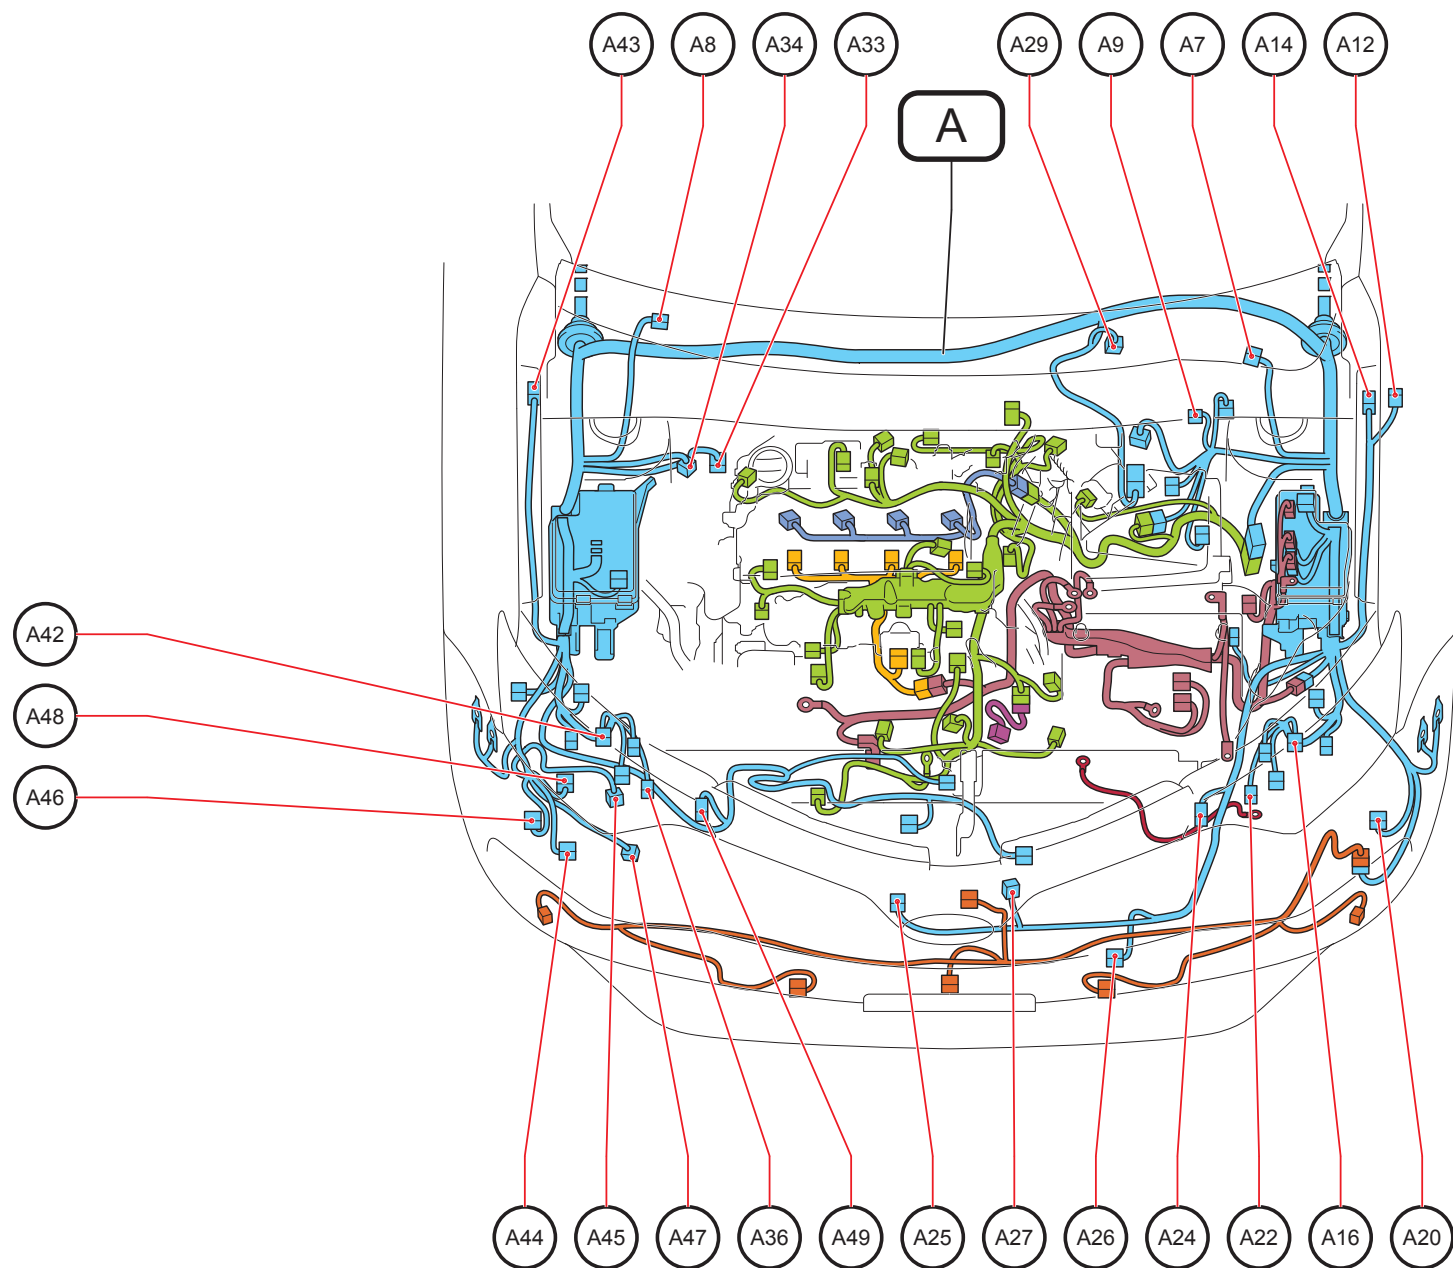

A7	Windshield Wiper Motor Assembly
A8	Windshield Deicer (Windshield Glass)
A9	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
A12	Wireless Door Lock Buzzer
A14	Front Speed Sensor LH
A16	Headlight Assembly LH
A20	Fog Light Assembly LH
A22	Headlight Assembly LH
A24	Front Airbag Sensor LH
A25	High Pitched Horn Assembly
A26	Cooler (Ambient Temperature Sensor) Thermistor
A27	Low Pitched Horn Assembly
A29	Heater Pump Assembly
A33	Heater & Accessory Assembly
A34	A/C Pressure Sensor (Liquid Pipe Sub-Assembly)
A36	Headlight Assembly RH
A42	Headlight Assembly RH
A43	Front Speed Sensor RH
A44	Level Warning Switch Assembly
A45	Windshield Washer Motor and Pump Assembly
A46	Fog Light Assembly RH
A47	Headlight Cleaner Motor and Pump Assembly
A48	Headlight Cleaner Control Relay
A49	Front Airbag Sensor RH


Position of Parts in Engine Compartment (LHD 2WW)

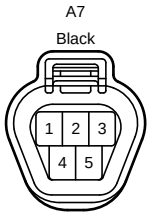

90980-11599




90980-11155

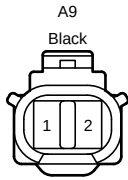


90980-11207
(LHD)




90980-11207
(RHD)

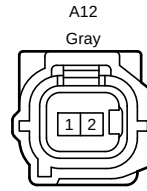


90980-12572

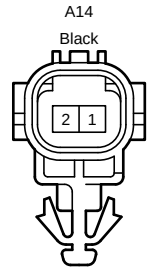

90980-12627

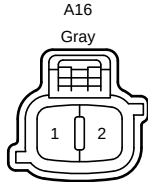


90980-11019
(Front Turn Signal Light)

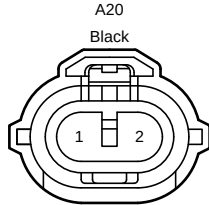


82824-60460



90980-11292
(Clearance Light and Daytime Running Light)

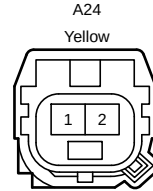

90980-12490

 

90980-10619




90980-11070




90980-10619




90080-98001

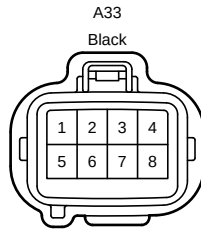


90980-10897

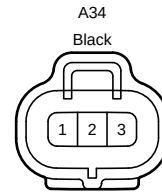


90980-10845

 


90980-11292
(Clearance Light and Daytime Running Light)

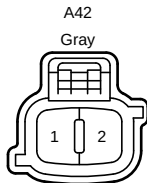


90980-11019
(Front Turn Signal Light)

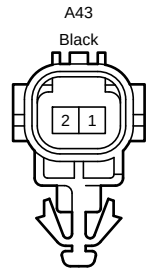


90980-12627

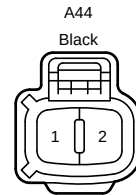


90980-11068

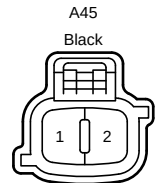


90980-11019

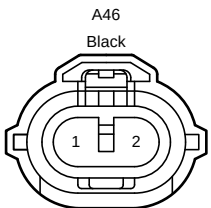


82824-60460

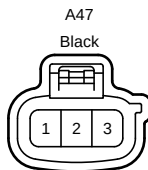

90980-10981

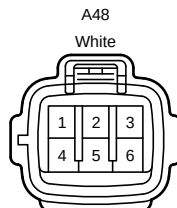

90980-11194

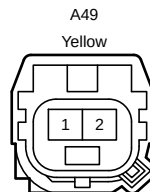

90980-12490