


Position of Parts in Engine Compartment (LHD 2WW)

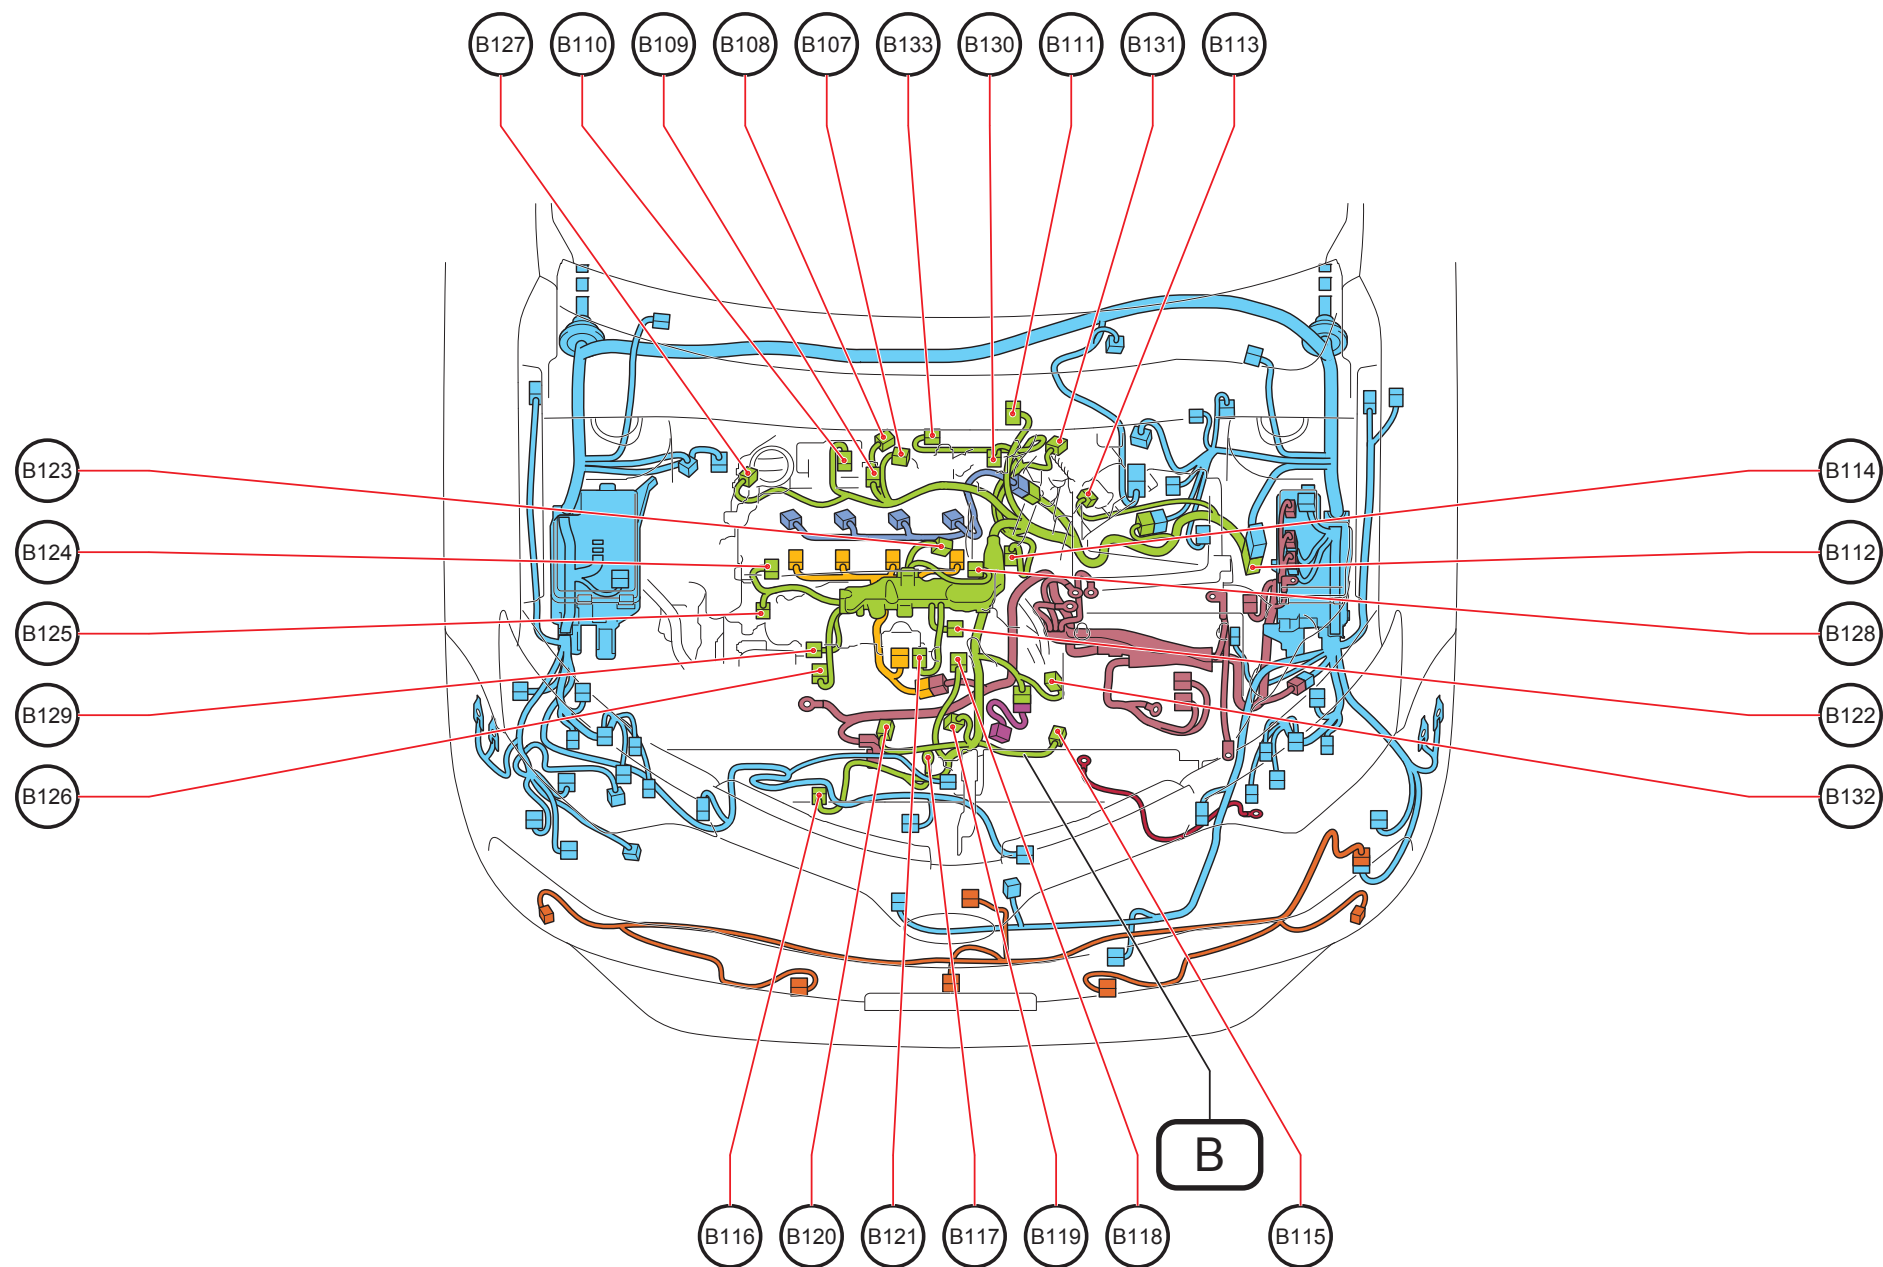

B107	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B108	Exhaust Gas Temperature Sensor
B109	VSV (EGR)
B110	No. 2 Exhaust Gas Temperature Sensor
B111	Turbocharger Sub-Assembly
B112	ECM
B113	Intake Mass Air Flow Meter Sub-Assembly
B114	Crank Position Sensor
B115	Intake Air Temperature Sensor
B116	Compressor with Pulley Assembly
B117	Starter Assembly
B118	Oil Pressure Switch
B119	Suction Control Valve
B120	Fuel Temperature Sensor
B121	Glow Plug Controller
B122	Turbo Pressure Sensor
B123	Cam Position Sensor
B124	Rail Pressure Sensor
B125	Diesel Engine Engine Coolant Temperature Sensor
B126	Generator Assembly
B127	Differential Pressure Sensor
B128	Fuel Pressure Control Valve
B129	Swirl Control Valve
B130	Exhaust Gas Pressure Sensor
B131	EGR Valve Assembly
B132	EGR Valve Temperature Sensor
B133	Air Fuel Ratio Sensor (Bank 1 Sensor 2)

Position of Parts in Engine Compartment (LHD 2WW)

