


Position of Parts in Engine Compartment (LHD 2WW)

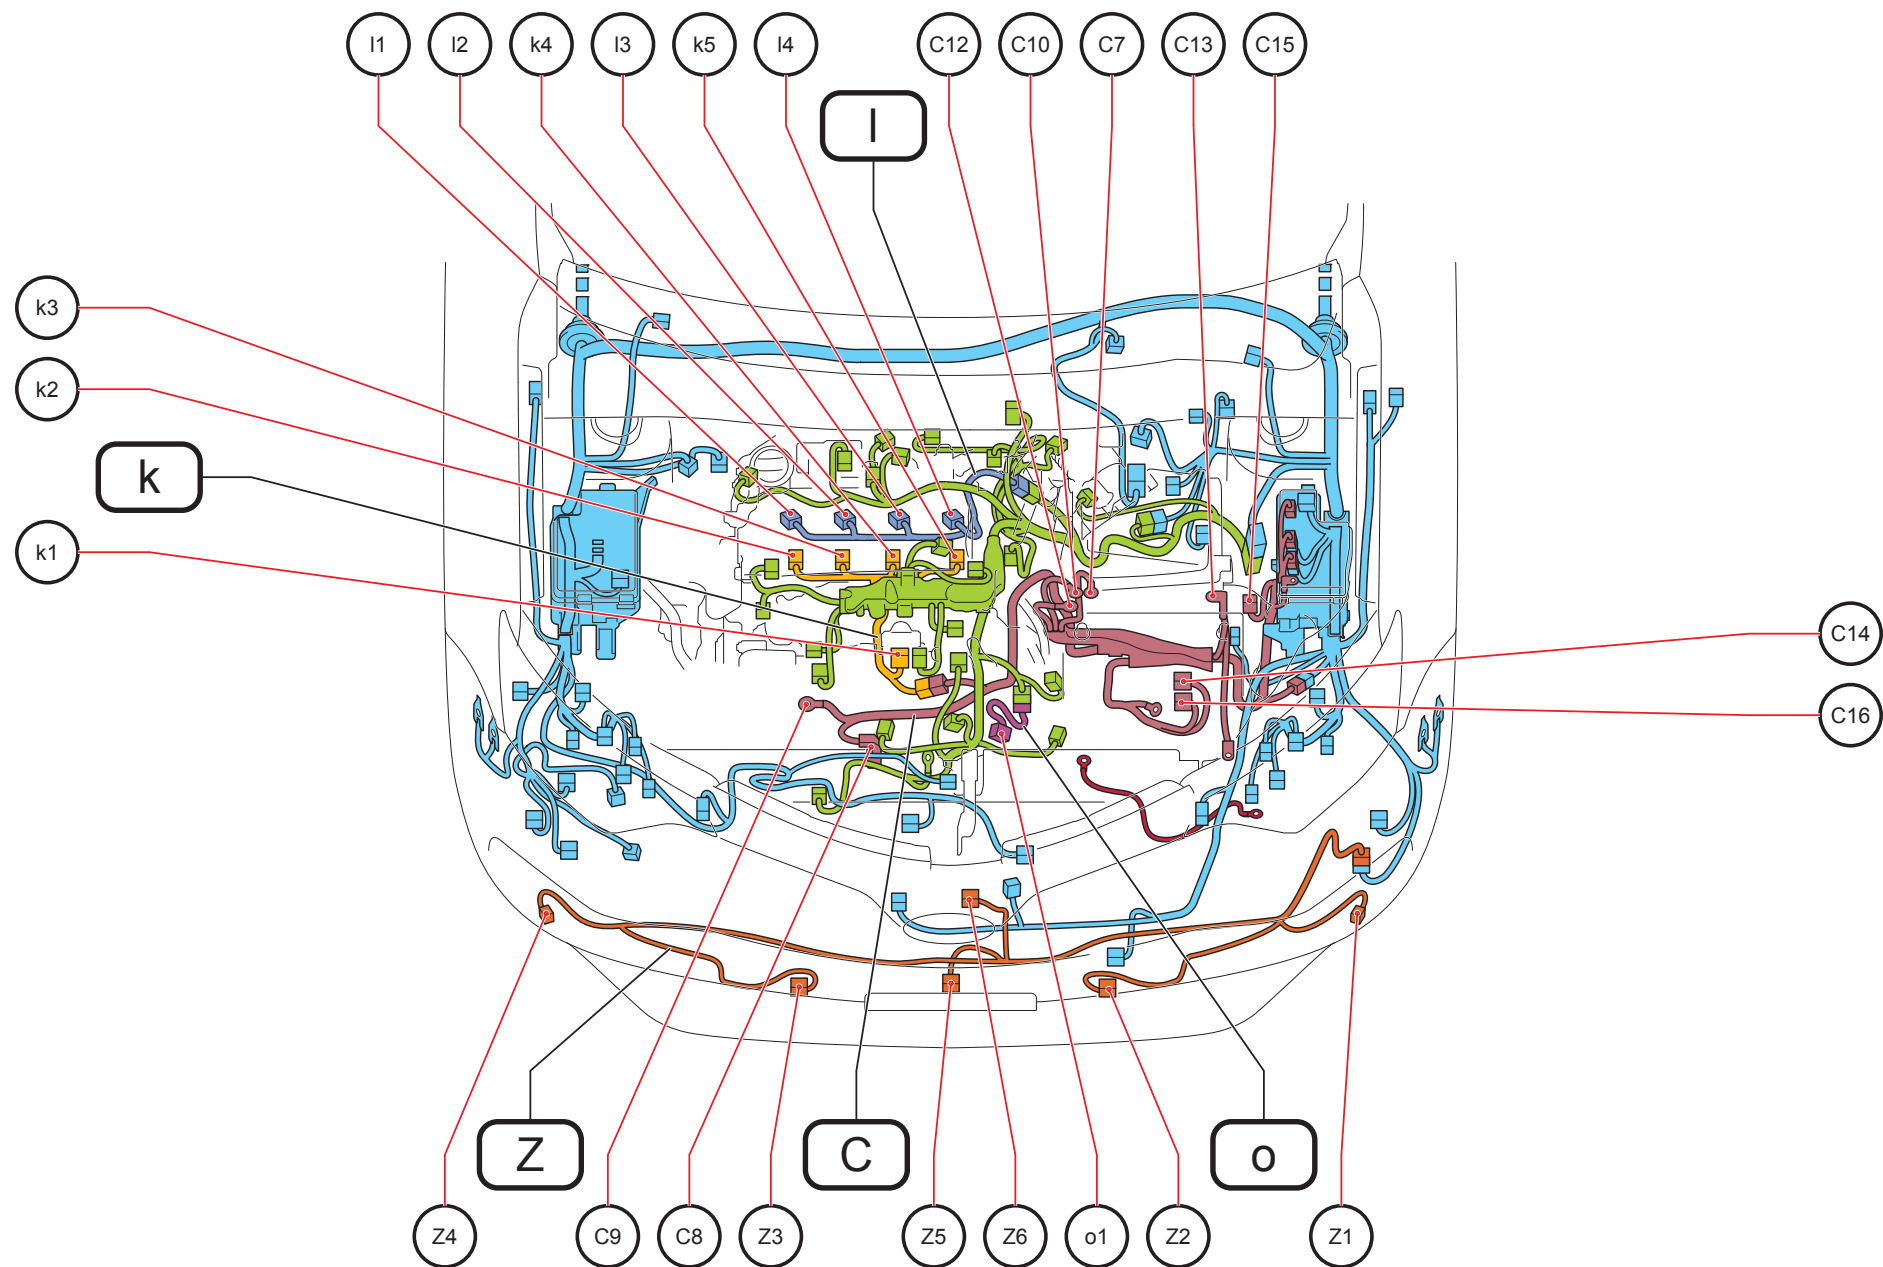

C7	Battery
C8	Starter Assembly
C9	Generator Assembly
C10	Battery
C12	Battery
C13	Battery
C14	Back-Up Light Switch Assembly
C15	Glow Plug Relay Assembly
C16	Neutral Position Switch
Z1	Front No. 1 Ultrasonic Sensor LH
Z2	Front No. 1 Ultrasonic Sensor Center LH
Z3	Front No. 1 Ultrasonic Sensor Center RH
Z4	Front No. 1 Ultrasonic Sensor RH
Z5	Front Television Camera Assembly
Z6	Millimeter Wave Radar Sensor Assembly
k1	Glow Plug Controller
k2	No. 1 Glow Plug Connector
k3	No. 2 Glow Plug Connector
k4	No. 3 Glow Plug Connector
k5	No. 4 Glow Plug Connector
l1	No. 1 Fuel Injector Assembly
l2	No. 2 Fuel Injector Assembly
l3	No. 3 Fuel Injector Assembly
l4	No. 4 Fuel Injector Assembly
o1	Throttle Body Assembly

Position of Parts in Engine Compartment (LHD 2WW)

