



Position of Parts in Engine Compartment (RHD 2WW)

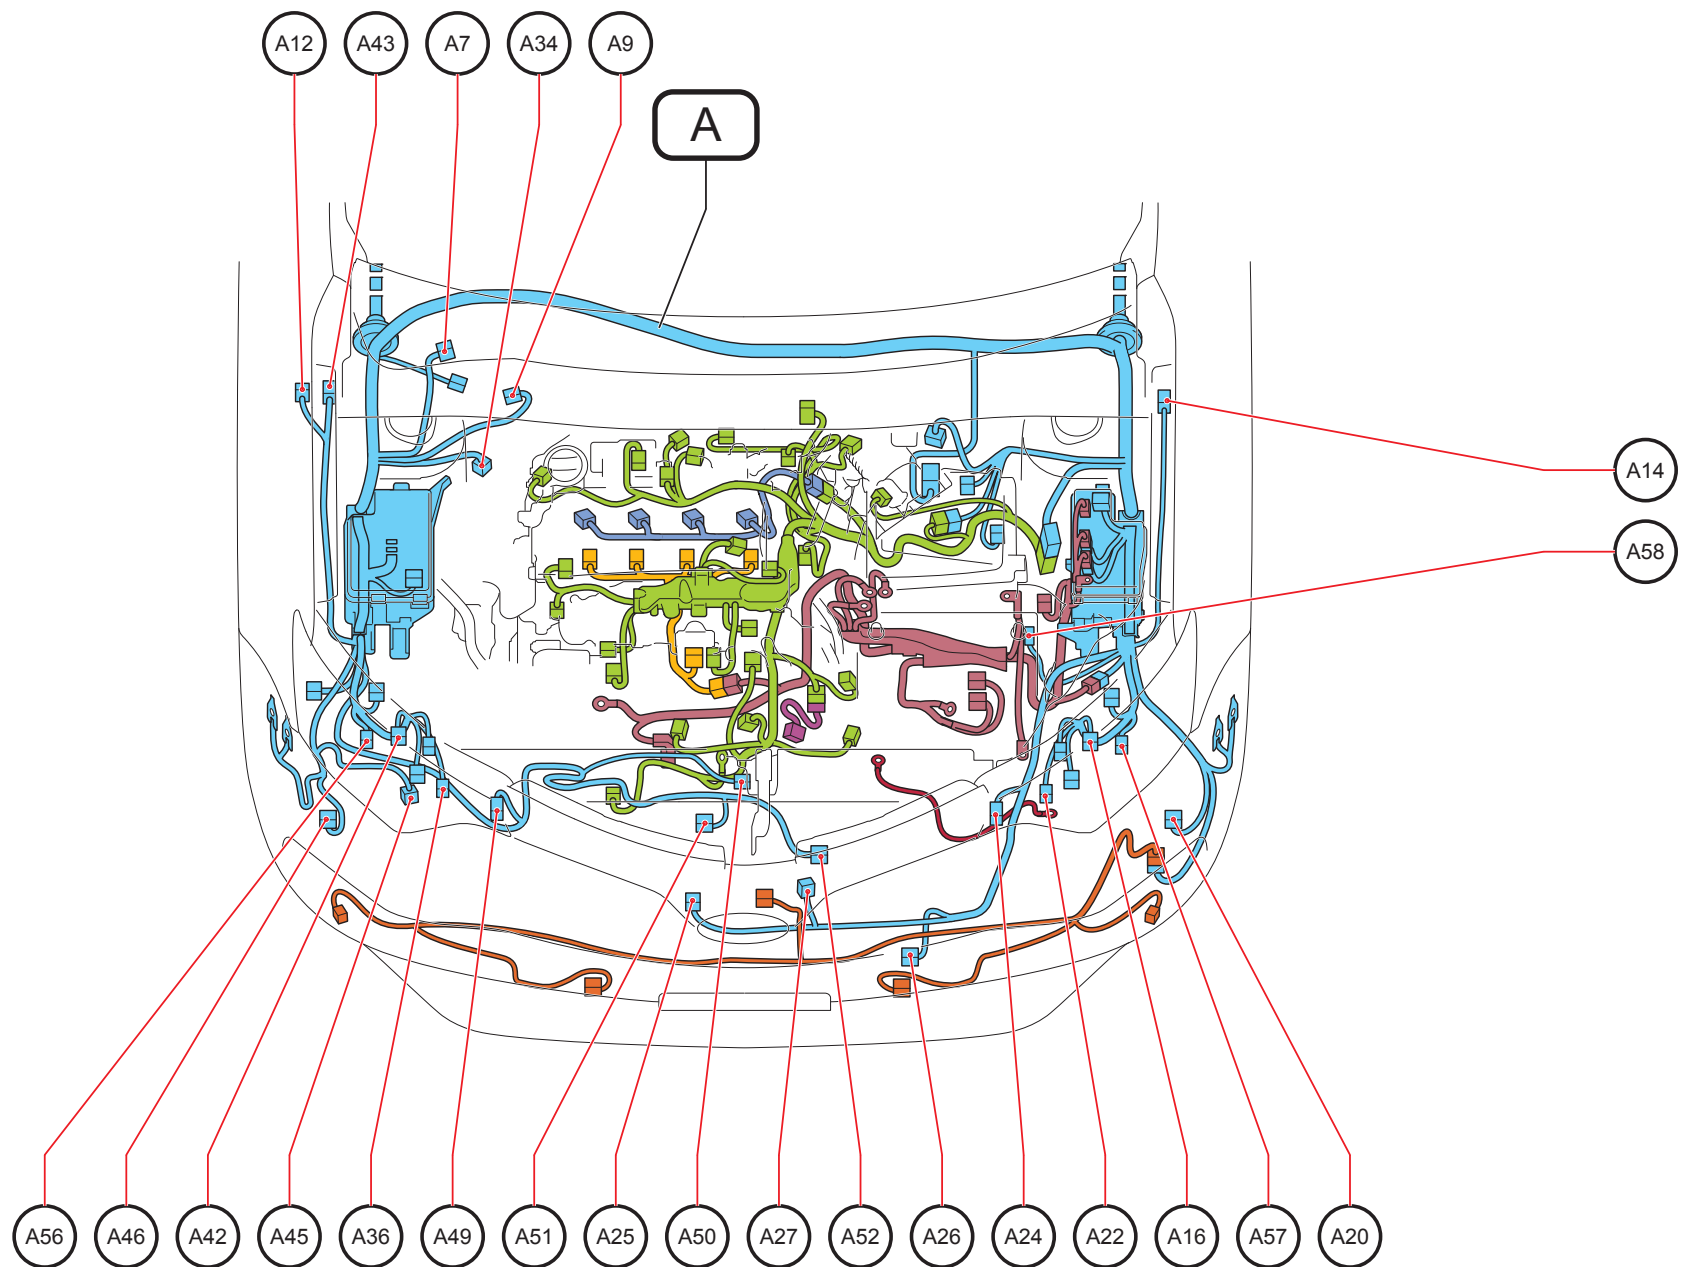


A7	Windshield Wiper Motor Assembly
A9	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
A12	Wireless Door Lock Buzzer
A14	Front Speed Sensor LH
A16	Headlight Assembly LH
A20	Fog Light Assembly LH
A22	Headlight Assembly LH
A24	Front Airbag Sensor LH
A25	High Pitched Horn Assembly
A26	Cooler (Ambient Temperature Sensor) Thermistor
A27	Low Pitched Horn Assembly
A34	A/C Pressure Sensor (Liquid Pipe Sub-Assembly)
A36	Headlight Assembly RH
A42	Headlight Assembly RH
A43	Front Speed Sensor RH
A45	Windshield Washer Motor and Pump Assembly
A46	Fog Light Assembly RH
A49	Front Airbag Sensor RH
A50	Hood Courtesy Switch (Hood Lock Assembly)
A51	No. 2 Cooling Fan Motor
A52	Cooling Fan Motor
A56	Headlight Assembly RH
A57	Headlight Assembly LH
A58	Generator Control ECU Assembly

Position of Parts in Engine Compartment (RHD 2WW)

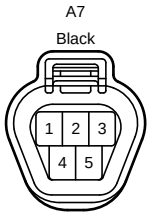


90980-11599

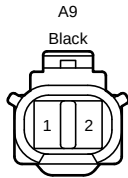


90980-11207
(LHD)




90980-11207
(RHD)

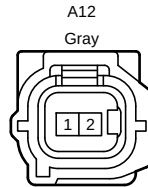


90980-12572

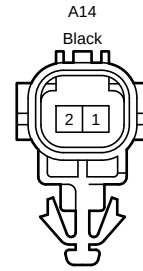

90980-12627

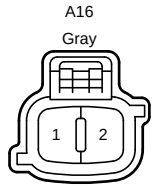


90980-11019
(Front Turn Signal Light)

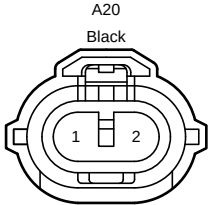


82824-60460



90980-11292
(Clearance Light and Daytime Running Light)

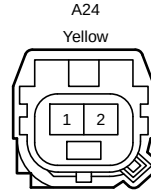


90980-12490

 


90980-10619



 90980-11070




90980-10619

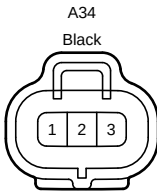


90980-10845




90980-11292
(Clearance Light and Daytime Running Light)

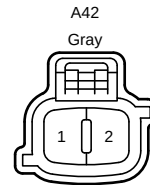


90980-11019
(Front Turn Signal Light)

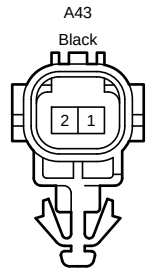


90980-12627

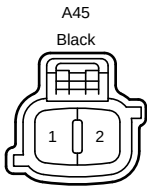


90980-11019

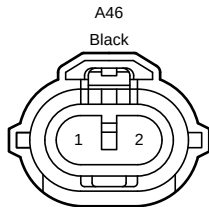


82824-60460

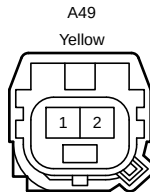


90980-12490

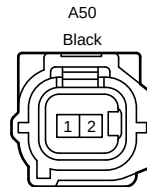


90980-12416

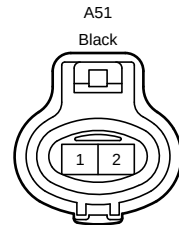


90980-10928

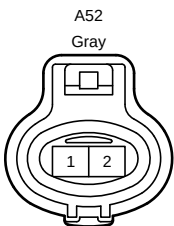


90980-10928

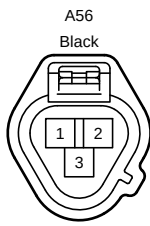

90980-11016
(Headlight Leveling Motor)

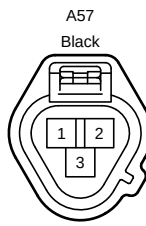

90980-11016
(Headlight Leveling Motor)

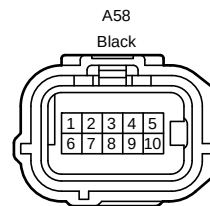

90980-12380