

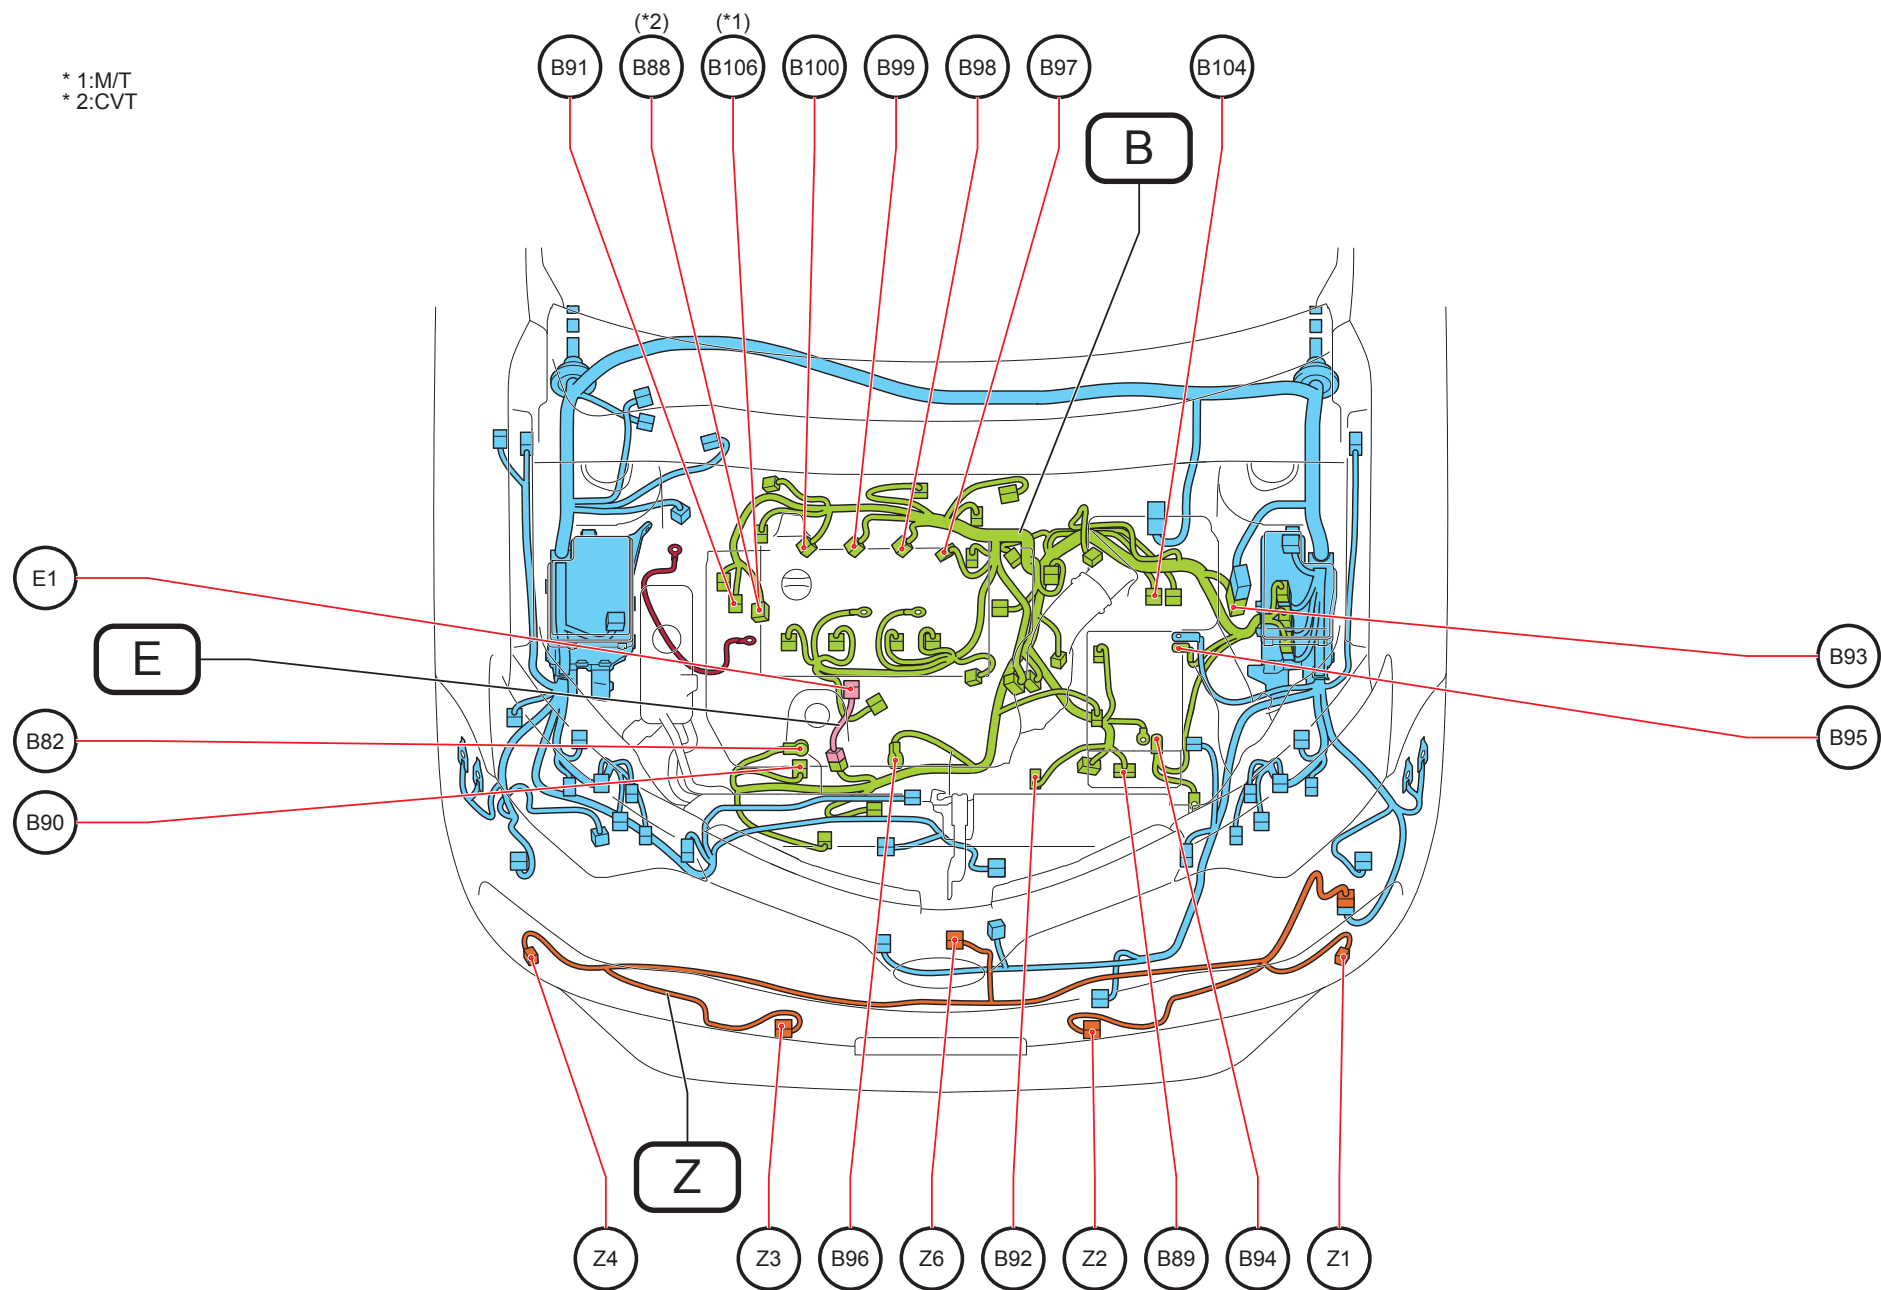


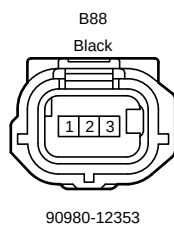


B82	Generator Assembly
B88	Crank Position Sensor
B89	CVT Solenoid (Transmission Wire)
B90	Generator Assembly
B91	Temperature Sensor
B92	Oil Pump Assembly
B93	ECM
B94	Battery
B95	Battery
B96	Starter Assembly
B97	Ignition Coil Assembly No. 4
B98	Ignition Coil Assembly No. 3
B99	Ignition Coil Assembly No. 2
B100	Ignition Coil Assembly No. 1
B104	Neutral Position Switch
B106	Crank Position Sensor
E1	Knock Control Sensor (Bank 1)
Z1	Front No. 1 Ultrasonic Sensor LH
Z2	Front No. 1 Ultrasonic Sensor Center LH
Z3	Front No. 1 Ultrasonic Sensor Center RH
Z4	Front No. 1 Ultrasonic Sensor RH
Z6	Millimeter Wave Radar Sensor Assembly


Position of Parts in Engine Compartment (RHD 3ZR-FAE w/ Stop & Start System From Oct. 2015 Production)

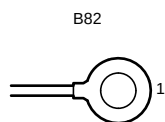


90980-12353

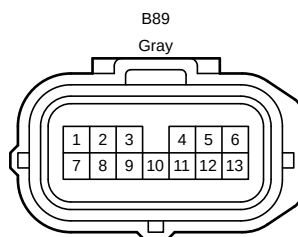


90980-12326

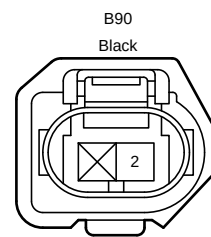


90980-12A88

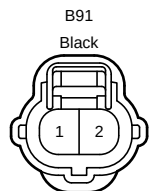





90980-11025

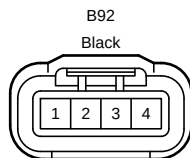


90980-11885

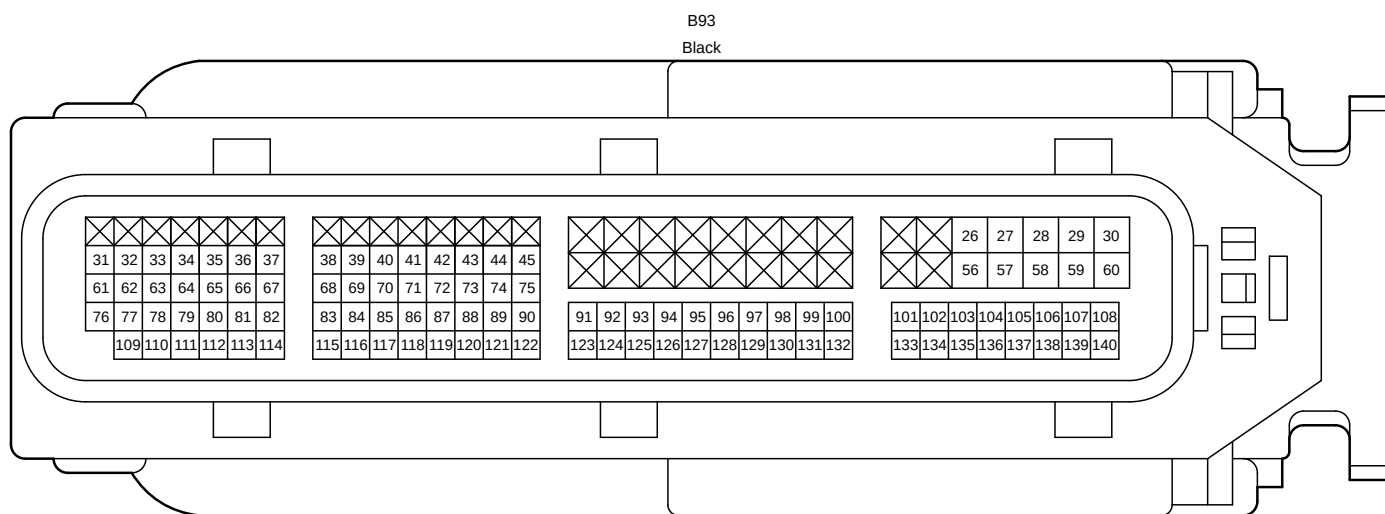

90980-12A38

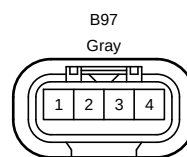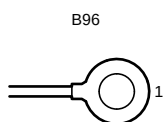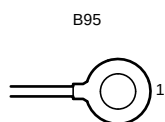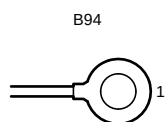


90980-12A29

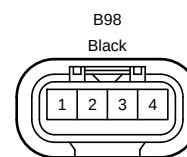


90980-12A29




90980-12A29

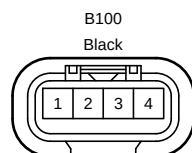


90980-12A29

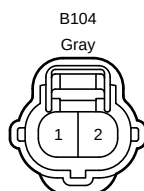

90980-11025

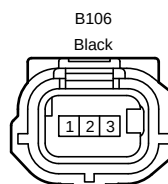

90980-12353

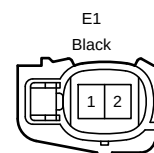

90980-11875

