



* 1:3ZR-FE
* 2:3ZR-FAE

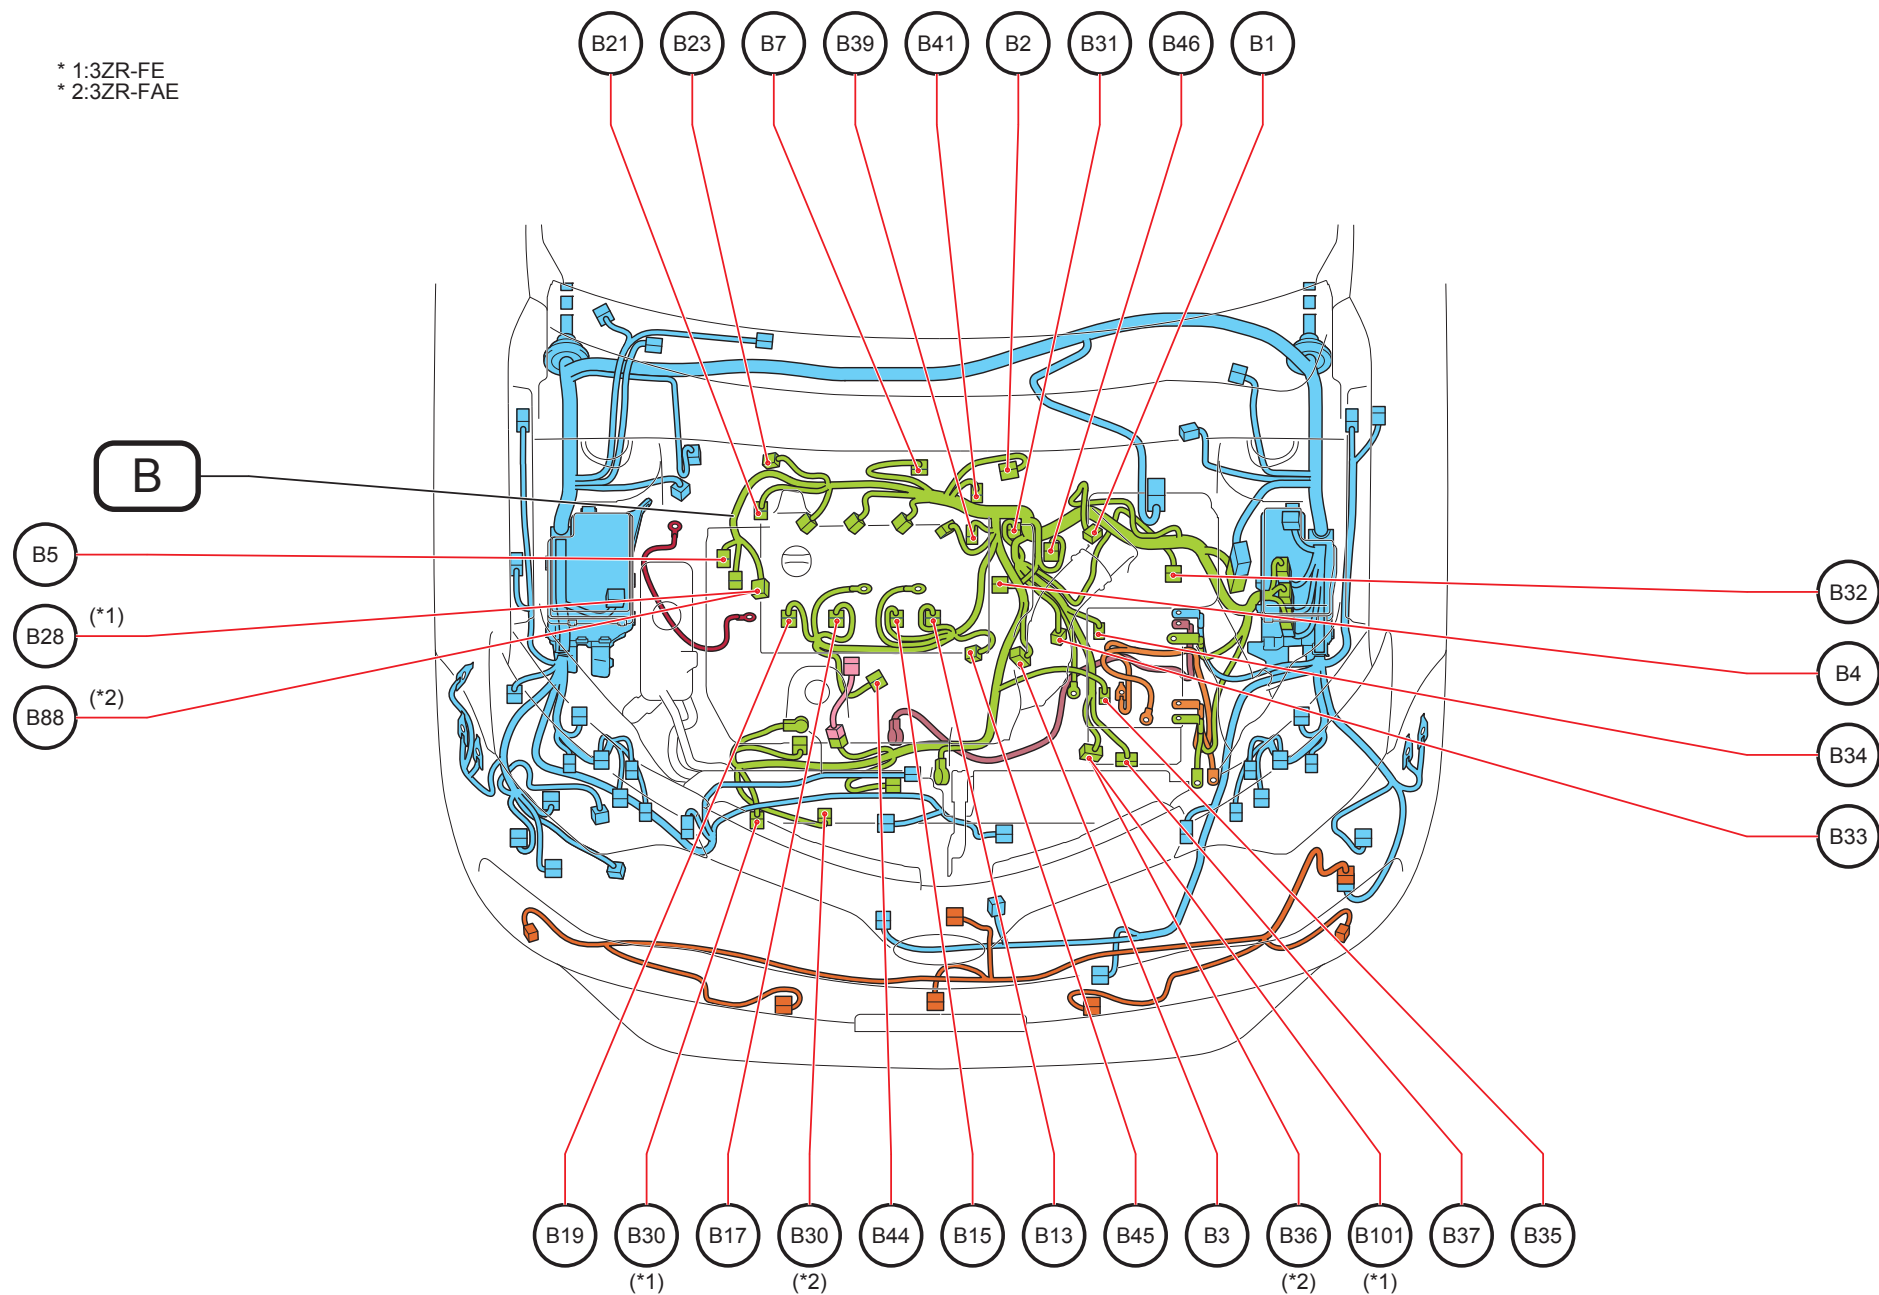

B1	Intake Mass Air Flow Meter Sub-Assembly
B2	Purge VSV (Vacuum Switching Valve Assembly)
B3	Throttle Body with Motor Assembly
B4	E. F. I. Engine Coolant Temperature Sensor
B5	Engine Oil Pressure Switch Assembly
B7	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B13	Injector Assembly No. 4
B15	Injector Assembly No. 3
B17	Injector Assembly No. 2
B19	Injector Assembly No. 1
B21	Camshaft Timing Oil Control Valve Assembly (Intake Side)
B23	Camshaft Timing Oil Control Valve Assembly (Exhaust Side)
B28	Crank Position Sensor
B30	Compressor with Pulley Assembly
B31	Transmission Revolution Sensor (Secondary)
B32	Oil Pressure Sensor
B33	Transmission Revolution Sensor (Turbine)
B34	Transmission Revolution Sensor (Primary)
B35	Back-Up Light Switch Assembly
B36	Park/Neutral Position Switch Assembly
B37	CVT Solenoid (Transmission Wire)
B39	VVT Sensor (Intake Side)
B41	VVT Sensor (Exhaust Side)
B44	VSV (ACIS)
B45	E. F. I. Vacuum Sensor Assembly
B46	Continuously Variable Valve Lift Controller Assembly
B88	Crank Position Sensor
B101	Park/Neutral Position Switch Assembly

Position of Parts in Engine Compartment (LHD 3ZR-FE, 3ZR-FAE w/o Stop & Start System From Oct. 2015 Production)

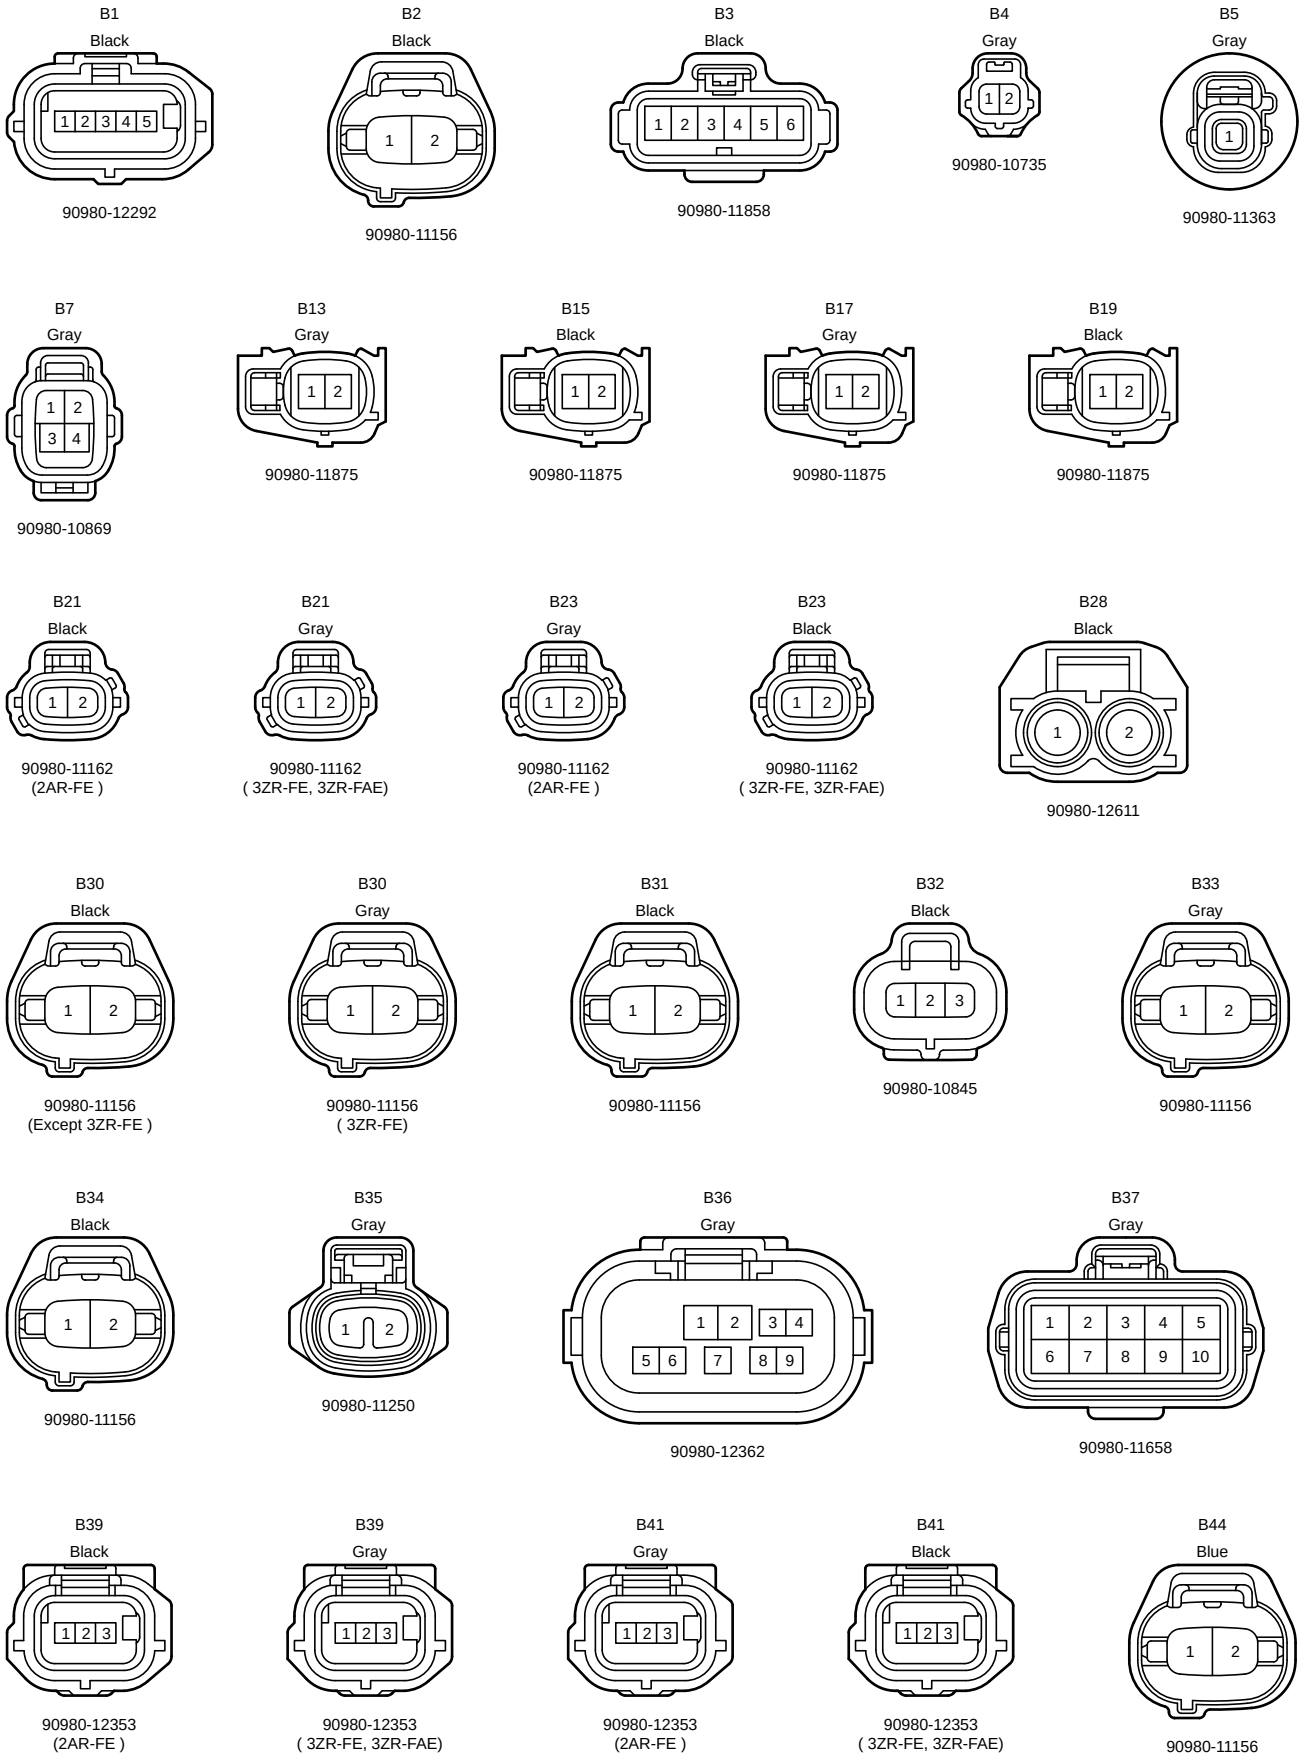

Position of Parts in Engine Compartment (LHD 3ZR-FE, 3ZR-FAE w/o Stop & Start System From Oct. 2015 Production)

