


Position of Parts in Instrument Panel (LHD)















- * 11:Korea
- * 12:Except Korea
- * 13:6 Speaker
- * 14:11 Speaker
- * 19:Before Oct. 2015 Production
- * 20:From Oct. 2015 Production
- * 21:2WW
- * 22:Except 2WW

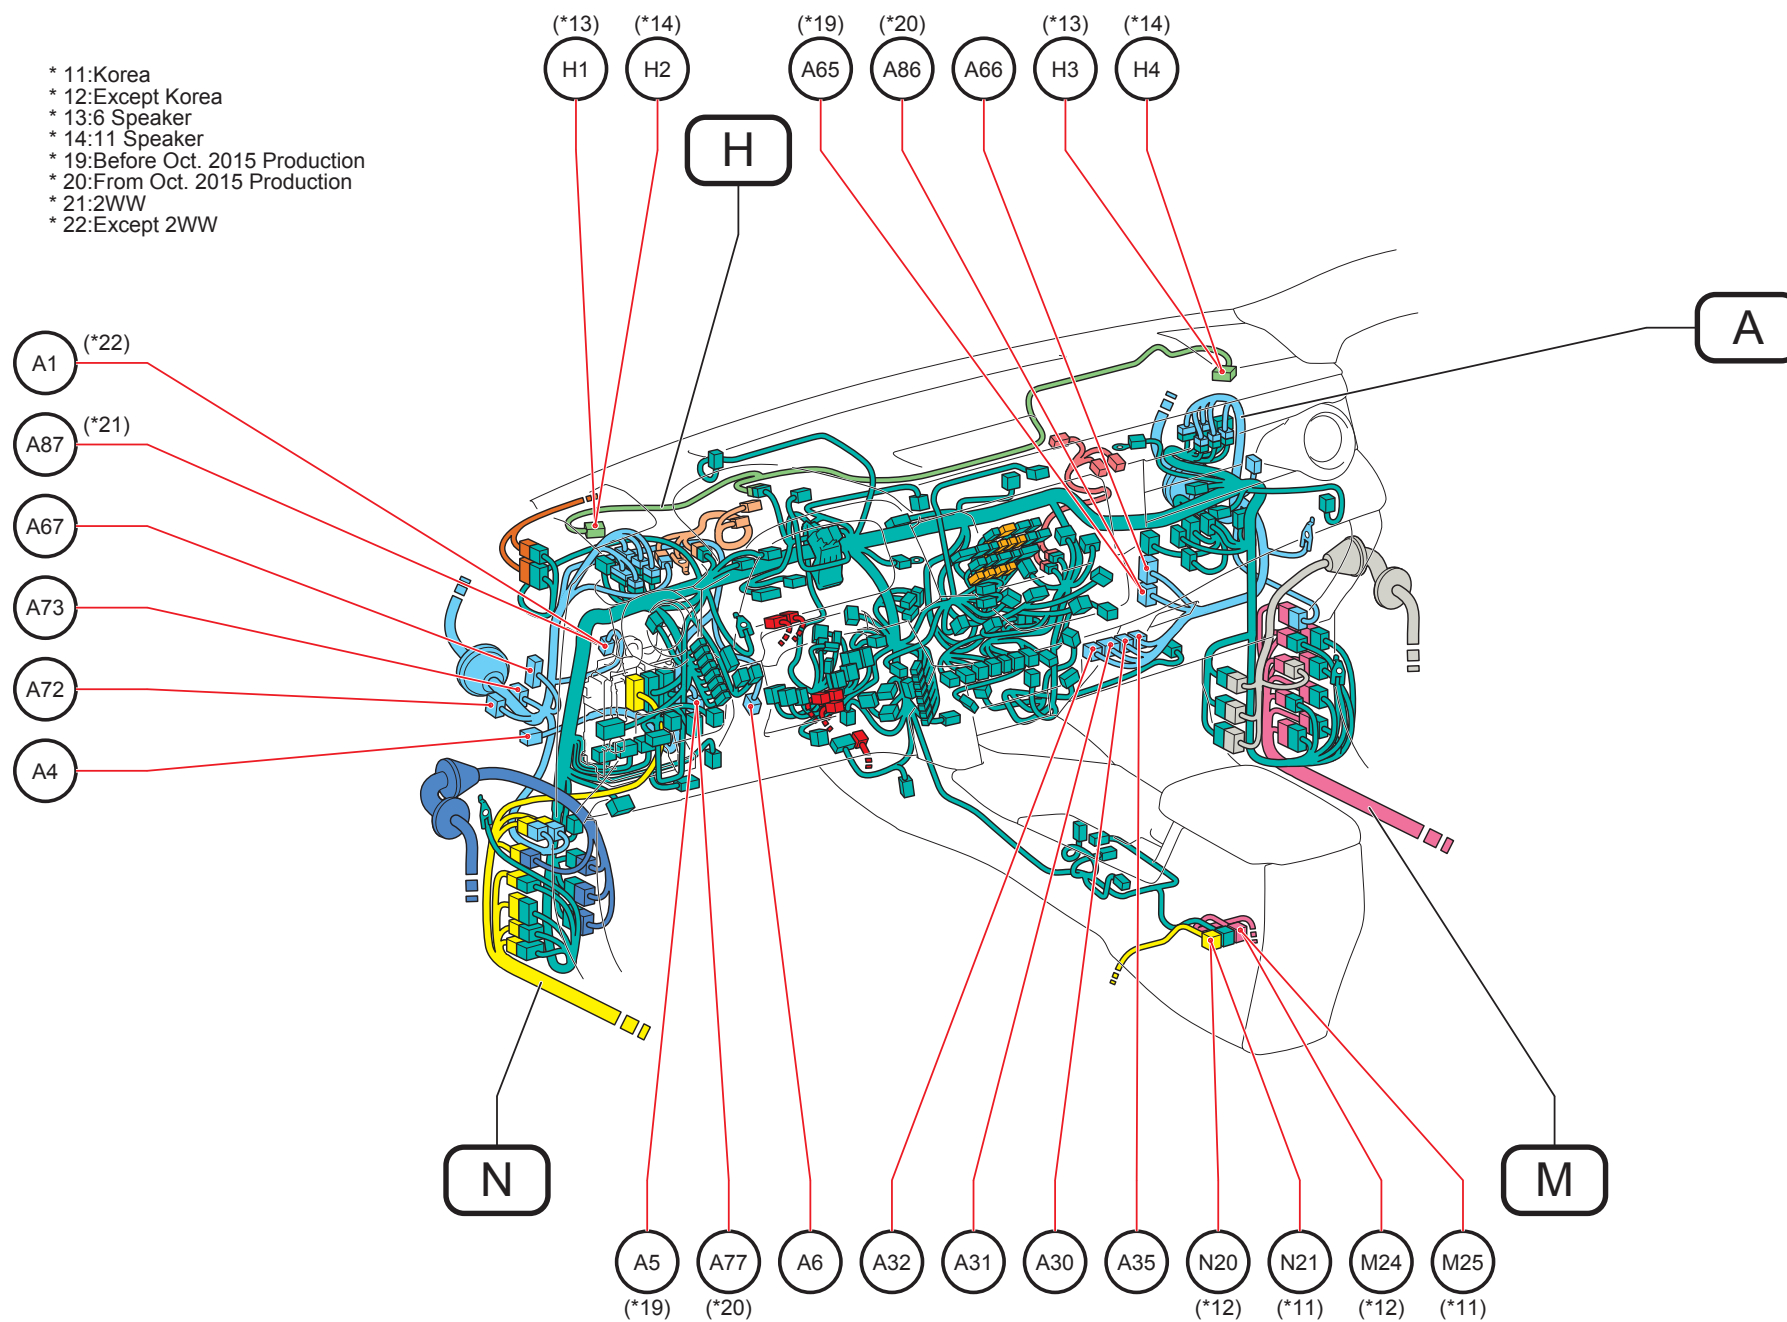


Position of Parts in Instrument Panel (LHD)

A1	Clutch Switch Assembly
A4	Clutch Start Switch Assembly
A5	Stop Light Switch Assembly
A6	Accelerator Pedal Sensor Assembly
A30	Quick Heater Assembly
A31	Quick Heater Assembly
A32	Quick Heater Assembly
A35	Quick Heater Assembly
A65	Engine Stop and Start ECU
A66	Engine Stop and Start ECU
A67	Headlight Leveling ECU Assembly
A72	No. 3 Junction Connector
A73	No. 4 Junction Connector
A77	Stop Light Switch Assembly
A86	Engine Stop and Start ECU
A87	Clutch Switch Assembly
H1	Front No. 2 Speaker Assembly LH
H2	Front No. 2 Speaker Assembly LH
H3	Front No. 2 Speaker Assembly RH
H4	Front No. 2 Speaker Assembly RH
M24	Airbag Sensor Assembly
M25	Airbag Sensor Assembly
N20	Airbag Sensor Assembly
N21	Airbag Sensor Assembly

    
Position of Parts in Instrument Panel (LHD)

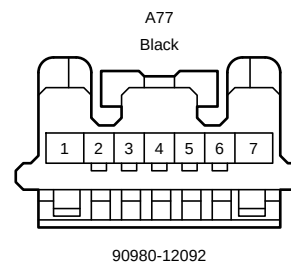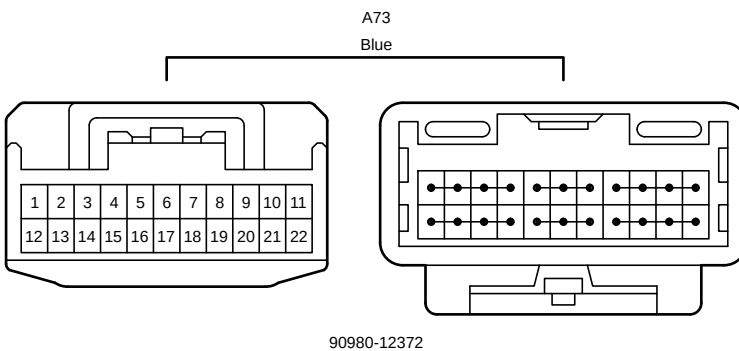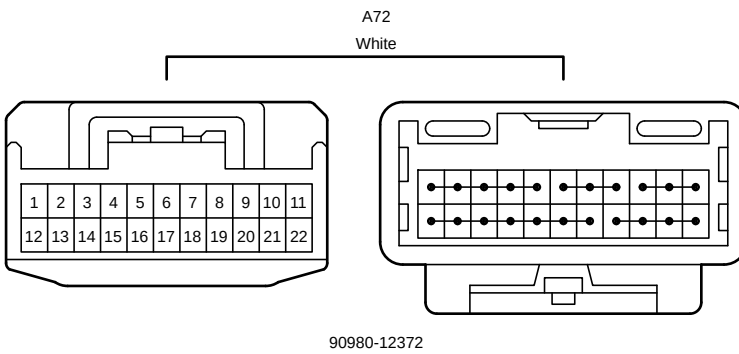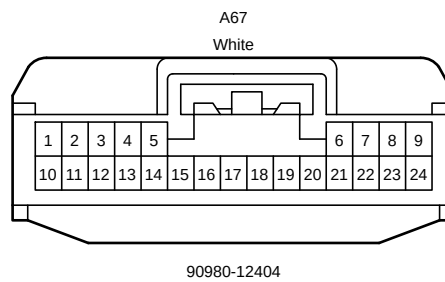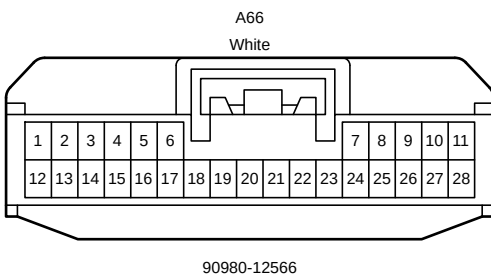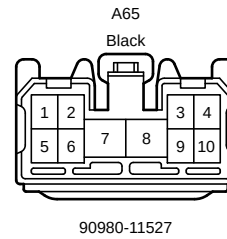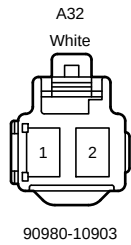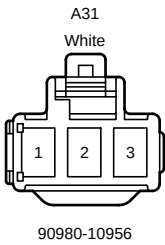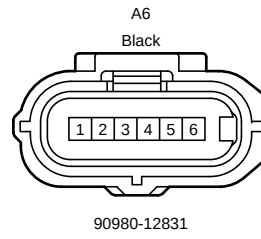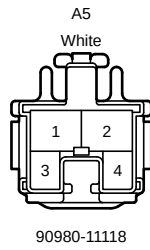


Position of Parts in Instrument Panel (LHD)

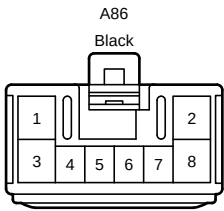


90980-11362

 


90980-10906

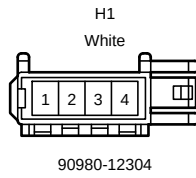


90980-12304

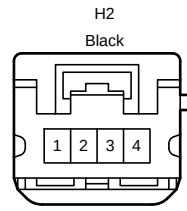


90980-12733

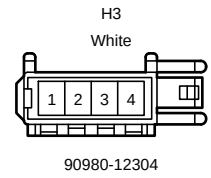


90980-12304

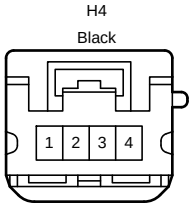


90980-12733

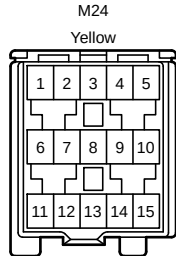


90980-12449

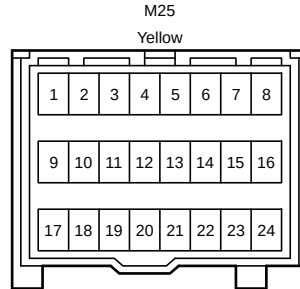

90980-12392

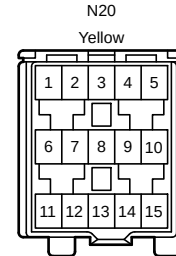

90980-12450

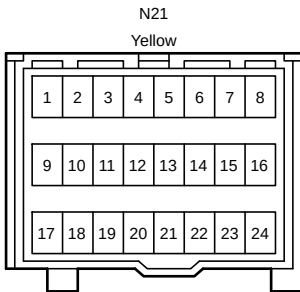

90980-12390