


Position of Parts in Instrument Panel (LHD)

* 11:Korea
 * 12:Except Korea

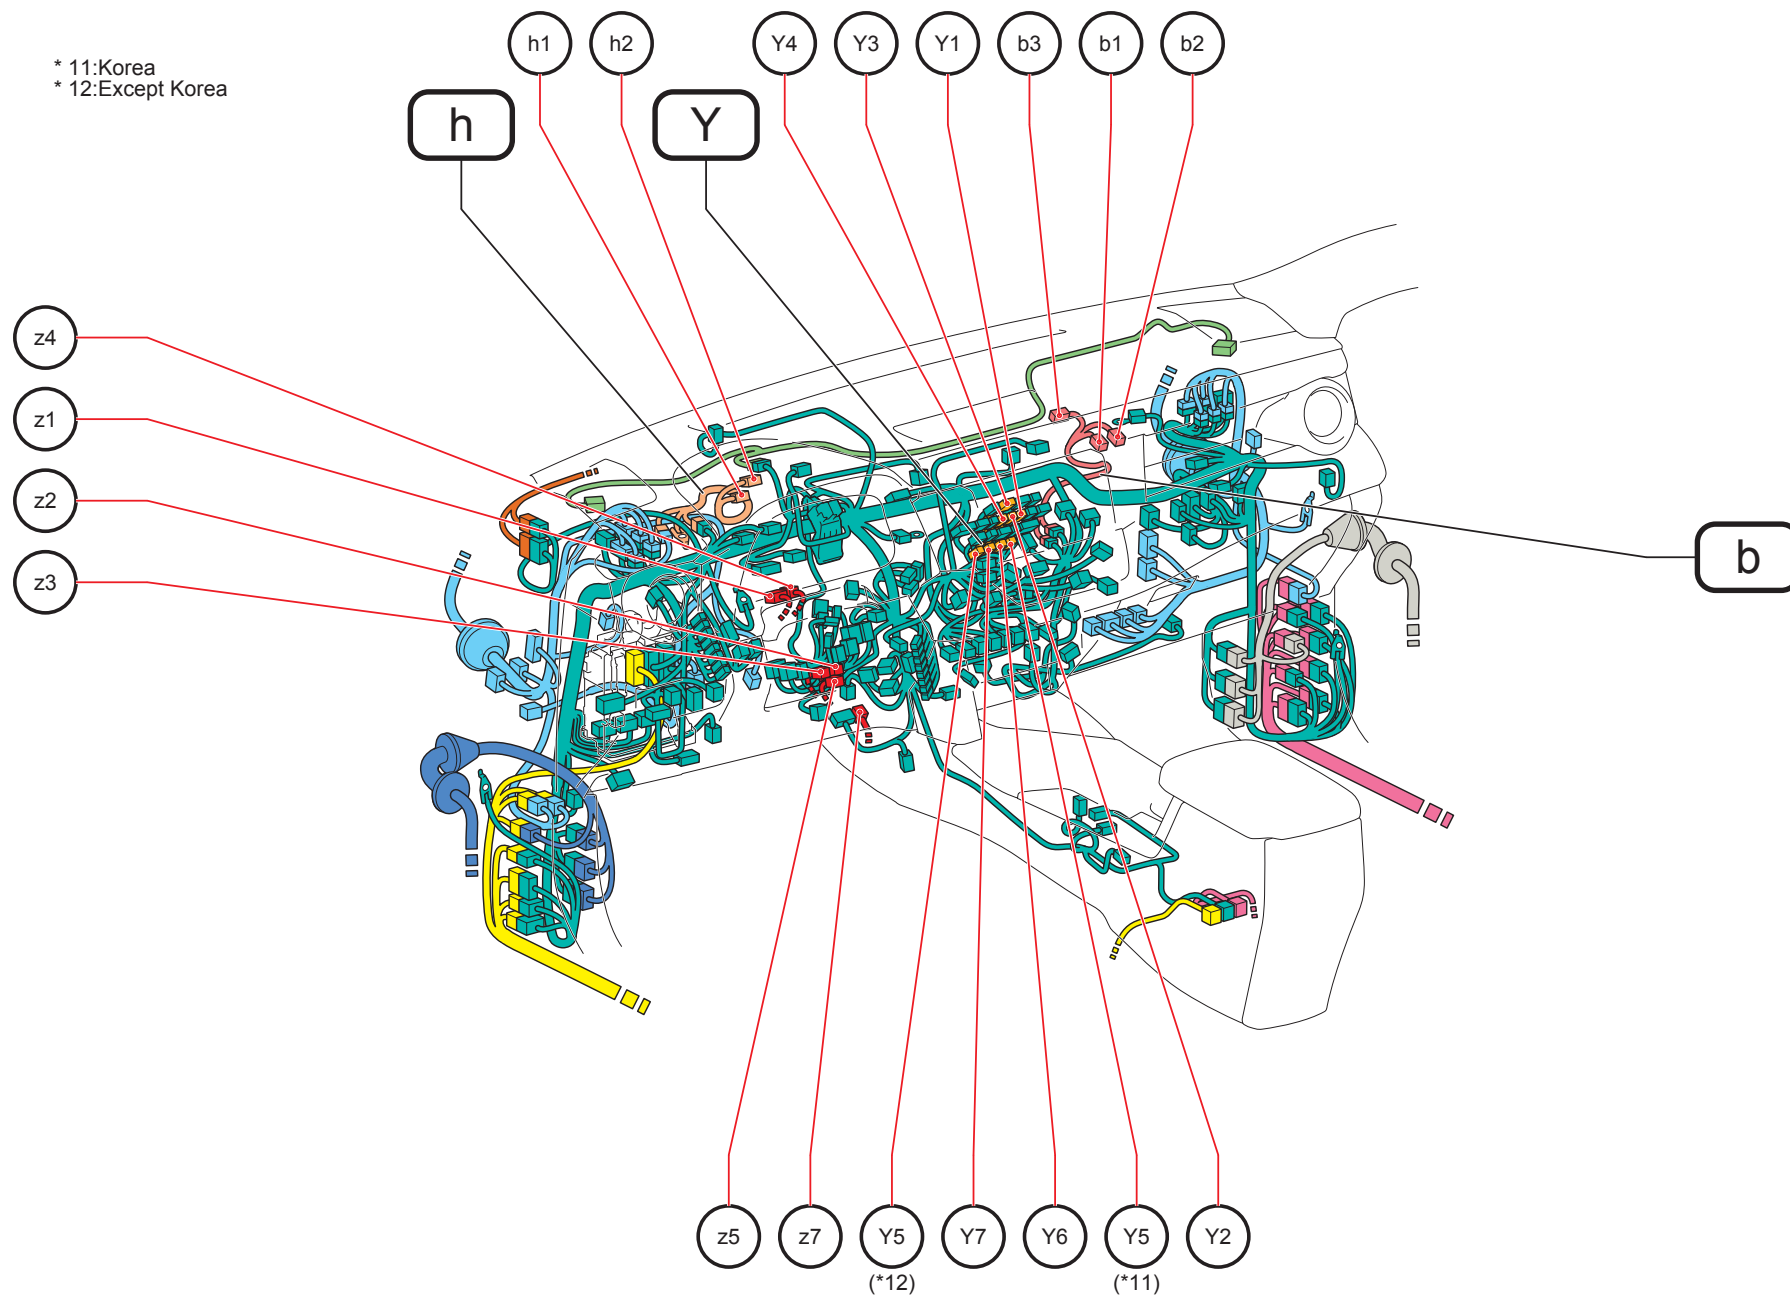

Position of Parts in Instrument Panel (LHD)

Y1	Radio & Display Receiver Assembly
Y2	Radio & Display Receiver Assembly
Y3	Radio & Display Receiver Assembly
Y4	Radio & Display Receiver Assembly
Y5	Navigation ECU
Y6	Navigation ECU
Y7	Navigation ECU
b1	Instrument Panel Passenger Airbag without Door Assembly
b2	Instrument Panel Passenger Airbag without Door Assembly
b3	Instrument Panel Passenger Airbag without Door Assembly
h1	Power Steering ECU Assembly
h2	Power Steering ECU Assembly
z1	Steering Pad Switch Assembly , Spiral Cable Sub-Assembly
z2	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable Sub-Assembly
z3	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable Sub-Assembly
z4	Cruise Control Main Switch , Spiral Cable Sub-Assembly
z5	Steering Heater Switch , Spiral Cable Sub-Assembly
z7	A/C Blower Assembly (A/C Harness Assembly) , A/C Amplifier Assembly

Position of Parts in Instrument Panel (LHD)

