

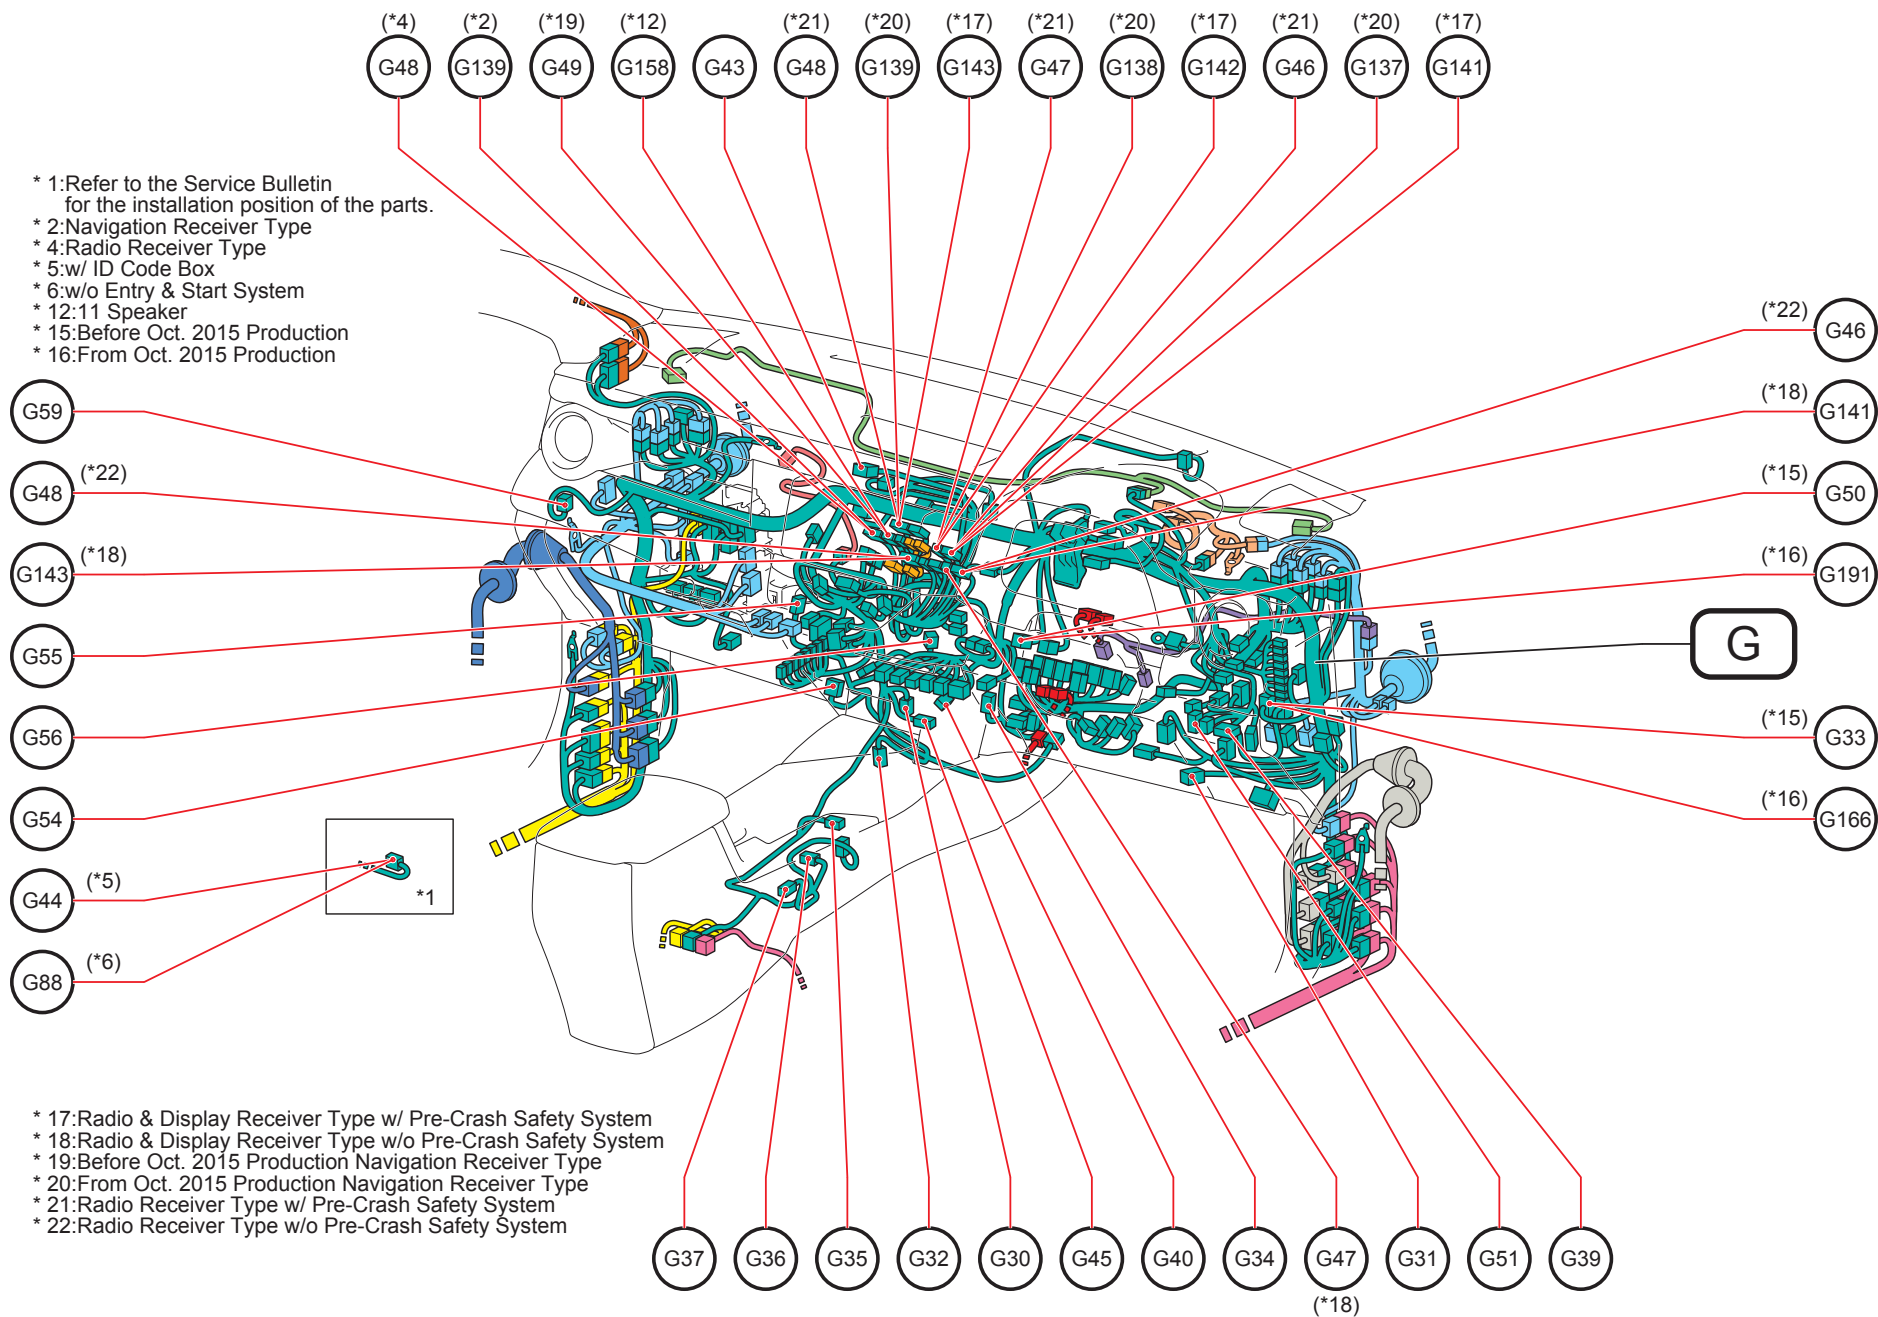
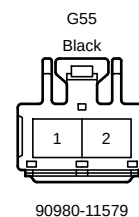
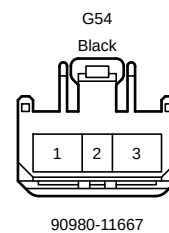
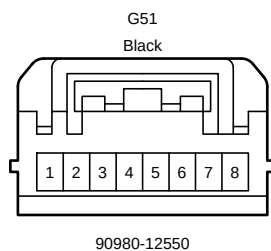
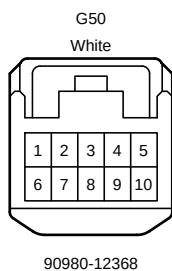
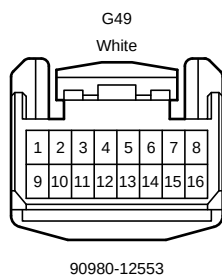
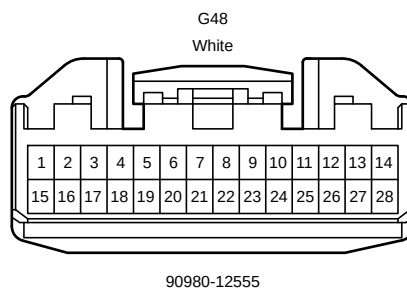
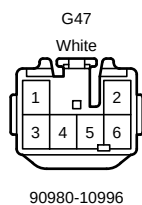
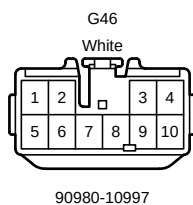
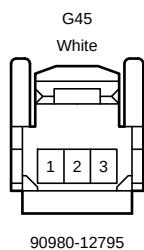
 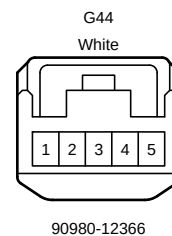
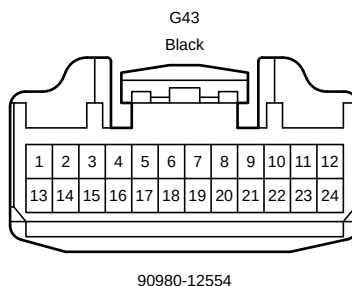

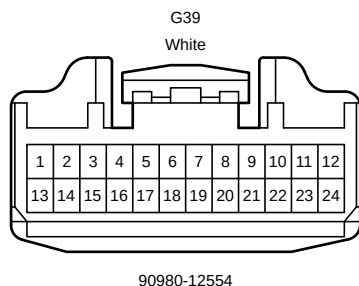
 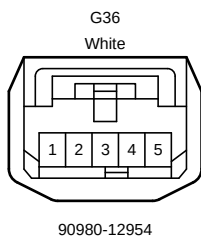
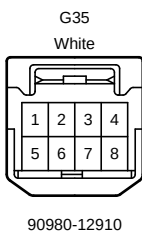
 
 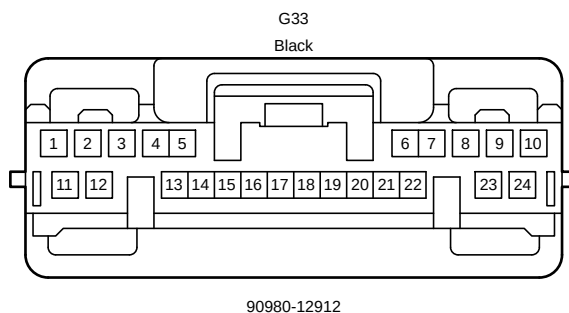
 


Position of Parts in Instrument Panel (RHD)




G30	No. 1 Cooler Thermistor
G31	Lower No. 1 Instrument Panel Airbag Assembly
G32	Oxygen Sensor (Bank 1 Sensor 2)
G33	Clearance Warning ECU Assembly
G34	No. 1 Clearance Warning Buzzer
G35	Shift Lock Control ECU (Floor Shift Lever Sub-Assembly)
G36	Transmission Control Switch
G37	Parking Brake Switch Assembly
G39	Outer Mirror Switch Assembly
G40	No. 1 Power Outlet Socket Assembly
G43	Telltale Light Assembly
G44	ID Code Box (Immobiliser Code ECU)
G45	No. 1 Indoor Electrical Key Antenna Assembly
G46	Radio Receiver Assembly
G47	Radio Receiver Assembly
G48	Radio Receiver Assembly
G49	Navigation Receiver Assembly
G50	Differential Lock Switch
G51	Traction Control Switch
G54	Blower Assembly
G55	Blower Motor with Fan Assembly
G56	Blower Resistor
G59	Airbag Cut Off Switch Cylinder Sub-Assembly
G88	Transponder Key ECU Assembly
G137	Navigation Receiver Assembly
G138	Navigation Receiver Assembly
G139	Navigation Receiver Assembly
G141	Radio & Display Receiver Assembly
G142	Radio & Display Receiver Assembly
G143	Radio & Display Receiver Assembly
G158	Navigation Receiver Assembly
G166	Clearance Warning ECU Assembly
G191	Differential Lock Switch


Position of Parts in Instrument Panel (RHD)




Position of Parts in Instrument Panel (RHD)

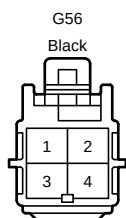


90980-11136

 


90980-12063

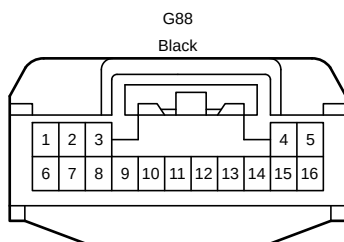


90980-12423

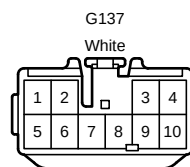


90980-10997

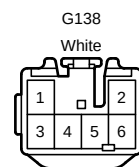


90980-10996

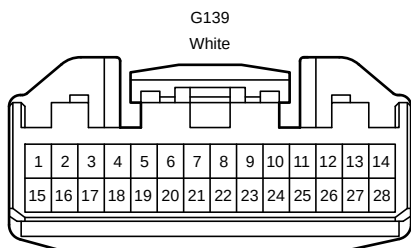


90980-12555

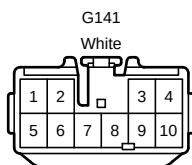


90980-10997

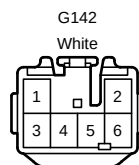


90980-10996

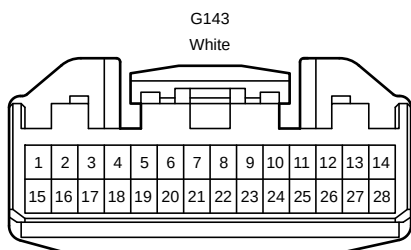


90980-12555

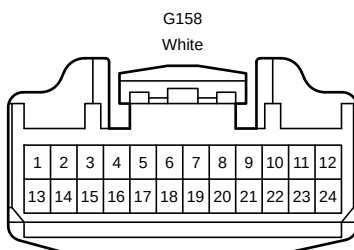

90980-12554

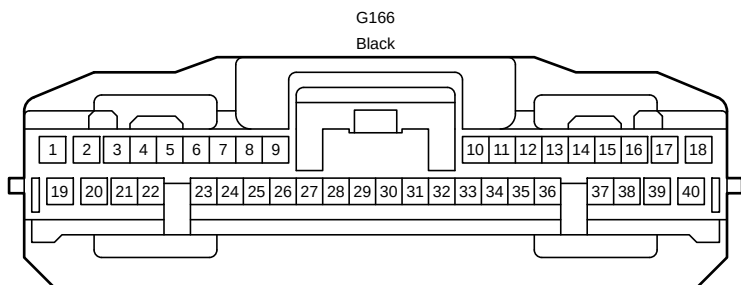

90980-12924

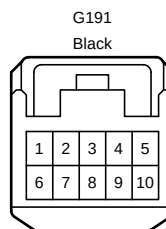

90980-12368