 
 


G46(A), G47(B), G48(C), G146(D)
Radio Receiver Assembly
G49(E), G137(F), G138(G), G139(H), G149(K)
Navigation Receiver Assembly
G141(L), G142(M), G143(N), G144(P), G150(Q), Y1(T), Y2(U), Y3(V), Y4(W)
Radio & Display Receiver Assembly

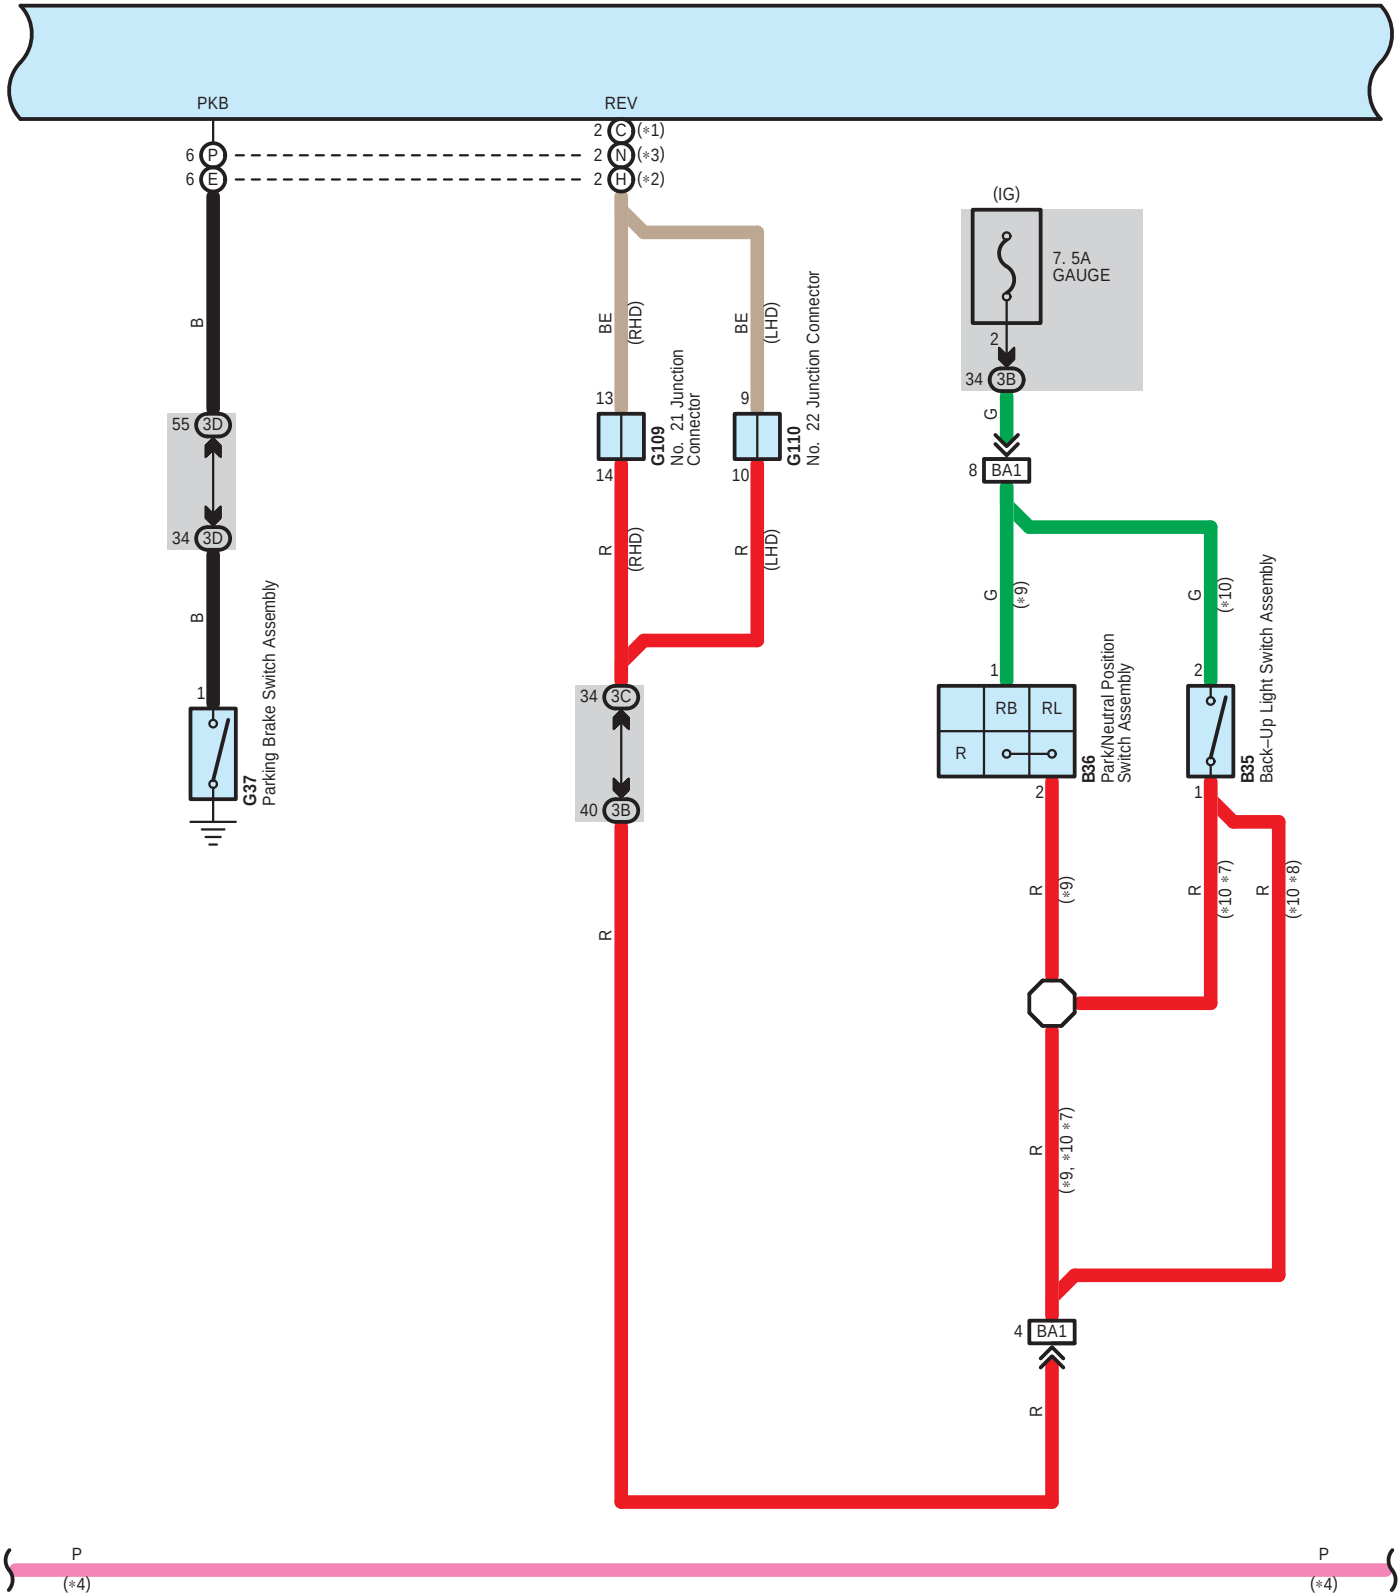 


G46(A), G47(B), G48(C), G146(D)
Radio Receiver Assembly
G49(E), G137(F), G138(G), G139(H), G149(K)
Navigation Receiver Assembly
G141(L), G142(M), G143(N), G144(P), G150(Q), Y1(T), Y2(U), Y3(V), Y4(W)
Radio & Display Receiver Assembly

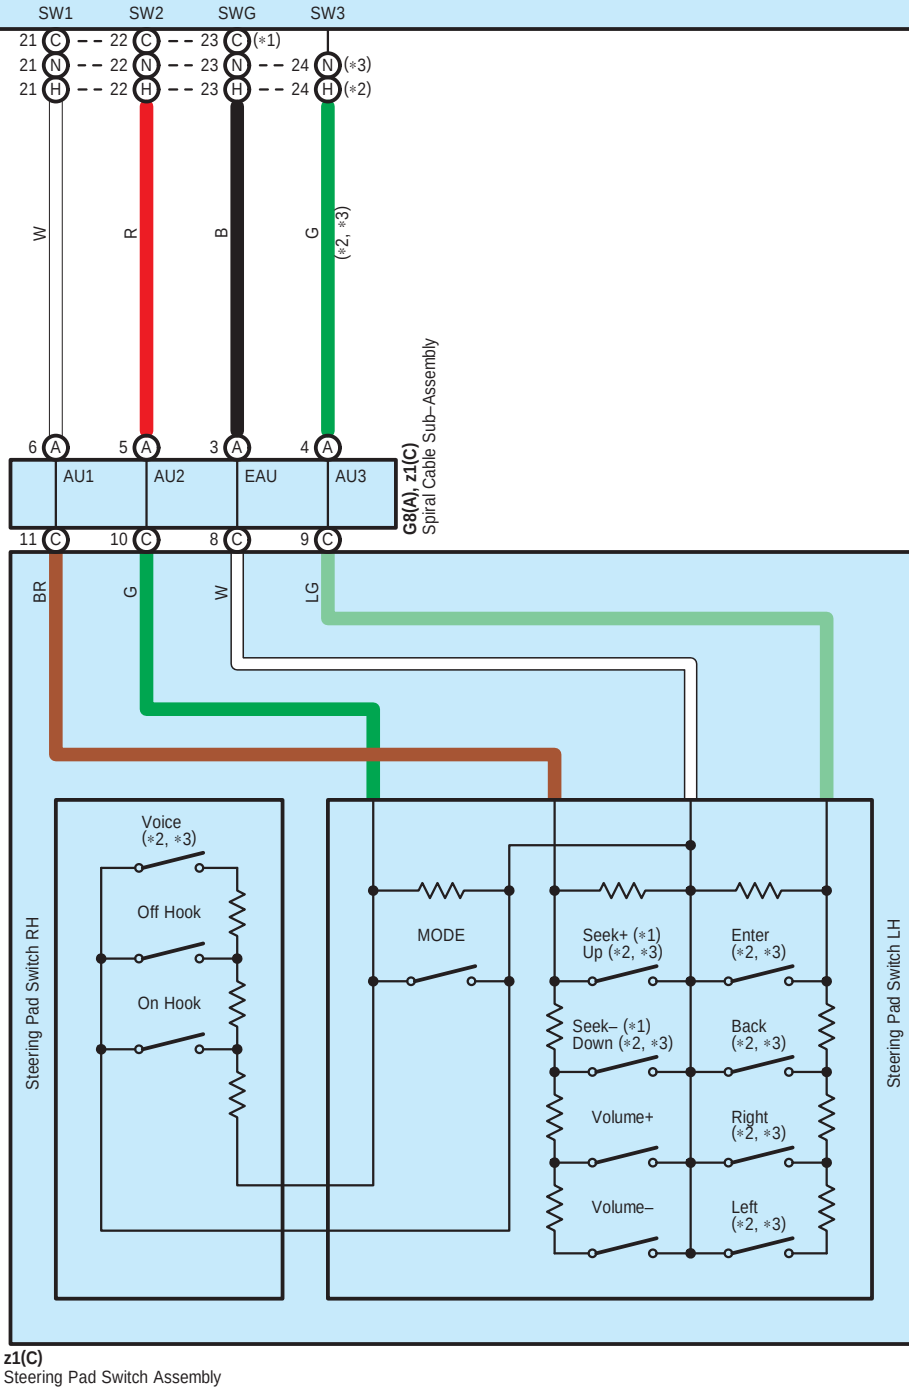


z1(C)
Steering Pad Switch Assembly


G46(A), G47(B), G48(C), G146(D)
Radio Receiver Assembly
G49(E), G137(F), G138(G), G139(H), G149(K)
Navigation Receiver Assembly
G141(L), G142(M), G143(N), G144(P), G150(Q), Y1(T), Y2(U), Y3(V), Y4(W)
Radio & Display Receiver Assembly

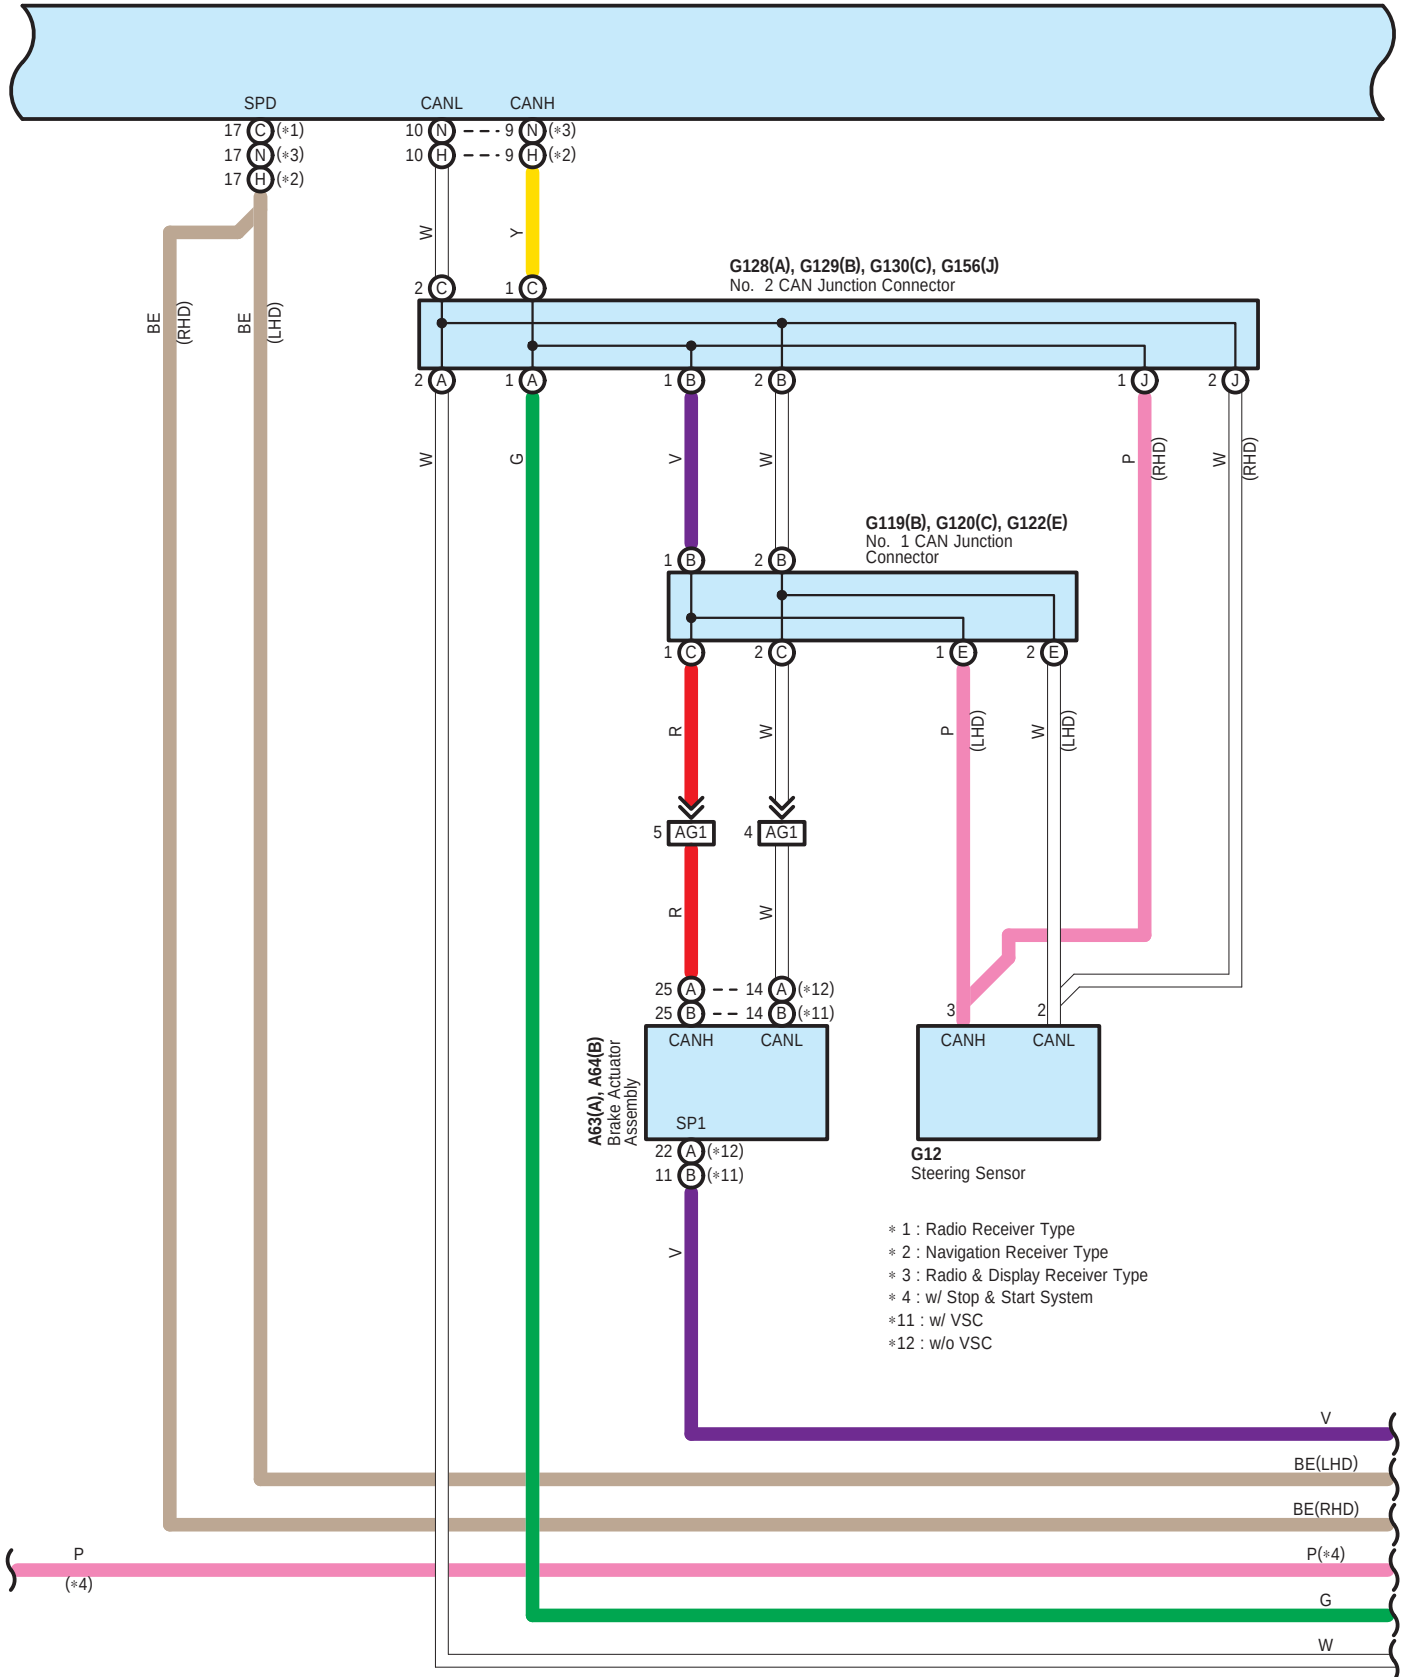

 G46(A), G47(B), G48(C), G146(D)
Radio Receiver Assembly
G49(E), G137(F), G138(G), G139(H), G149(K)
Navigation Receiver Assembly
G141(L), G142(M), G143(N), G144(P), G150(Q), Y1(T), Y2(U), Y3(V), Y4(W)
Radio & Display Receiver Assembly

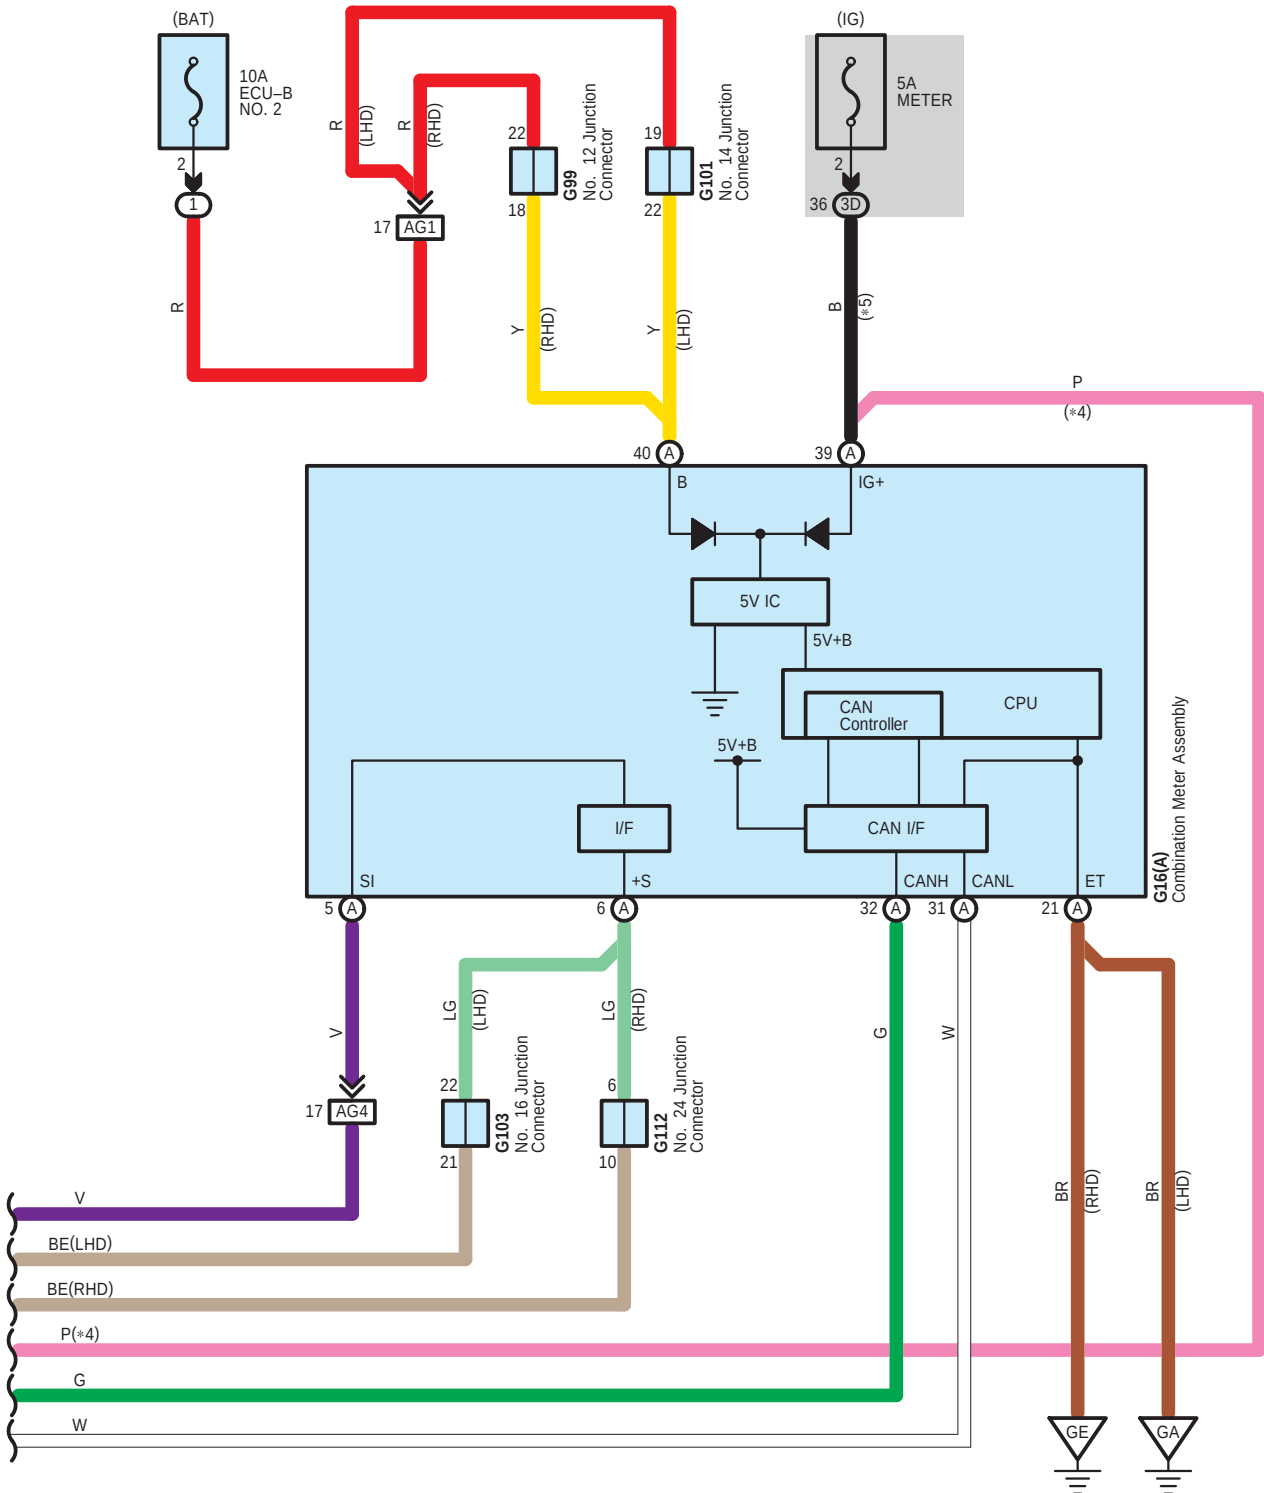

 G46(A), G47(B), G48(C), G146(D)
Radio Receiver Assembly
G49(E), G137(F), G138(G), G139(H), G149(K)
Navigation Receiver Assembly
G141(L), G142(M), G143(N), G144(P), G150(Q), Y1(T), Y2(U), Y3(V), Y4(W)
Radio & Display Receiver Assembly

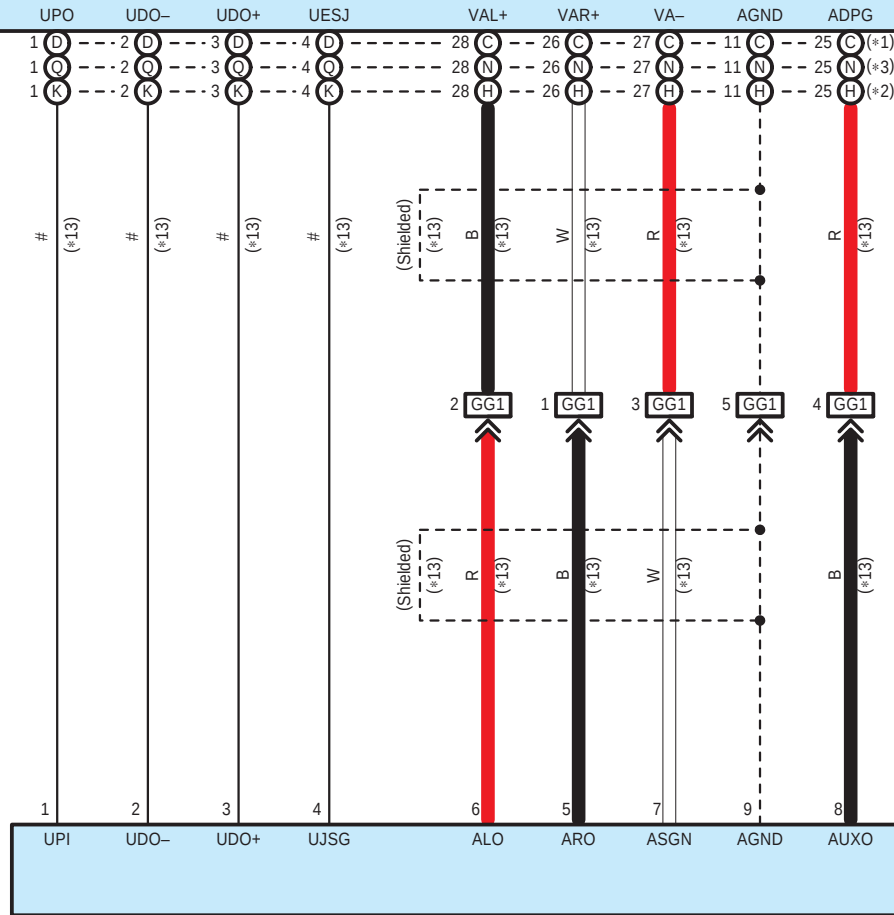


G145
No. 1 Stereo Jack Adapter Assembly

- * 1 : Radio Receiver Type
- * 2 : Navigation Receiver Type
- * 3 : Radio & Display Receiver Type
- * 4 : w/ Stop & Start System
- * 5 : w/o Stop & Start System
- *13 : w/ No. 1 Stereo Jack Adapter Assembly


: There is no wire color information.

 G46(A), G47(B), G48(C), G146(D)
Radio Receiver Assembly
G49(E), G137(F), G138(G), G139(H), G149(K)
Navigation Receiver Assembly
G141(L), G142(M), G143(N), G144(P), G150(Q), Y1(T), Y2(U), Y3(V), Y4(W)
Radio & Display Receiver Assembly

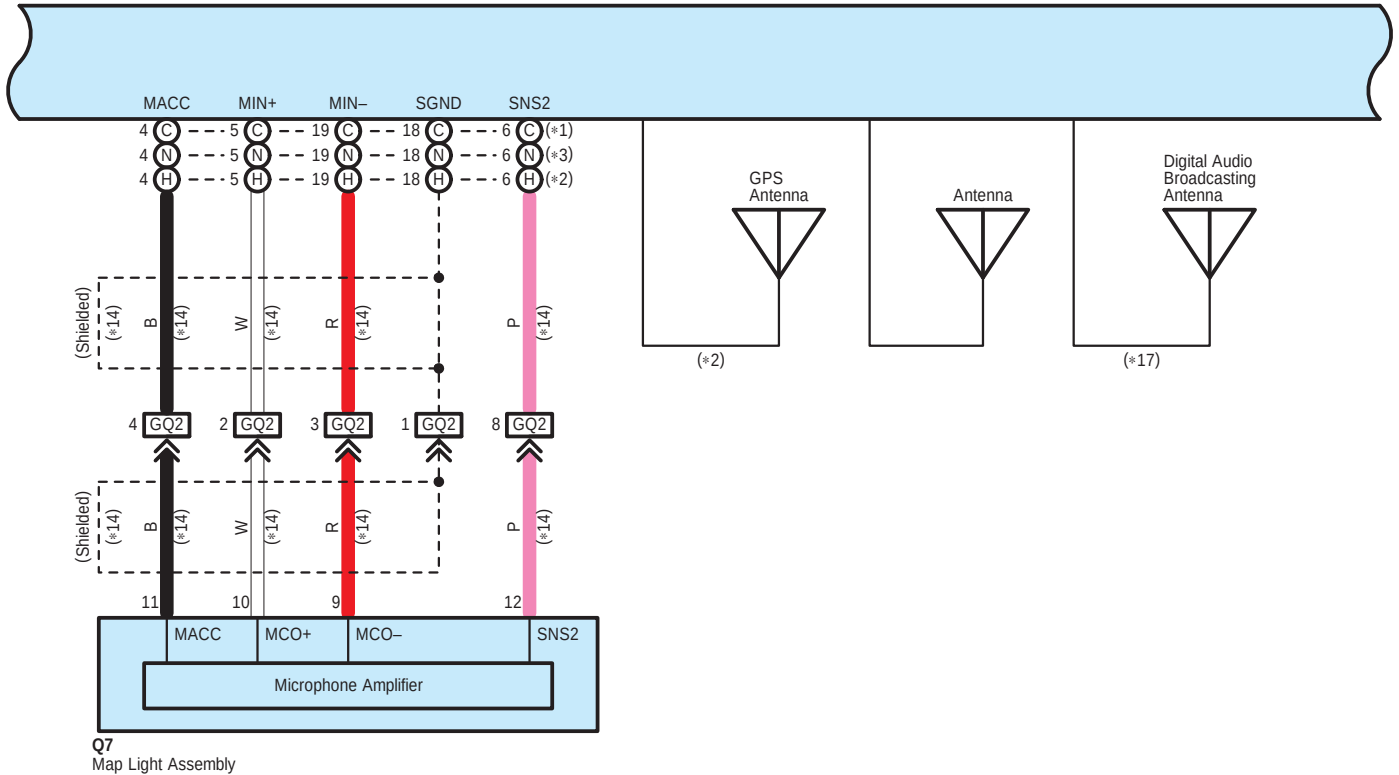


- * 1 : Radio Receiver Type
- * 2 : Navigation Receiver Type
- * 3 : Radio & Display Receiver Type
- *14 : w/ Microphone Amplifier
- *15 : 4 Speaker
- *16 : 6 Speaker
- *17 : w/ Digital Audio Broadcasting Antenna

 
G46(A), G47(B), G48(C), G146(D)
Radio Receiver Assembly
G49(E), G137(F), G138(G), G139(H), G149(K)
Navigation Receiver Assembly
G141(L), G142(M), G143(N), G144(P), G150(Q), Y1(T), Y2(U), Y3(V), Y4(W)
Radio & Display Receiver Assembly

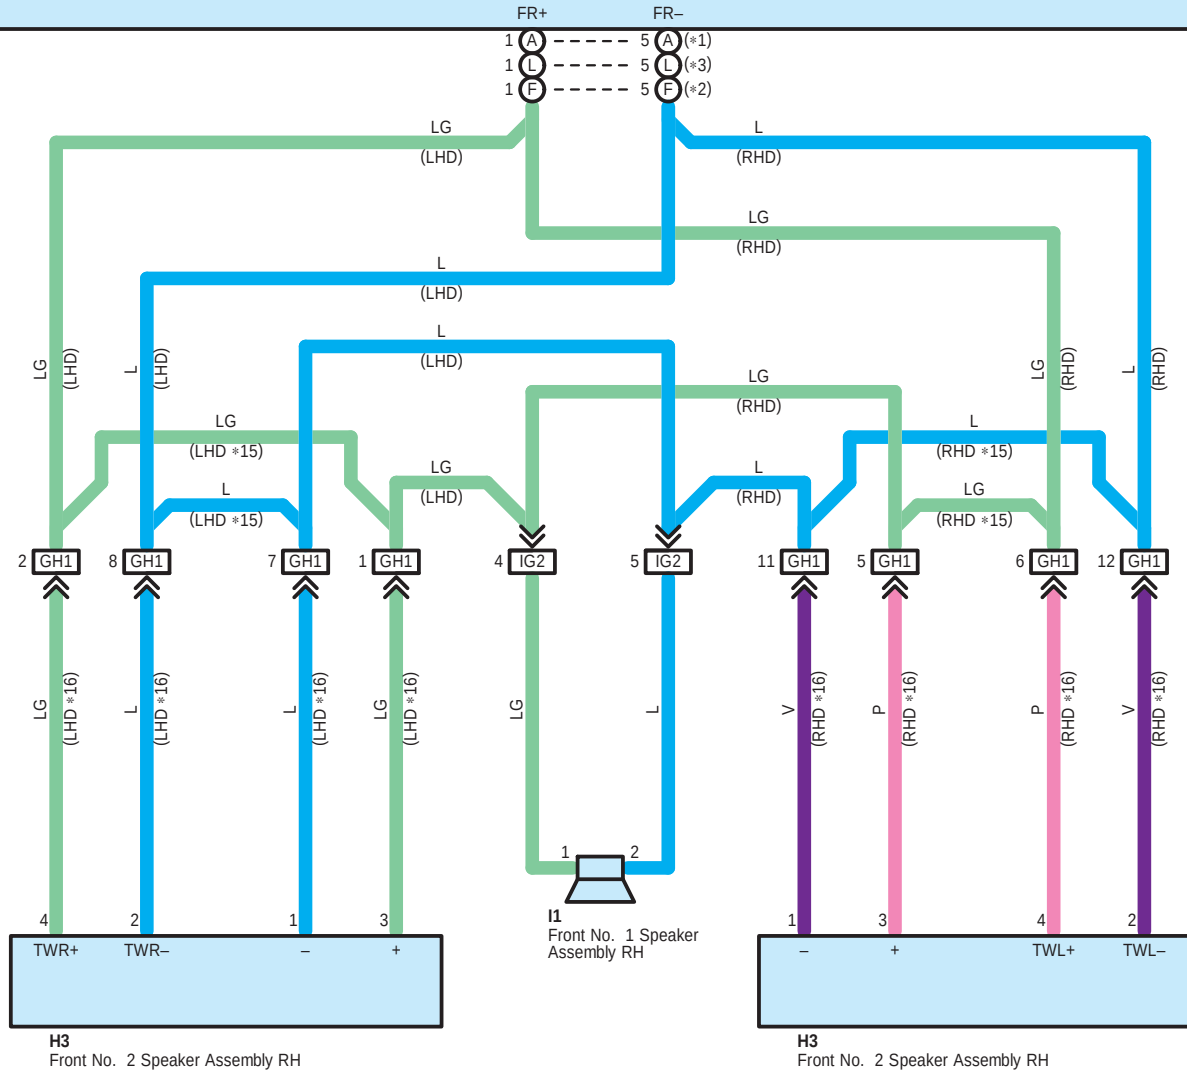

 G46(A), G47(B), G48(C), G146(D)
Radio Receiver Assembly
G49(E), G137(F), G138(G), G139(H), G149(K)
Navigation Receiver Assembly
G141(L), G142(M), G143(N), G144(P), G150(Q), Y1(T), Y2(U), Y3(V), Y4(W)
Radio & Display Receiver Assembly

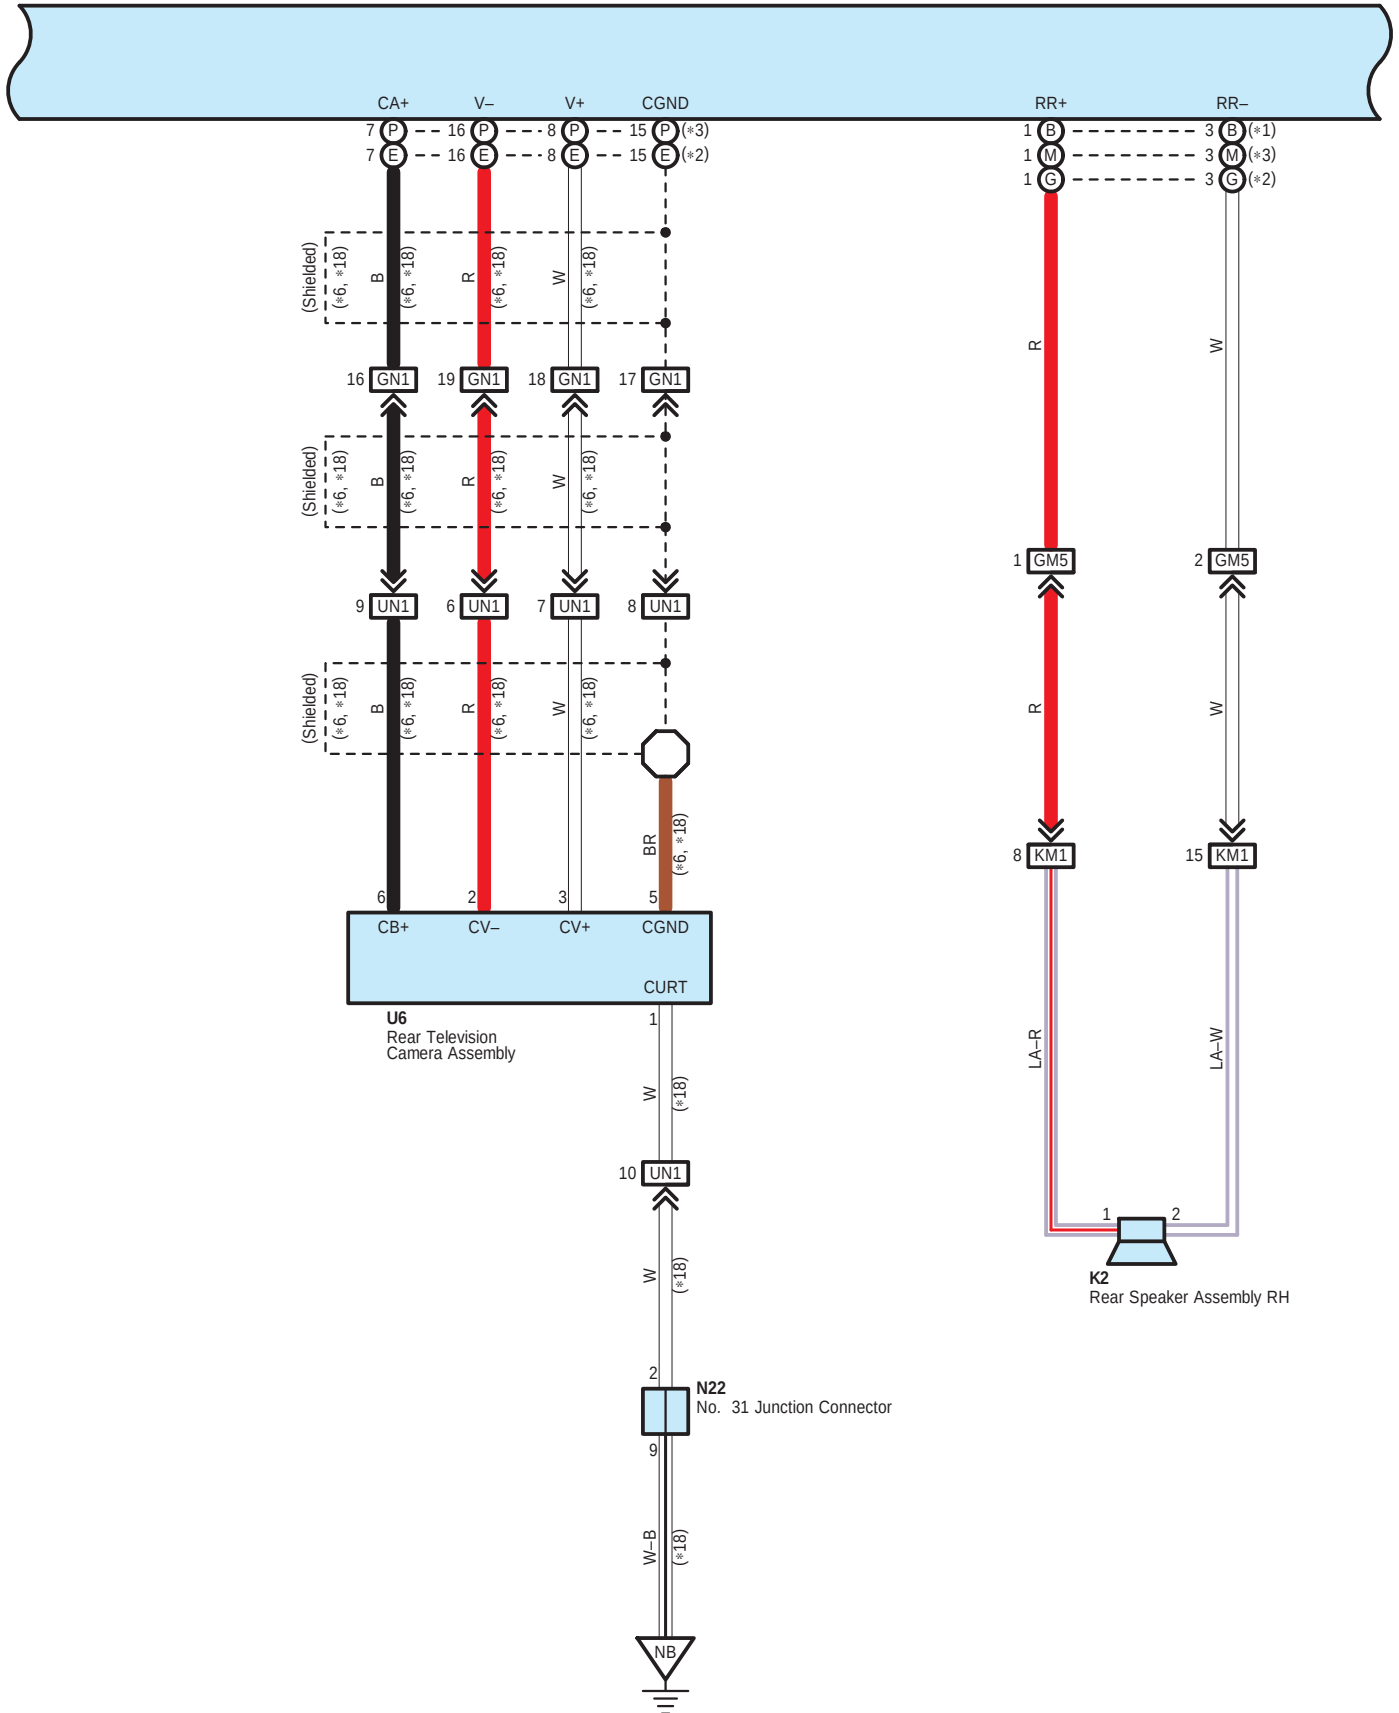


 G46(A), G47(B), G48(C), G146(D)
Radio Receiver Assembly
G49(E), G137(F), G138(G), G139(H), G149(K)
Navigation Receiver Assembly
G141(L), G142(M), G143(N), G144(P), G150(Q), Y1(T), Y2(U), Y3(V), Y4(W)
Radio & Display Receiver Assembly

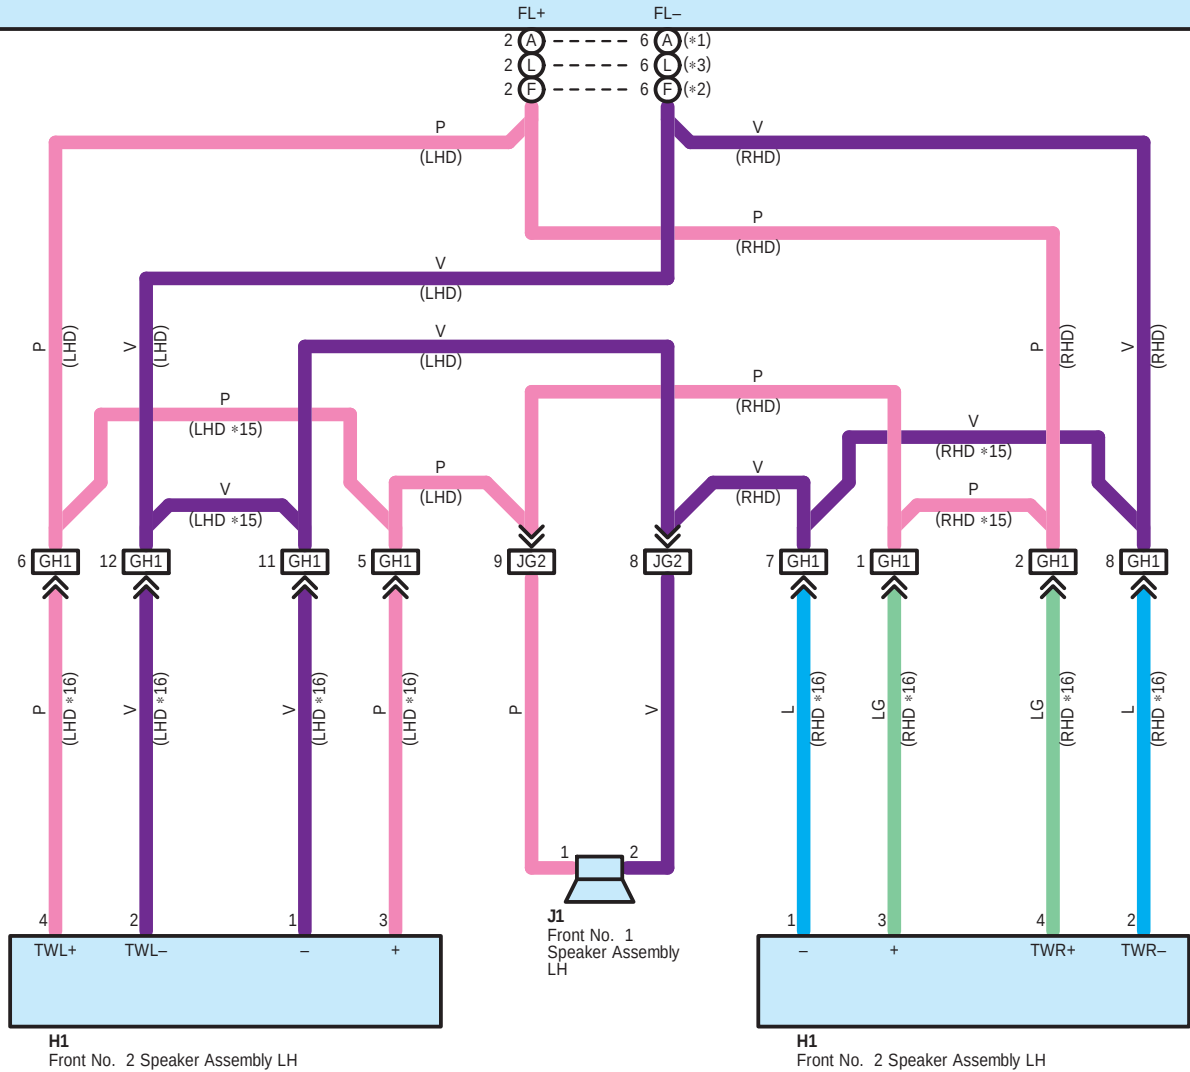


- * 1 : Radio Receiver Type
- * 2 : Navigation Receiver Type
- * 3 : Radio & Display Receiver Type
- * 6 : w/ Rear View Monitor
- *15 : 4 Speaker
- *16 : 6 Speaker
- *18 : w/ Back Guide Monitor

 
G46(A), G47(B), G48(C), G146(D)
Radio Receiver Assembly
G49(E), G137(F), G138(G), G139(H), G149(K)
Navigation Receiver Assembly
G141(L), G142(M), G143(N), G144(P), G150(Q), Y1(T), Y2(U), Y3(V), Y4(W)
Radio & Display Receiver Assembly

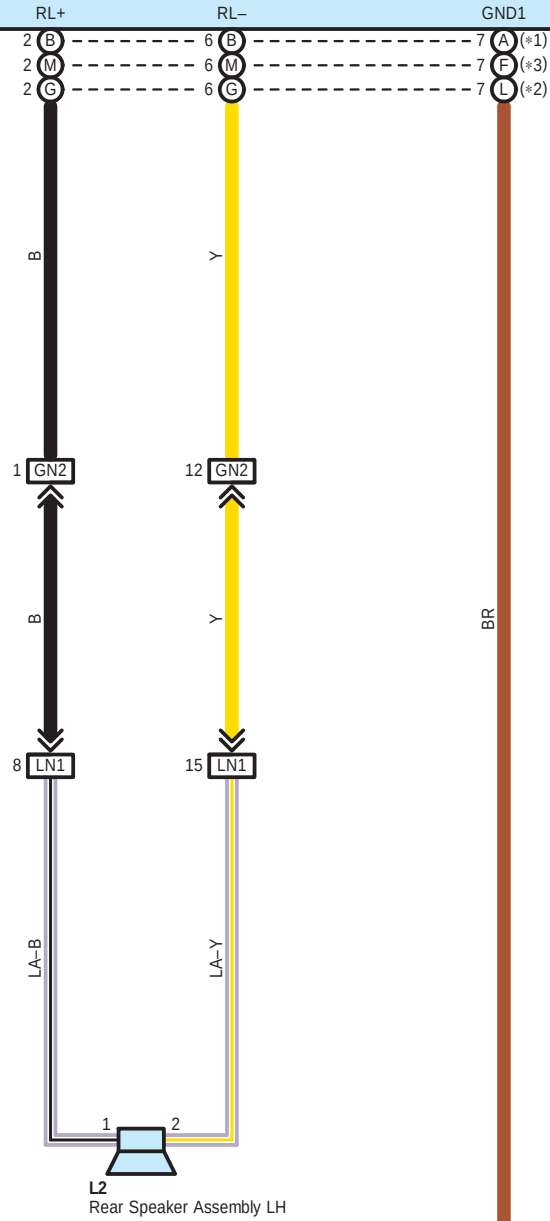

 - * 1 : Radio Receiver Type
- * 2 : Navigation Receiver Type
- * 3 : Radio & Display Receiver Type
- *19 : w/ Navigation ECU
- # : There is no wire color information.

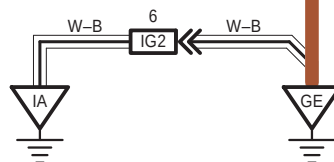

 
G46(A), G47(B), G48(C), G146(D)
Radio Receiver Assembly
G49(E), G137(F), G138(G), G139(H), G149(K)
Navigation Receiver Assembly
G141(L), G142(M), G143(N), G144(P), G150(Q), Y1(T), Y2(U), Y3(V), Y4(W)
Radio & Display Receiver Assembly

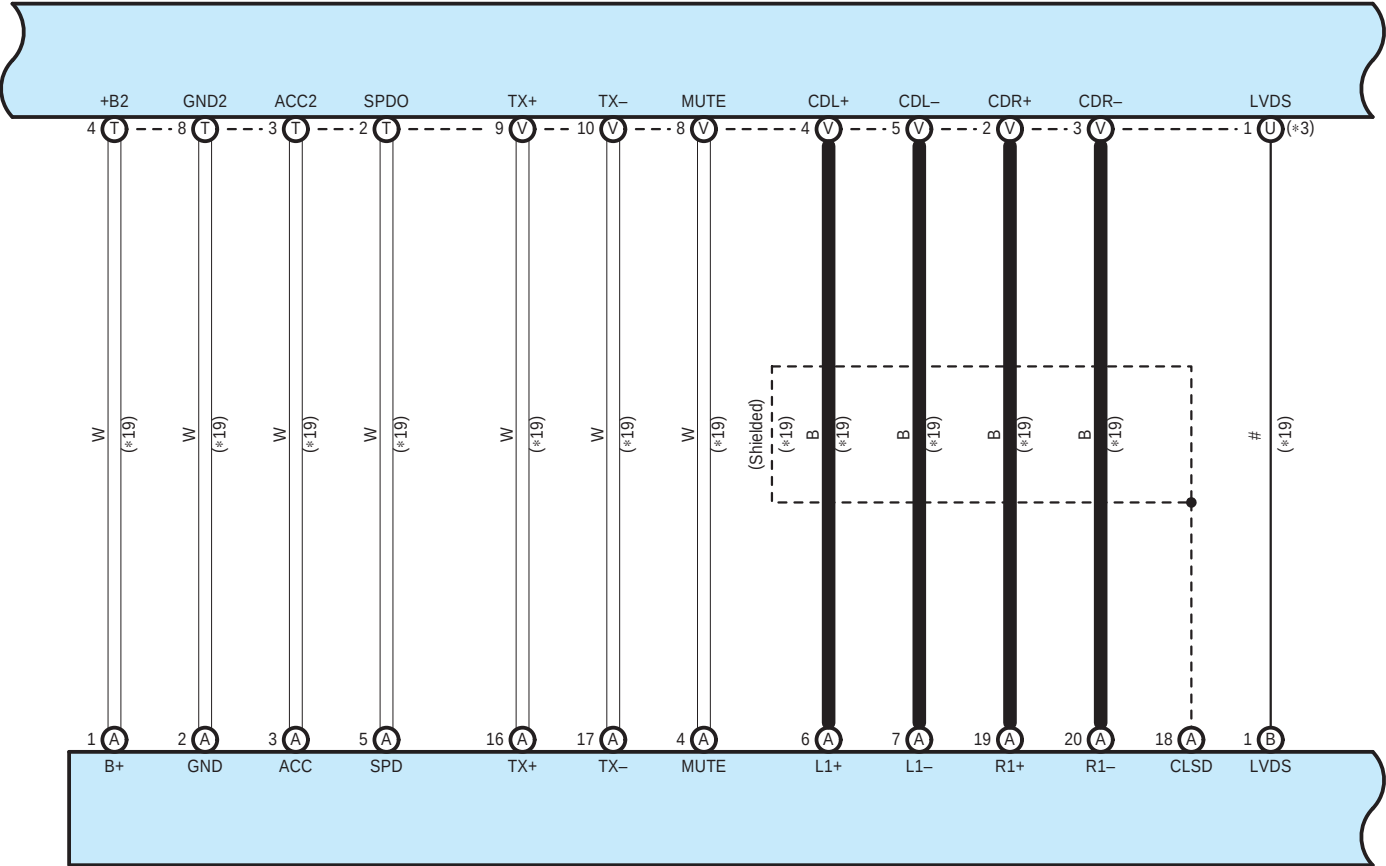


Y5(A), Y6(B), Y7(C)
Navigation ECU

G46(A), G47(B), G48(C), G146(D)
Radio Receiver Assembly
G49(E), G137(F), G138(G), G139(H), G149(K)
Navigation Receiver Assembly
G141(L), G142(M), G143(N), G144(P), G150(Q),
Y1(T), Y2(U), Y3(V), Y4(W)
Radio & Display Receiver Assembly

 * 3 : Radio & Display Receiver Type
*19 : w/ Navigation ECU
: There is no wire color information.

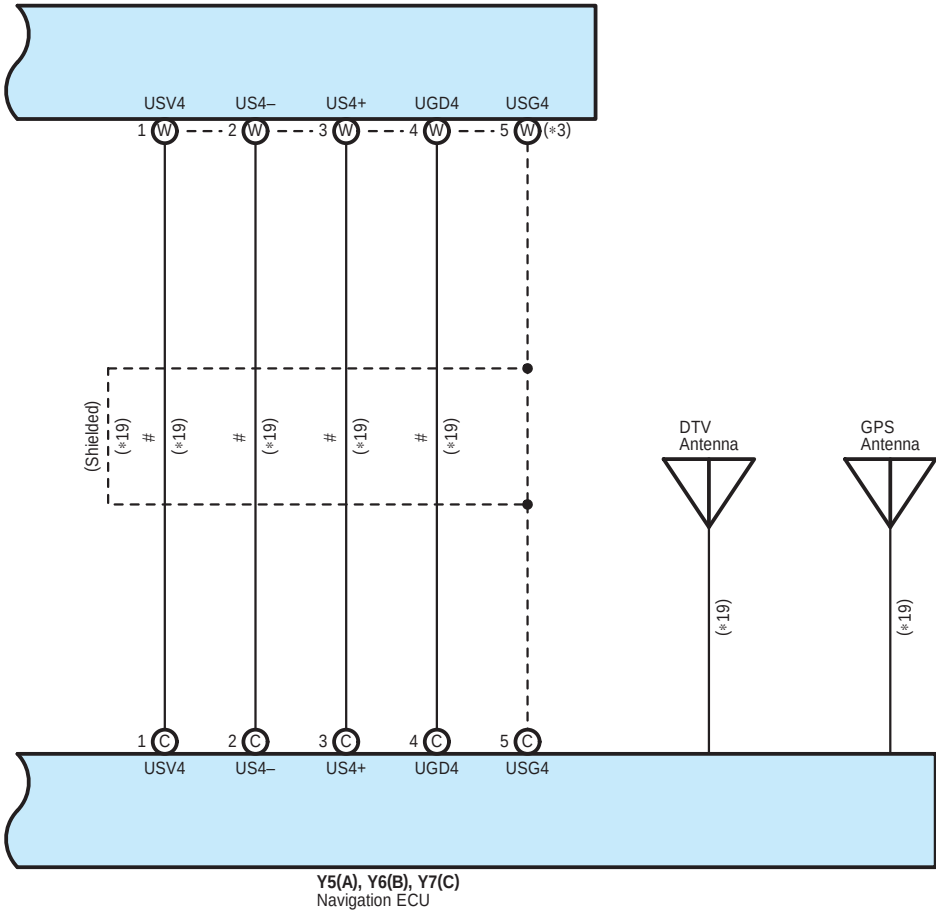


A63
Gray

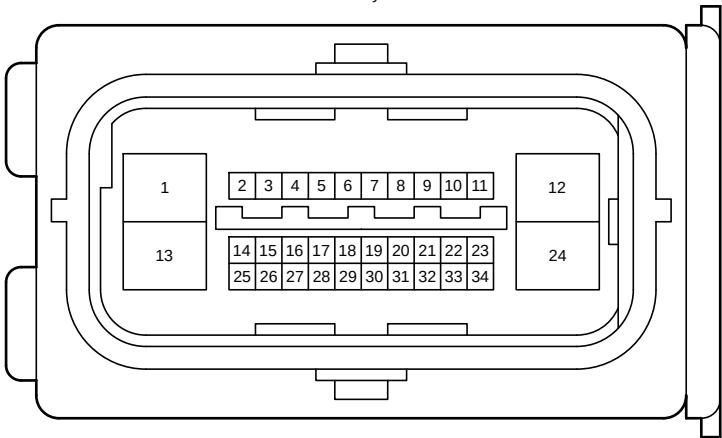 


90980-12687

 A64
Black

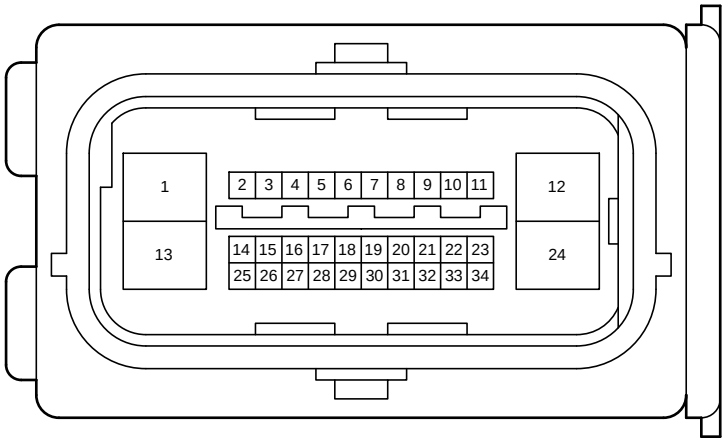


90980-12686

 B35
Gray

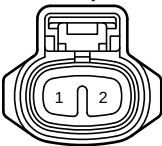


90980-11250

 B36
Gray

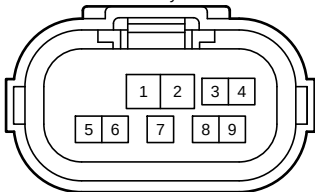


90980-12362

 G8
Black

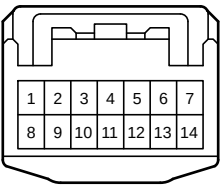


90980-12370

 G12
Black

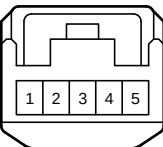

90980-12366

 G16
Black

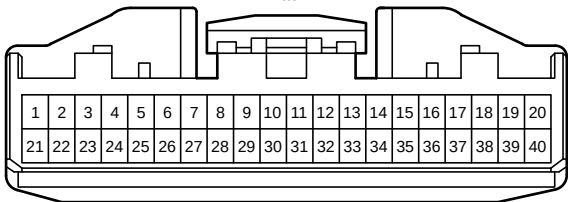

90980-12557

G37
Black



 
90980-10871
(RHD)

G37
Brown




90980-10871
(LHD)


G46
White

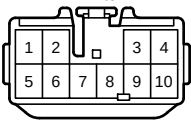


90980-10997

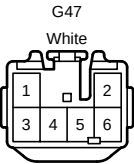 


90980-10996

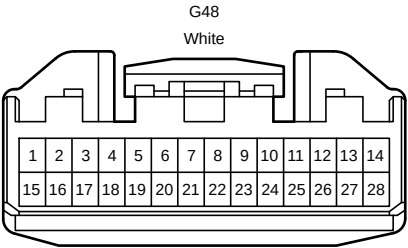 



90980-12555

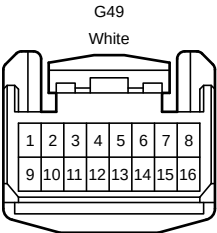 


90980-12553

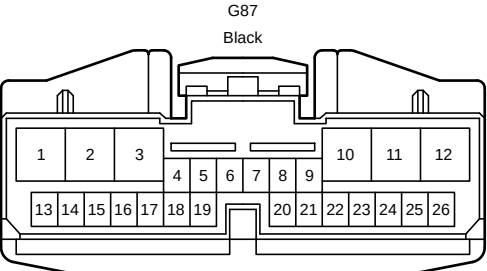 


82824-12510

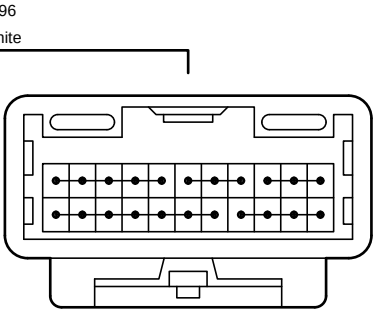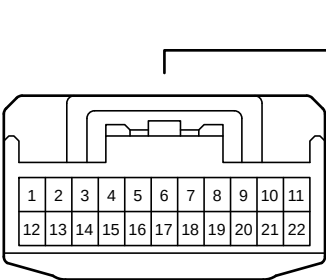  





90980-12372

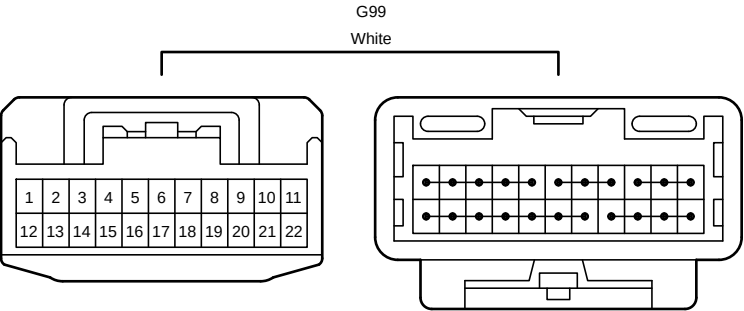 



90980-12372

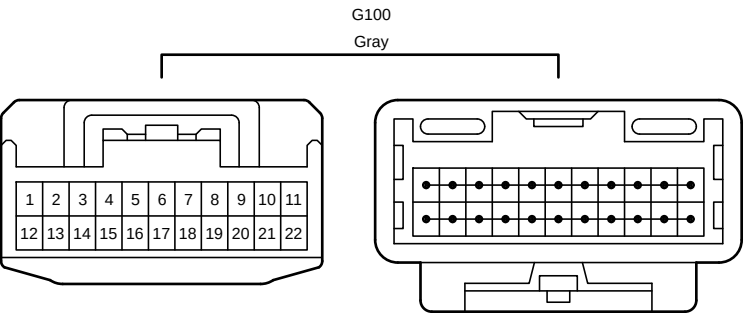 

90980-12372

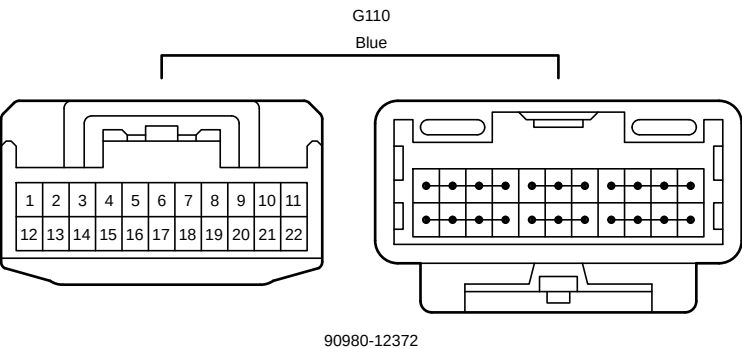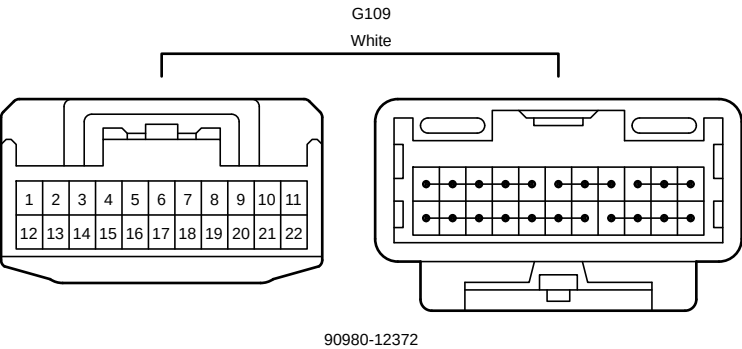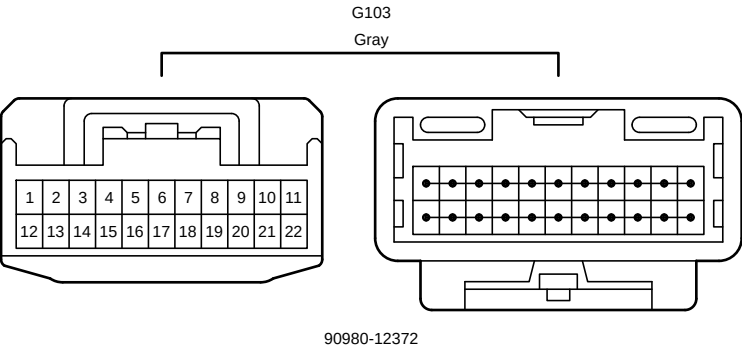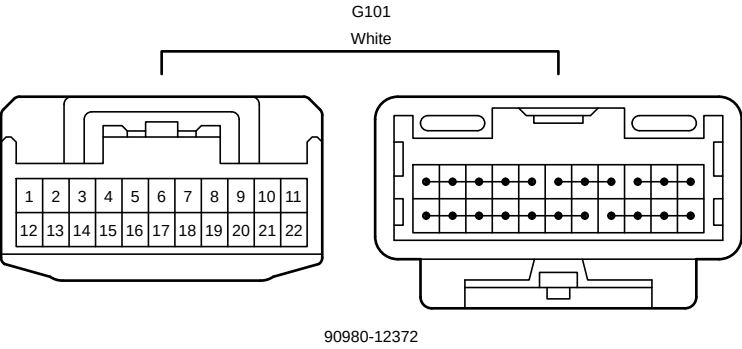    


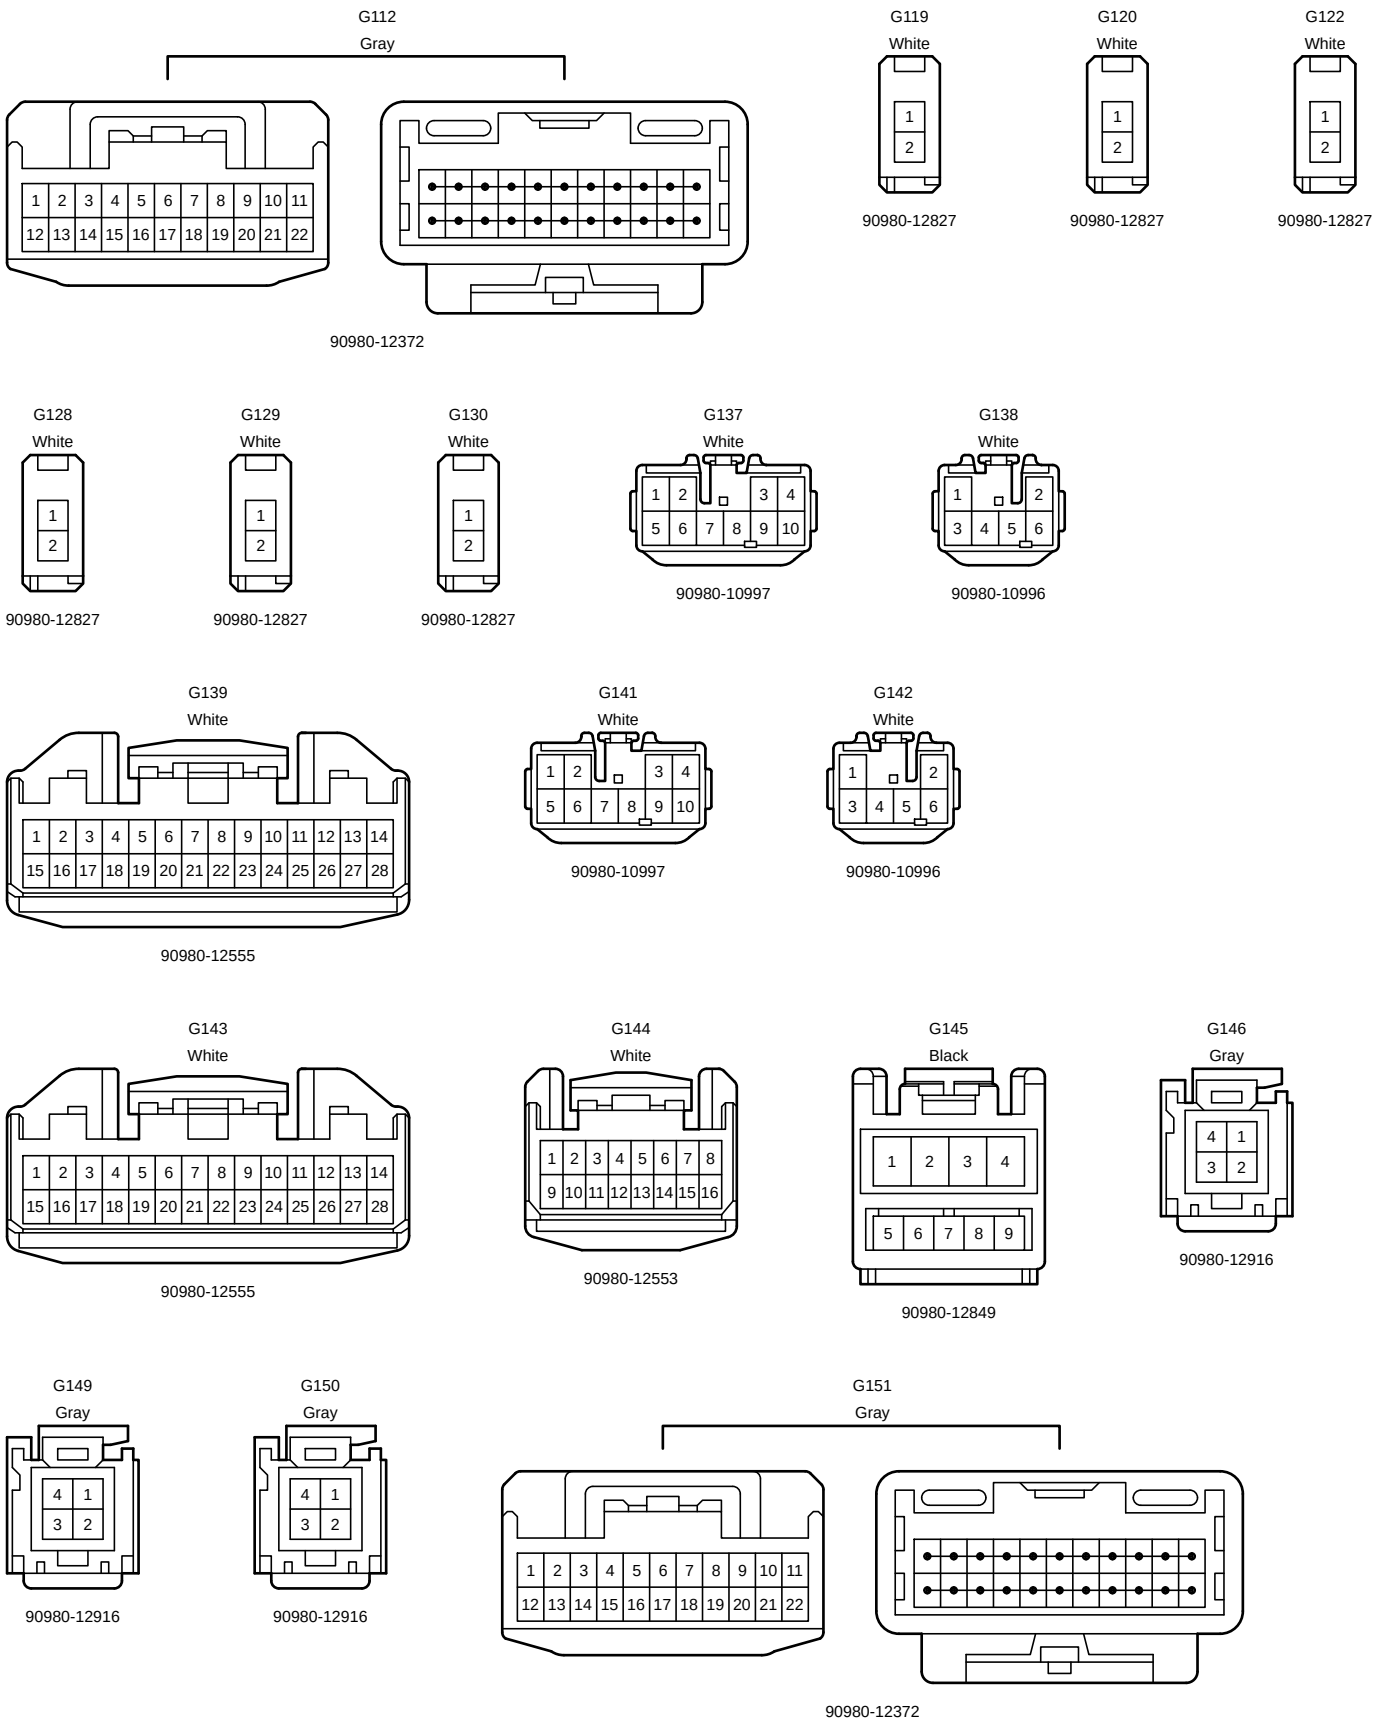 

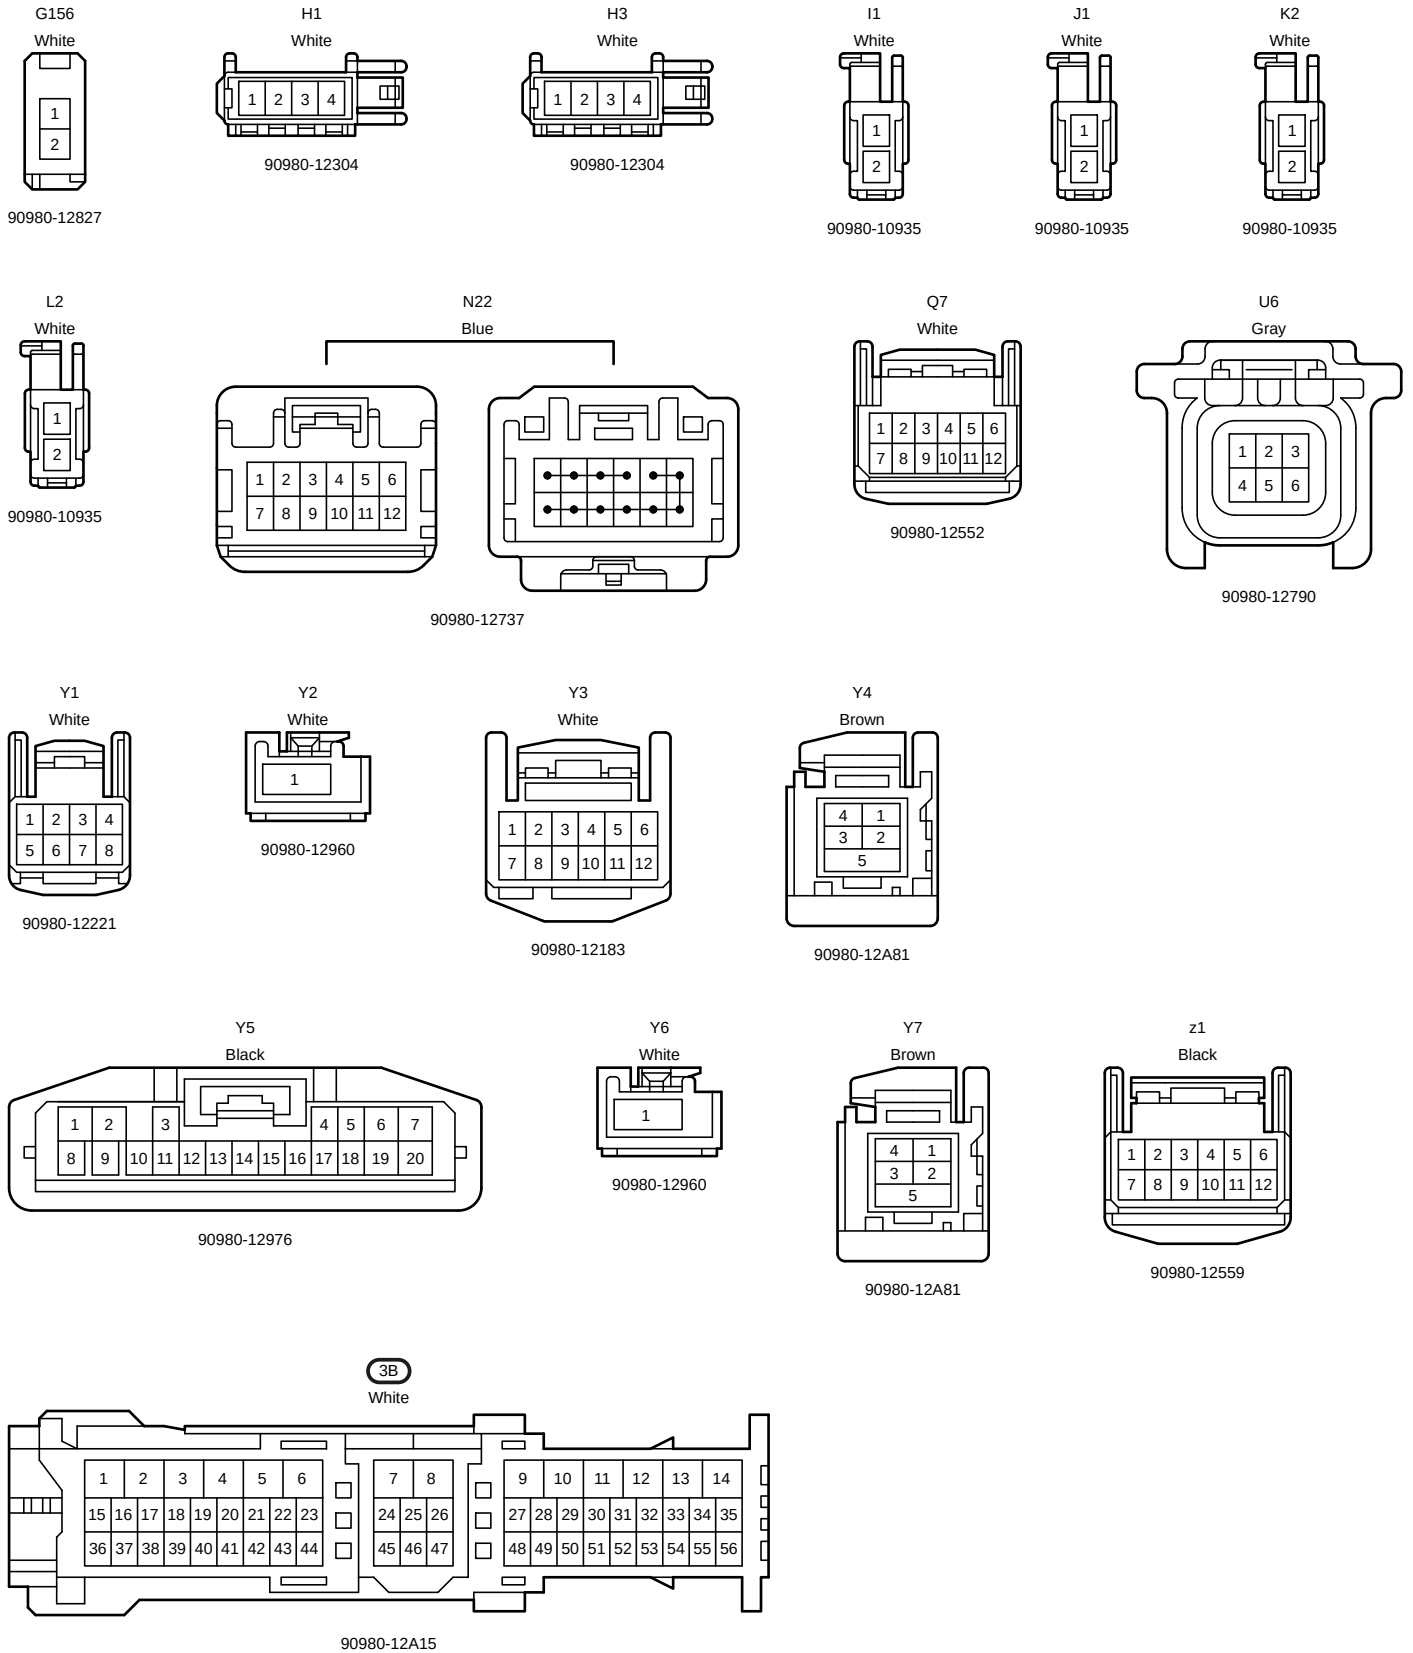 

3C

 
White

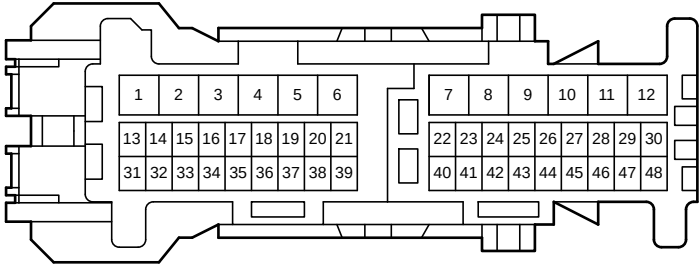

90980-12887

3D

 
White

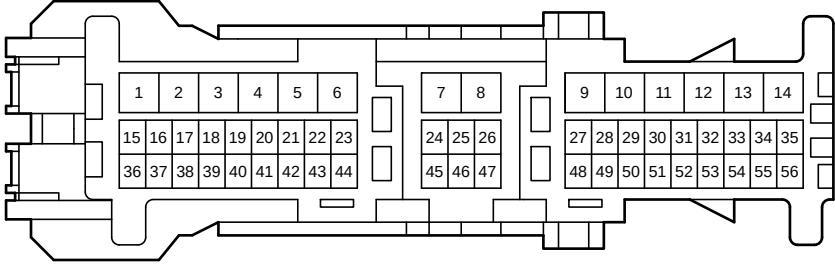

90980-12890

AG1

 Blue

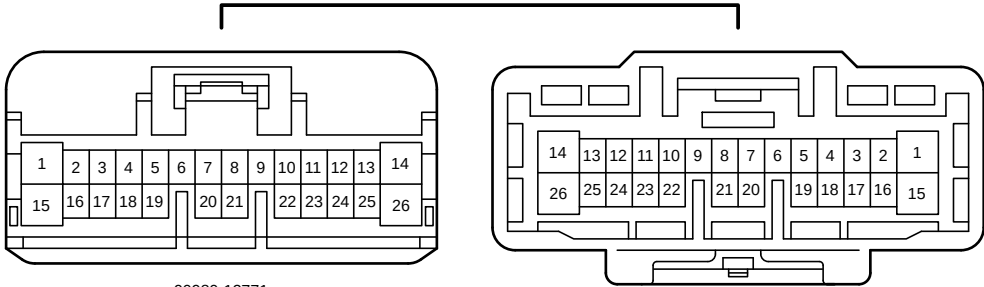


90980-12771

90980-12770

AG4

 White

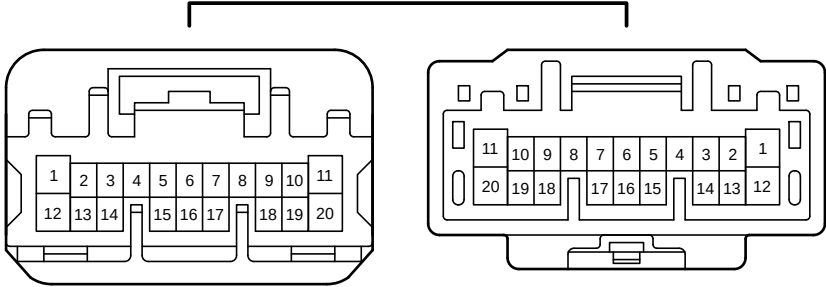

90980-12741

90980-12740

