



Position of Parts in Engine Compartment (LHD)

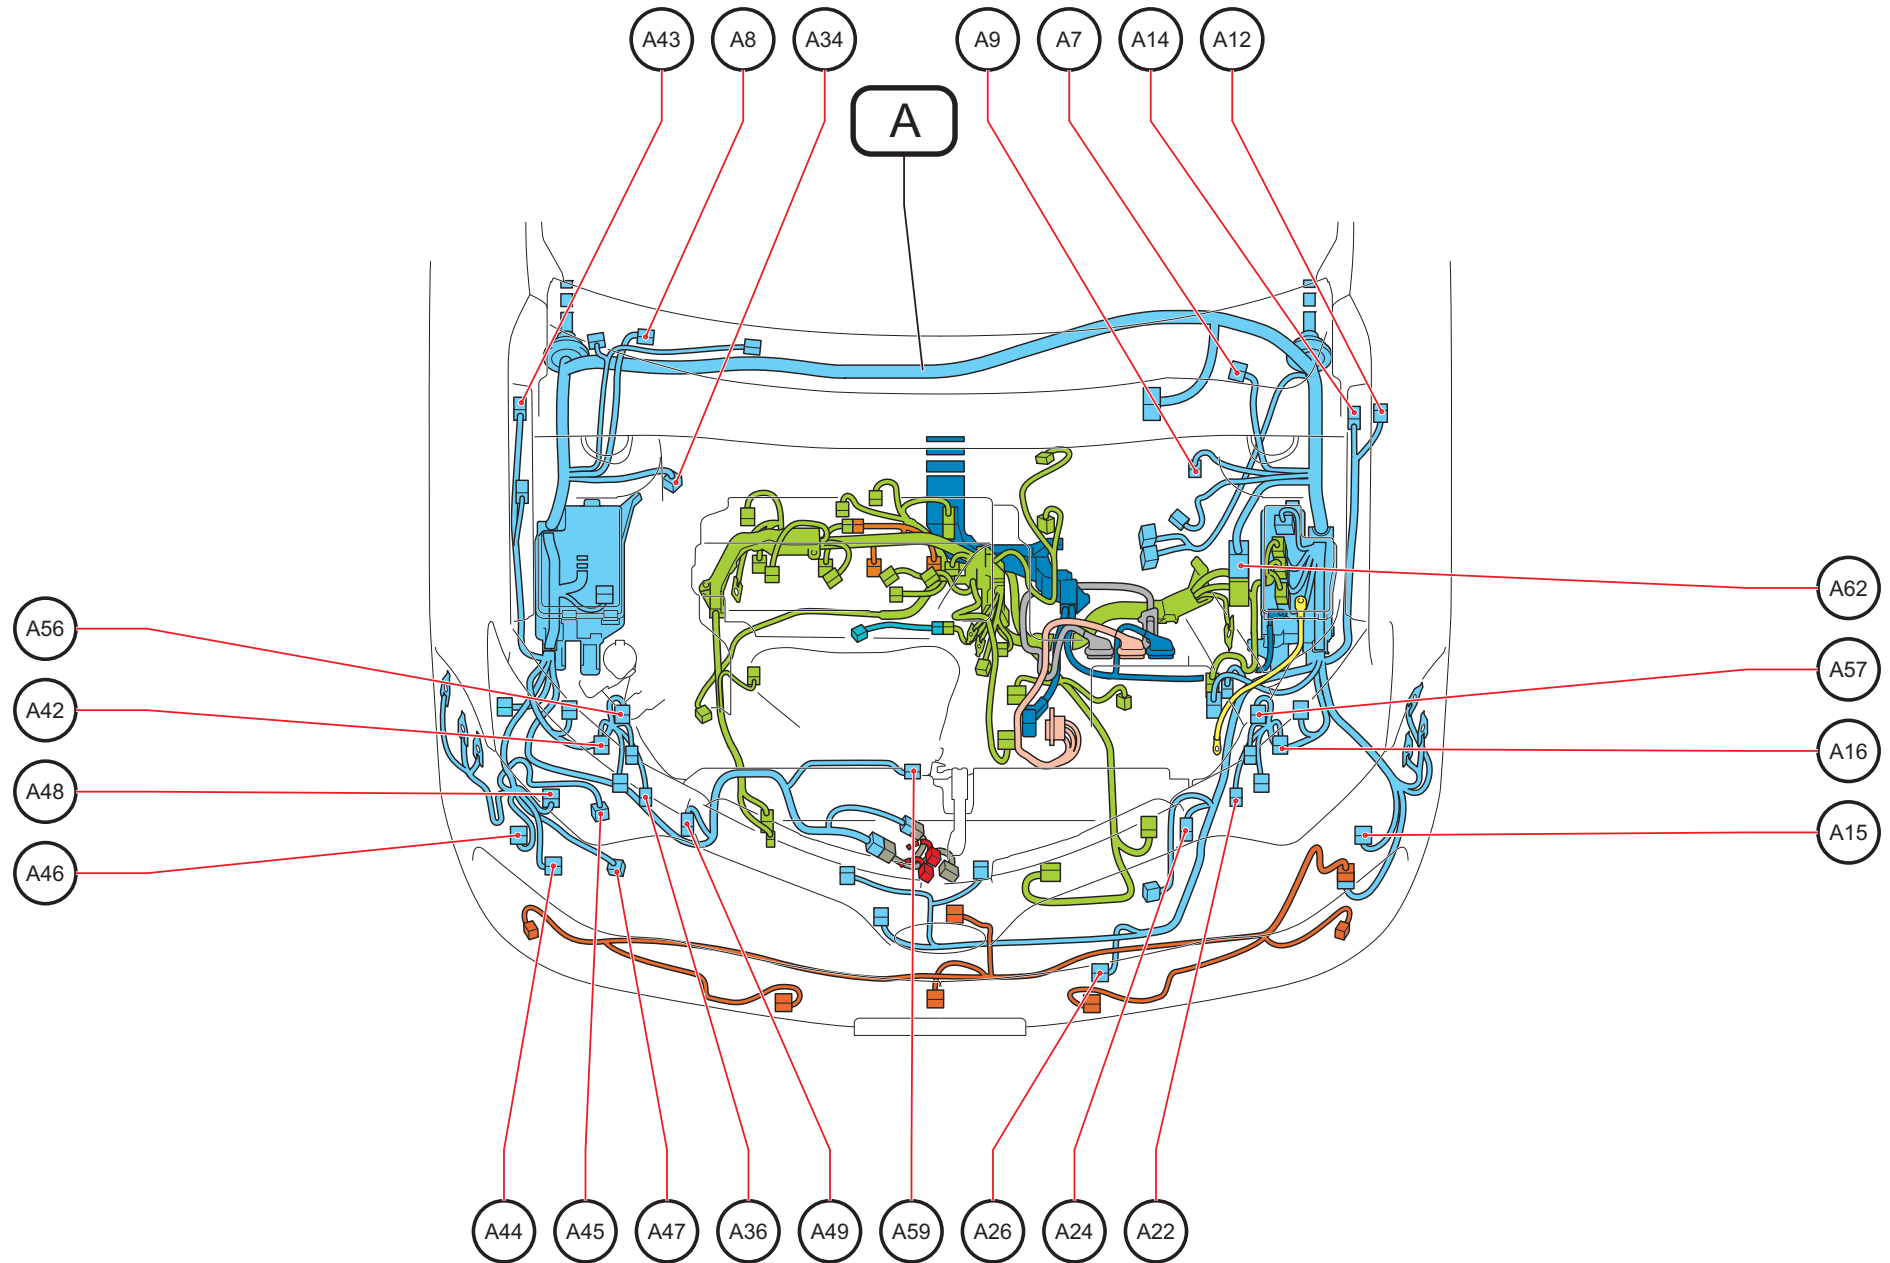

A7	Windshield Wiper Motor Assembly
A8	Windshield Deicer (Windshield Glass)
A9	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
A12	Wireless Door Lock Buzzer
A14	Front Speed Sensor LH
A15	Fog Light Assembly LH
A16	Headlight Assembly LH
A22	Headlight Assembly LH
A24	Front Airbag Sensor LH
A26	Cooler (Ambient Temperature Sensor) Thermistor
A34	A/C Pressure Sensor (Liquid Pipe Sub-Assembly)
A36	Headlight Assembly RH
A42	Headlight Assembly RH
A43	Front Speed Sensor RH
A44	Level Warning Switch Assembly
A45	Windshield Washer Motor and Pump Assembly
A46	Fog Light Assembly RH
A47	Headlight Cleaner Motor and Pump Assembly
A48	Headlight Cleaner Control Relay
A49	Front Airbag Sensor RH
A56	Headlight Assembly RH
A57	Headlight Assembly LH
A59	Hood Courtesy Switch (Hood Lock Assembly)
A62	ECM


Position of Parts in Engine Compartment (LHD)

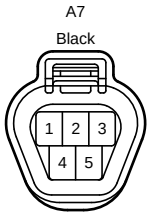


90980-11599




90980-11155

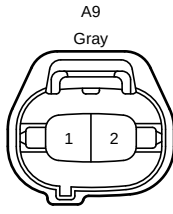


90980-11156

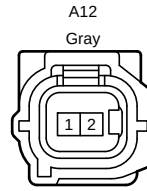


90980-12572

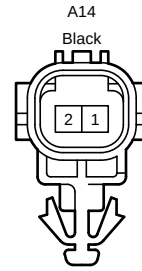

90980-12627

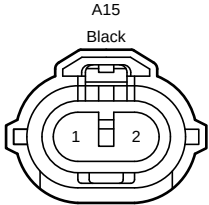


82824-60460

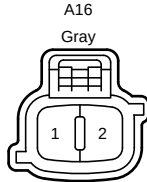

90980-11019
(Front Turn Signal Light)




90980-11292
(Clearance Light and Daytime Running Light)

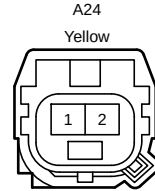

90980-12490




90980-11070

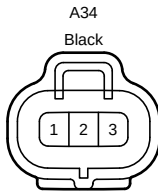


90980-10845




90980-11292
(Clearance Light and Daytime Running Light)

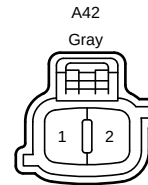


90980-11019
(Front Turn Signal Light)

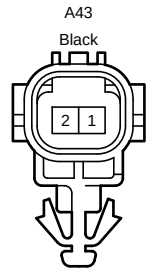


90980-12627

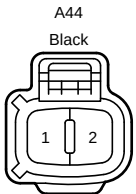


90980-11068

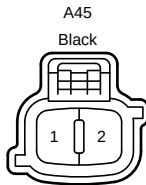


90980-11019

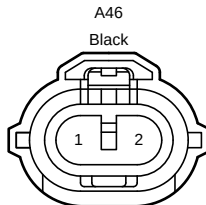


82824-60460

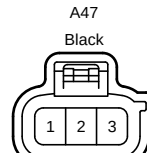


90980-10981

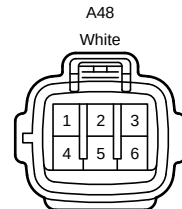


90980-11194

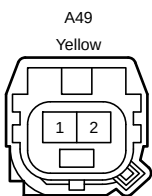


90980-12490

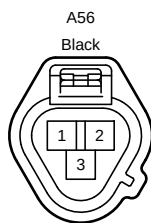

90980-11016
(Headlight Leveling Motor)

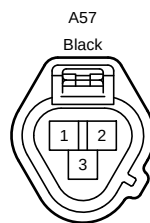

90980-11016
(Headlight Leveling Motor)

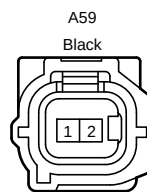

90980-12416

Position of Parts in Engine Compartment (LHD)

