



Position of Parts in Engine Compartment (LHD)

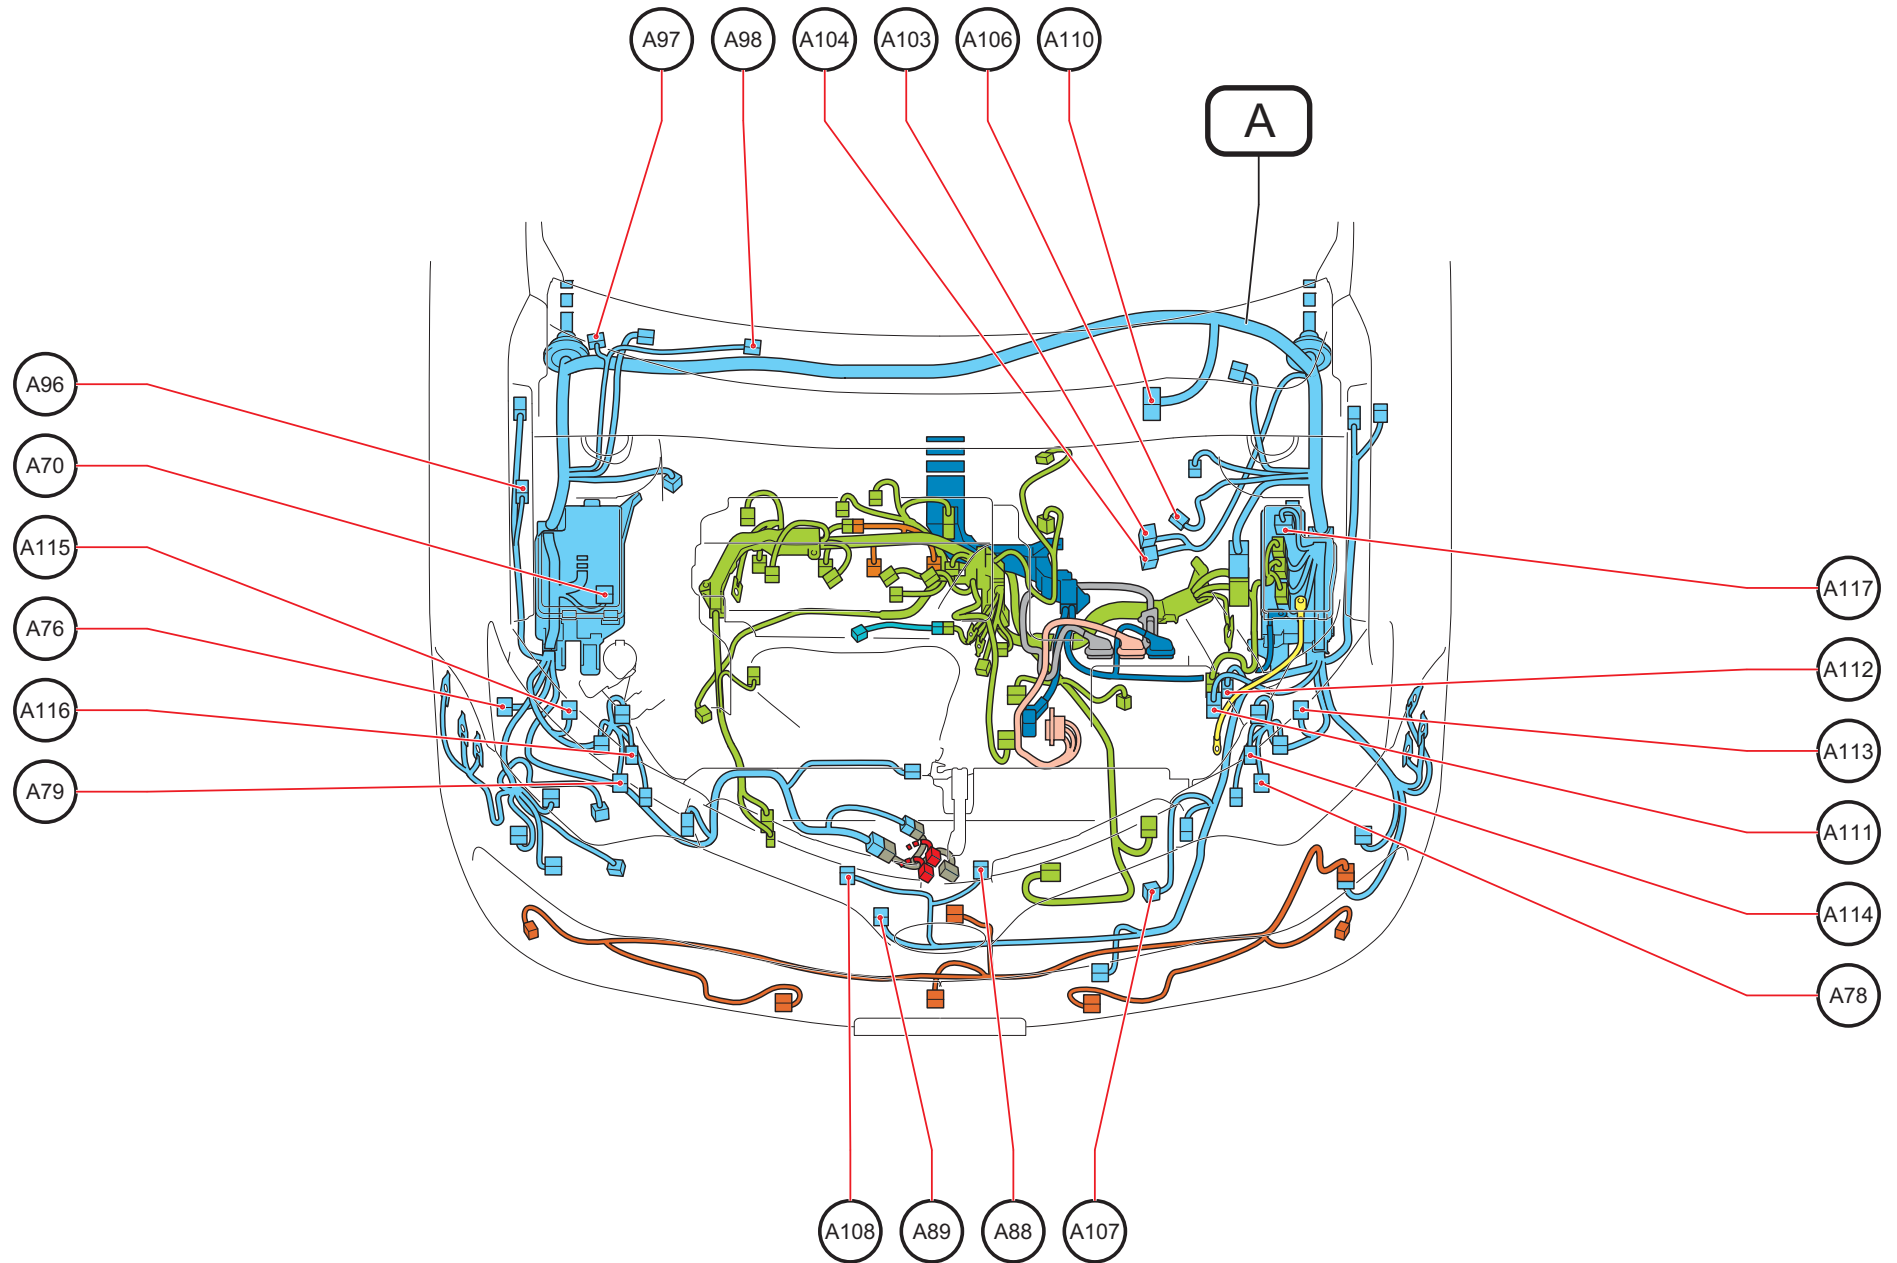

A70	No. 1 Junction Connector
A76	No. 1 Wiring Harness Condenser Assembly
A78	Headlight Assembly LH
A79	Headlight Assembly RH
A88	Low Pitched Horn Assembly
A89	High Pitched Horn Assembly
A96	Front Washer Nozzle and Hose Assembly
A97	Heated Windshield Defroster (Windshield Glass)
A98	Heated Windshield Defroster (Windshield Glass)
A103	Brake Booster Pump Assembly
A104	Brake Booster Pump Assembly
A106	Heater Accessory Assembly
A107	Inverter Water Pump Assembly (with Motor)
A108	Vehicle Approaching Speaker Assembly
A110	Brake Booster with Master Cylinder Assembly
A111	Inverter with Converter Assembly
A112	Inverter with Converter Assembly
A113	Headlight Assembly LH
A114	Headlight Assembly LH
A115	Headlight Assembly RH
A116	Headlight Assembly RH
A117	No. 38 Junction Connector

Position of Parts in Engine Compartment (LHD)

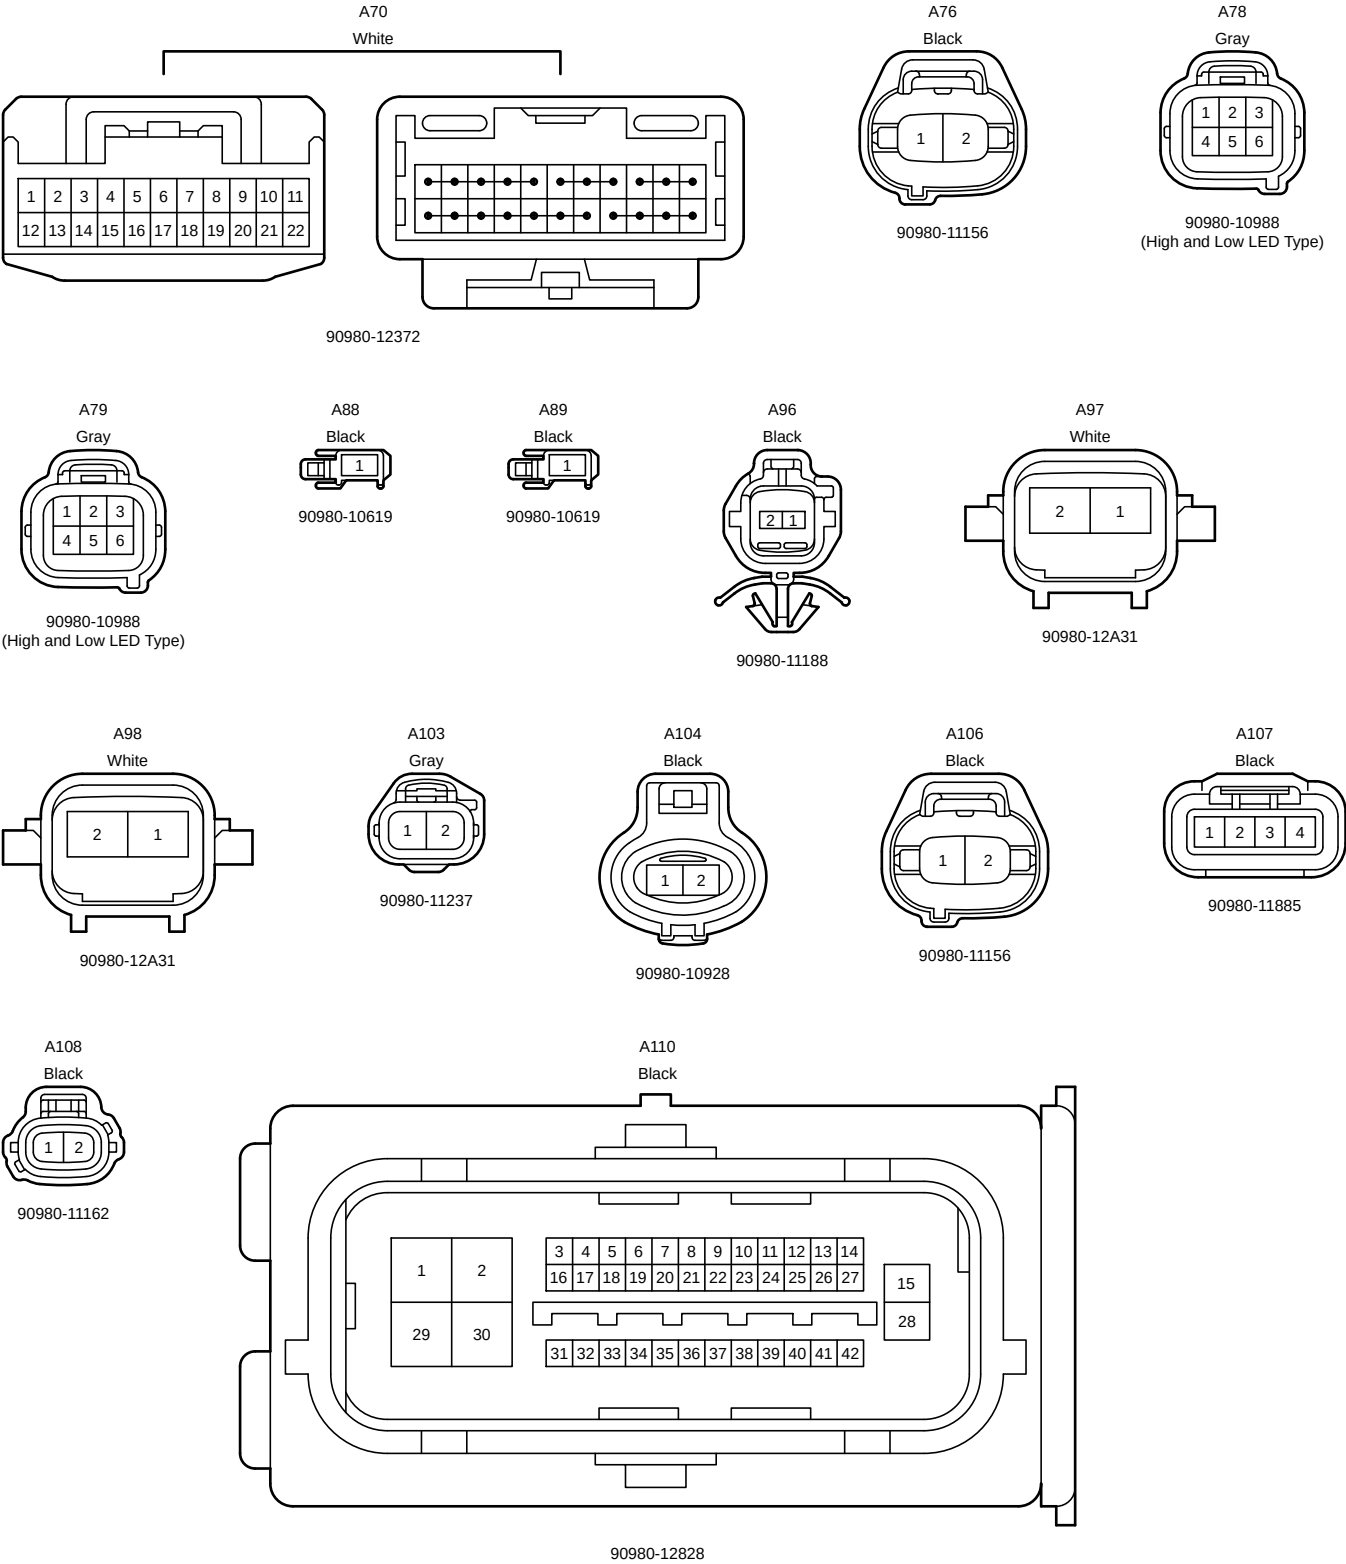

Position of Parts in Engine Compartment (LHD)

