



Position of Parts in Engine Compartment (LHD)

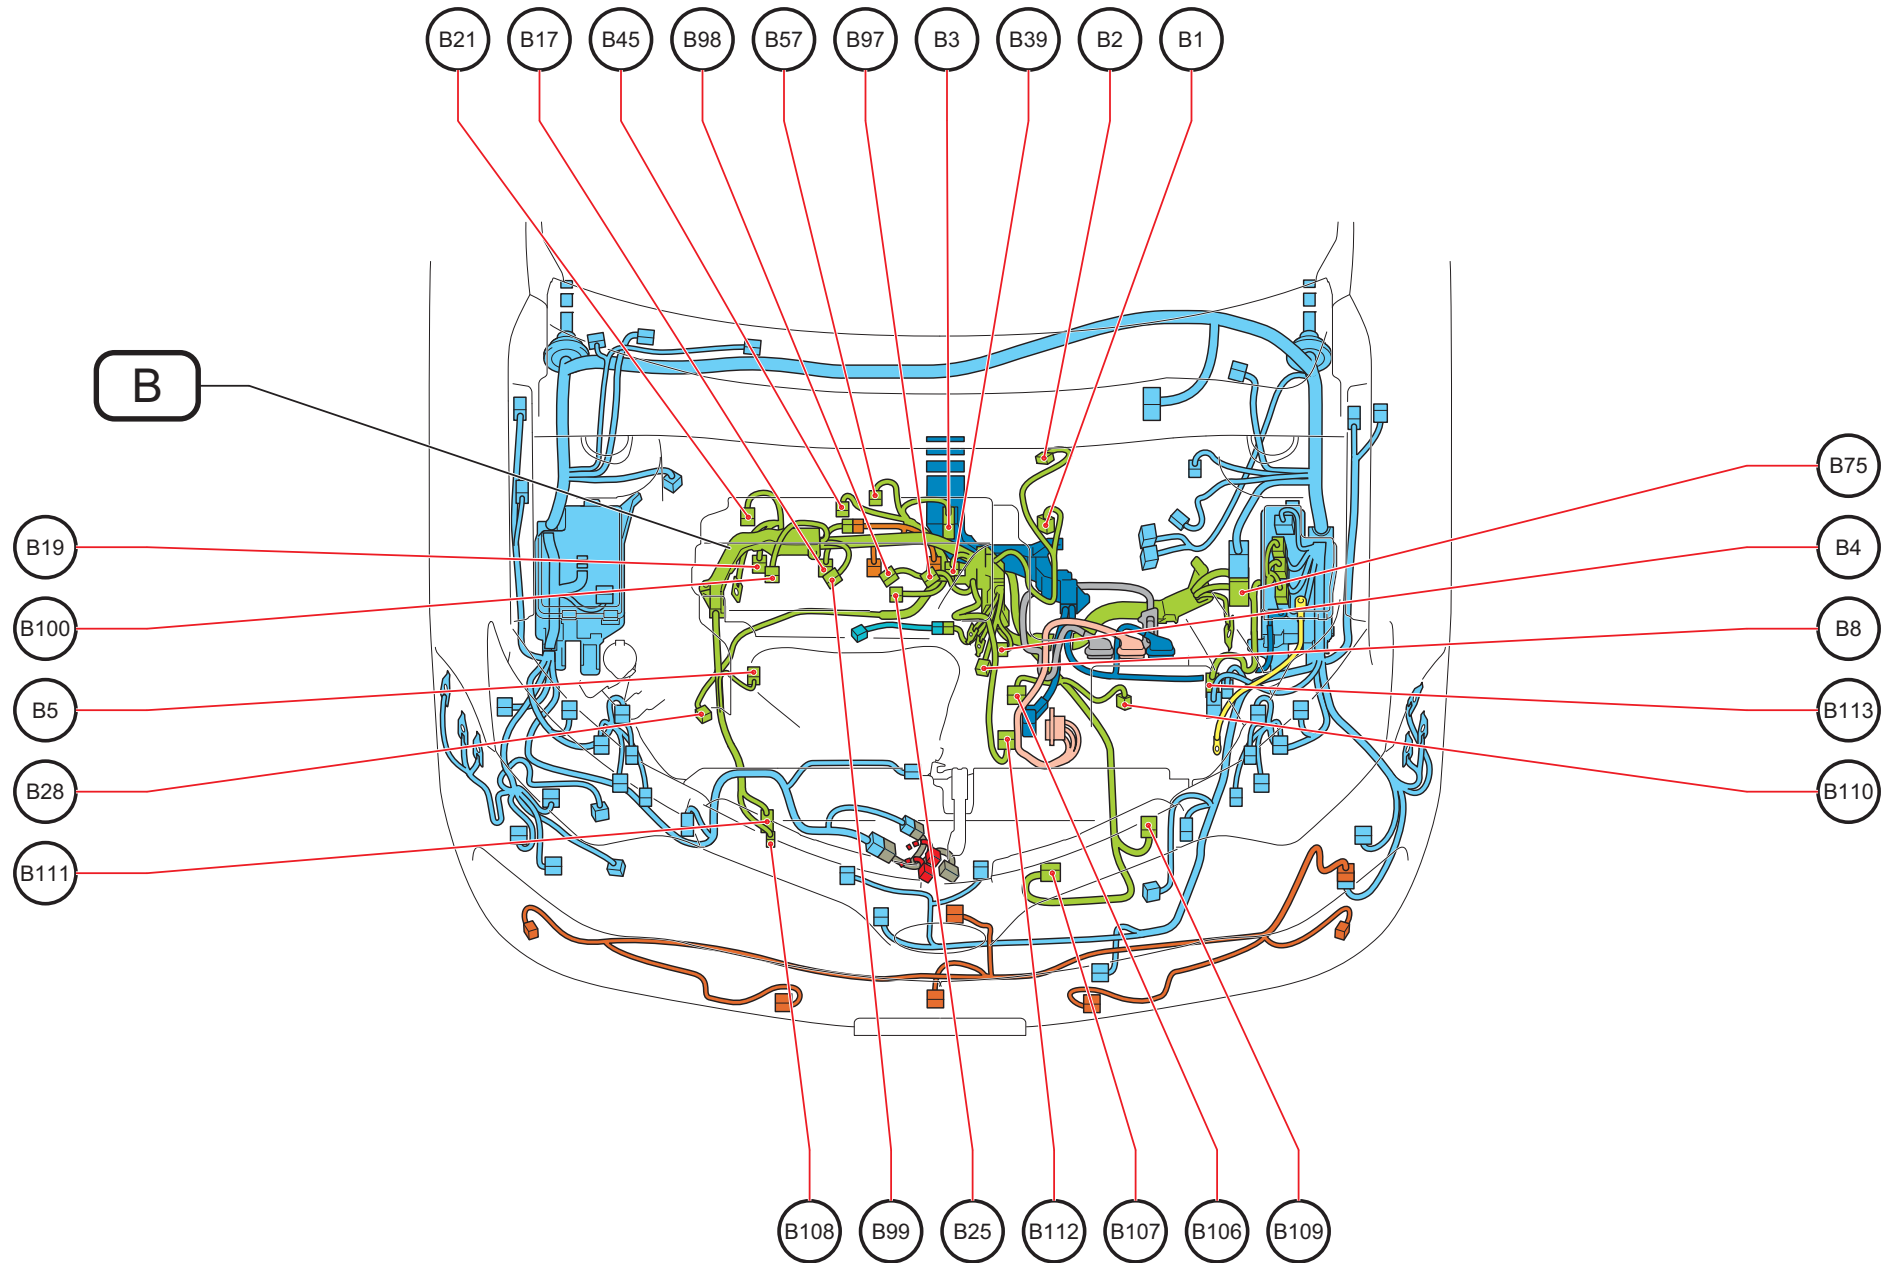

B1	Intake Mass Air Flow Meter Sub-Assembly
B2	Purge VSV (Vacuum Switching Valve Assembly)
B3	Throttle Body with Motor Assembly
B4	E. F. I. Engine Coolant Temperature Sensor
B5	Engine Oil Pressure Switch Assembly
B8	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B17	Injector Assembly No. 2
B19	Injector Assembly No. 1
B21	Camshaft Timing Oil Control Valve Assembly (Intake Side)
B25	Oxygen Sensor (Bank 1 Sensor 2)
B28	Crank Position Sensor
B39	VVT Sensor (Intake Side)
B45	E. F. I. Vacuum Sensor Assembly
B57	EGR Valve Assembly
B75	ECM
B97	Ignition Coil Assembly No. 4
B98	Ignition Coil Assembly No. 3
B99	Ignition Coil Assembly No. 2
B100	Ignition Coil Assembly No. 1
B106	Hybrid Vehicle Transaxle Assembly
B107	Shift Lever Position Sensor
B108	Compressor with Motor Assembly
B109	Hybrid Vehicle Transaxle Assembly
B110	Hybrid Vehicle Transaxle Assembly
B111	Compressor with Motor Assembly
B112	Inverter with Converter Assembly
B113	Inverter with Converter Assembly

Position of Parts in Engine Compartment (LHD)

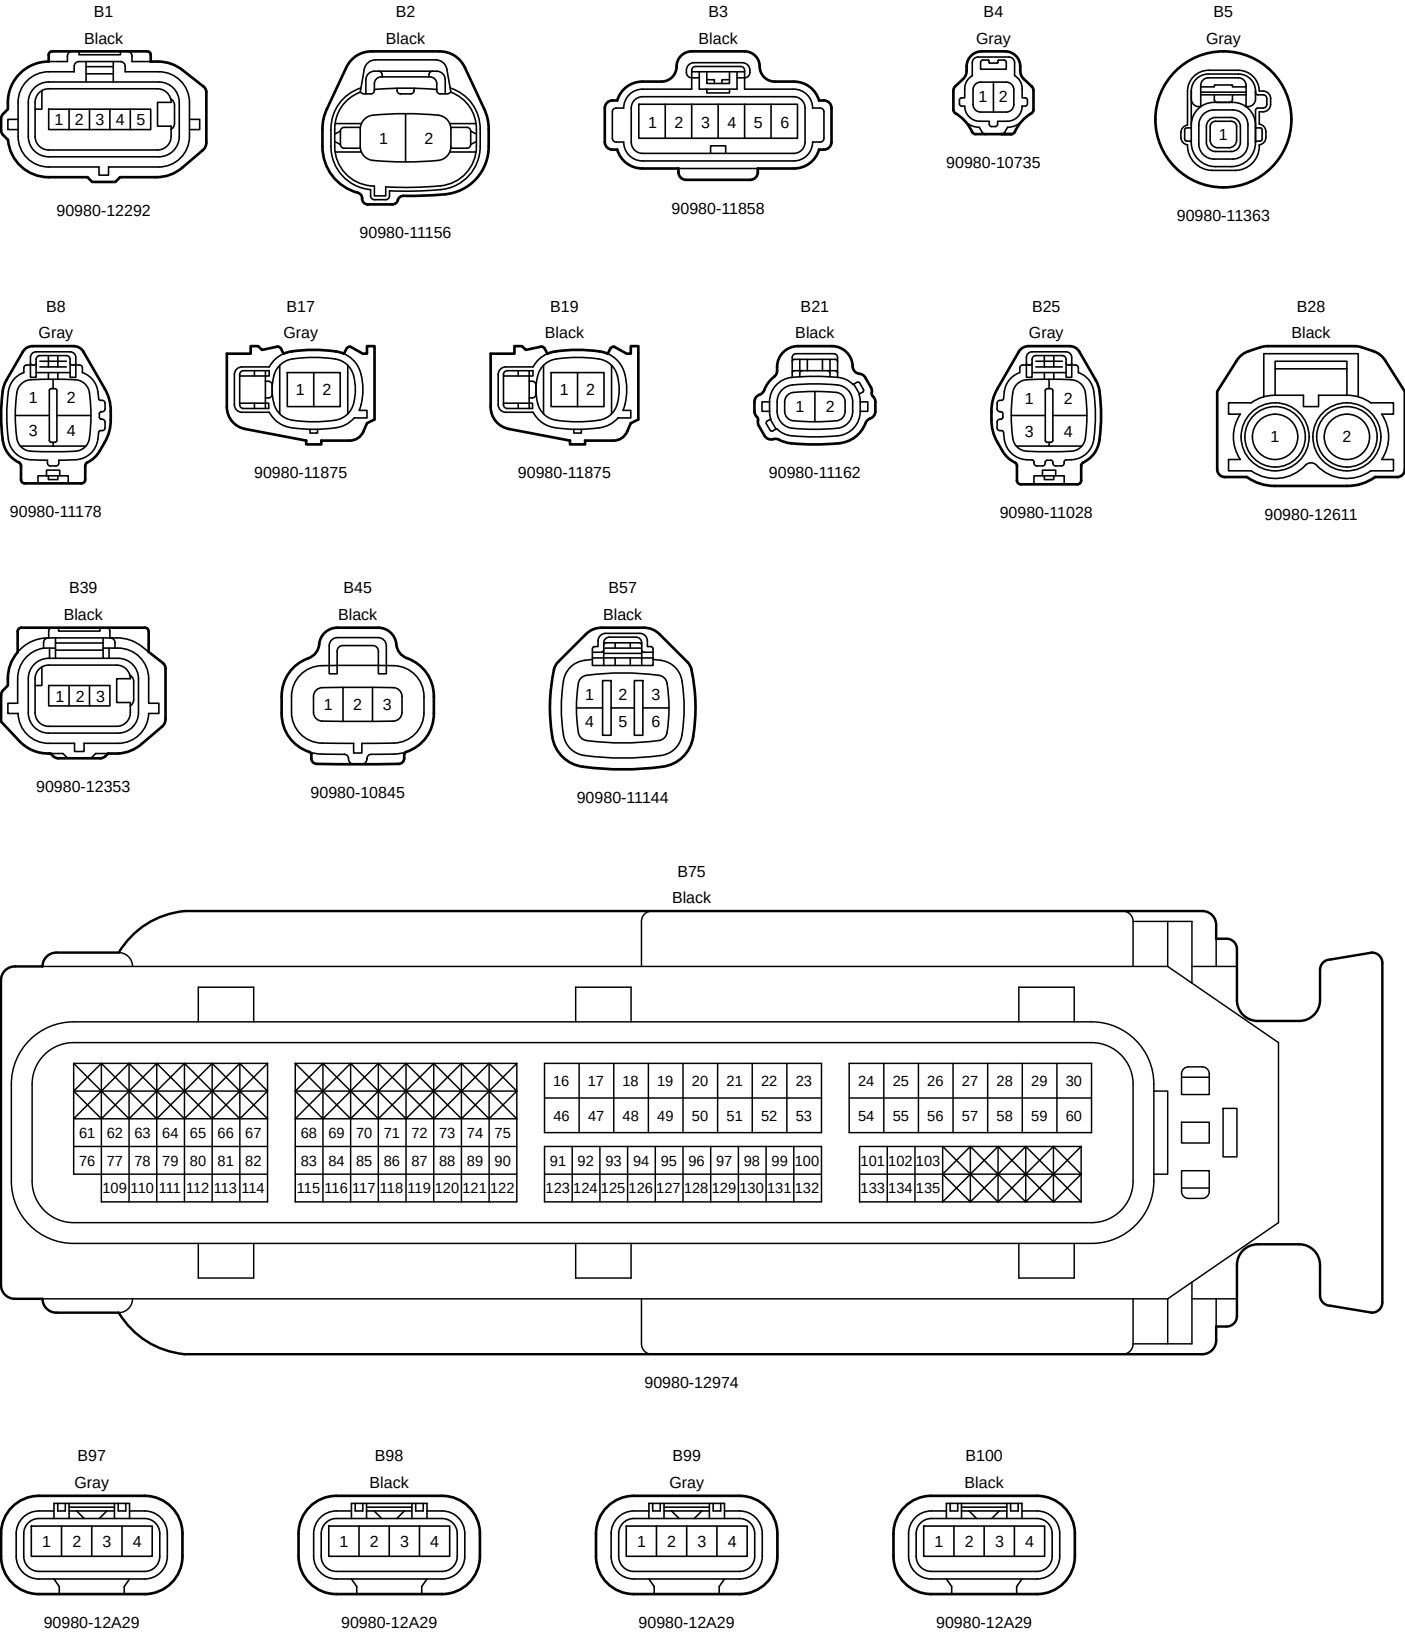

Position of Parts in Engine Compartment (LHD)

