


Position of Parts in Body (RHD)

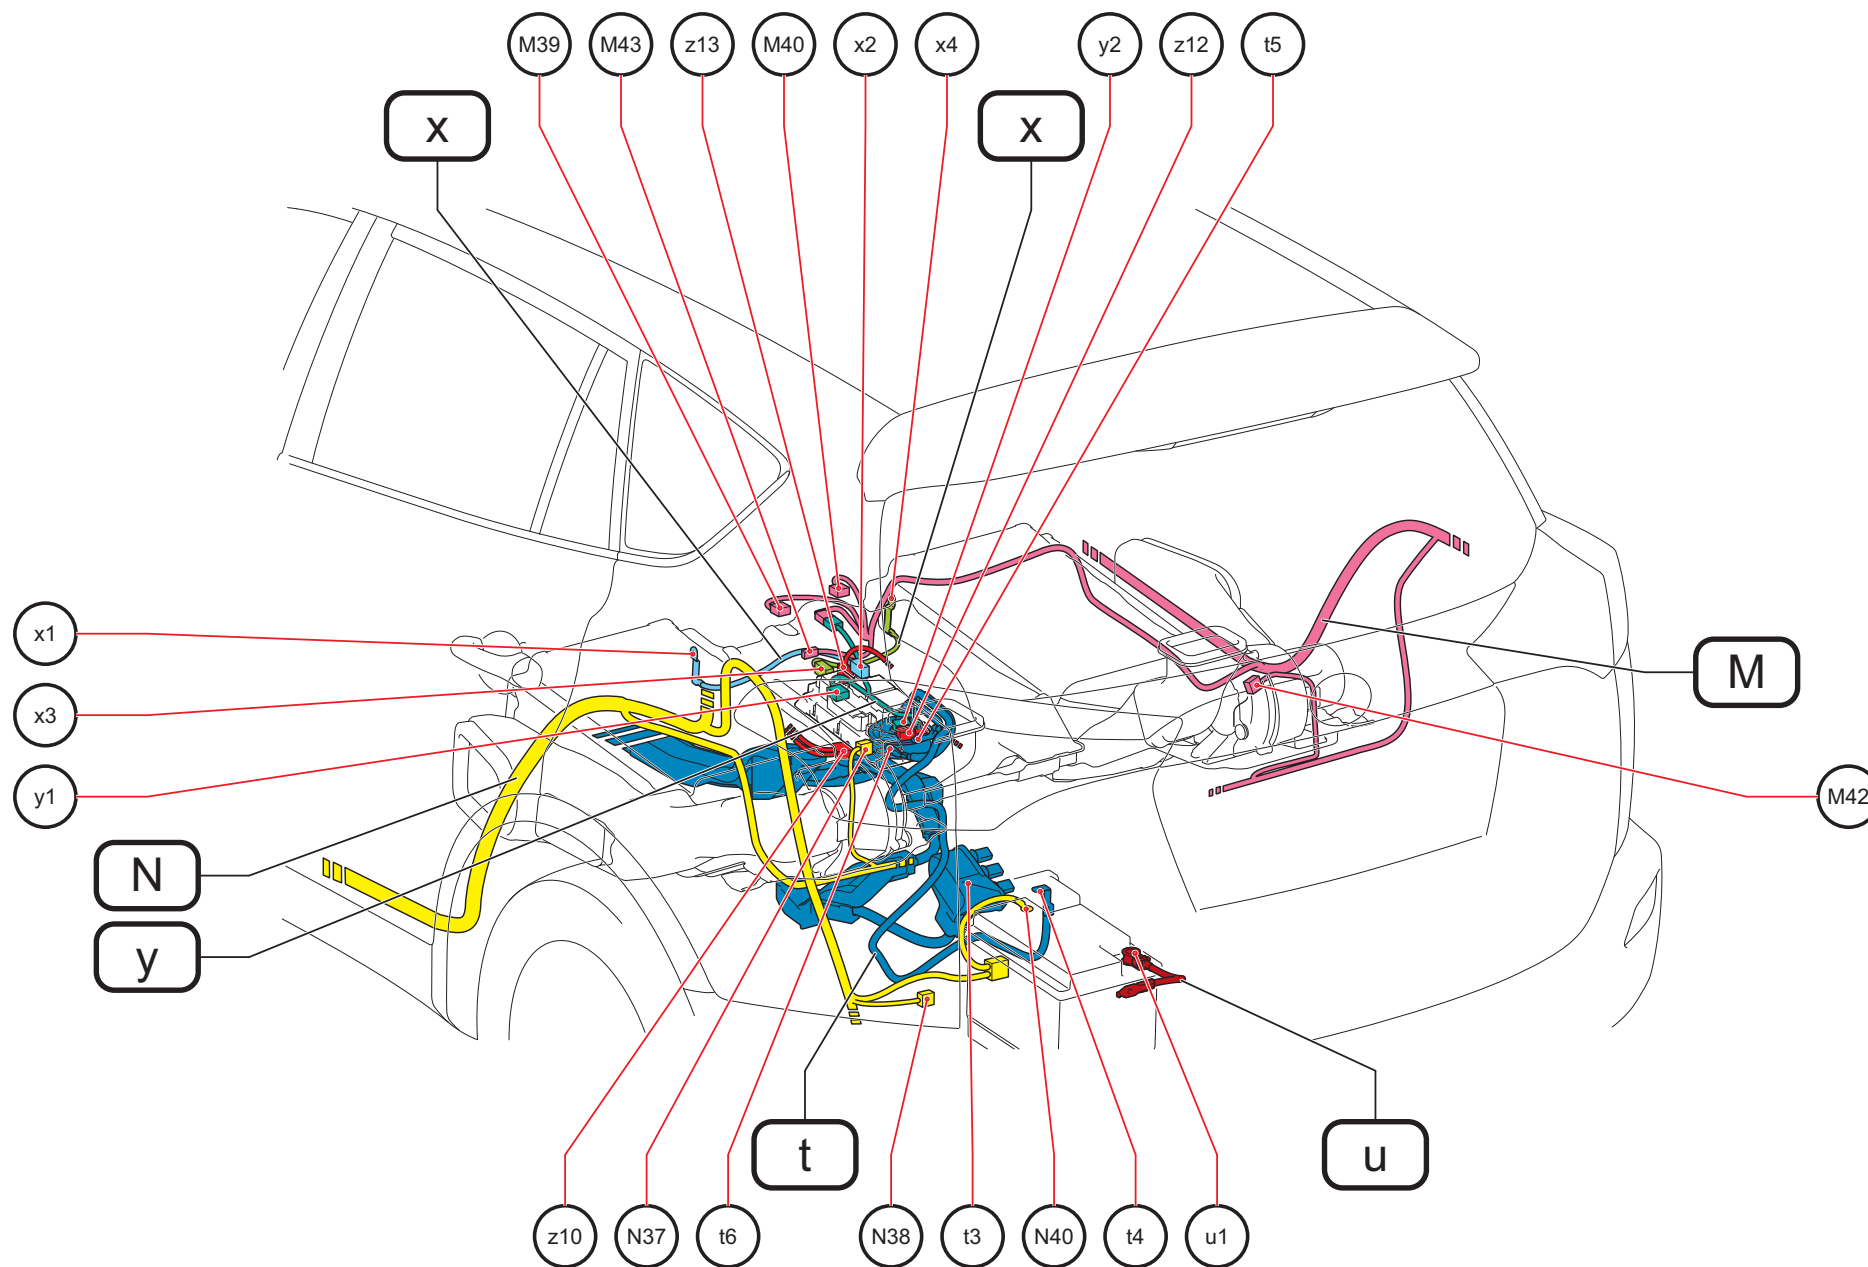

M39	Rear Seat Inner with Center Belt Assembly RH
M40	Rear Seat Belt Assembly Inner LH
M42	Battery Cooling Blower Assembly RH
M43	Inter Lock Switch
N37	Battery Cooling Blower Assembly LH
N38	Battery Thermometer Sensor (Thermistor Assembly)
N40	Fusible Link Block Assembly
t3	Rear Traction Motor with Transaxle Assembly
t4	Fusible Link Block Assembly
t5	Hybrid Battery Junction Block Assembly
t6	Hybrid Battery Junction Block Assembly
u1	Battery
x1	HV Supply Battery Assembly
x2	Hybrid Battery Junction Block Assembly
x3	Hybrid Battery Junction Block Assembly
x4	HV Supply Battery Assembly
y1	Hybrid Battery Junction Block Assembly
y2	Battery Voltage Sensor
z10	Battery Voltage Sensor , HV Supply Battery Assembly
z12	Battery Voltage Sensor , HV Supply Battery Assembly
z13	HV Supply Battery Assembly , Hybrid Battery Junction Block Assembly

Position of Parts in Body (RHD)

