


Position of Parts in Instrument Panel (LHD)


* 8:6 Speaker
* 9:11 Speaker

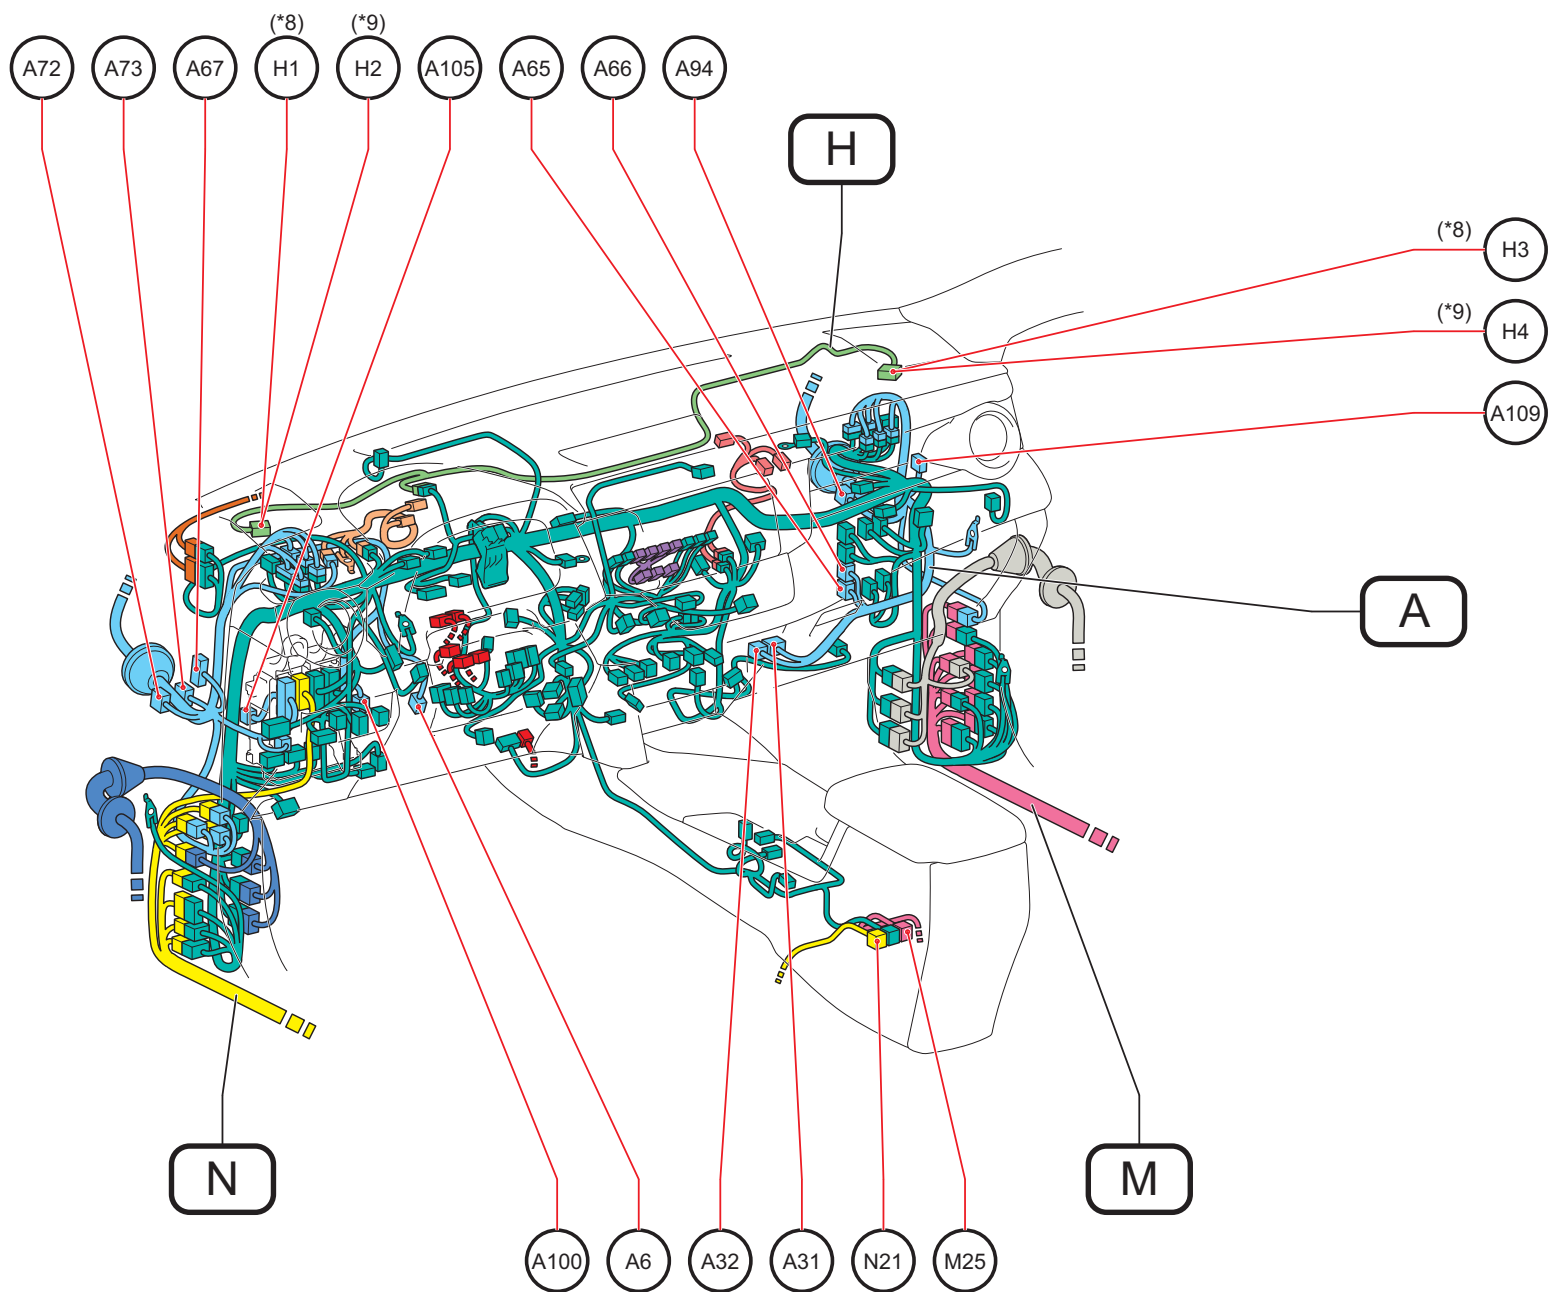


Position of Parts in Instrument Panel (LHD)

A6	Accelerator Pedal Sensor Assembly
A31	Quick Heater Assembly
A32	Quick Heater Assembly
A65	Hybrid Vehicle Control ECU
A66	Hybrid Vehicle Control ECU
A67	Headlight Leveling ECU Assembly
A72	No. 3 Junction Connector
A73	No. 4 Junction Connector
A94	No. 36 Junction Connector
A100	Stop Light Switch Assembly
A105	Brake Pedal Stroke Sensor Assembly
A109	Stop Light Control ECU Assembly
H1	Front No. 2 Speaker Assembly
H2	Front No. 2 Speaker Assembly LH
H3	Front No. 2 Speaker Assembly
H4	Front No. 2 Speaker Assembly RH
M25	Airbag Sensor Assembly
N21	Airbag Sensor Assembly


Position of Parts in Instrument Panel (LHD)

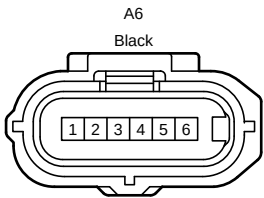


90980-12831

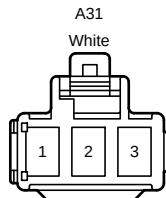


90980-10956

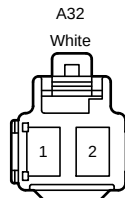


90980-10903

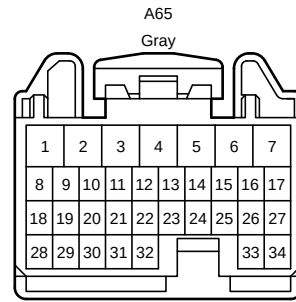


90980-12430

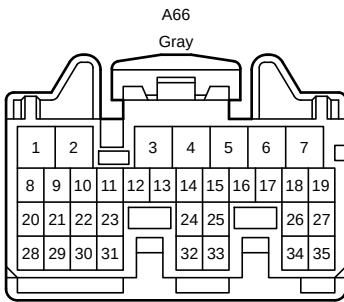


90980-12428

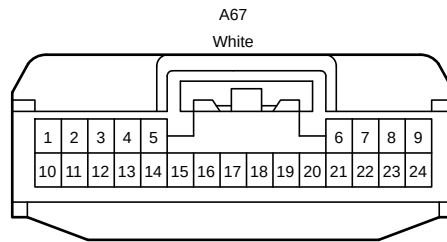

90980-12404

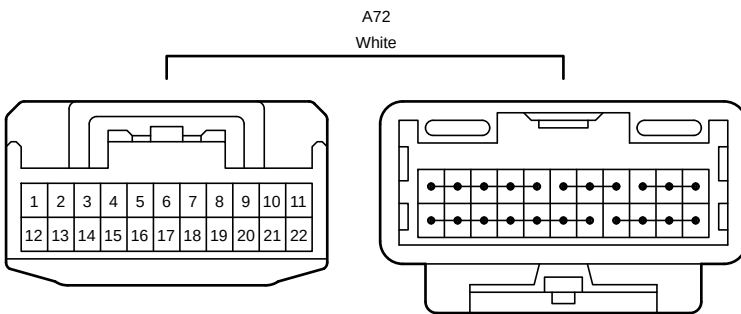

90980-12372

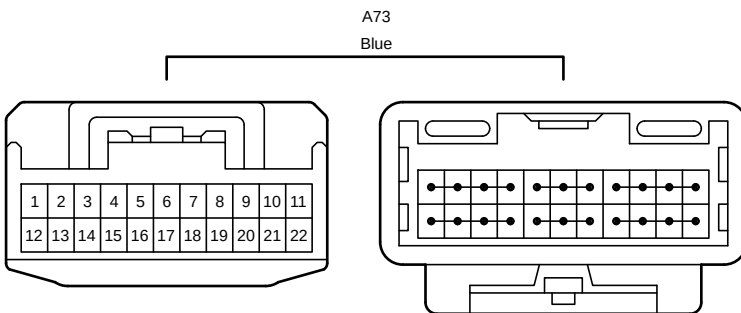

90980-12372

Position of Parts in Instrument Panel (LHD)

