



Position of Parts in Seat (RHD w/ Power Seat)

- * 1:w/ Seat Position Memory
- * 2:w/o Seat Position Memory

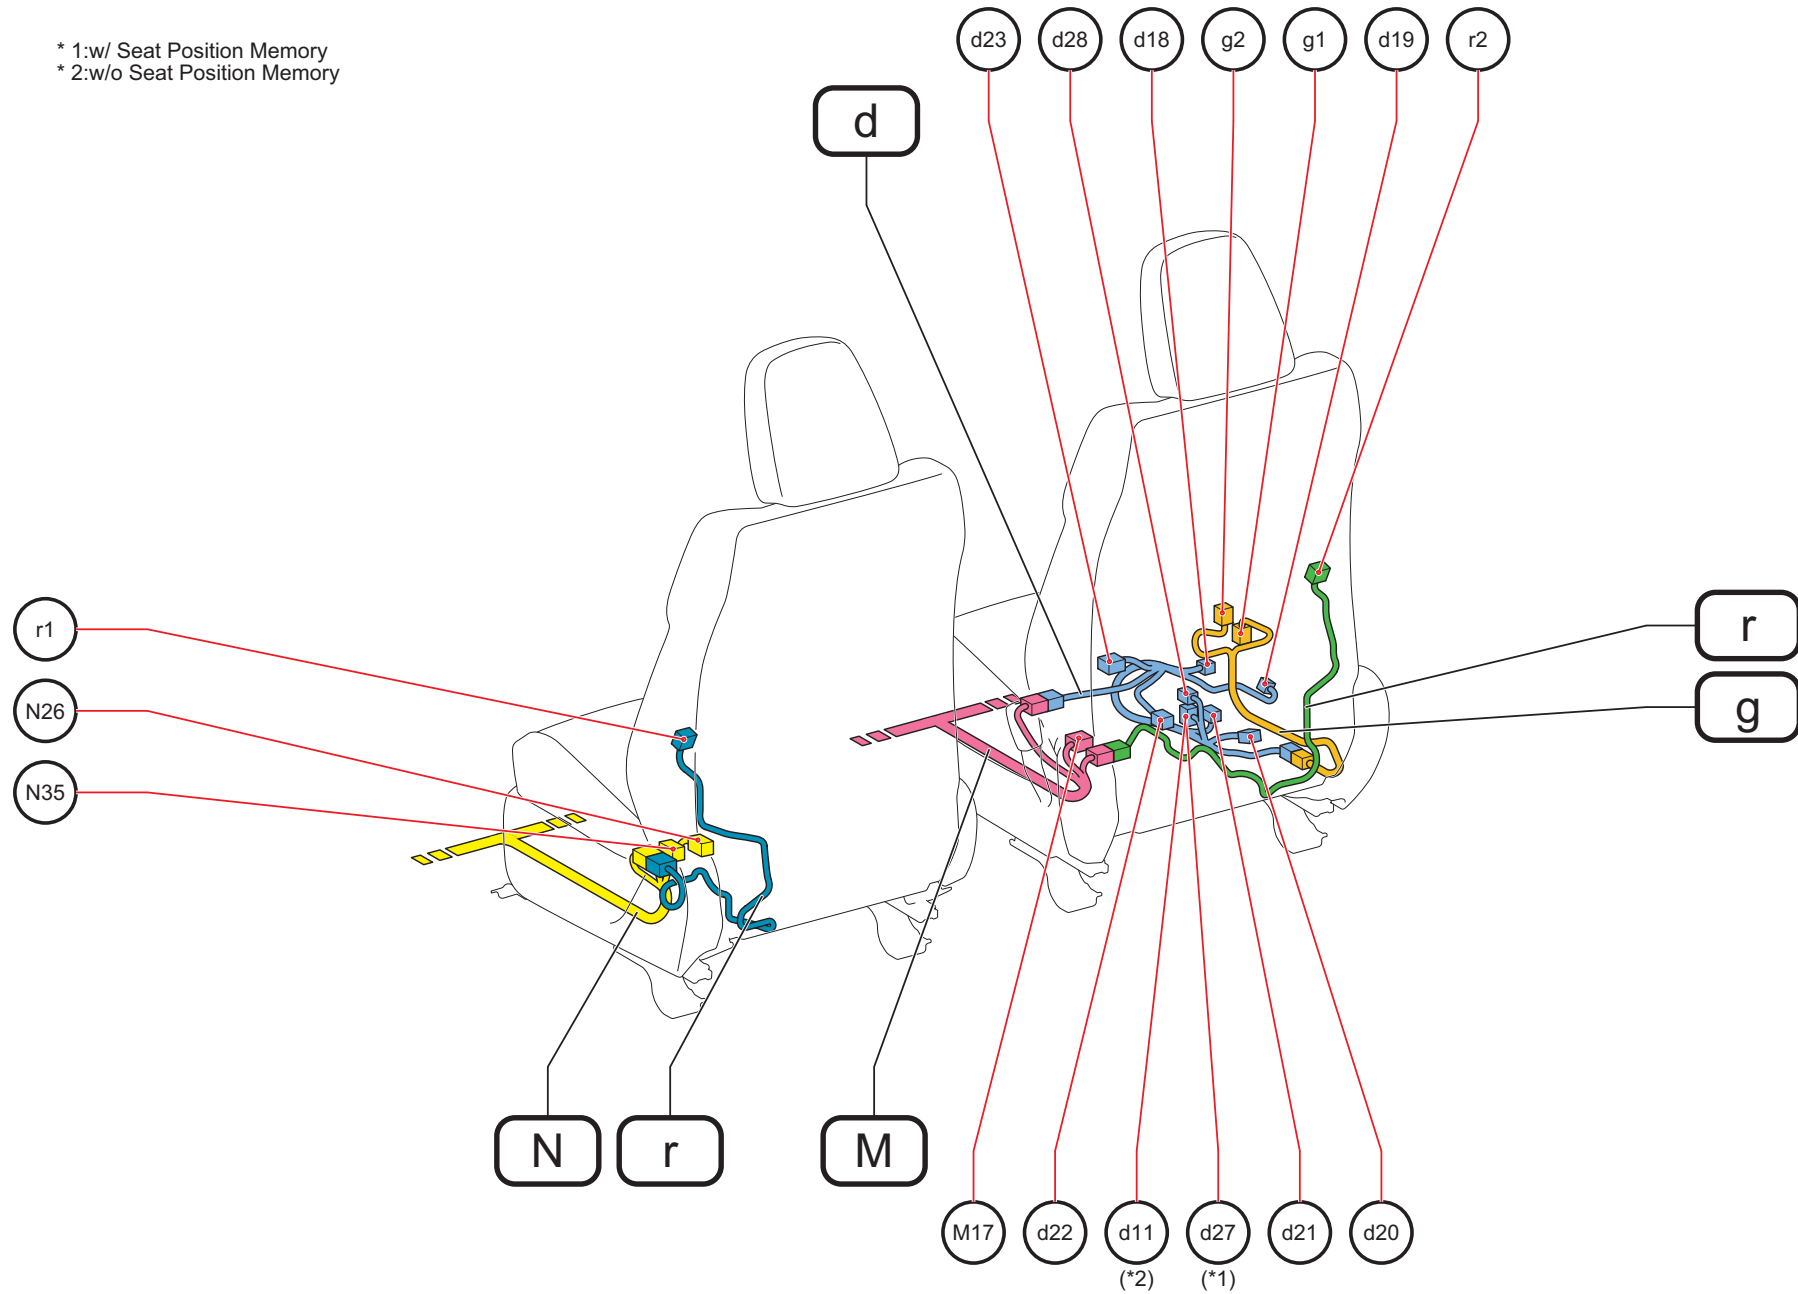


M17	Front Seat Inner Belt Assembly RH
N26	Front Seat Cushion Heater Assembly LH
N35	Front Seat Inner Belt Assembly LH
d11	Front Power Seat Switch RH
d18	Front Power Seat Slide Position Motor RH
d19	Front Power Seat Tilt Position Motor RH
d20	Front Power Seat Lift Position Motor RH
d21	Front Power Seat Lumbar Switch RH
d22	Front Seat Cushion Heater Assembly RH
d23	No. 34 Junction Connector
d27	Power Seat Switch Assembly
d28	Power Seat Switch Assembly
g1	Front Power Seat Reclining Position Motor RH
g2	Front Power Seat Lumbar Support Motor RH
r1	Front Seat Airbag Assembly LH
r2	Front Seat Airbag Assembly RH


Position of Parts in Seat (RHD w/ Power Seat)

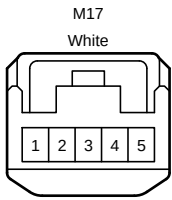


90980-12366

 


90980-10795

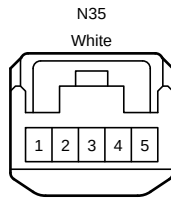


90980-12366

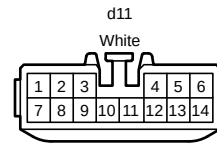


90980-10807

 


90980-12341

 


90980-12341

 


90980-12341

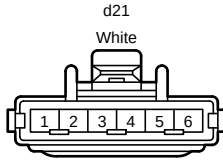


90980-10933

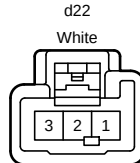


90980-11763

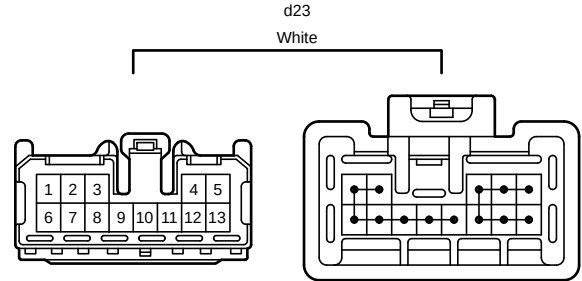


90980-12346

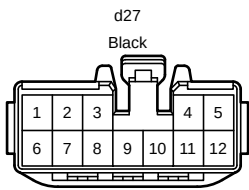


90980-11782

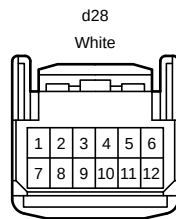


90980-12552

 


90980-12341

 

90980-12341

 

90980-12452

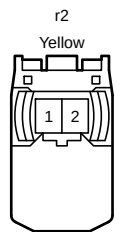

90980-12452