




Illumination

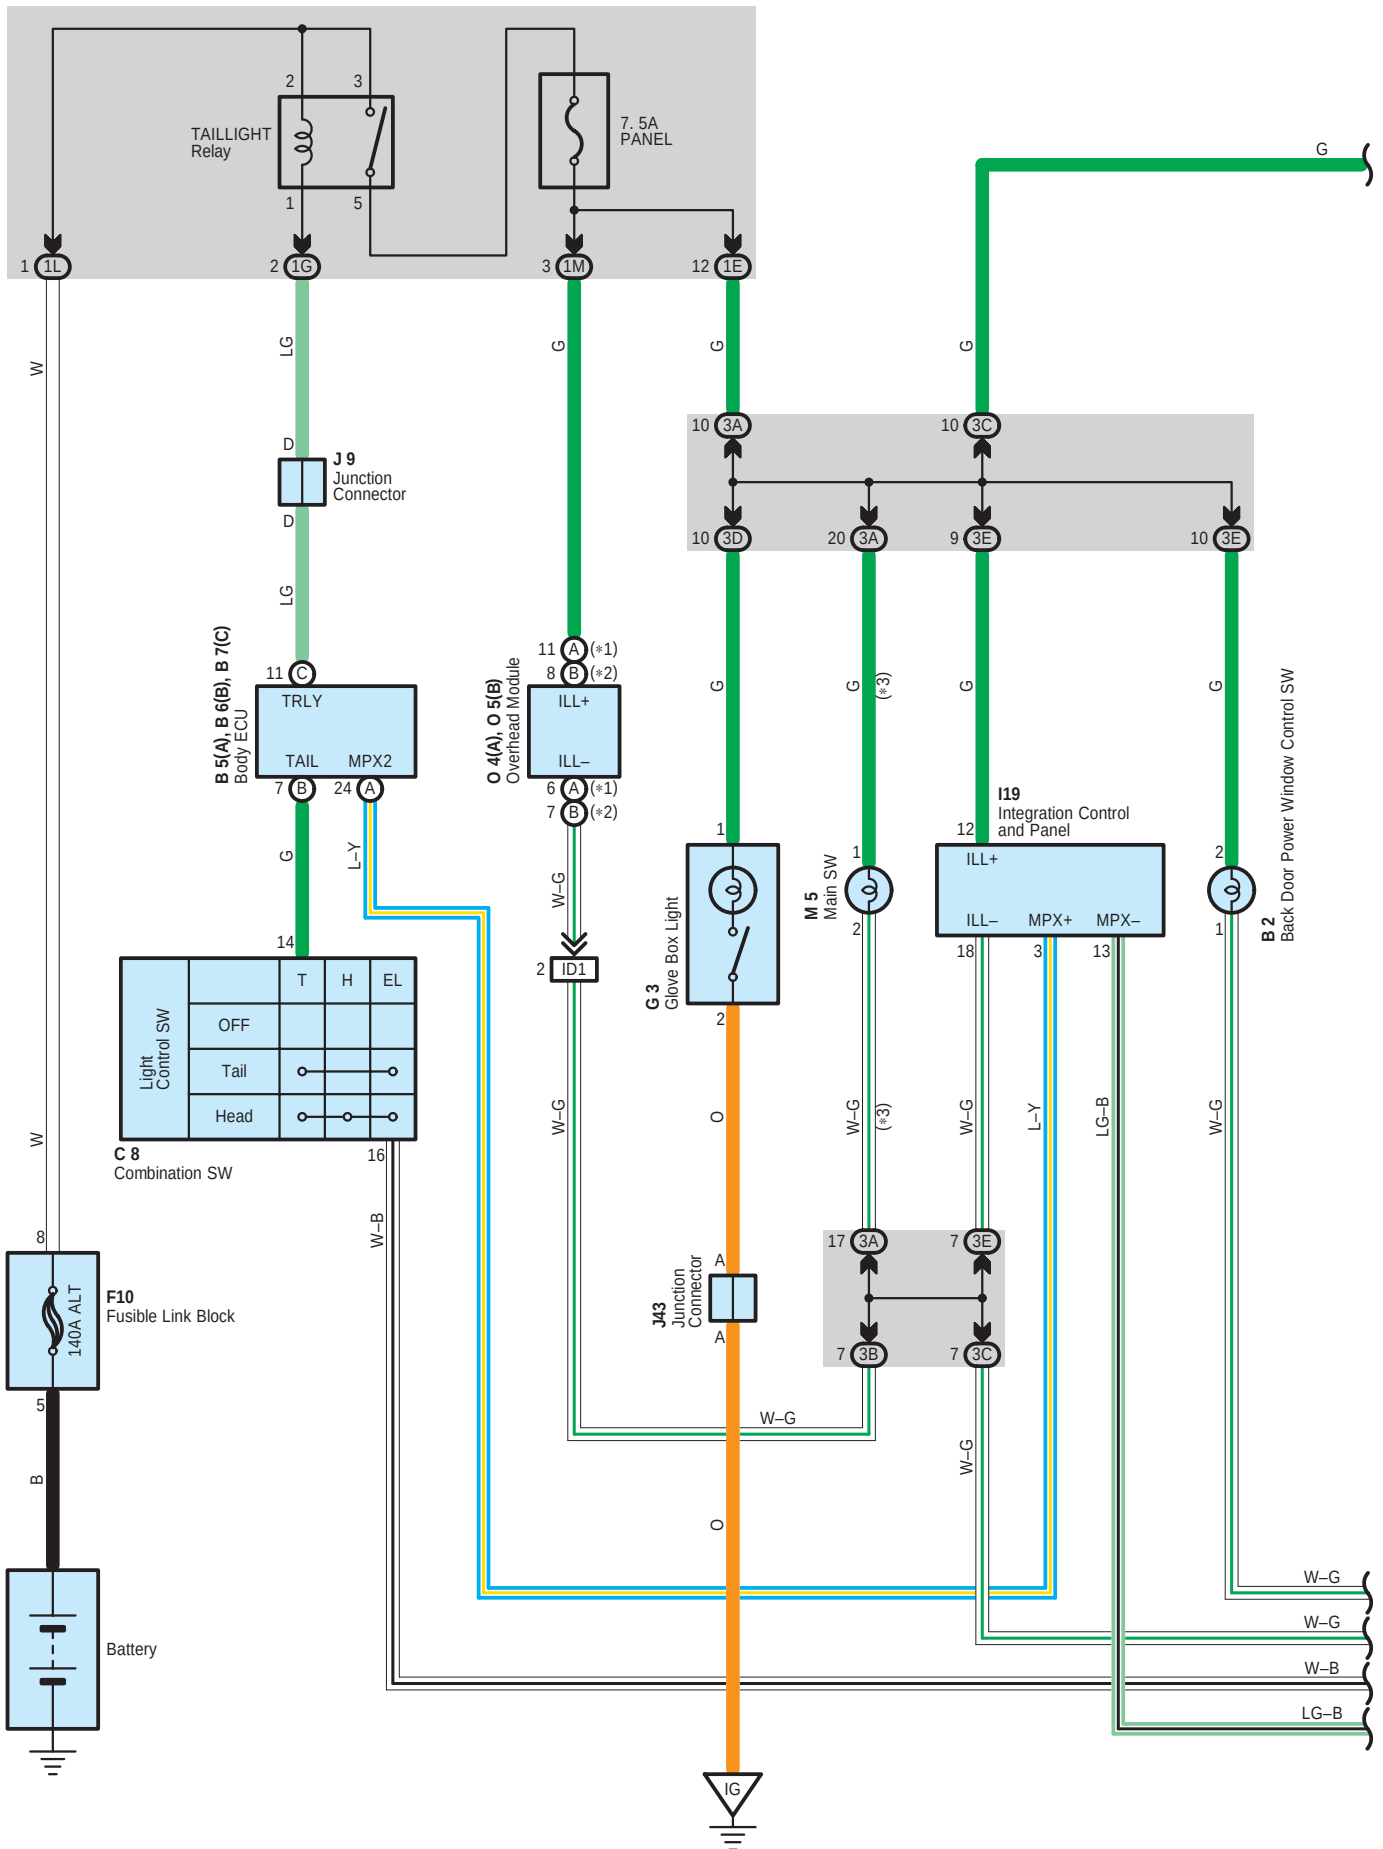

- * 1 : w/o Sliding Roof, Rear Seat Entertainment System and Rear Seat Audio System
- * 2 : w/ Sliding Roof, Rear Seat Entertainment System or Rear Seat Audio System
- * 3 : w/ Rear Seat Entertainment System or Rear Seat Audio System
- * 4 : w/o Rear Seat Entertainment System, Rear Seat Audio System
- * 5 : w/ Electric Modulated Air Suspension
- * 6 : 6 Speaker
- * 7 : 10 Speaker
- * 8 : w/ Navigation System
- * 9 : w/o Navigation System

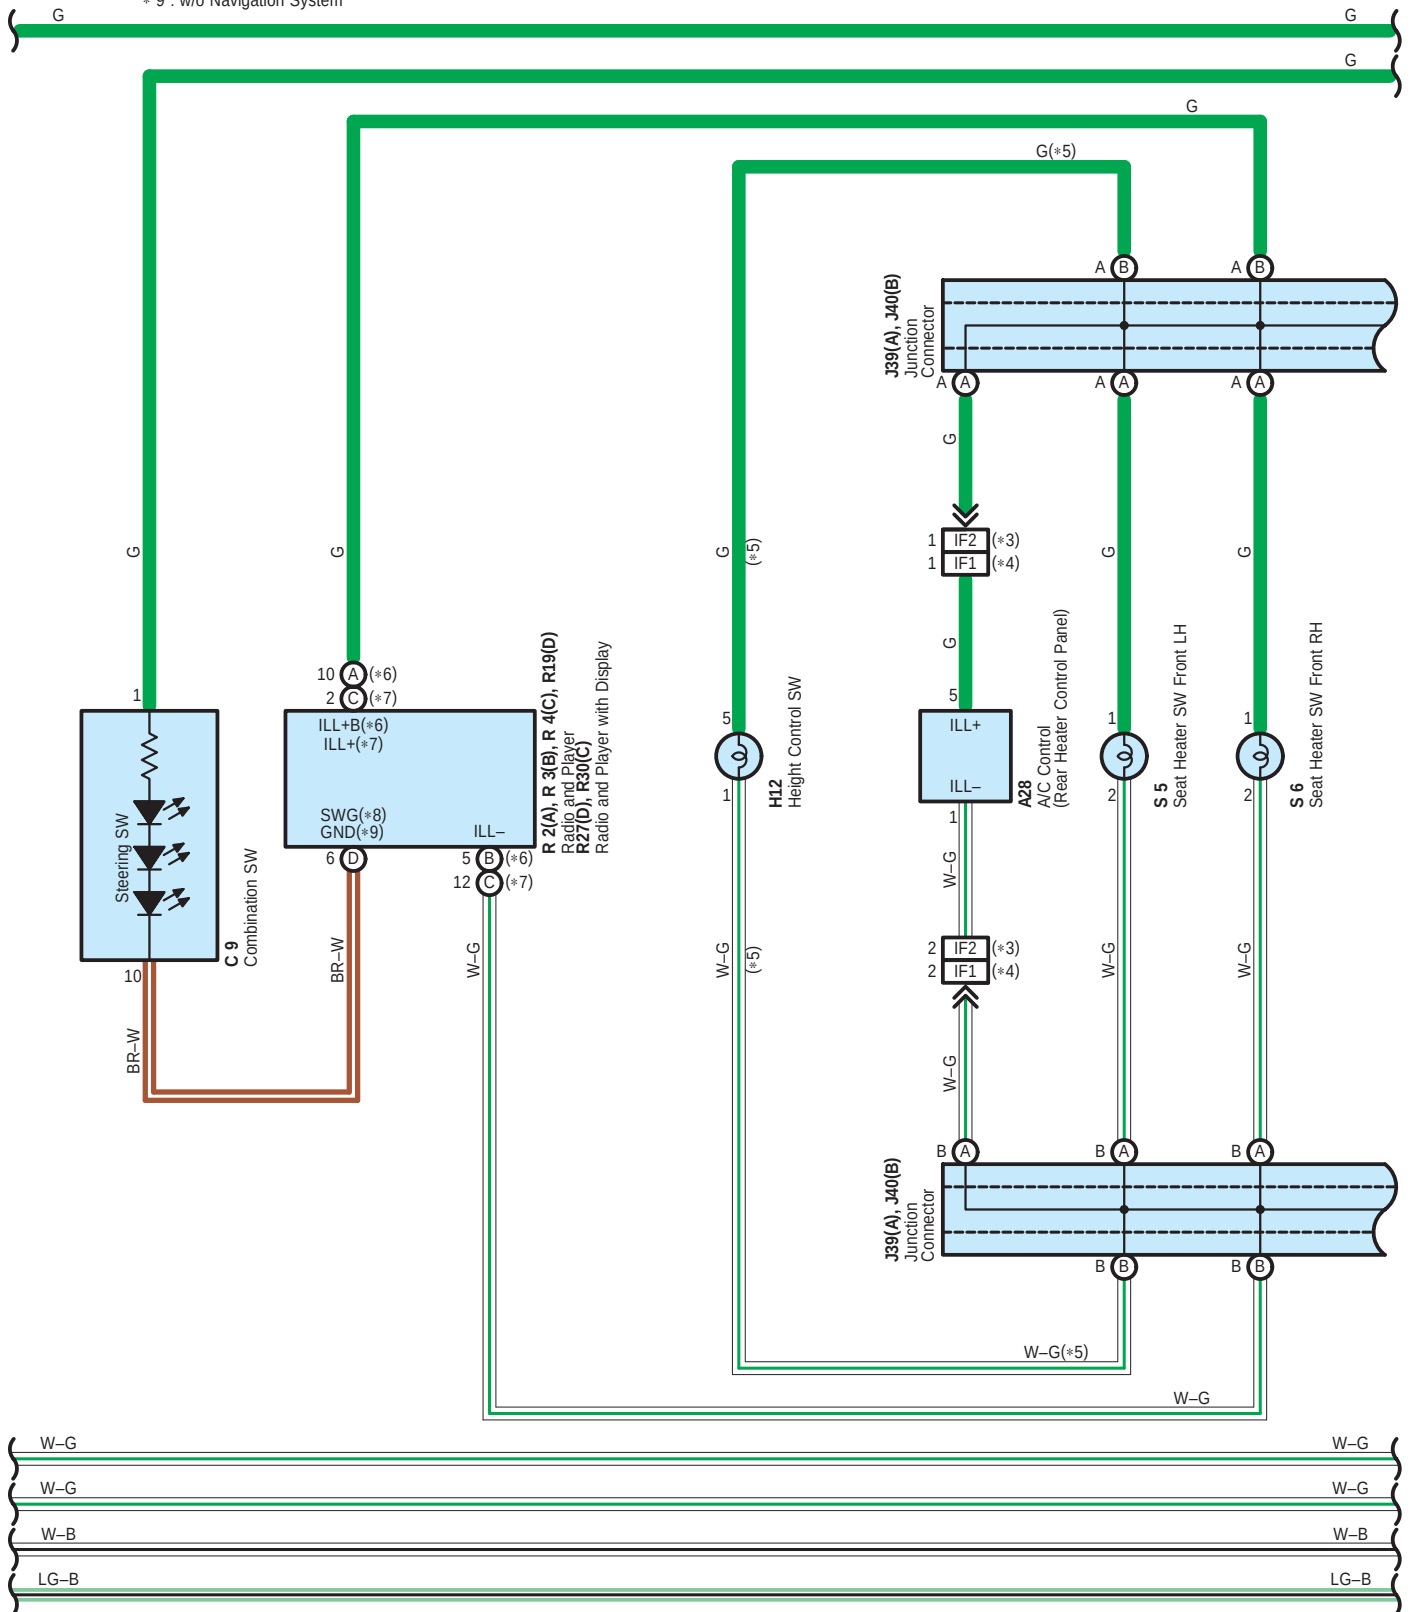

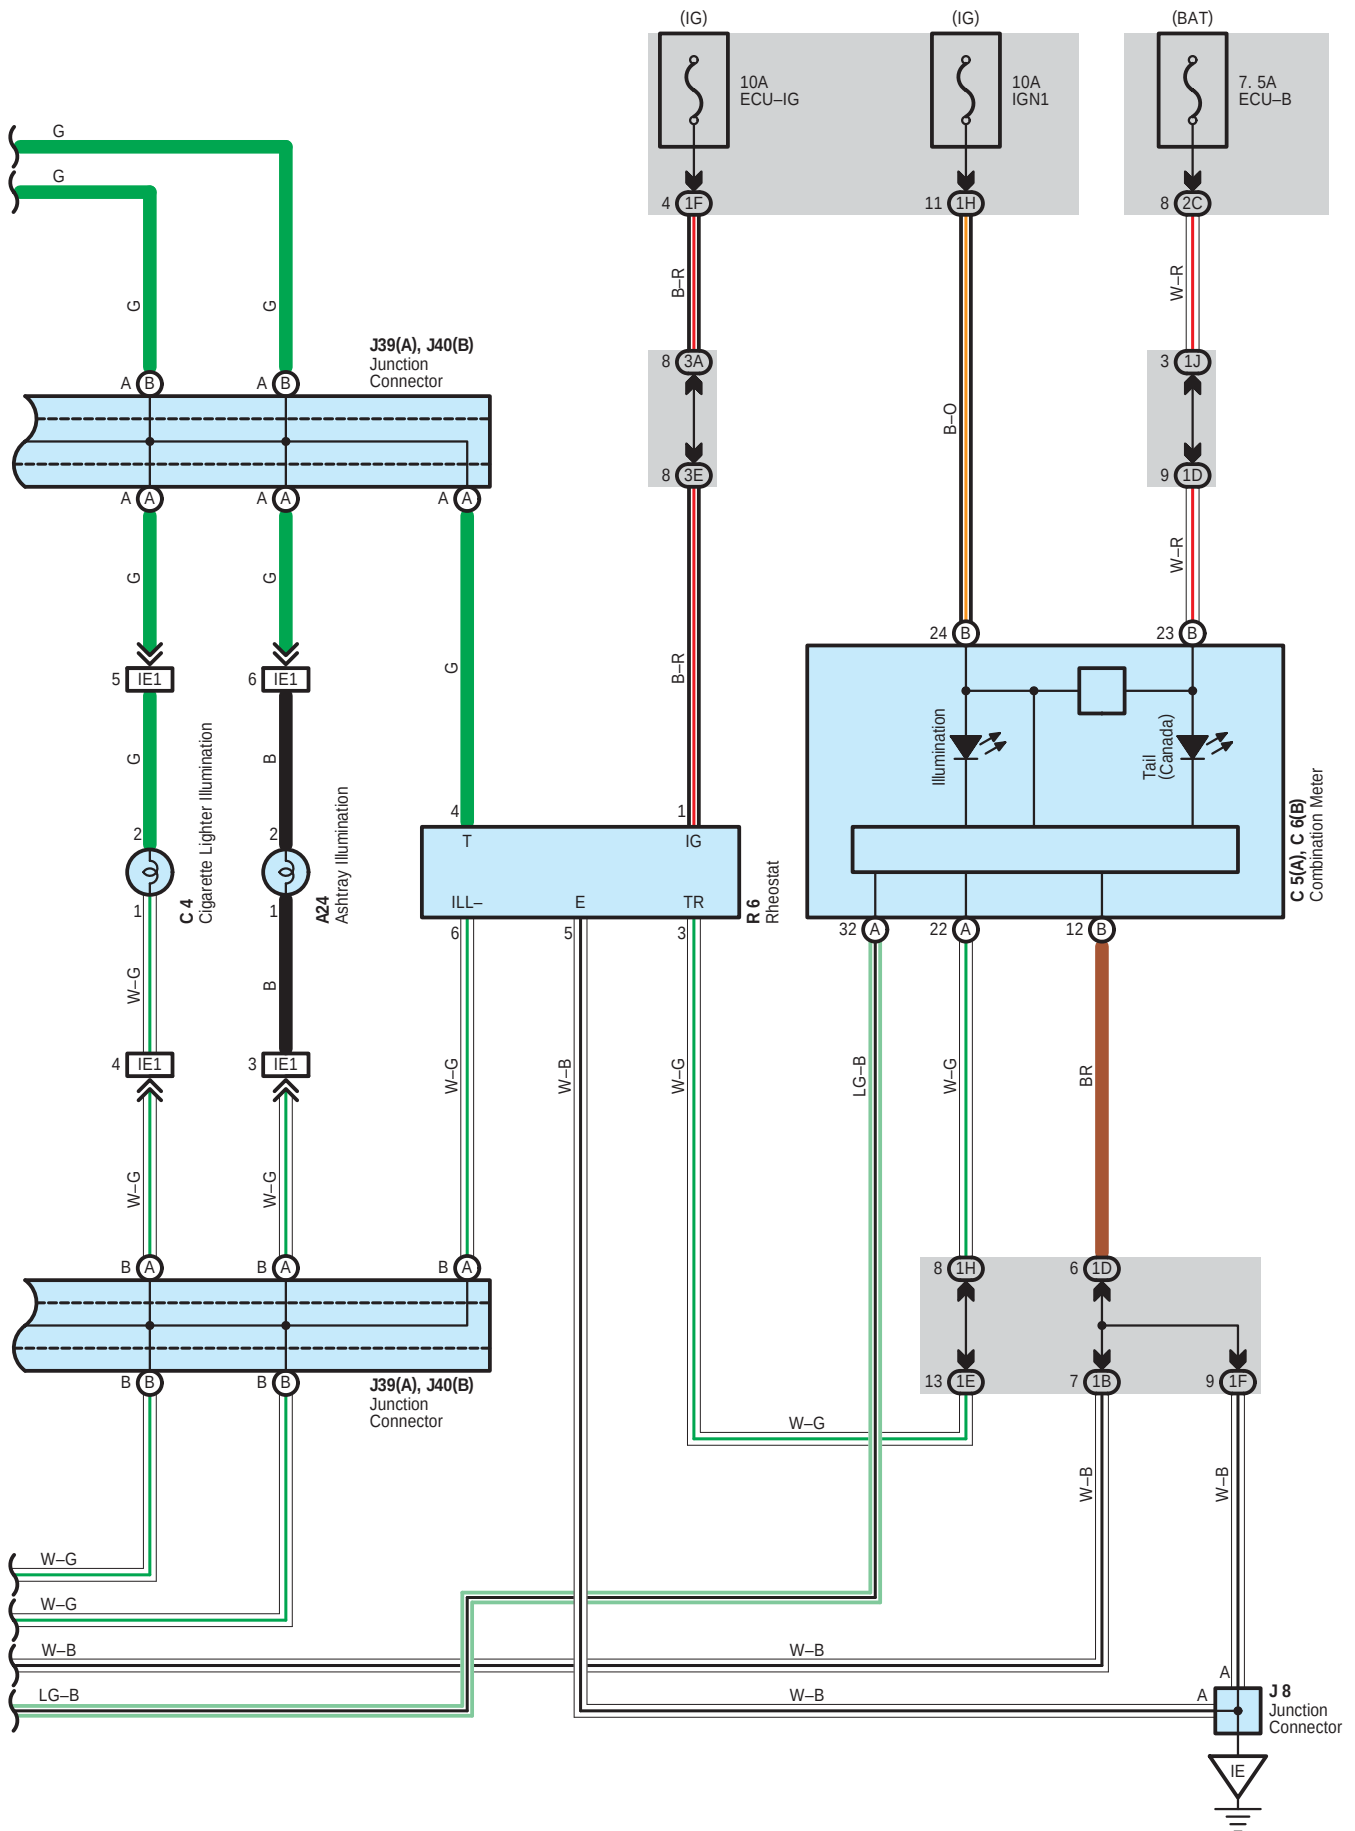

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A24	42	F10	22, 40	O5	B 47
A28	42	G3	43	R2	A 45
B2	42	H12	43	R3	B 45
B5	A 42	I19	43	R4	C 45
B6	B 42	J8	44	R6	45
B7	C 42	J9	44	R19	D 45
C4	42	J39	A 44	R27	D 45
C5	A 42	J40	B 44	R30	C 45
C6	B 42	J43	44	S5	45
C8	42	M5	45	S6	45
C9	42	O4	A 47		

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1E		
1F		
1G		
1H		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1L		
1M	33	Roof Wire and Instrument Panel J/B (Lower Finish Panel)
2C	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3B		
3C		
3D		
3E		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	51	Cowl Wire and Roof Wire (Left Side of Instrument Panel)
IE1	51	Cigarette Lighter Wire and Cowl Wire (Instrument Panel Brace LH)
IF1	51	Console Box Wire and Cowl Wire (Rear Console)
IF2		

 : Ground Points

Code	See Page	Ground Points Location
IE	51	Cowl Side Panel LH
IG	51	Cowl Side Panel RH