


Turn Signal and Hazard Warning Light

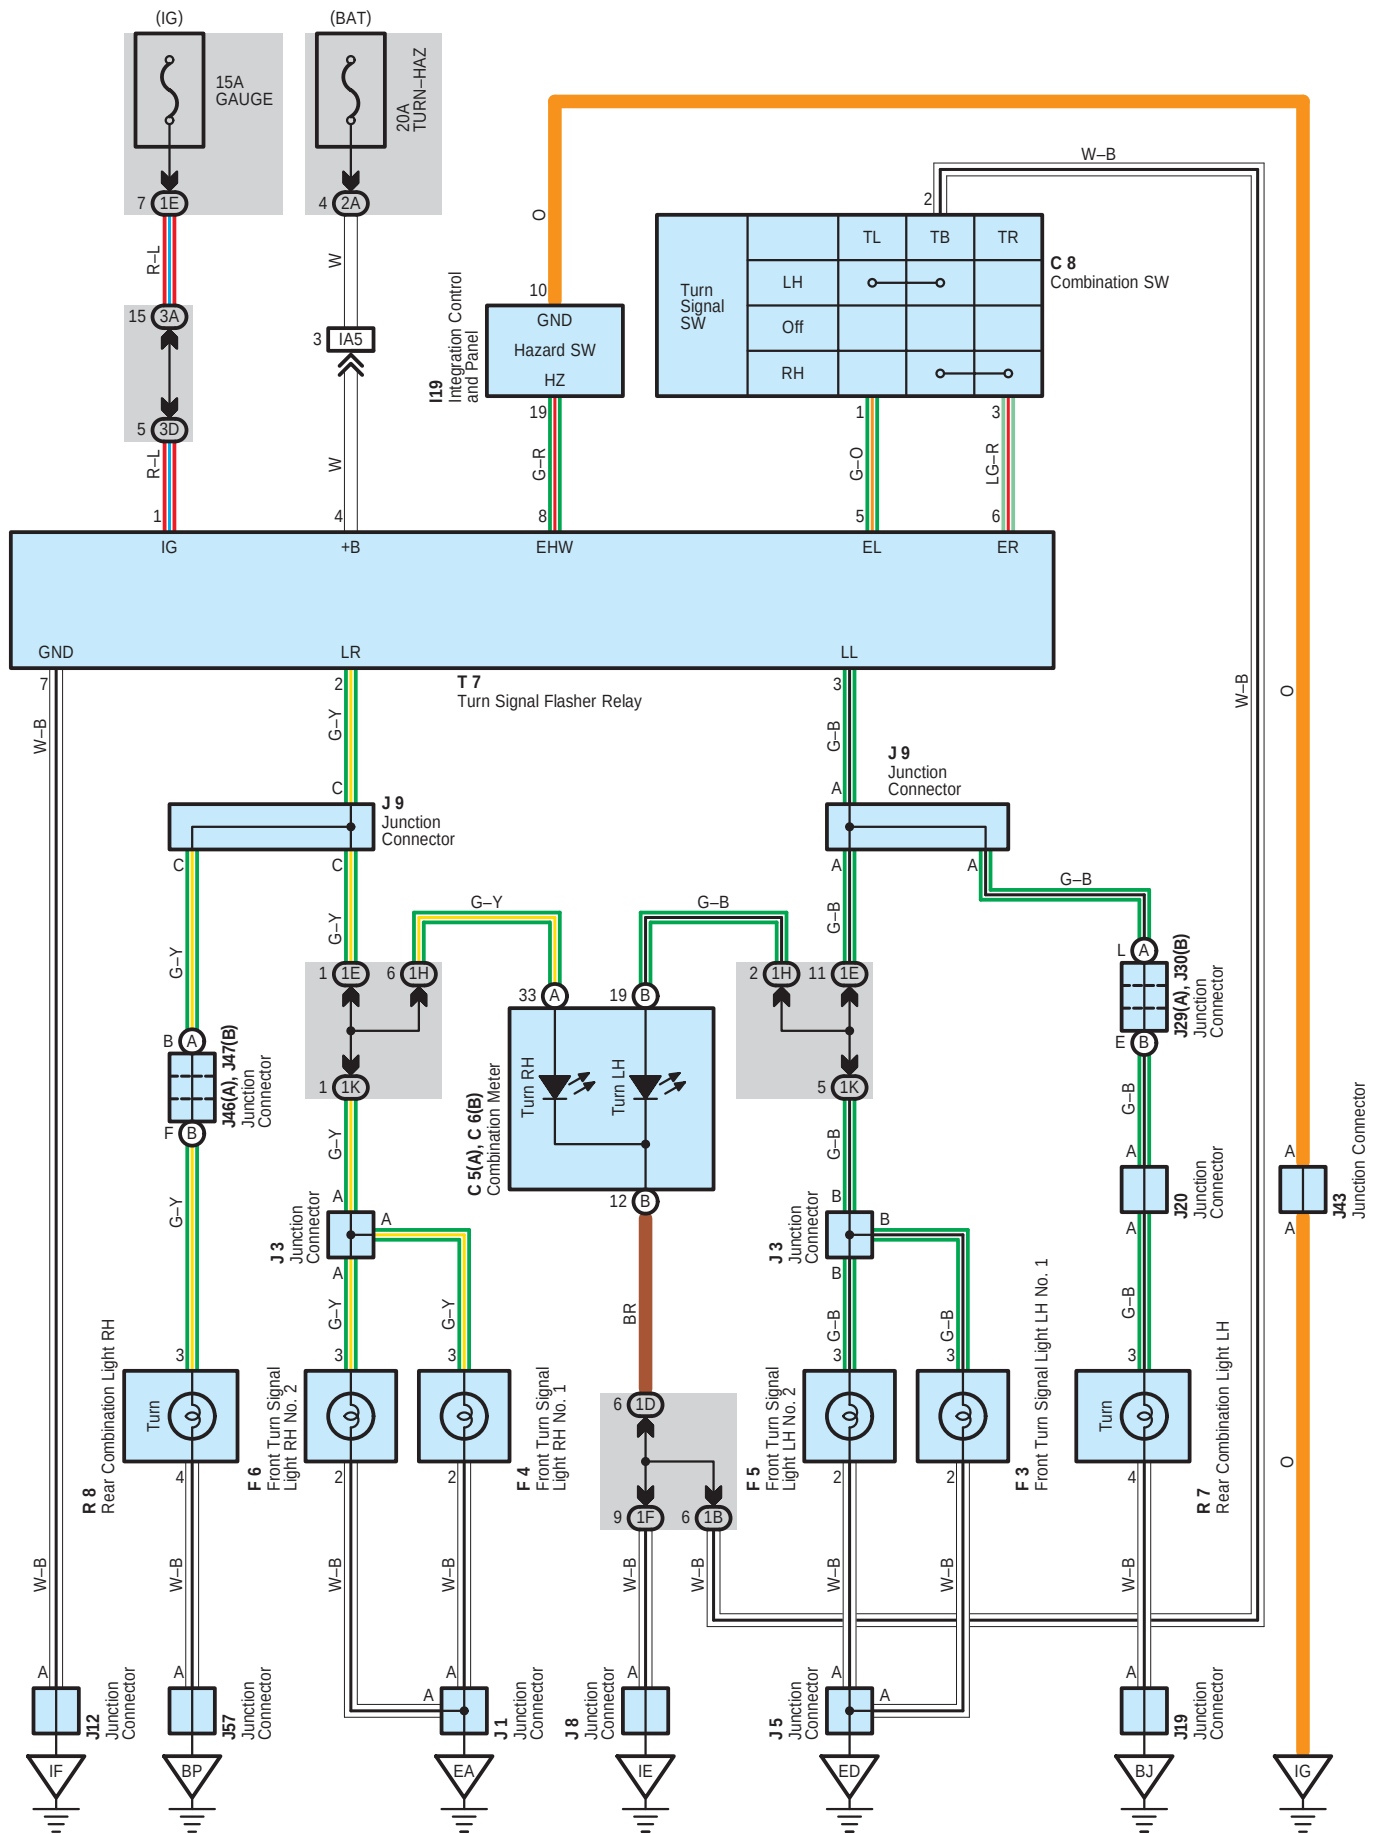

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
C5	A	42	J3	41		J43		44
C6	B	42	J5	41		J46	A	44
C8		42	J8	44		J47	B	44
F3		40	J9	44		J57		46
F4		40	J12	44		R7		47
F5		40	J19	46		R8		47
F6		40	J20	46		T7		45
I19		43	J29	A	44			
J1		41	J30	B	44			

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1E		
1F		
1H		
1K	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
2A	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3D		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA5	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)

 : Ground Points

Code	See Page	Ground Points Location
EA	50	Radiator Side Support RH
ED	50	Front Fender Apron LH
IE	51	Cowl Side Panel LH
IF	51	Instrument Panel Brace LH
IG	51	Cowl Side Panel RH
BJ	52	Quarter Panel LH
BP	52	Quarter Panel RH