



# Trailer Towing

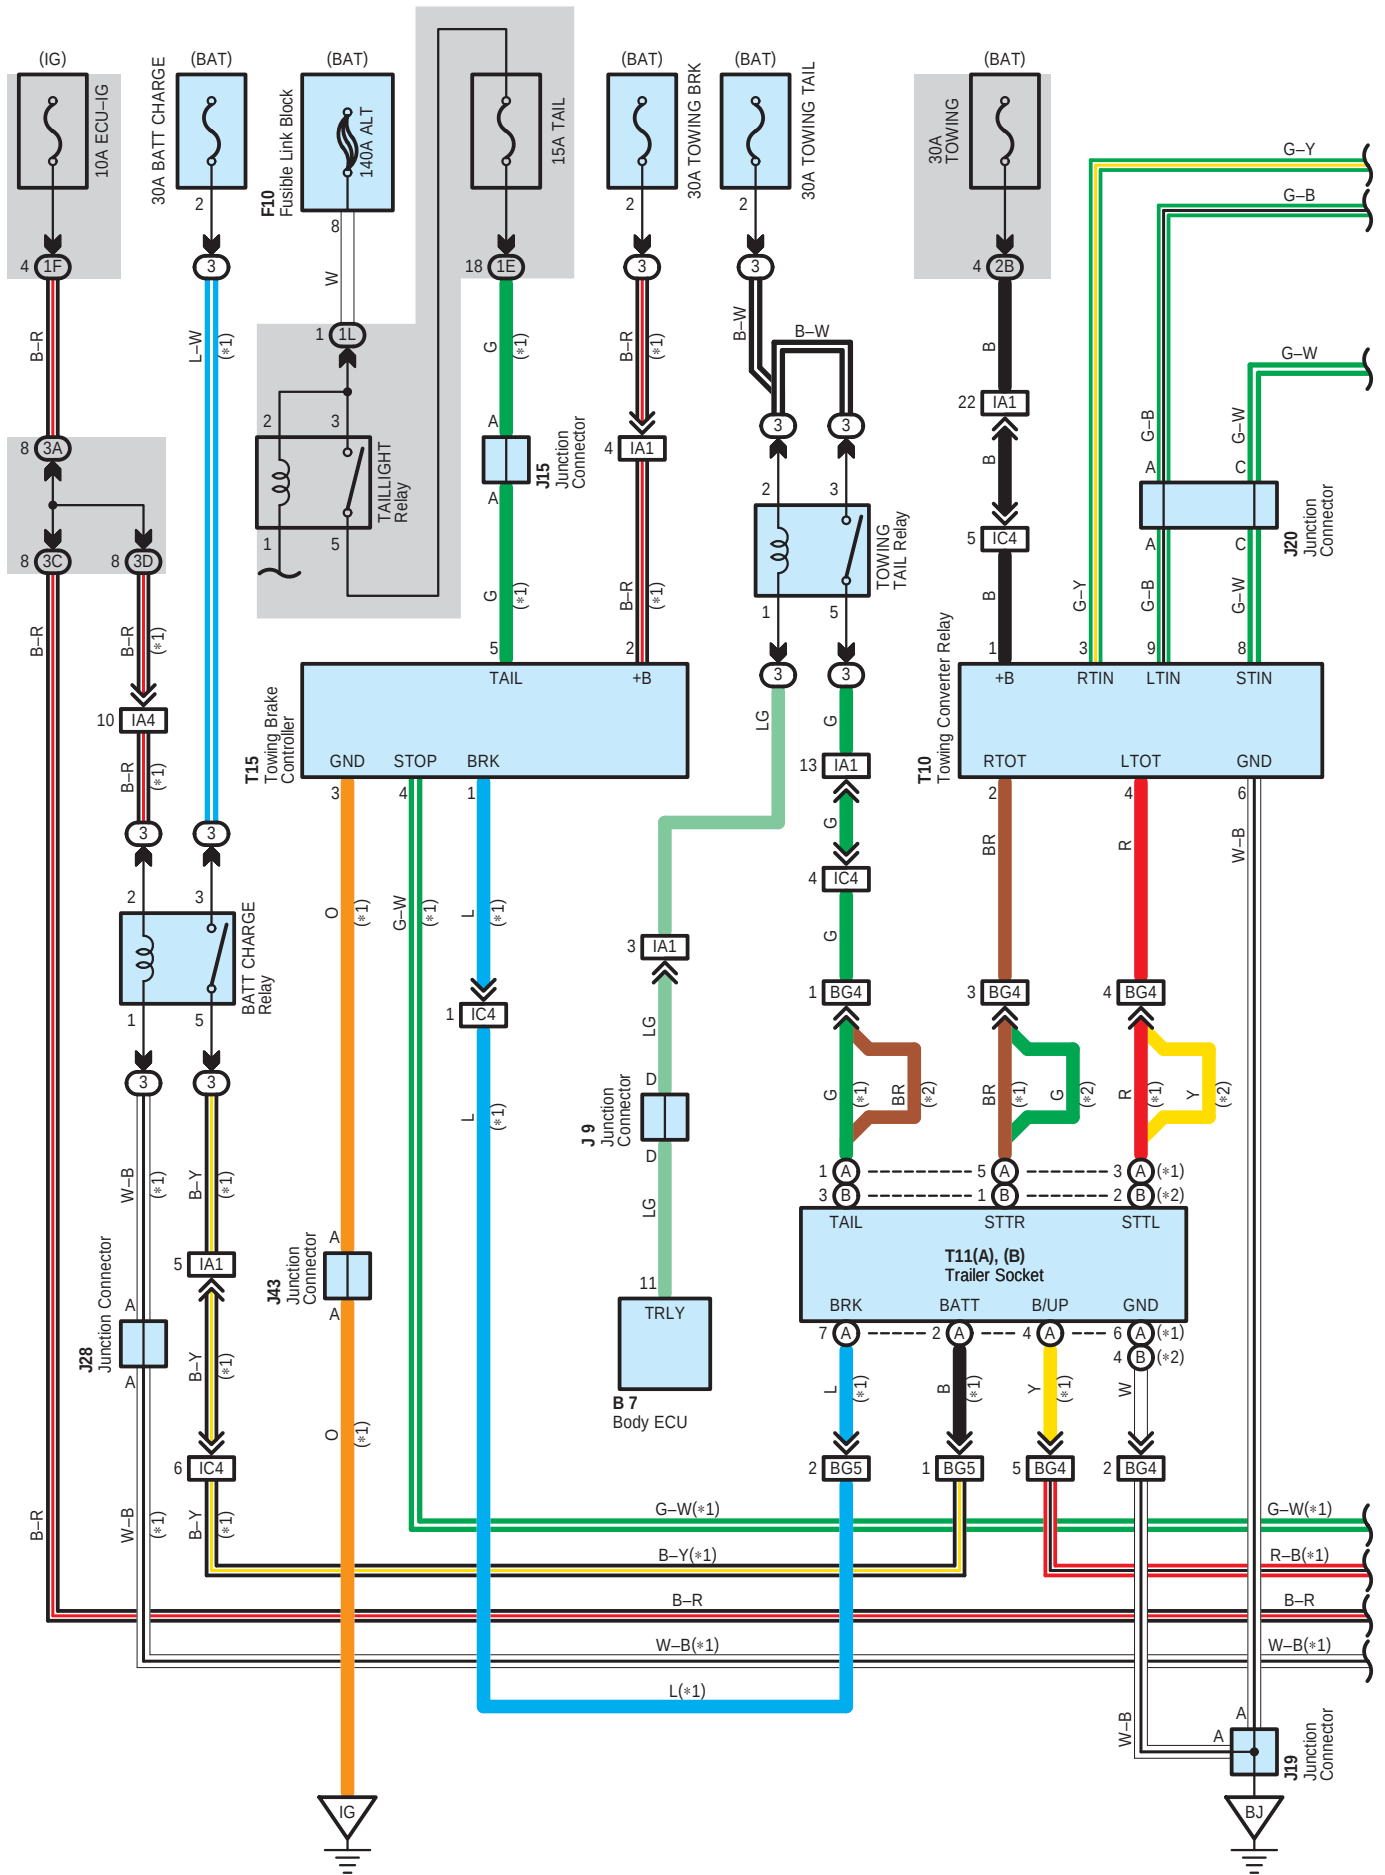

- \* 1 : Trailer Socket 7Pin Type
- \* 2 : Trailer Socket 4Pin Type

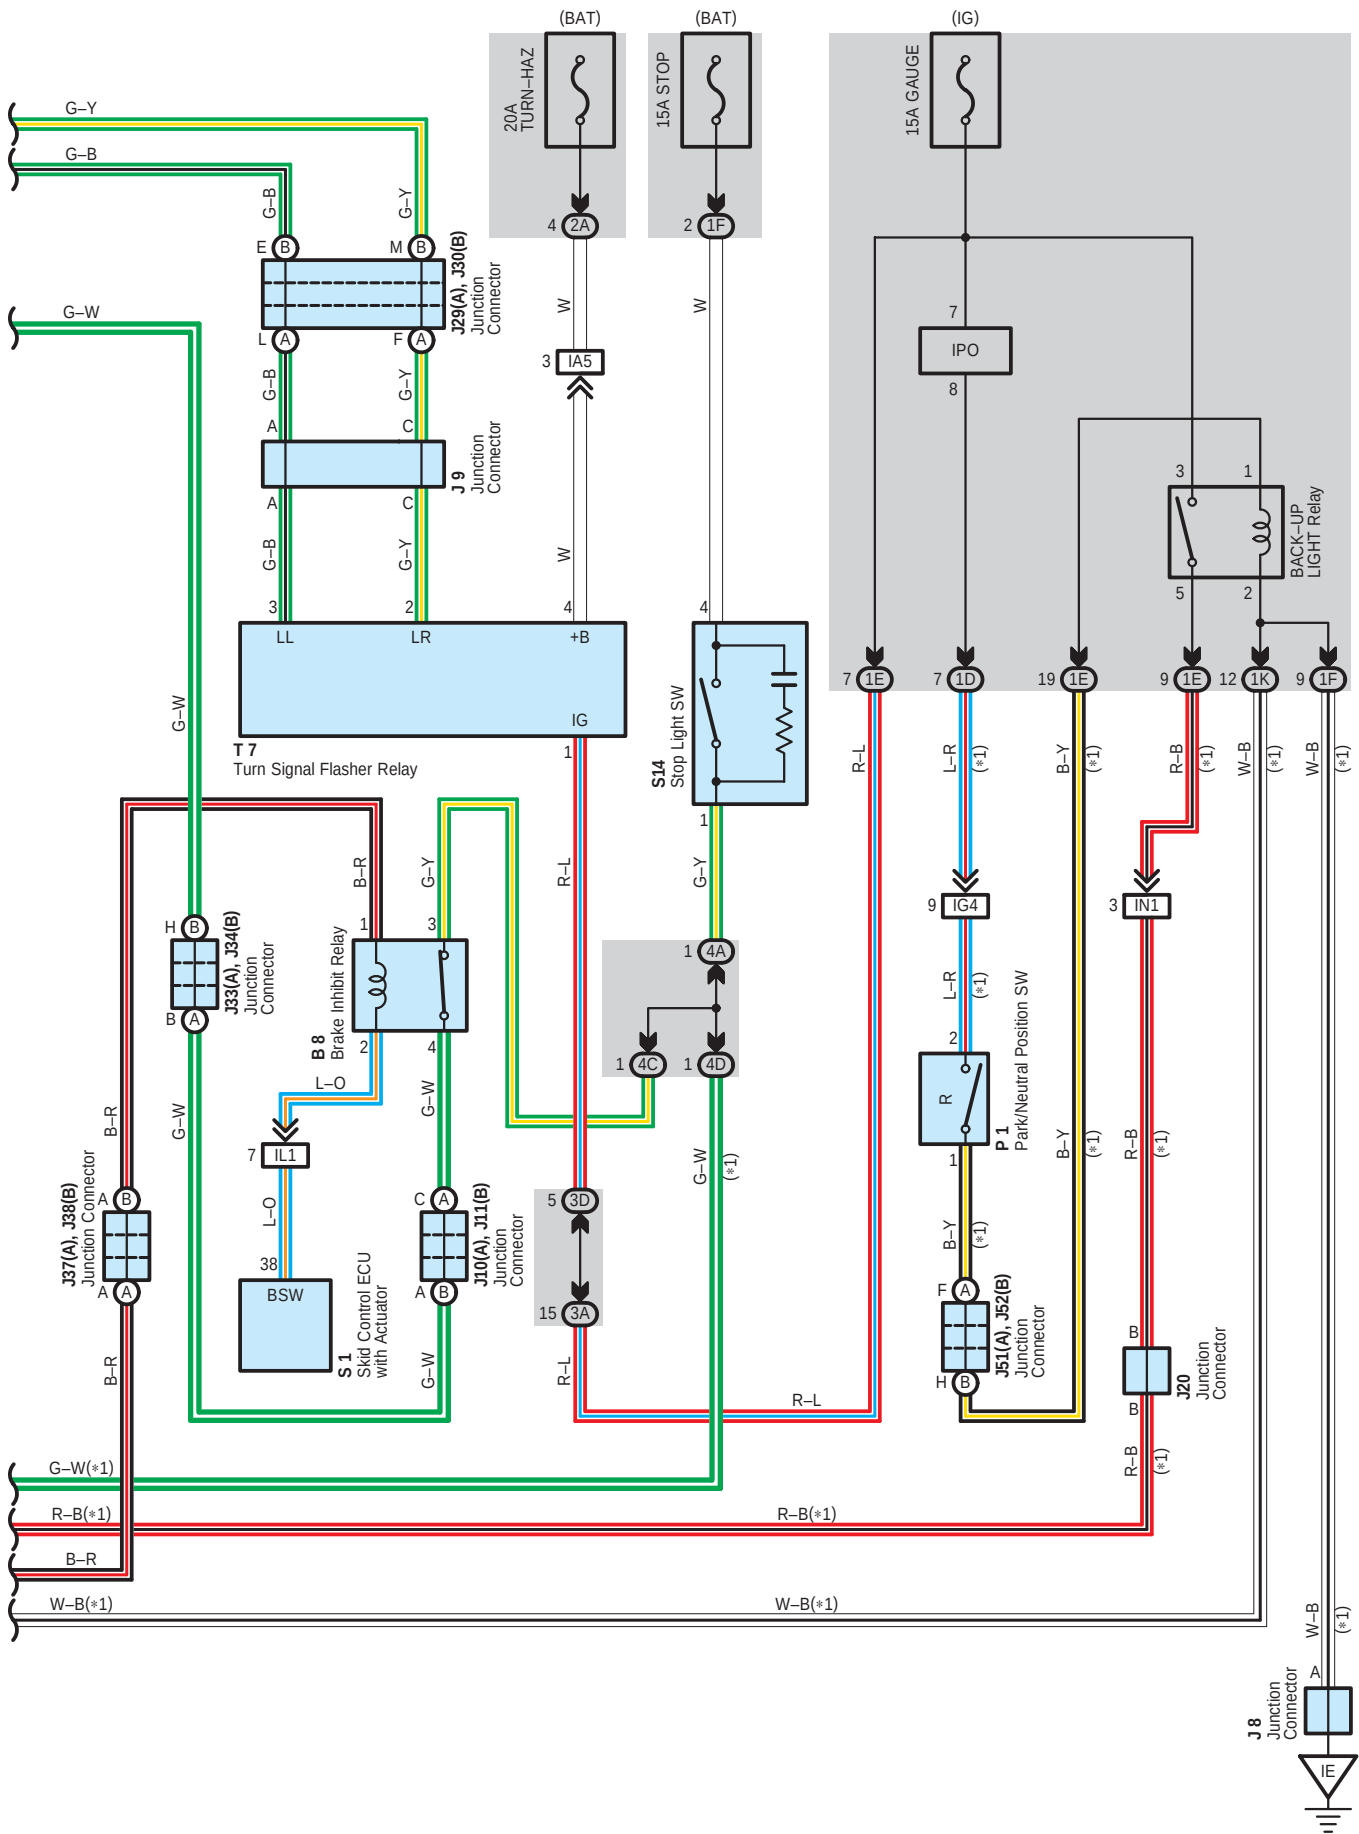

# Trailer Towing

## : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| B7   | 42       | J28  | 41       | P1   | 41       |
| B8   | 42       | J29  | A        | S1   | 41       |
| F10  | 22, 40   | J30  | B        | S14  | 45       |
| J8   | 44       | J33  | A        | T7   | 45       |
| J9   | 44       | J34  | B        | T10  | 47       |
| J10  | A        | J37  | A        | T11  | A        |
| J11  | B        | J38  | B        |      | B        |
| J15  | 44       | J43  | 44       | T15  | 45       |
| J19  | 46       | J51  | A        |      |          |
| J20  | 46       | J52  | B        |      |          |

## : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location)            |
|------|----------|------------------------------------------------|
| 3    | 26       | Engine Room R/B No.3 (Engine Compartment Left) |

## : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)                |
|------|----------|---------------------------------------------------------------------|
| 1D   | 33       | Cowl Wire and Instrument Panel J/B (Lower Finish Panel)             |
| 1E   |          |                                                                     |
| 1F   |          |                                                                     |
| 1K   | 33       | Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel) |
| 1L   |          |                                                                     |
| 2A   | 29       | Engine Room Main Wire and Engine Room J/B (Engine Compartment Left) |
| 2B   |          |                                                                     |
| 3A   | 36       | Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)            |
| 3C   |          |                                                                     |
| 3D   |          |                                                                     |
| 4A   | 38       | Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)            |
| 4C   |          |                                                                     |
| 4D   |          |                                                                     |

## : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)        |
|------|----------|-------------------------------------------------------------------|
| IA1  | 51       | Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)          |
| IA4  |          |                                                                   |
| IA5  |          |                                                                   |
| IC4  | 51       | Floor No.2 Wire and Cowl Wire (Left Kick Panel)                   |
| IG4  | 51       | Engine Wire and Cowl Wire (Right Side of Instrument Panel)        |
| IL1  | 51       | Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)          |
| IN1  | 51       | Floor No.2 Wire and Cowl Wire (Rear Console)                      |
| BG4  | 52       | Floor No.2 Wire and Frame No.3 Wire (Left Side of Rear Floor Pan) |
| BG5  |          |                                                                   |

## : Ground Points

| Code | See Page | Ground Points Location |
|------|----------|------------------------|
| IE   | 51       | Cowl Side Panel LH     |
| IG   | 51       | Cowl Side Panel RH     |
| BJ   | 52       | Quarter Panel LH       |

