


Back-Up Light

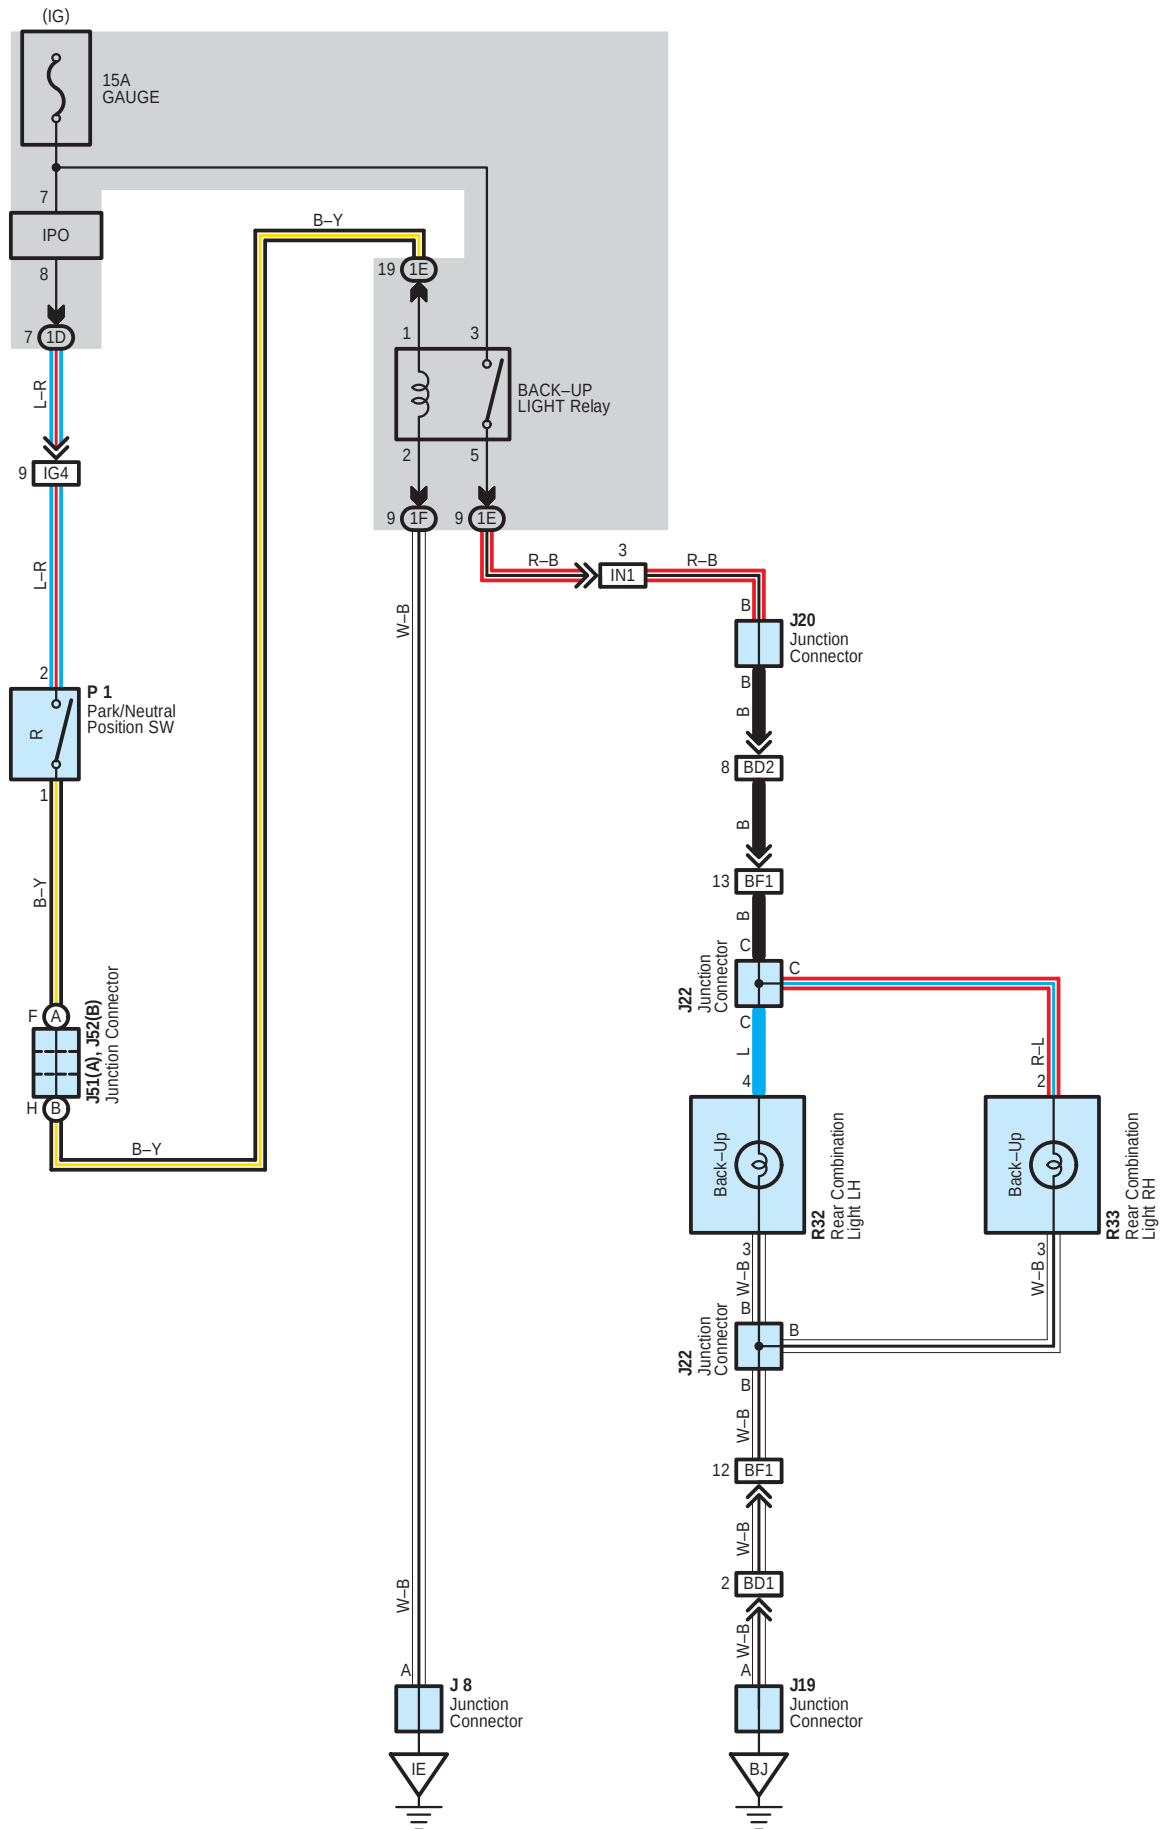

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
J8	44	J22	46	P1	41
J19	46	J51	A	R32	47
J20	46	J52	B	R33	47

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1F		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG4	51	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
IN1	51	Floor No.2 Wire and Cowl Wire (Rear Console)
BD1	52	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BD2		
BF1	52	Back Door No.2 Wire and Back Door No.1 Wire (Left Side of Back Door)

 : Ground Points

Code	See Page	Ground Points Location
IE	51	Cowl Side Panel LH
BJ	52	Quarter Panel LH