


Stop Light

* 1 : w/o Rear Spoiler
 * 2 : w/ Rear Spoiler

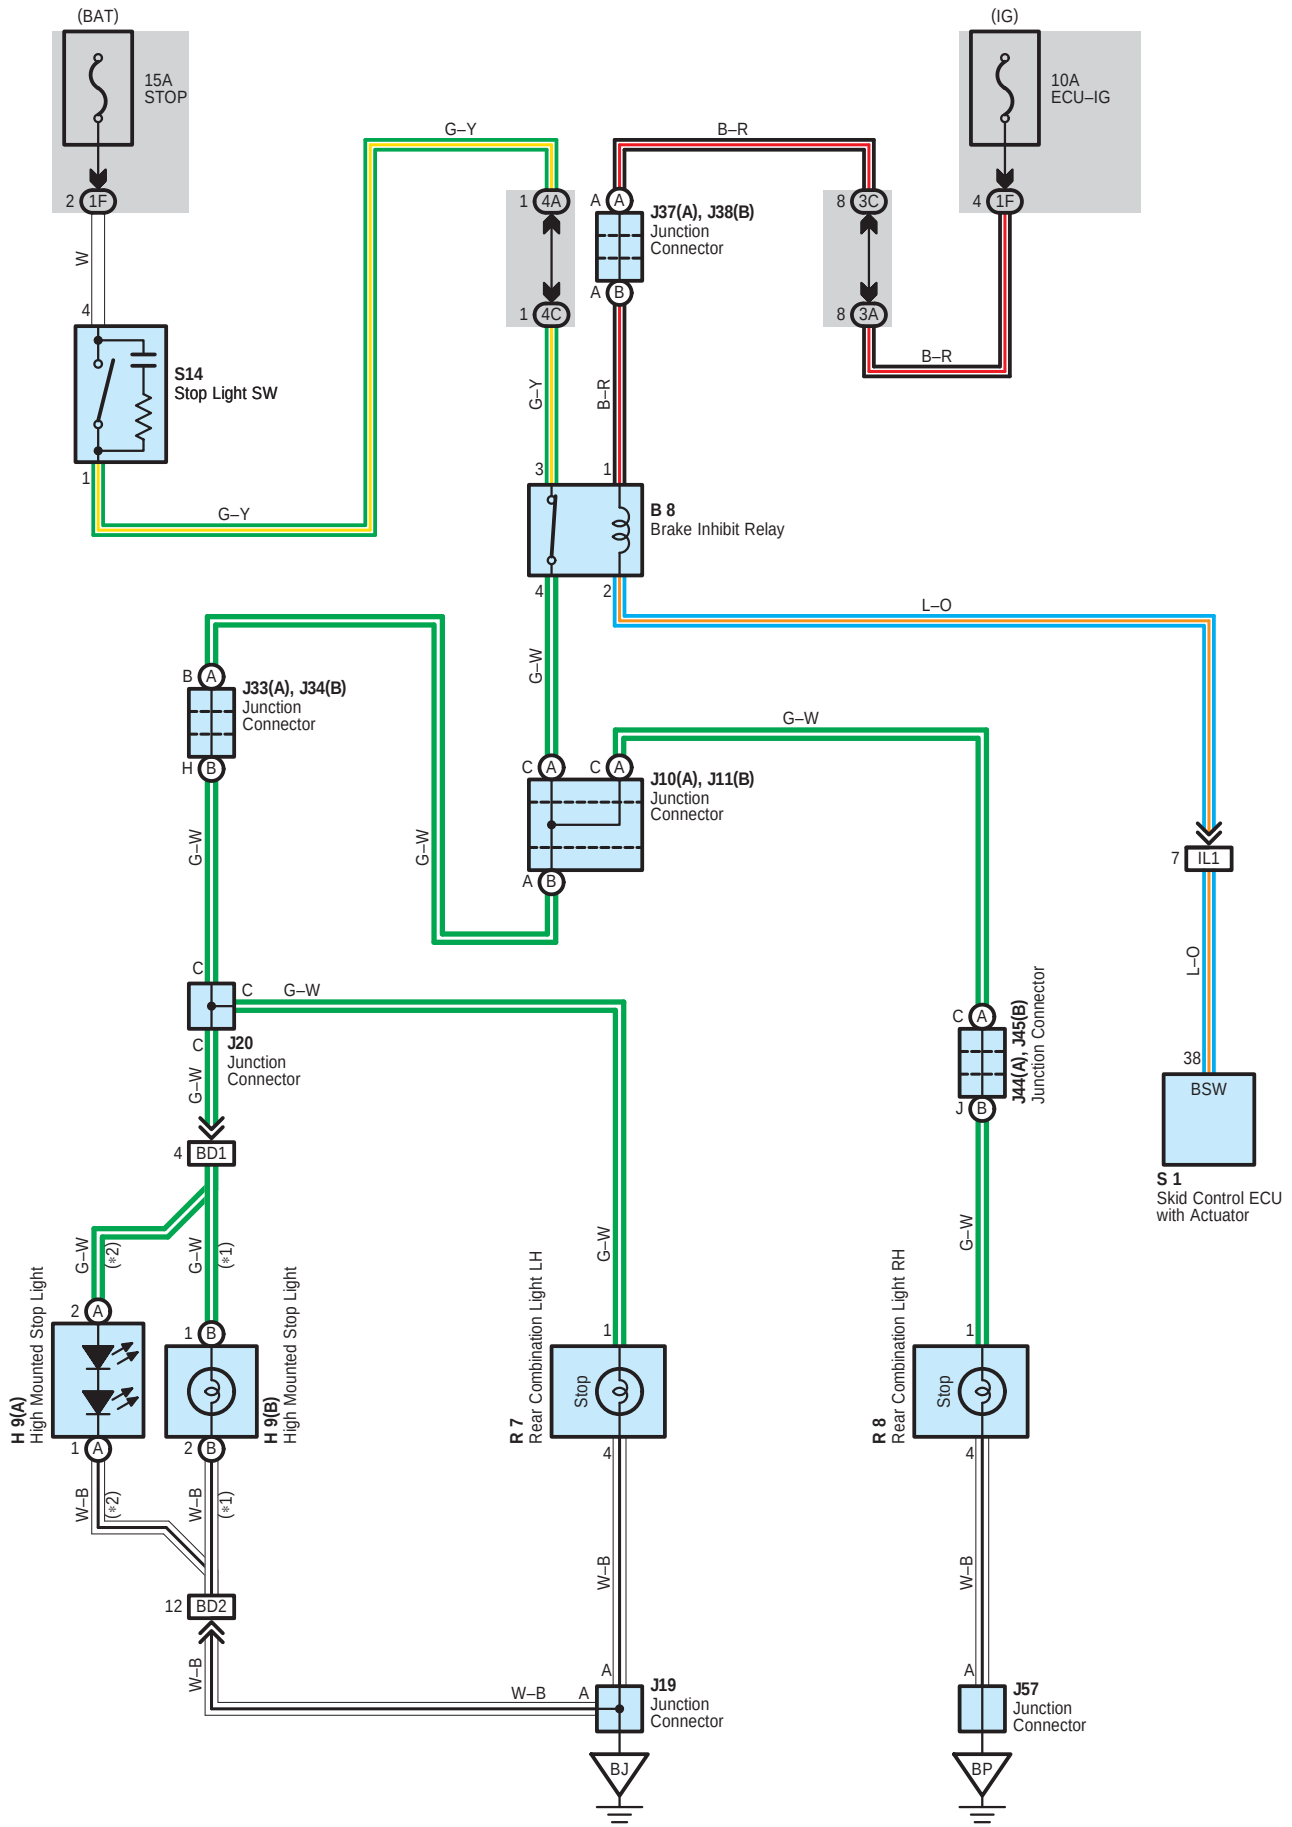

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
B8	42	J20	46	J45	B 44
H9	A	J33	A	J57	46
	B	J34	B	R7	47
J10	A	J37	A	R8	47
J11	B	J38	B	S1	41
J19	46	J44	A	S14	45

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3C		
4A	38	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4C		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IL1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)
BD1	52	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BD2		

 : Ground Points

Code	See Page	Ground Points Location
BJ	52	Quarter Panel LH
BP	52	Quarter Panel RH