





Multiplex Communication System – BEAN

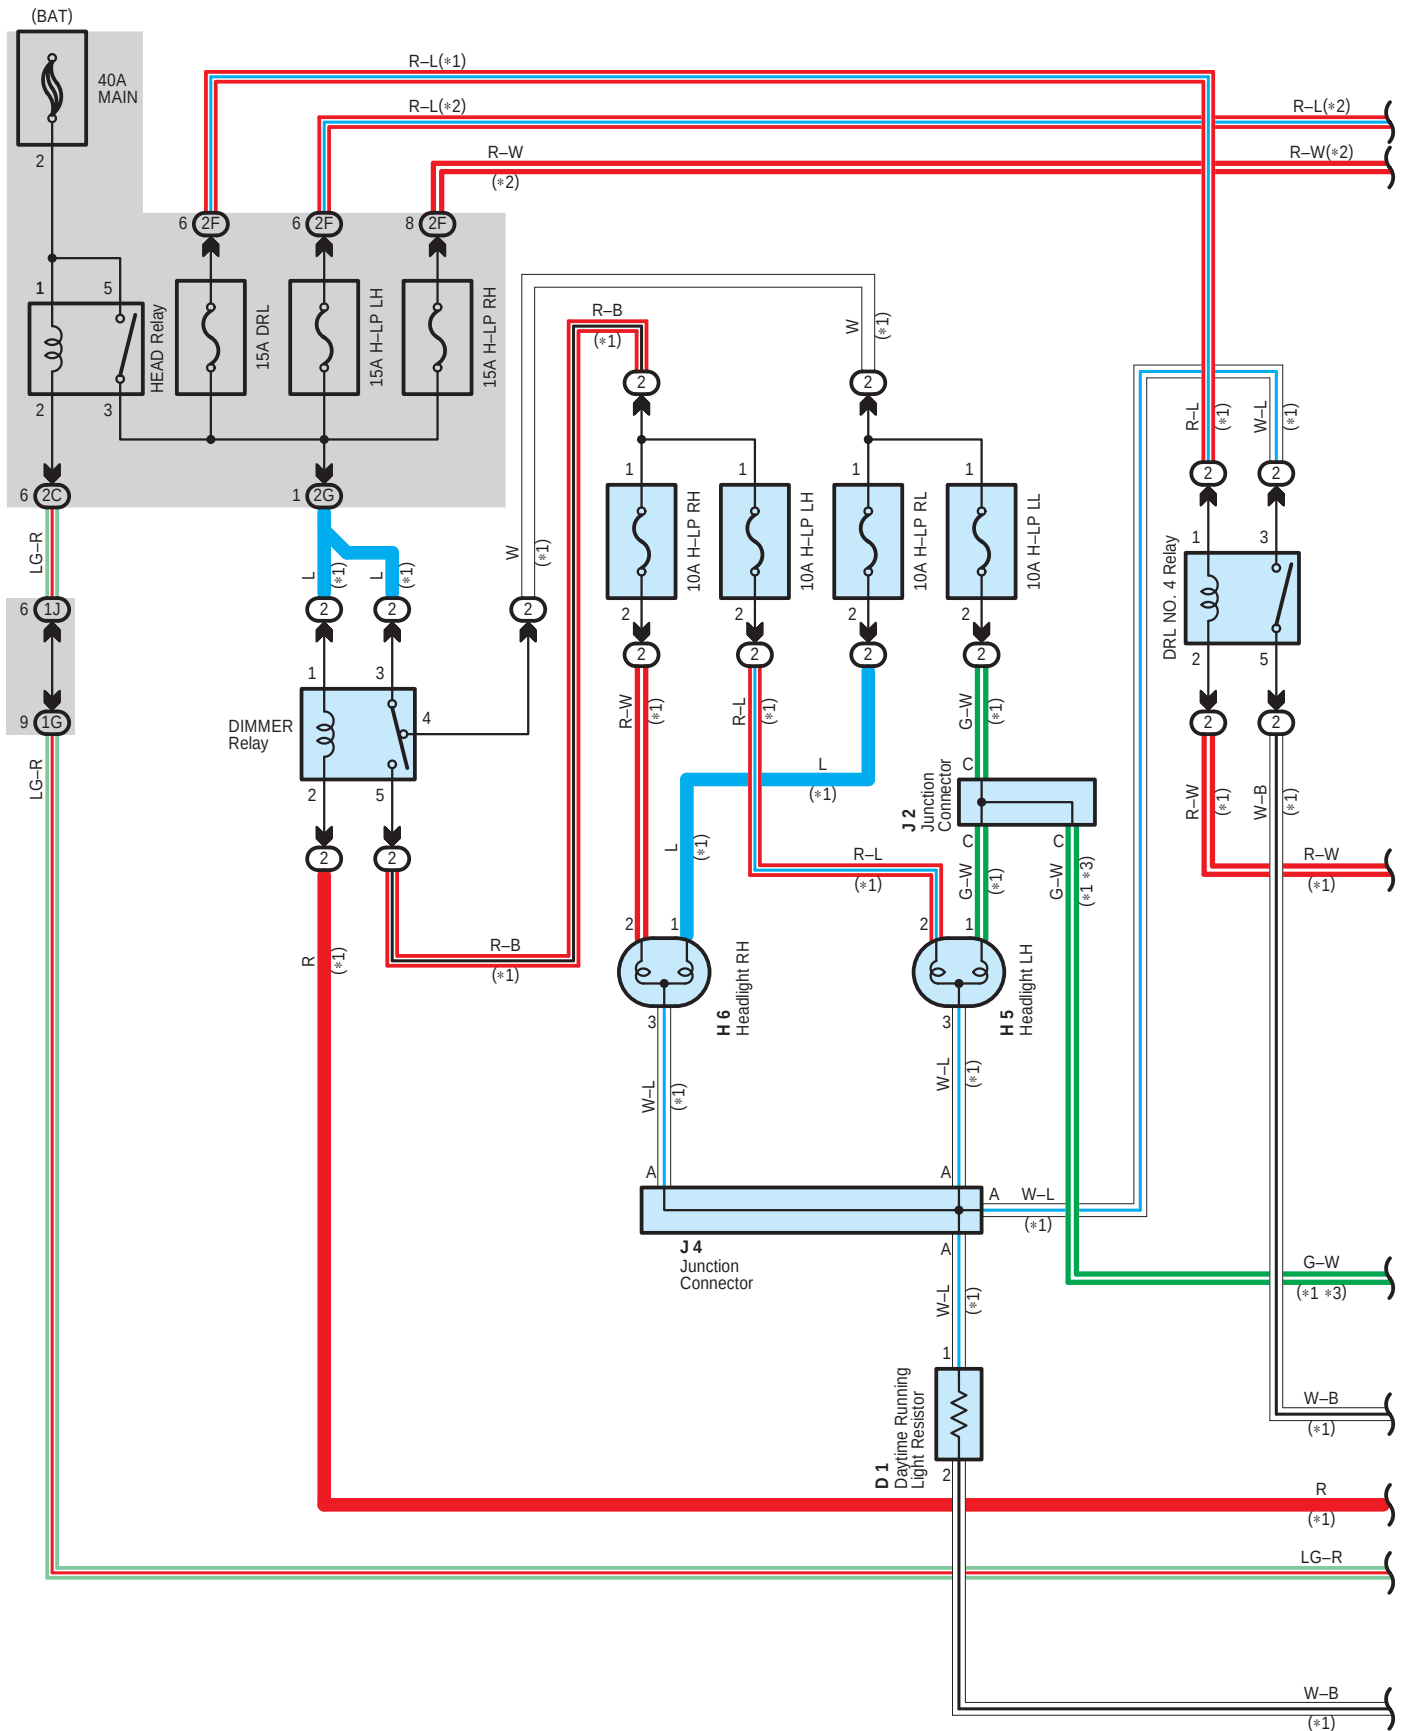


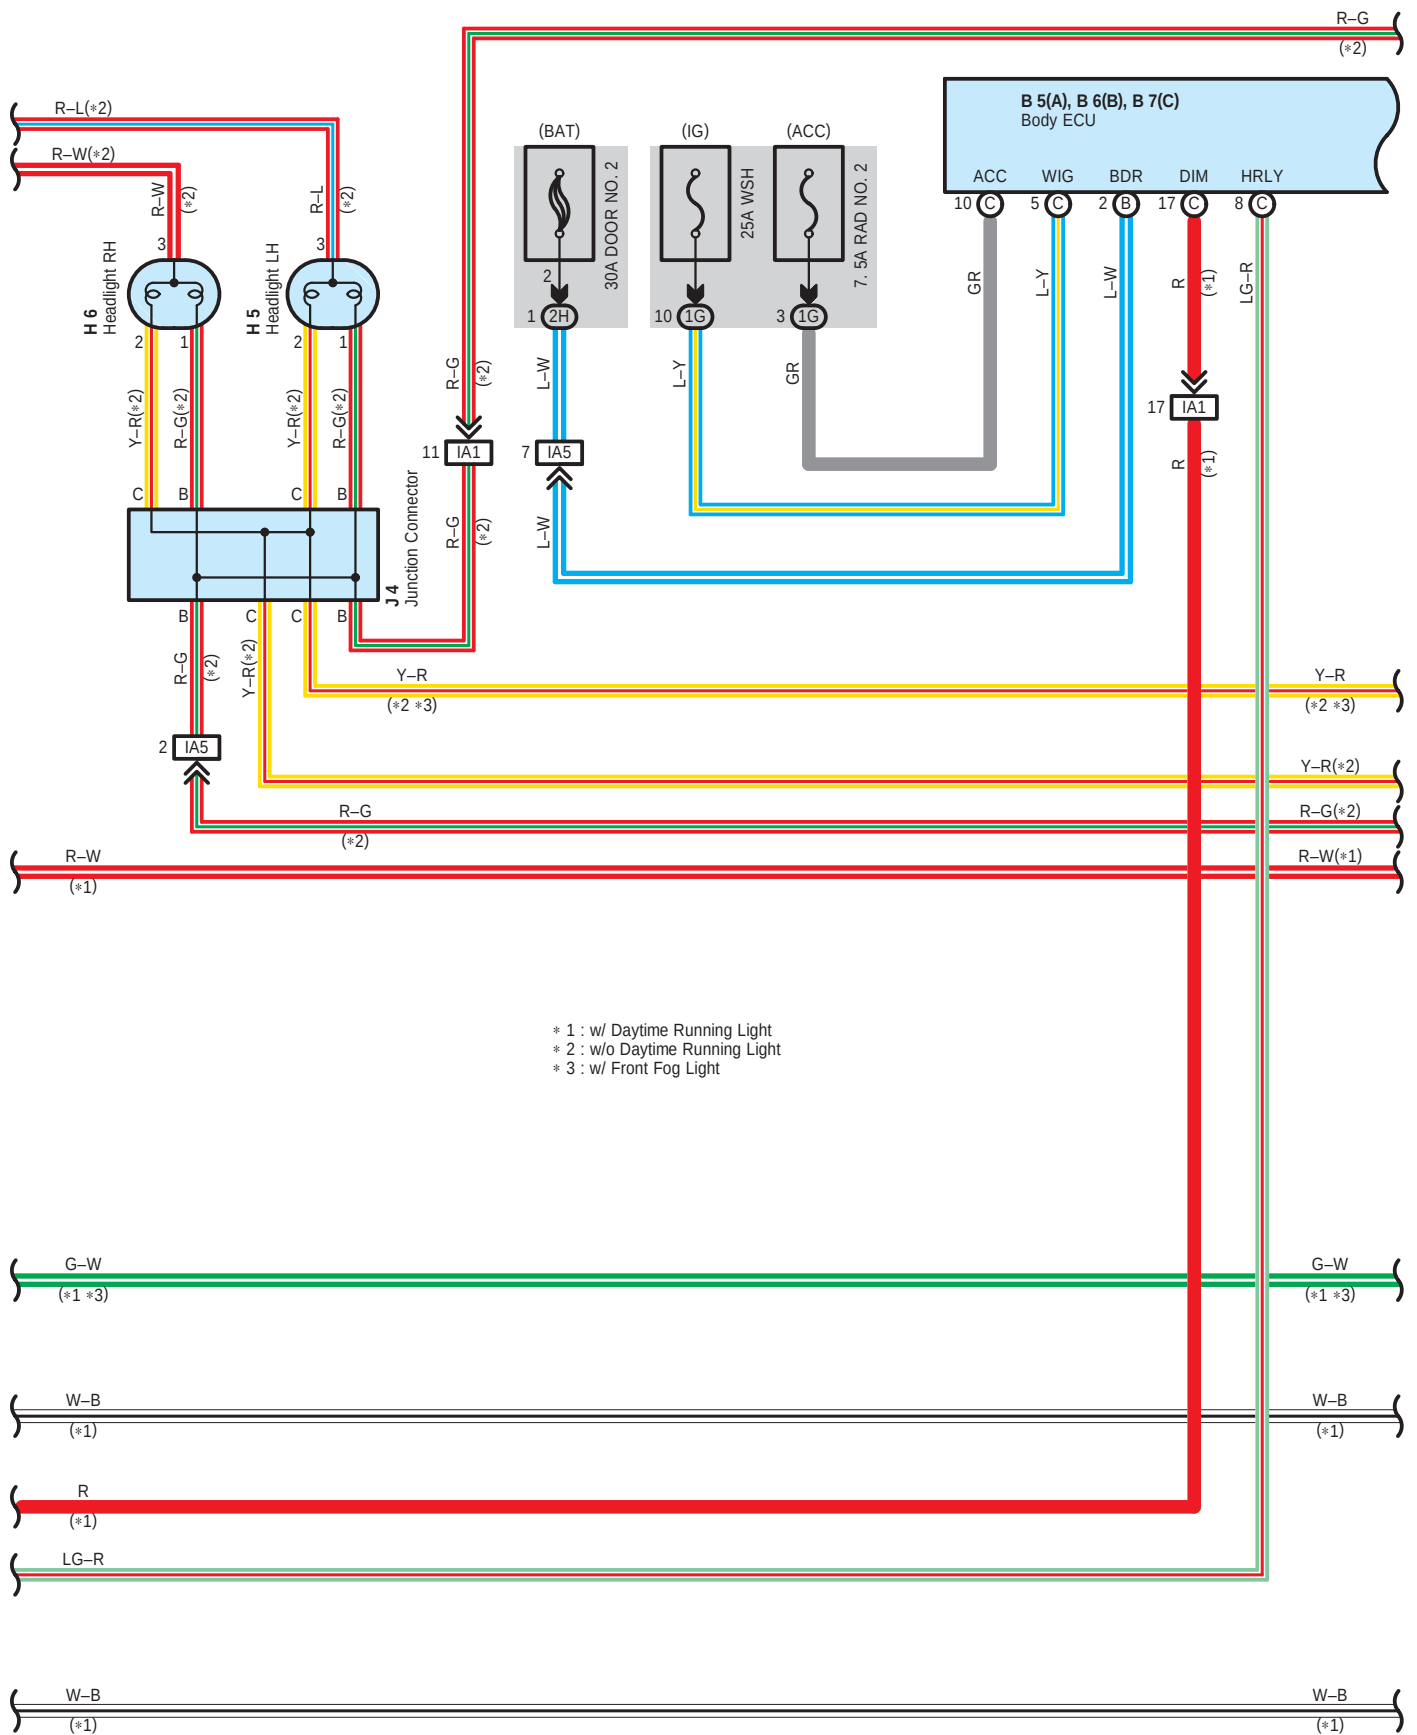


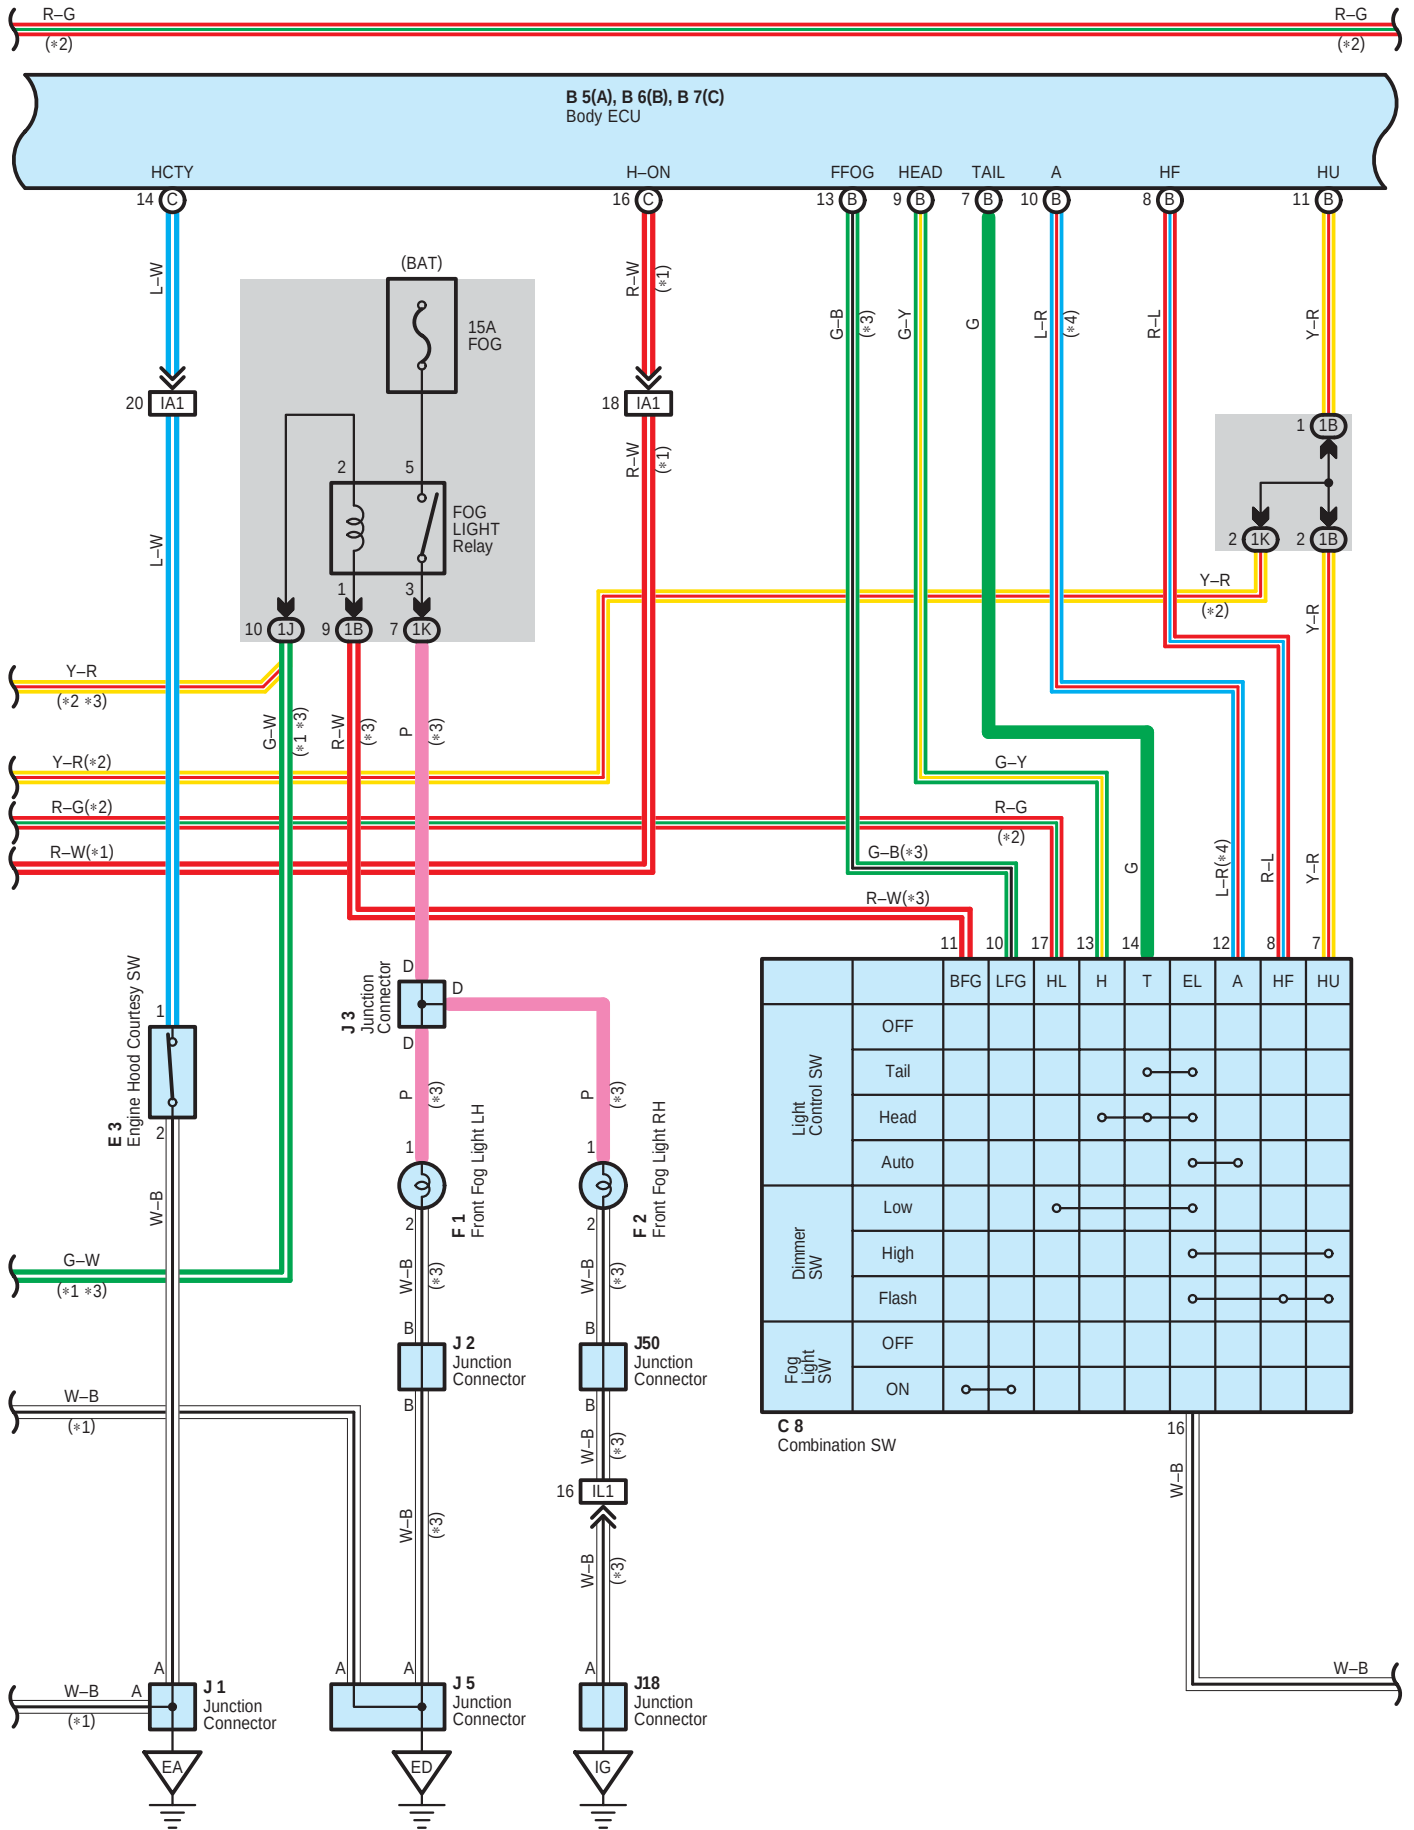

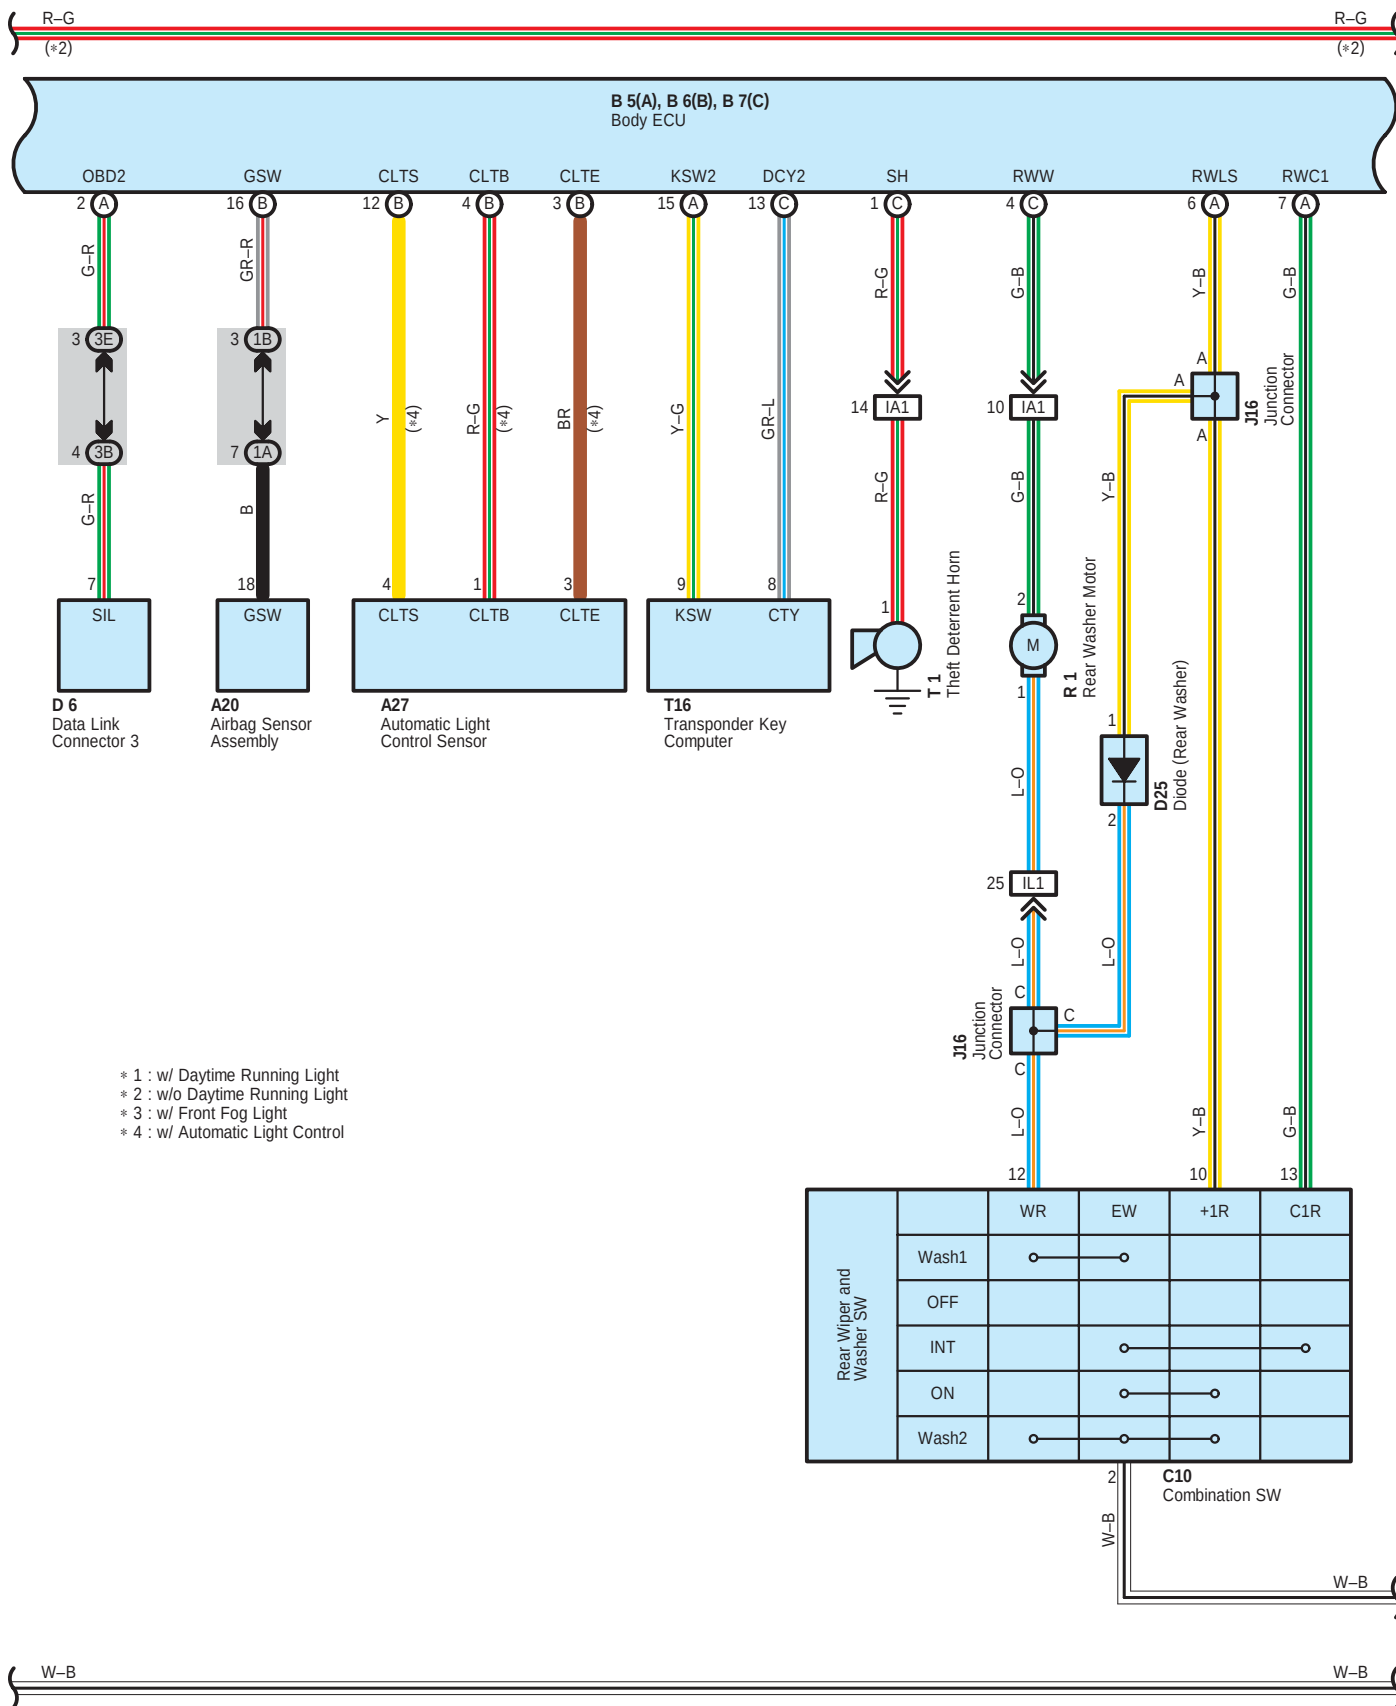



Multiplex Communication System – BEAN

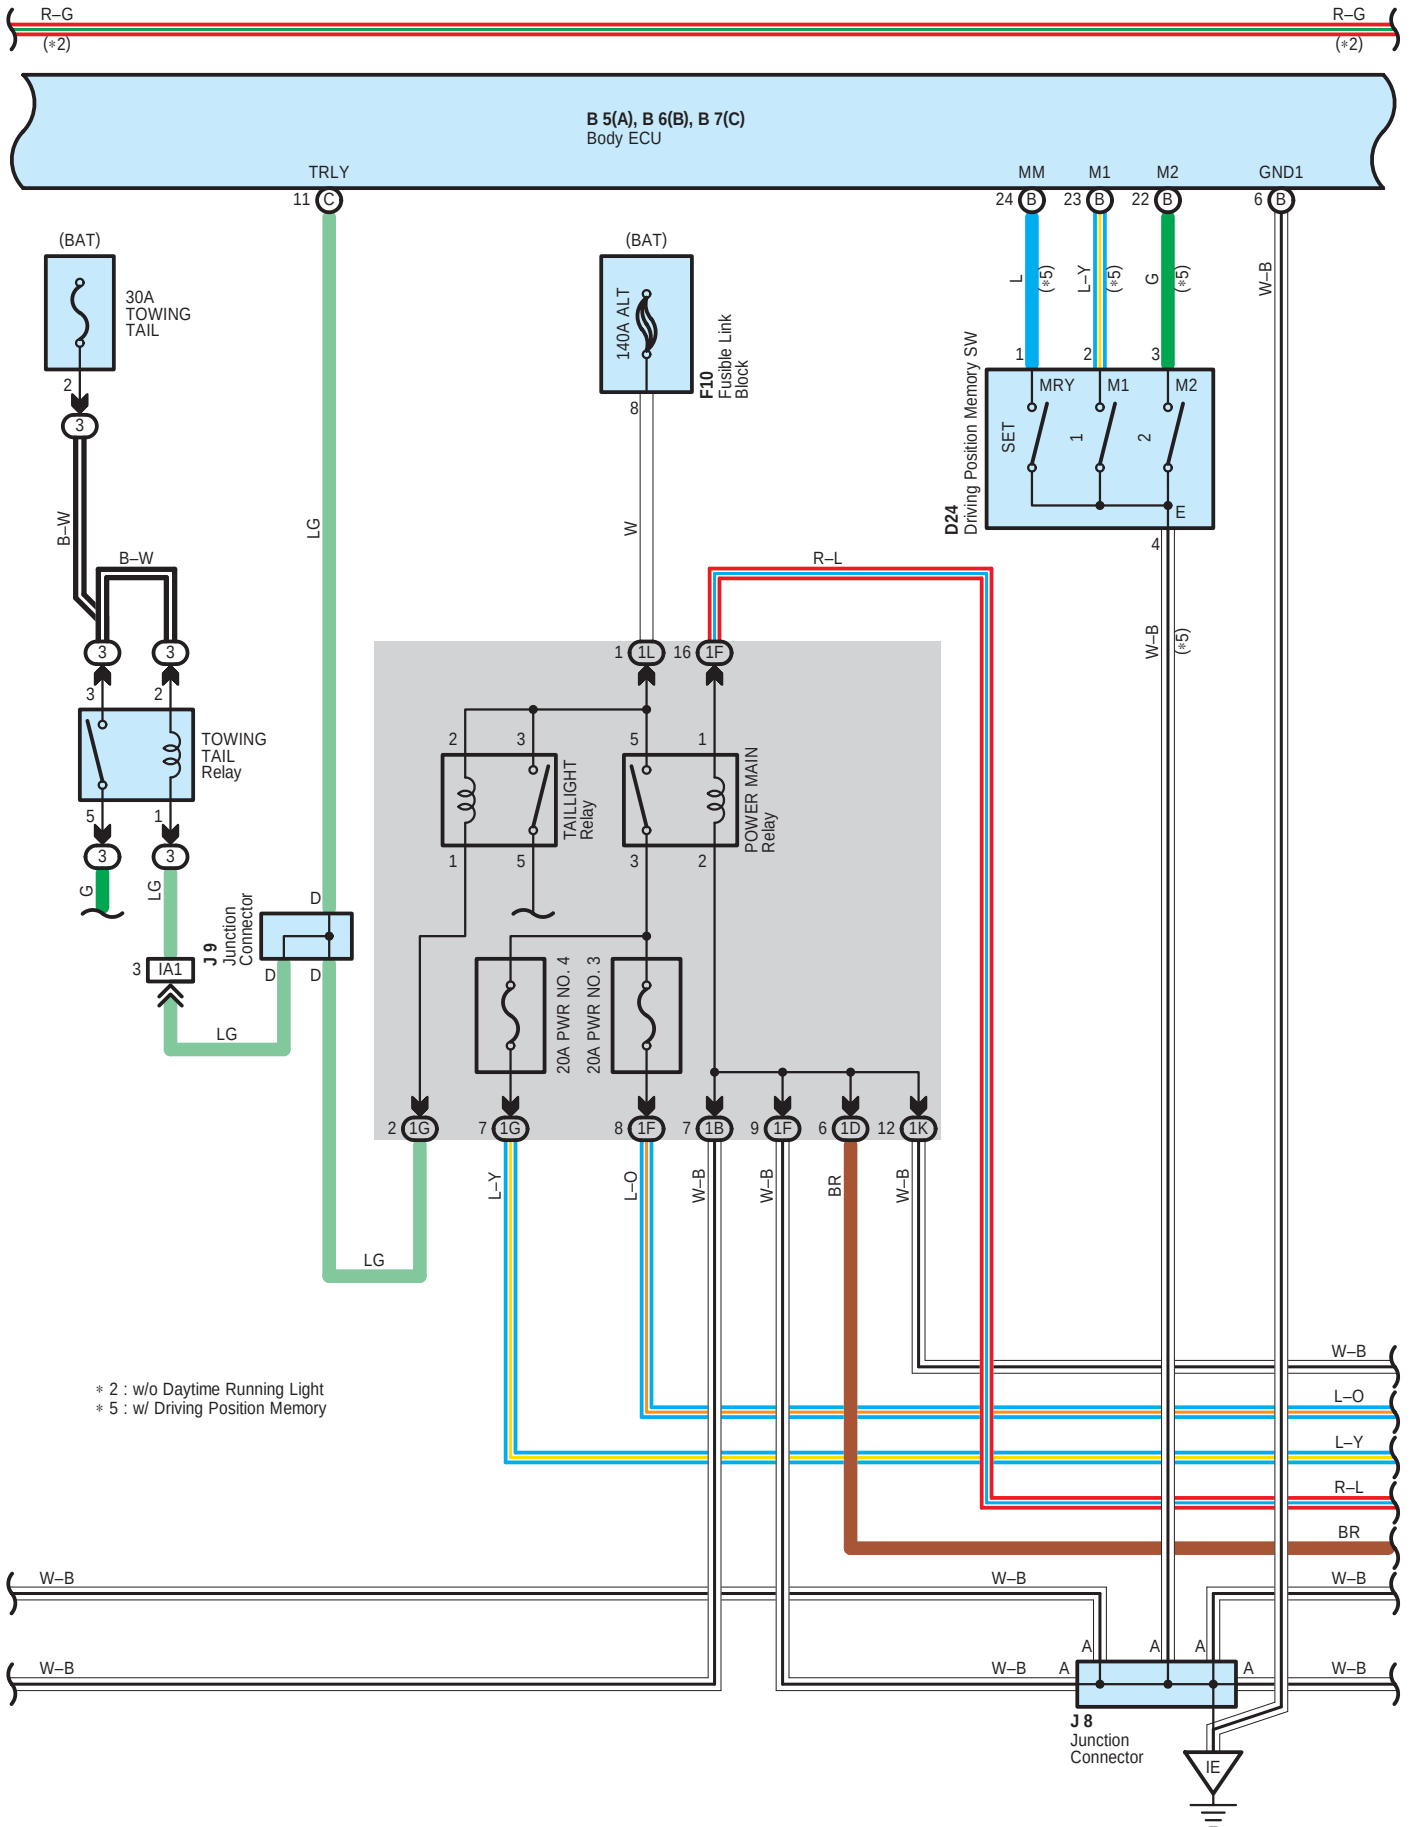

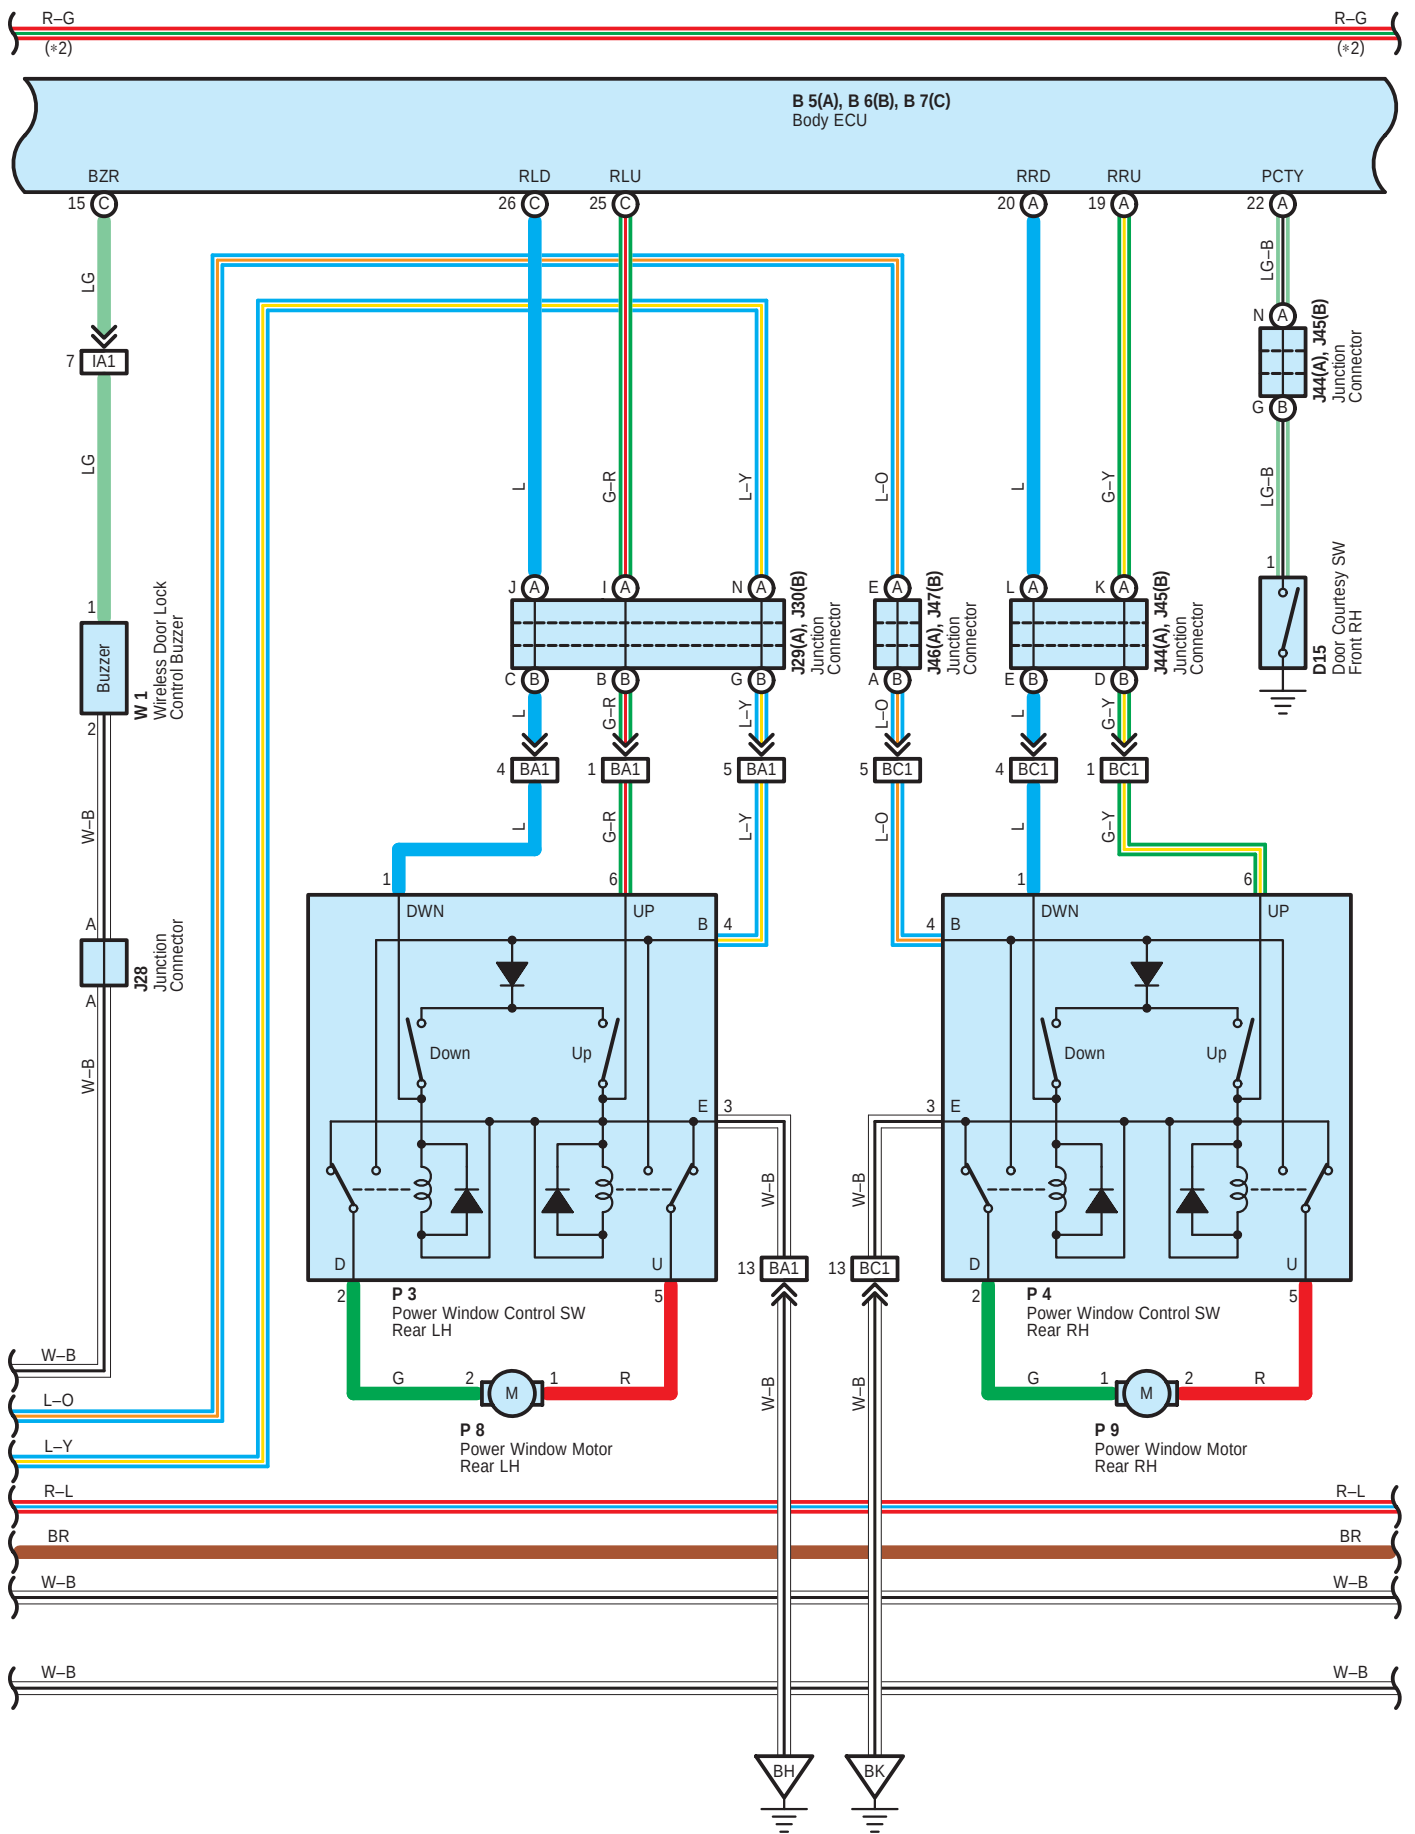



Multiplex Communication System – BEAN

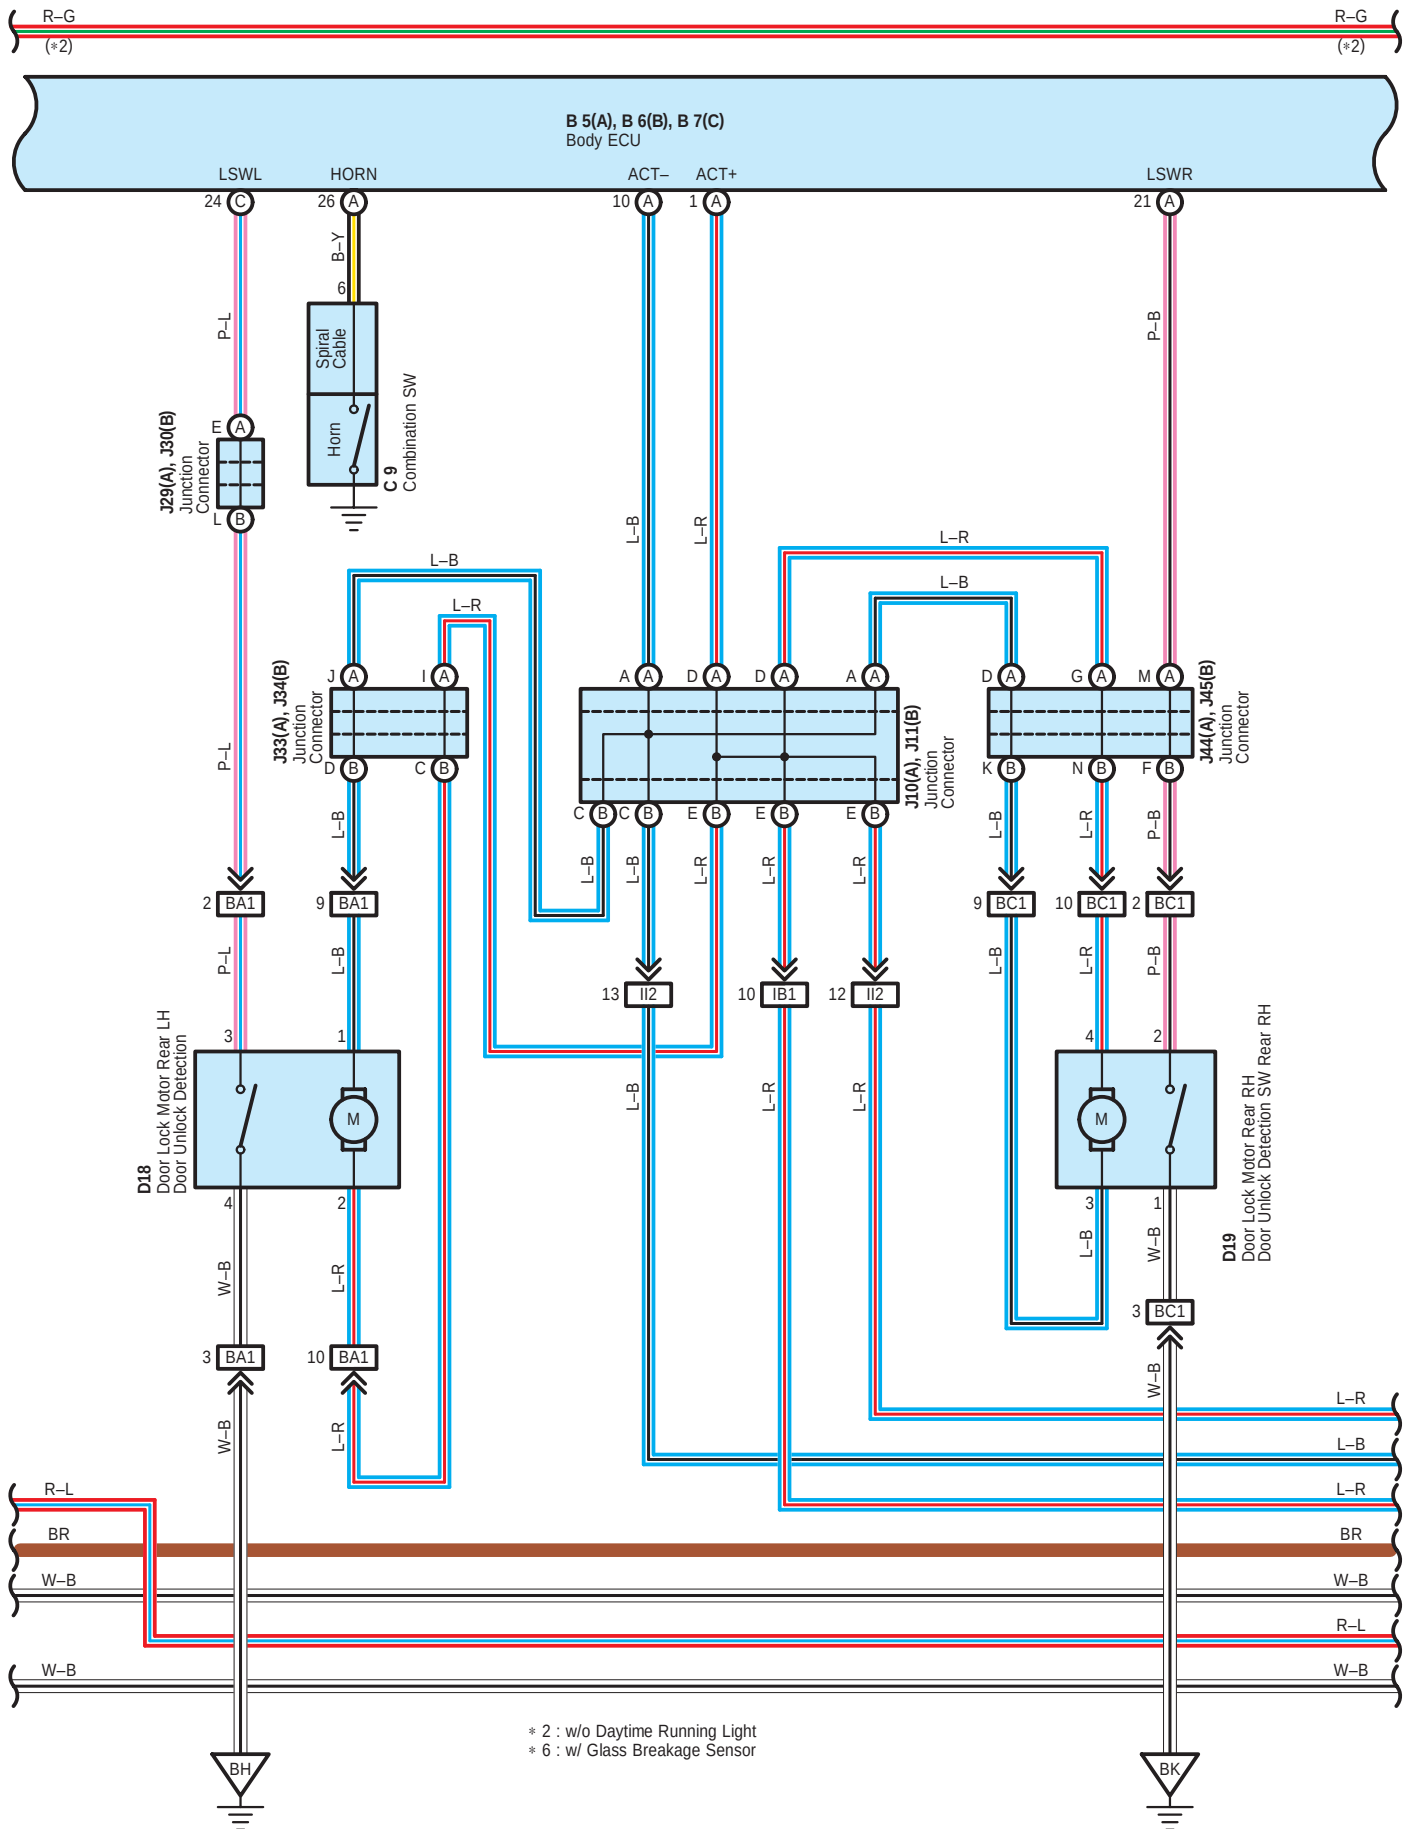

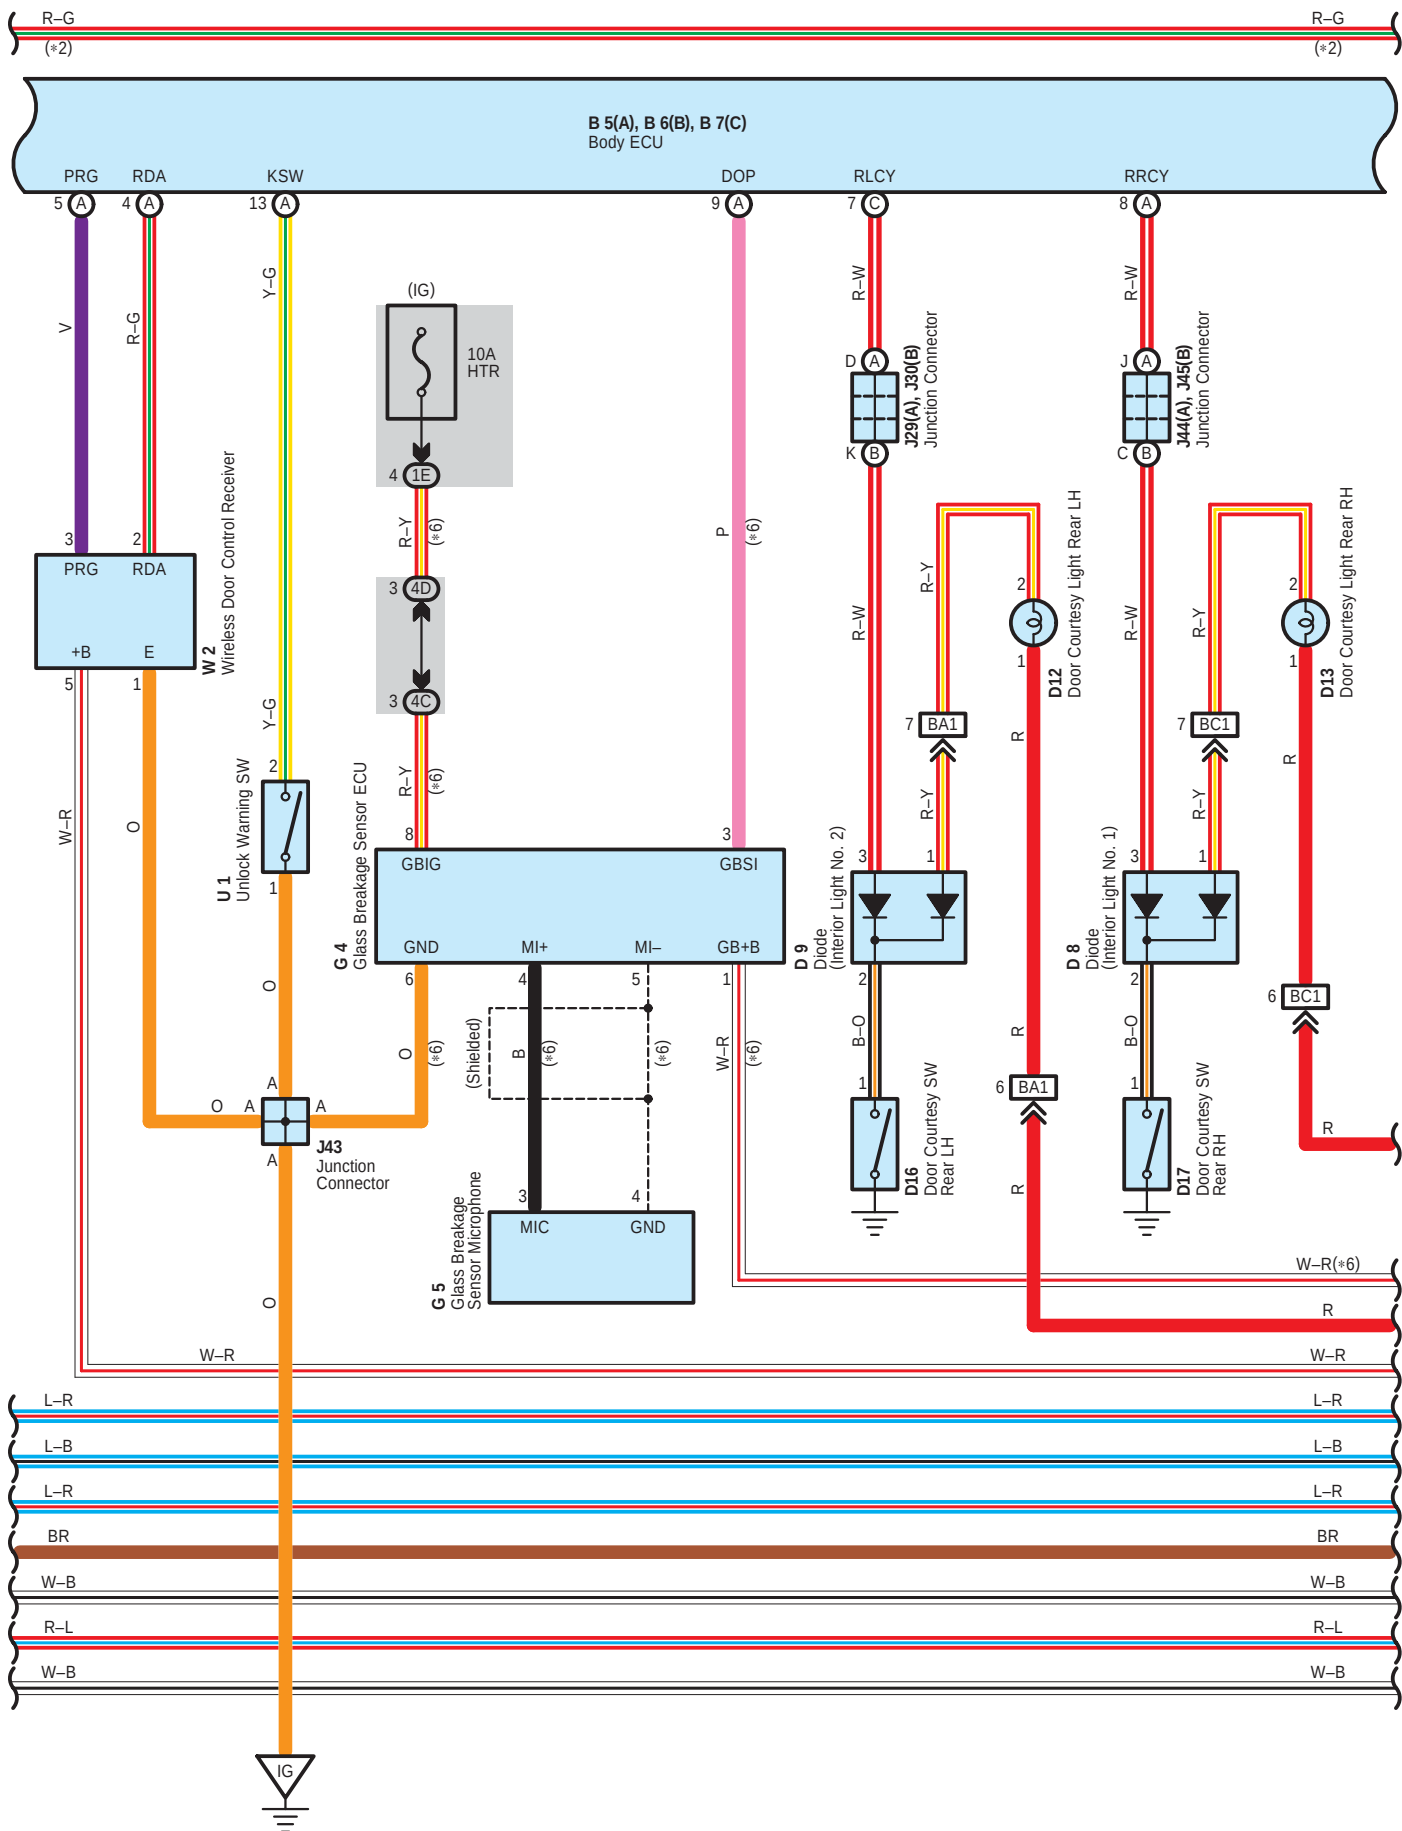

Multiplex Communication System – BEAN

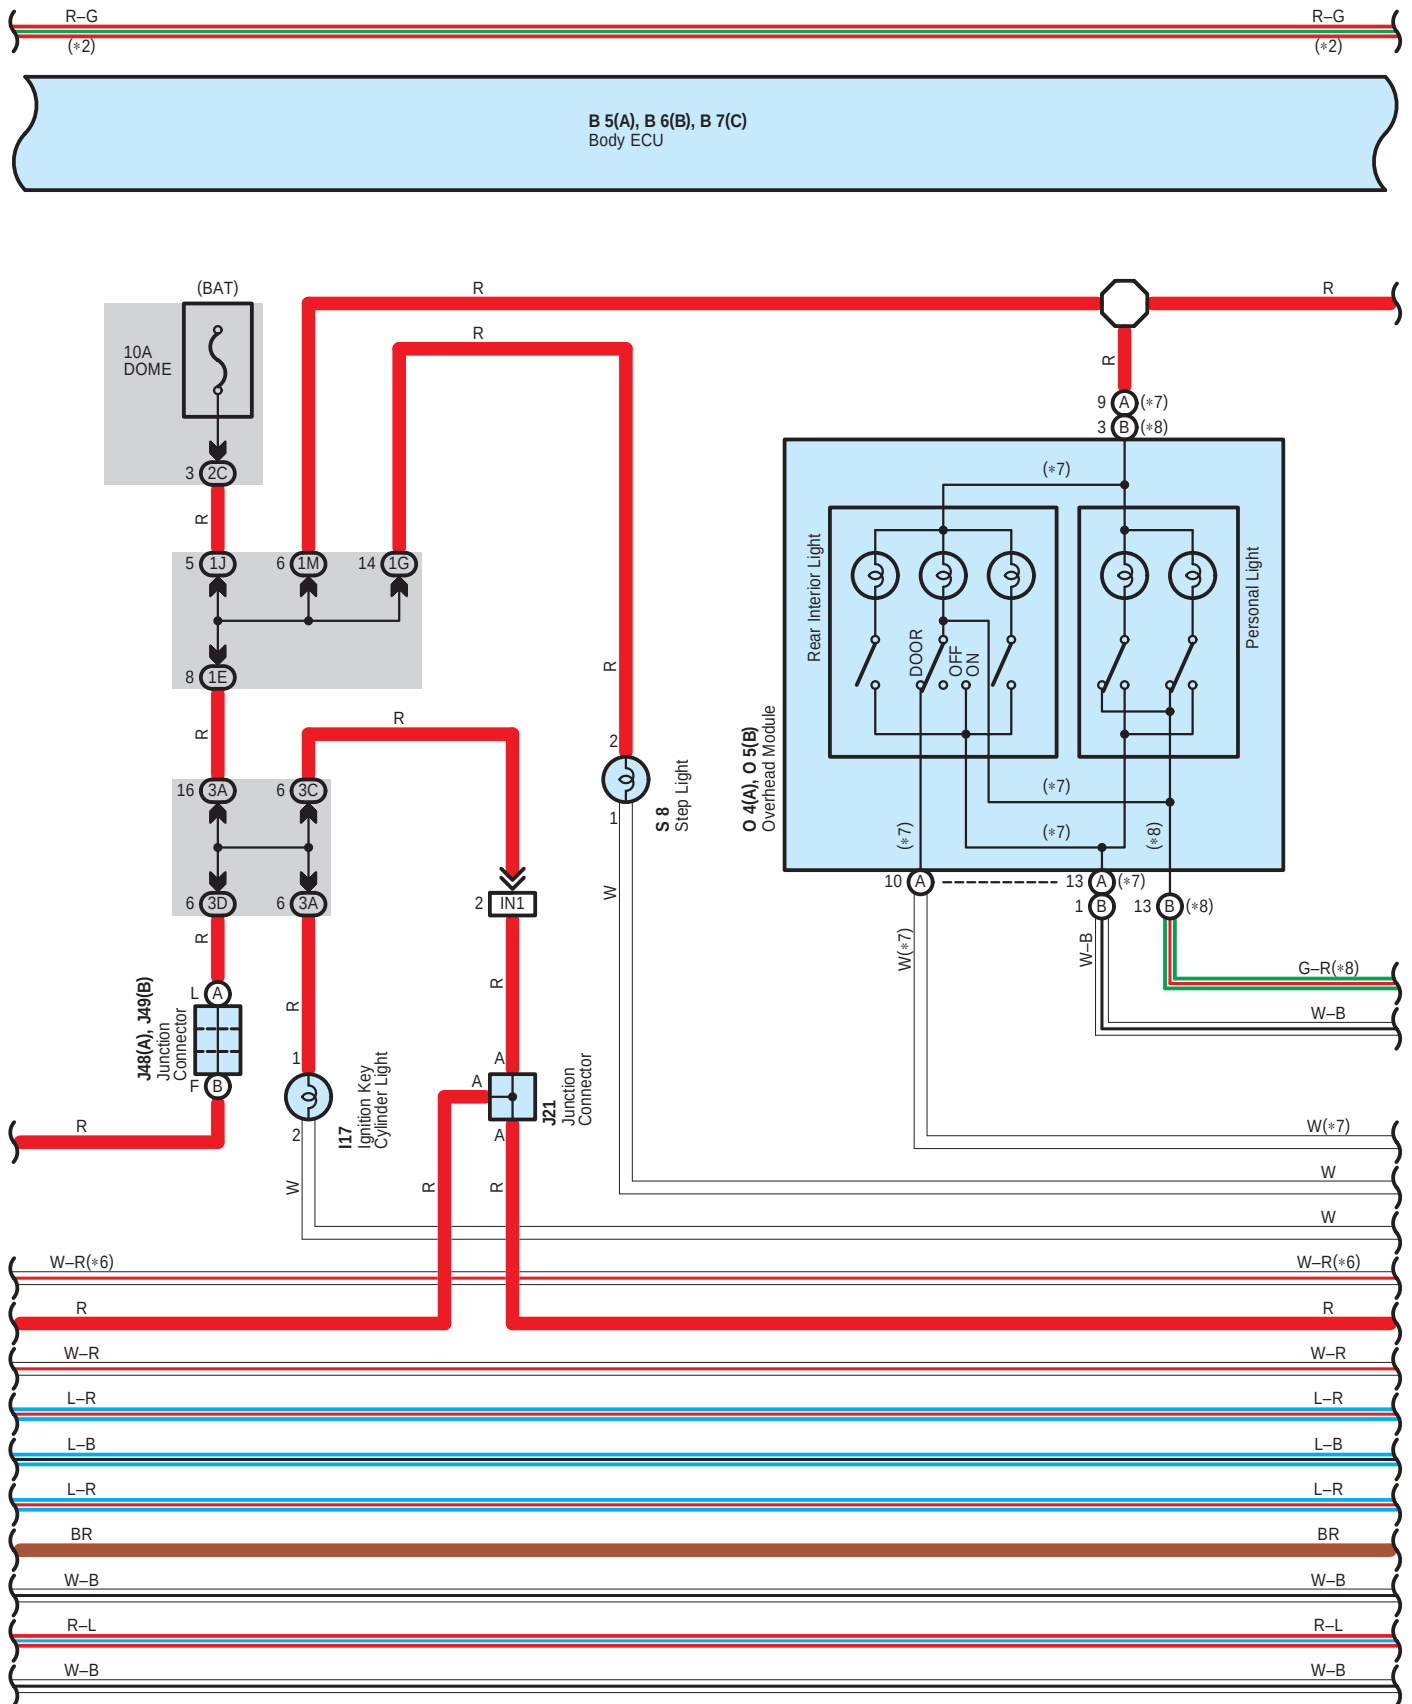


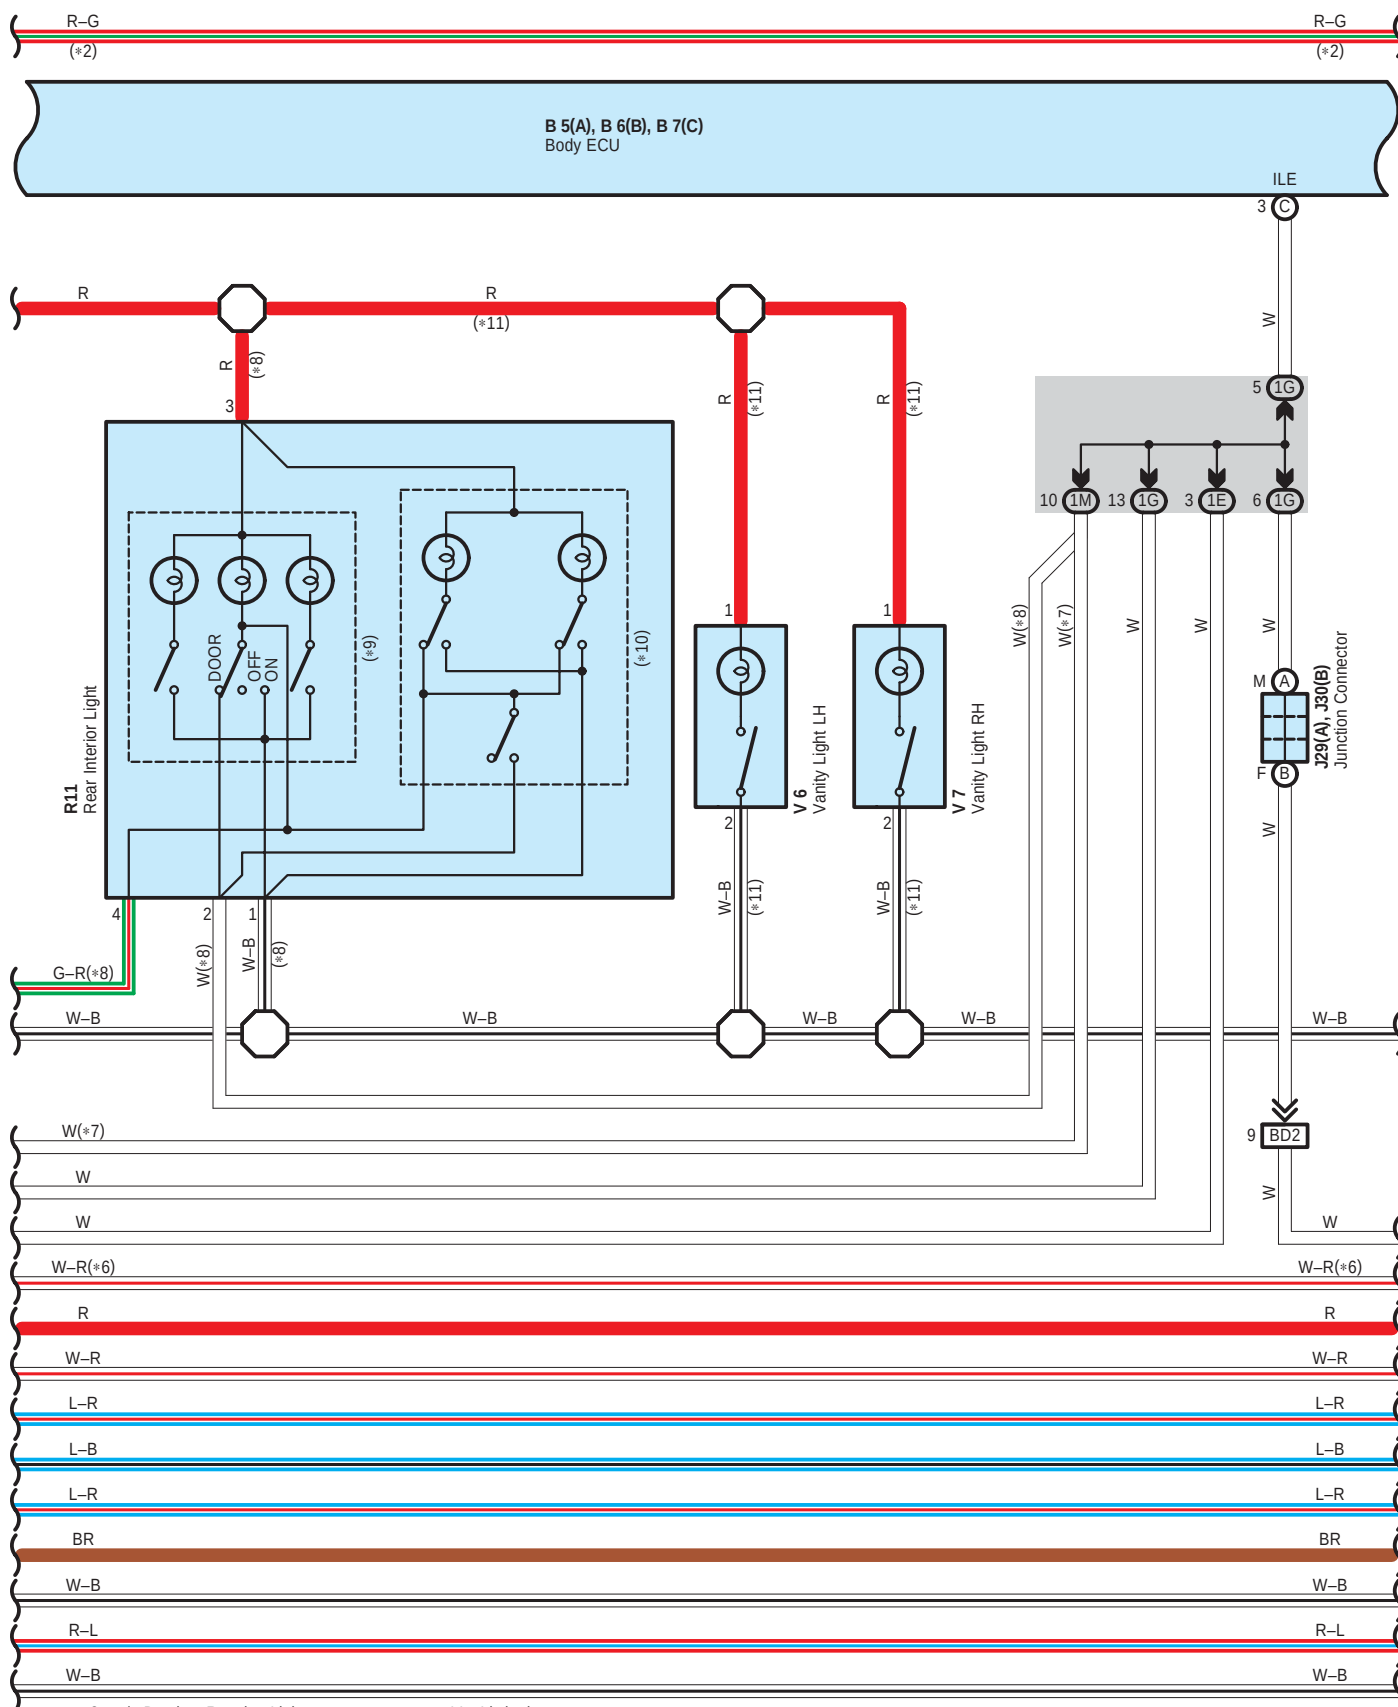


- * 2 : w/o Daytime Running Light
- * 6 : w/ Glass Breakage Sensor
- * 7 : w/o Sliding Roof, Rear Seat Entertainment System and Rear Seat Audio System
- * 8 : w/ Sliding Roof, Rear Seat Entertainment System or Rear Seat Audio System
- * 9 : w/ Sliding Roof w/o Rear Seat Entertainment System and Rear Seat Audio System
- * 10 : w/ Sliding Roof w/ Rear Seat Entertainment System or Rear Seat Audio System


*11 : Limited


Multiplex Communication System – BEAN

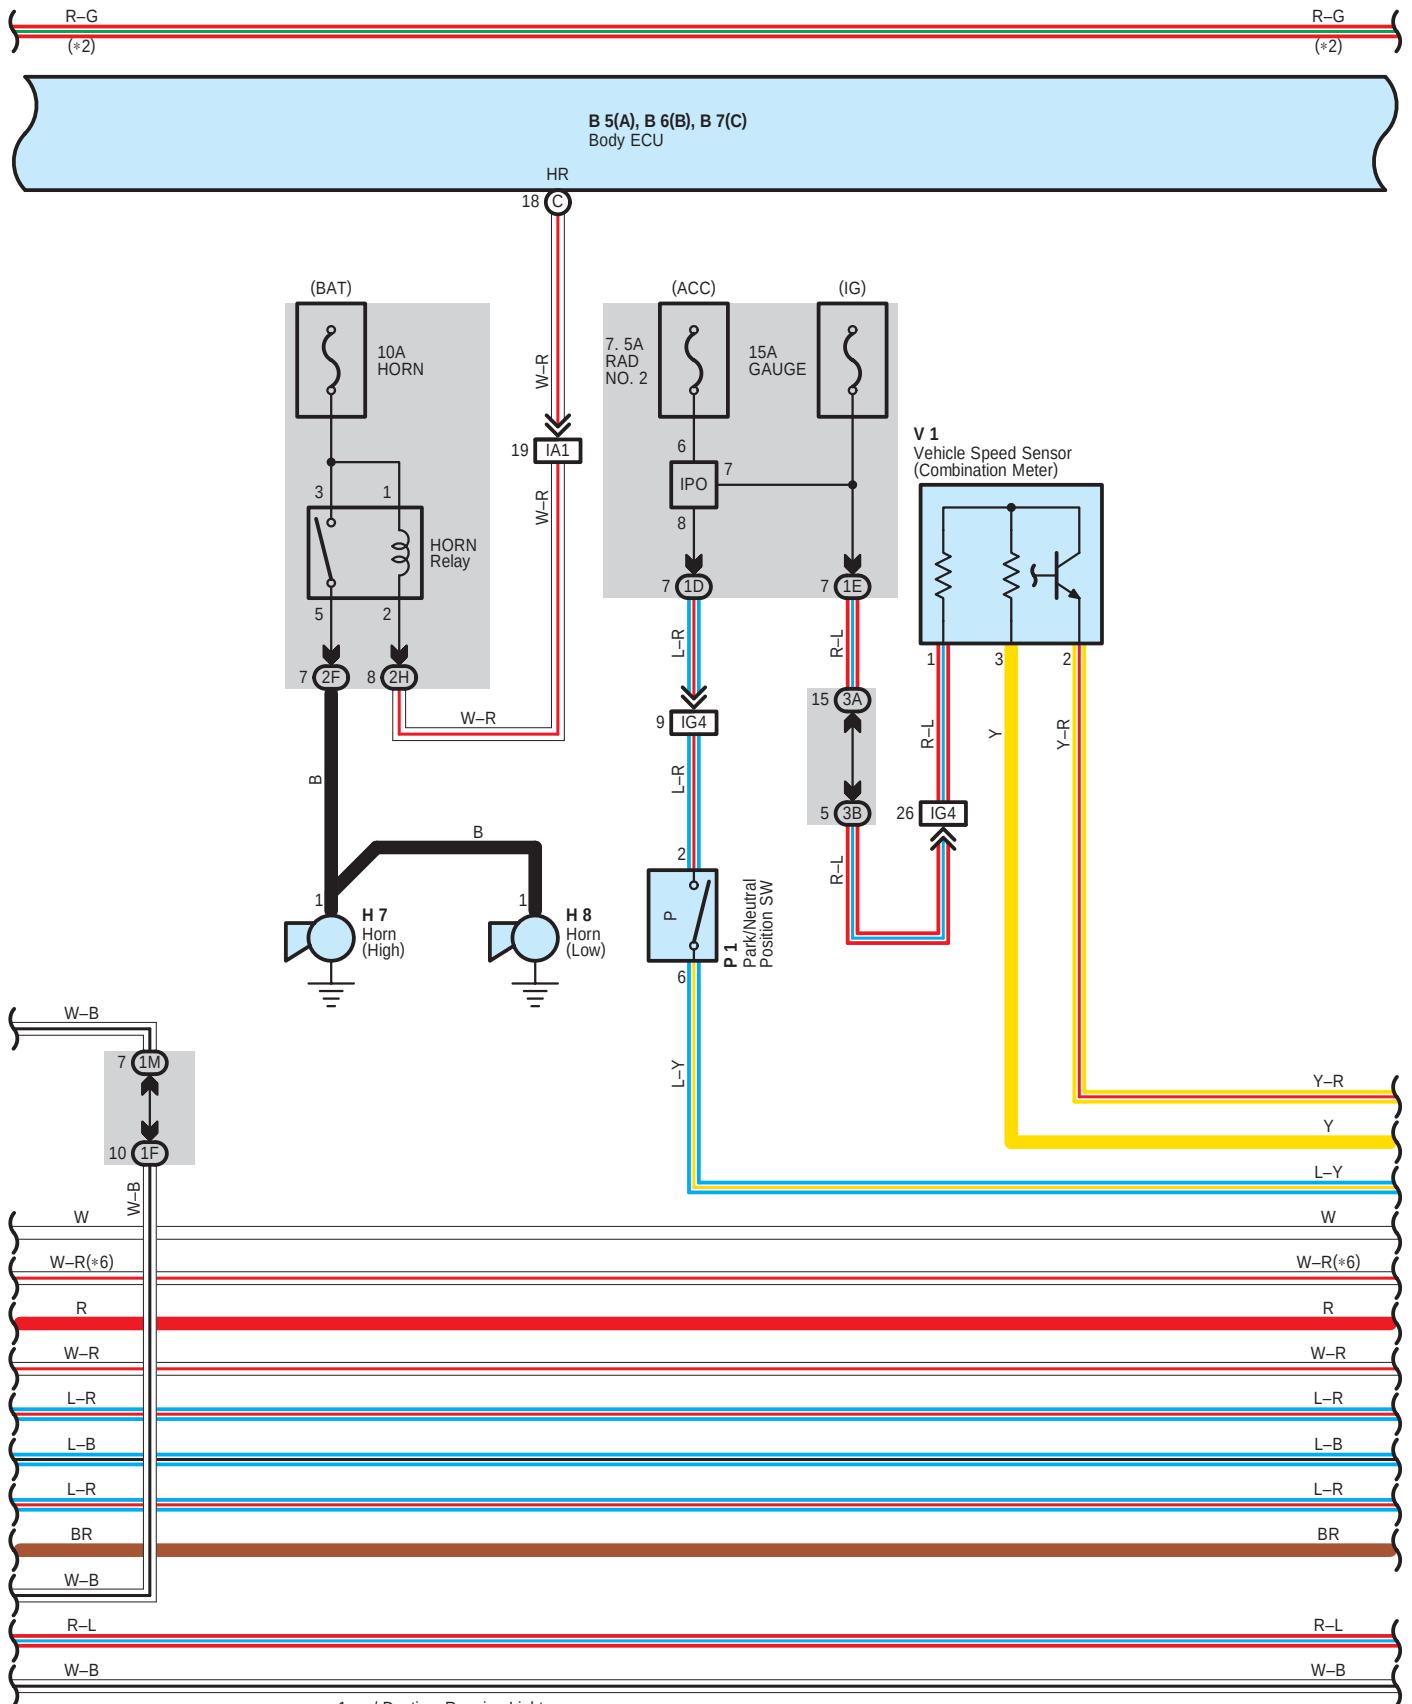

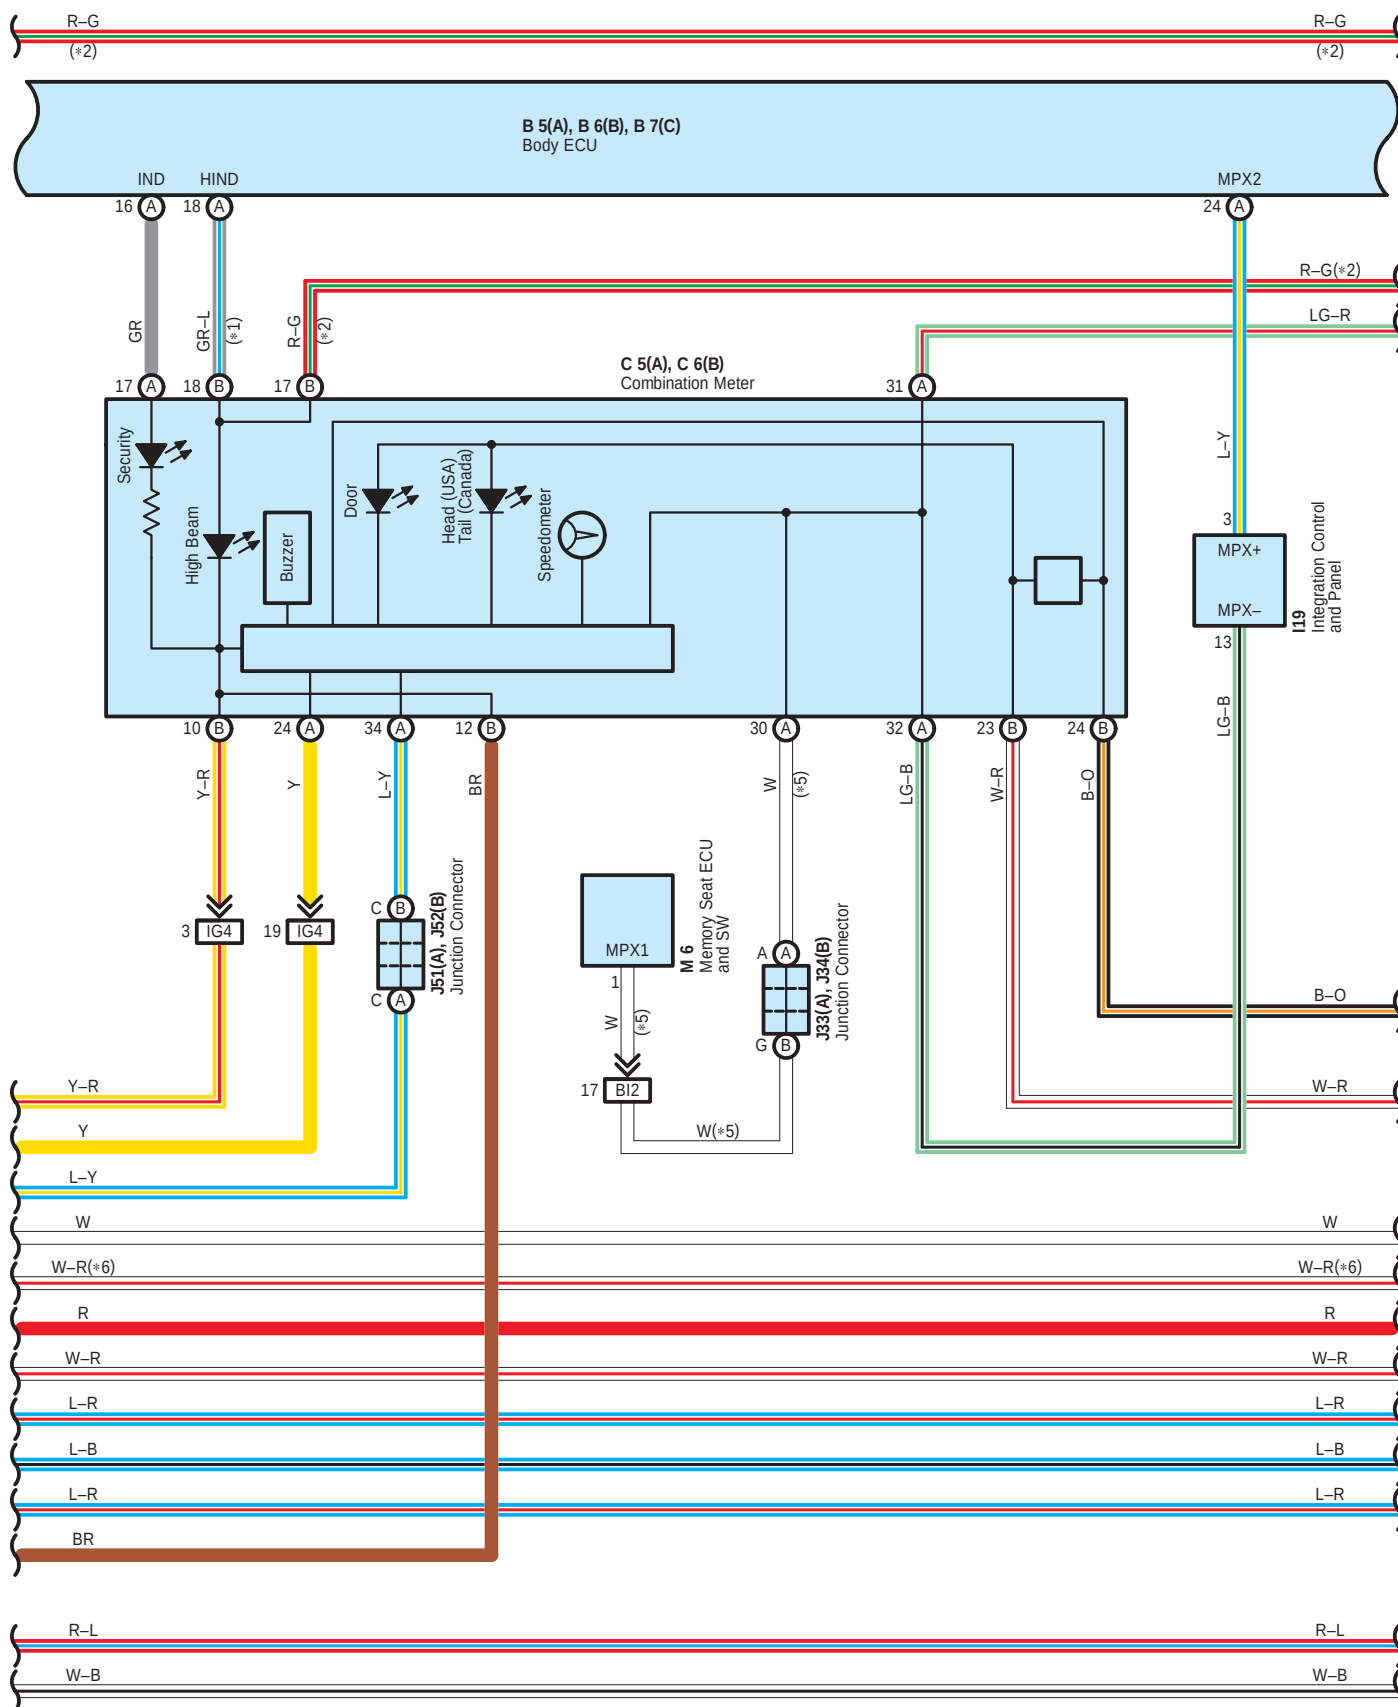



Multiplex Communication System – BEAN

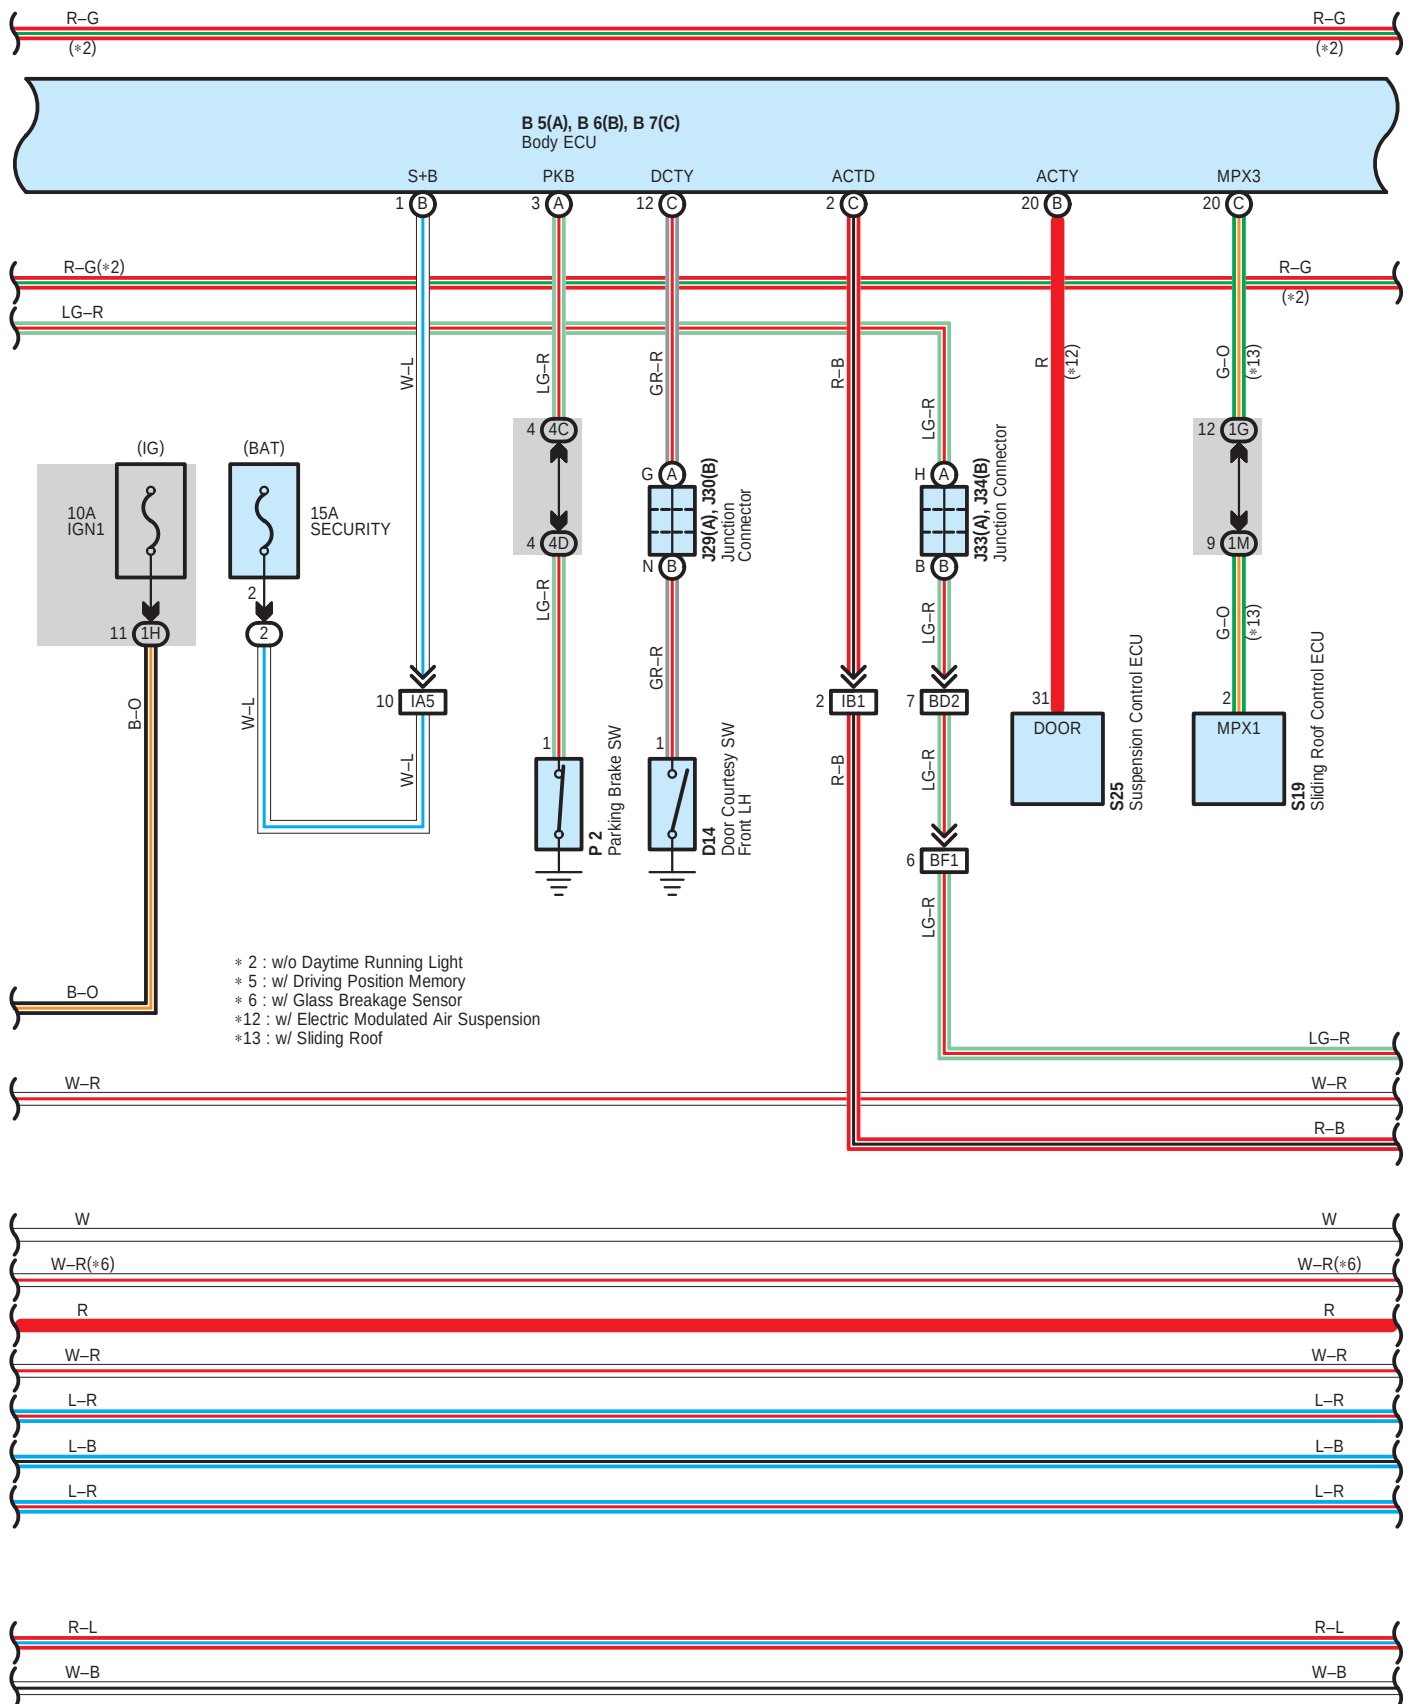

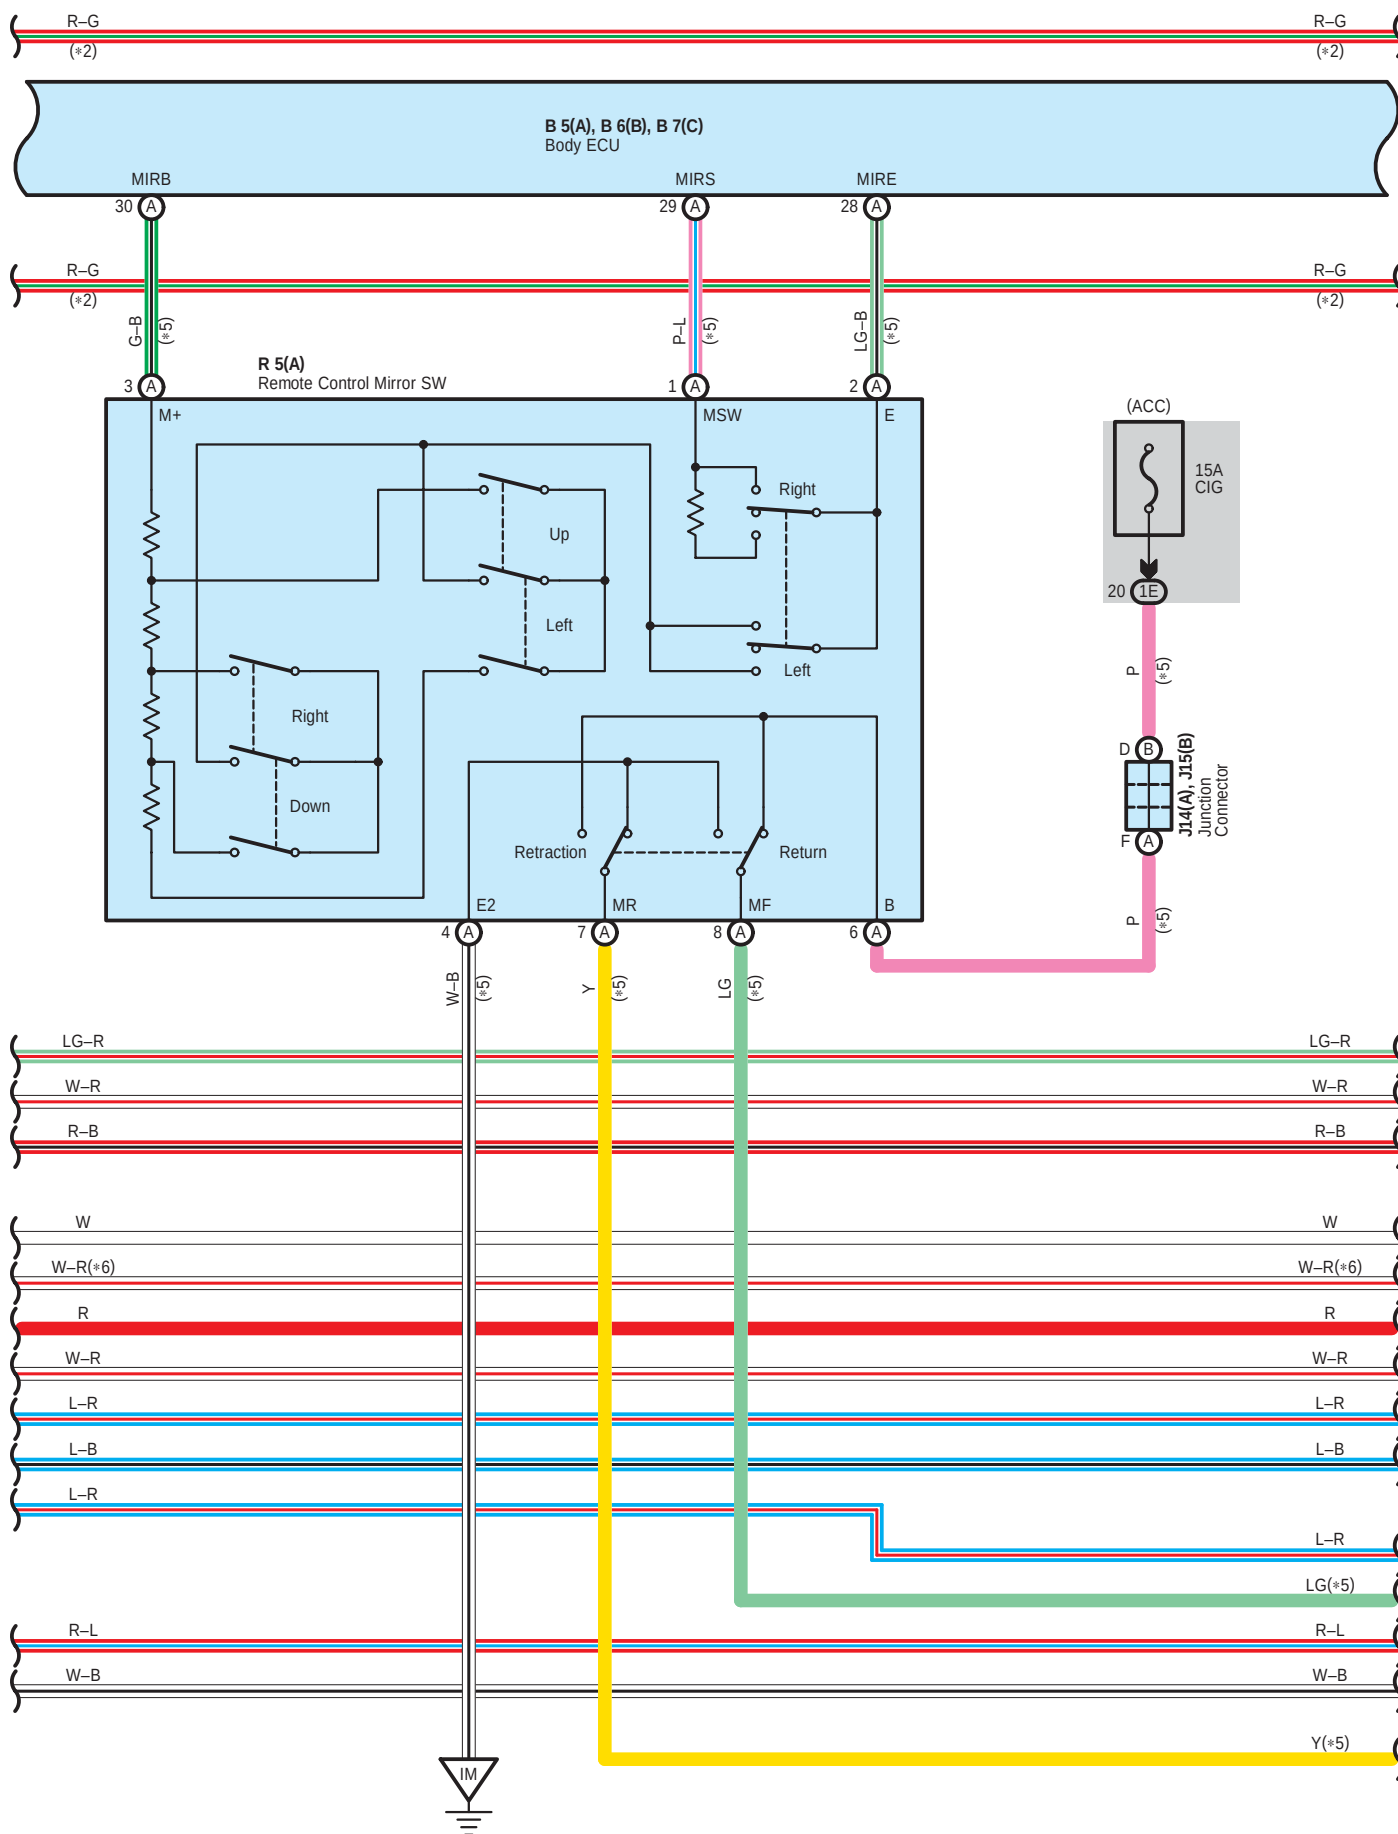


Multiplex Communication System – BEAN

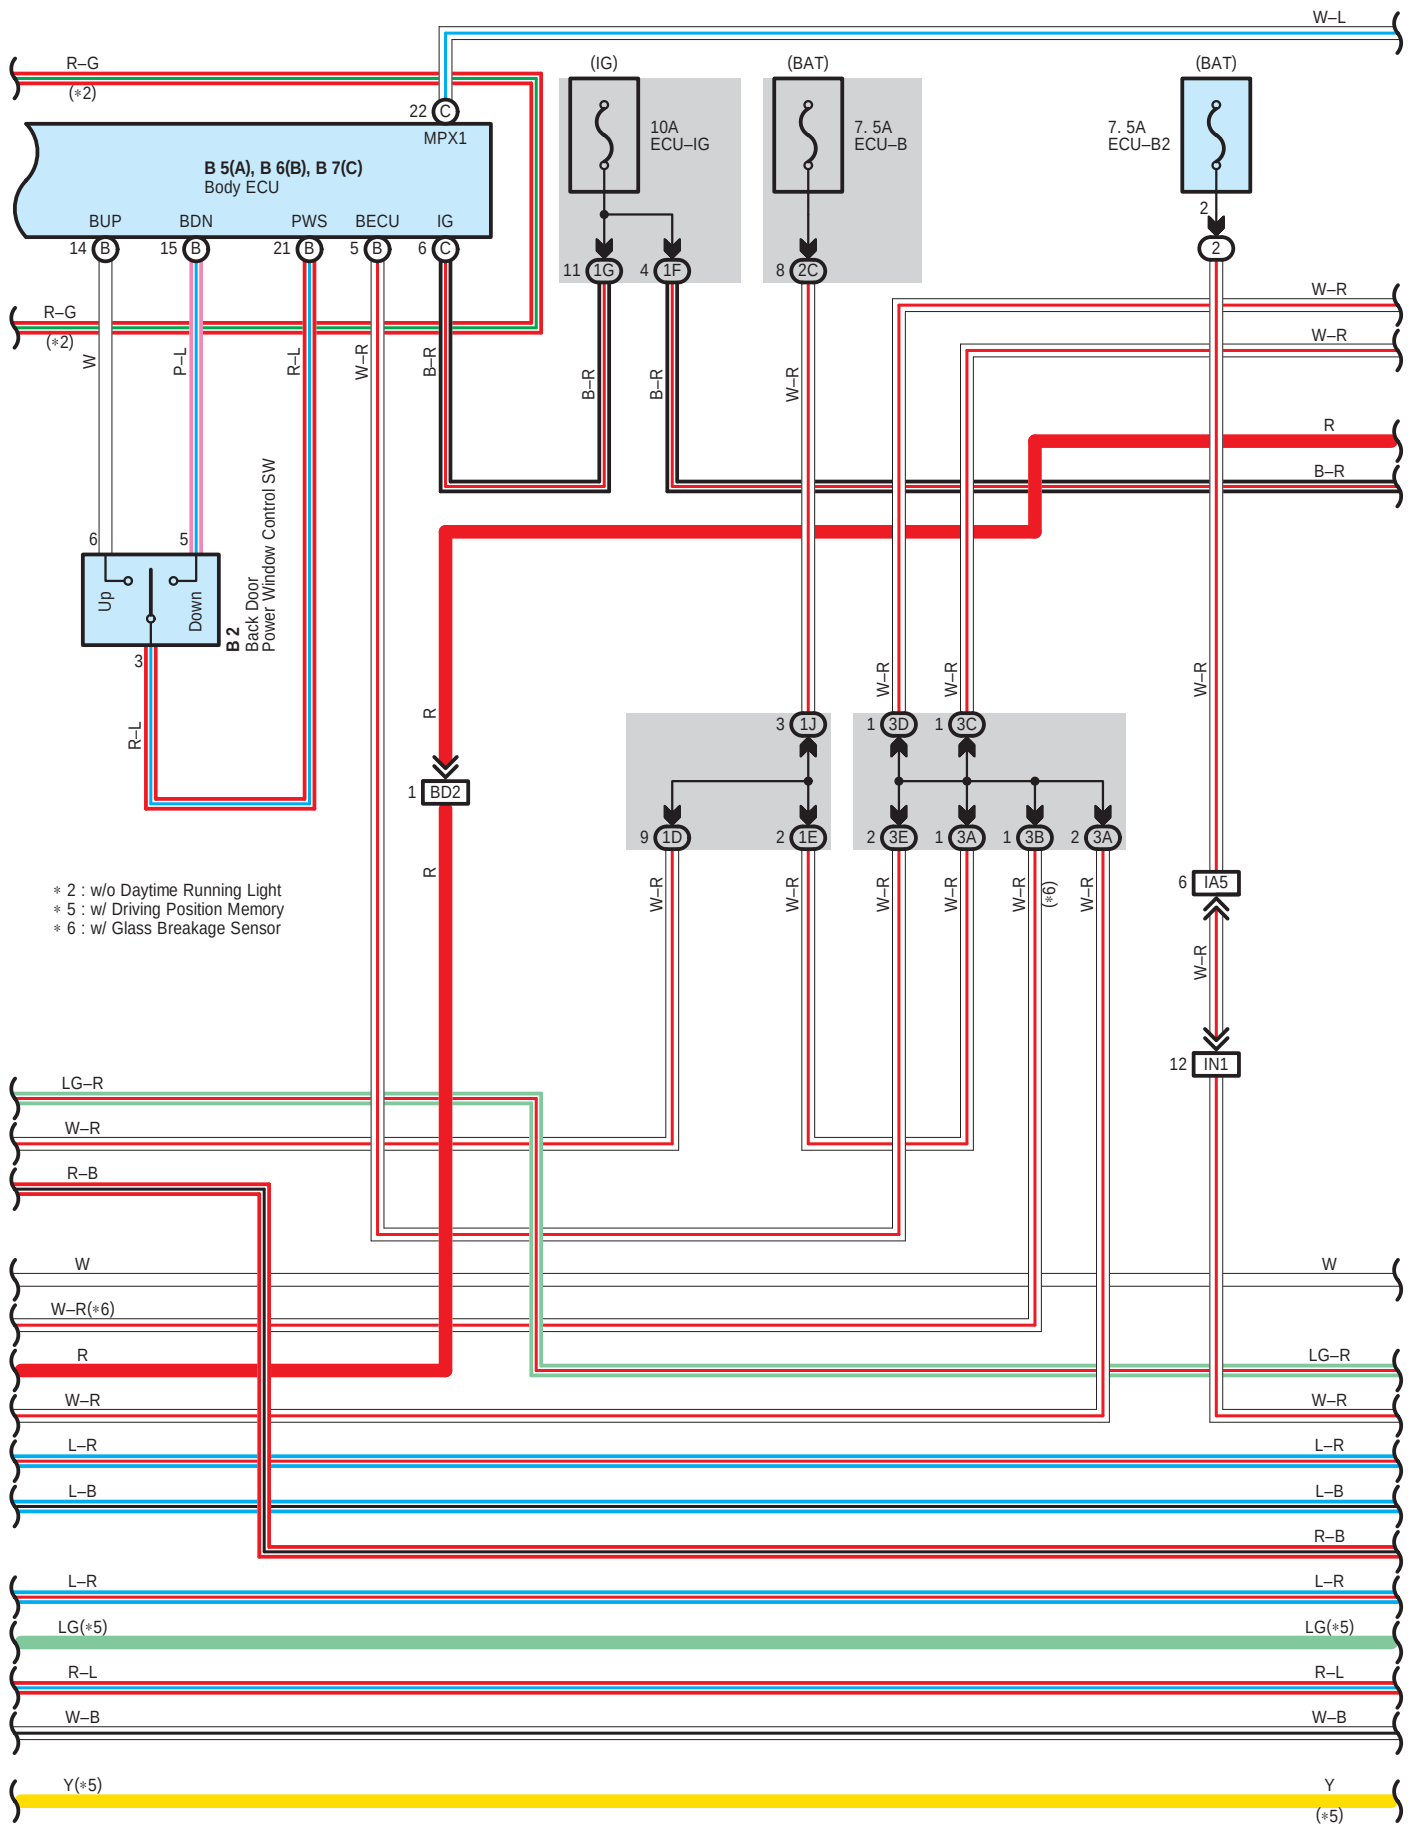


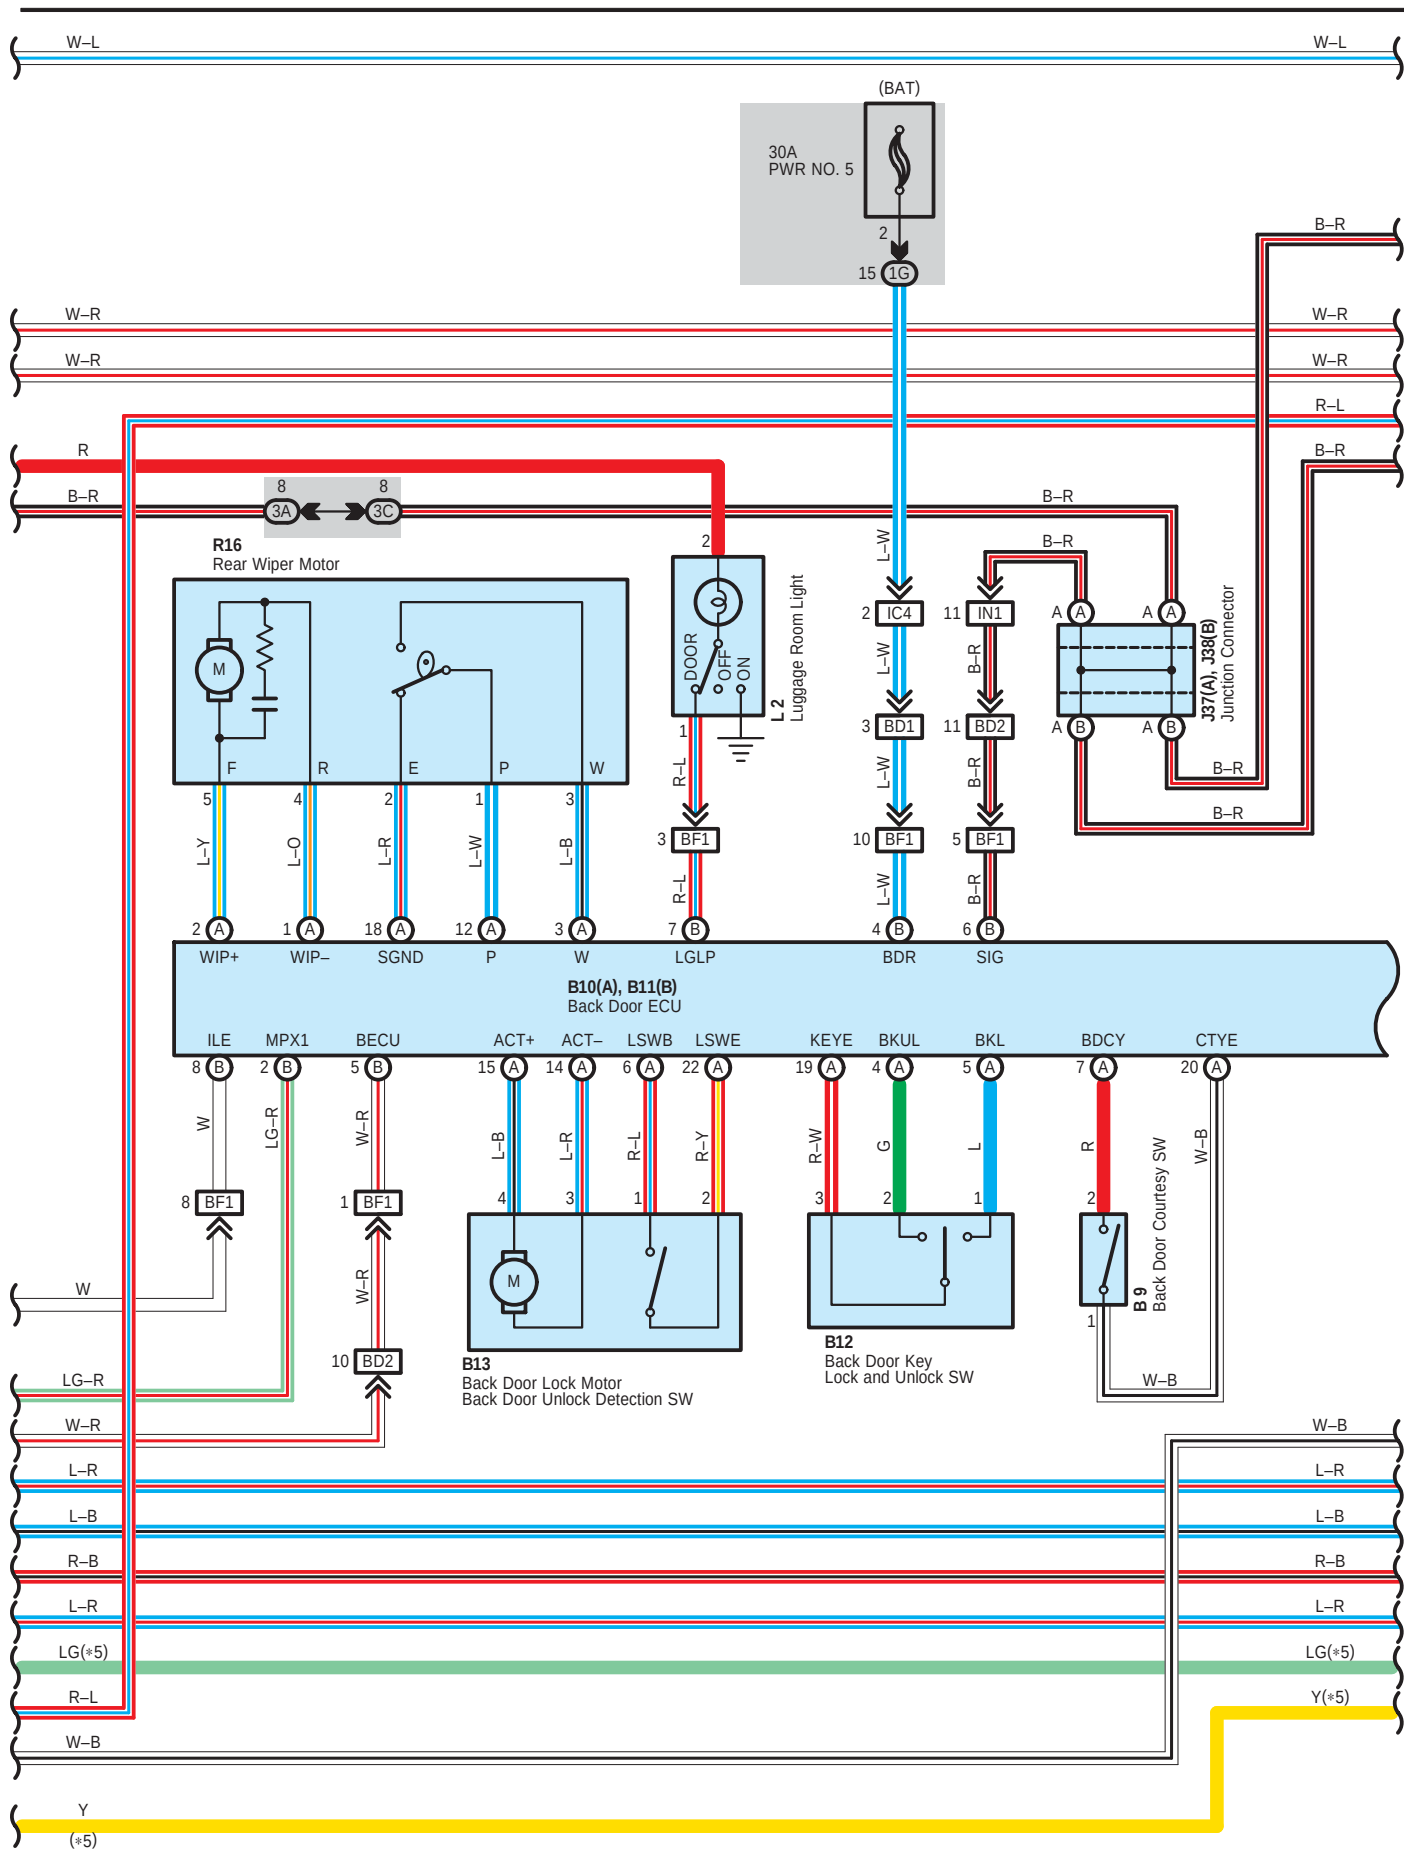


Multiplex Communication System – BEAN

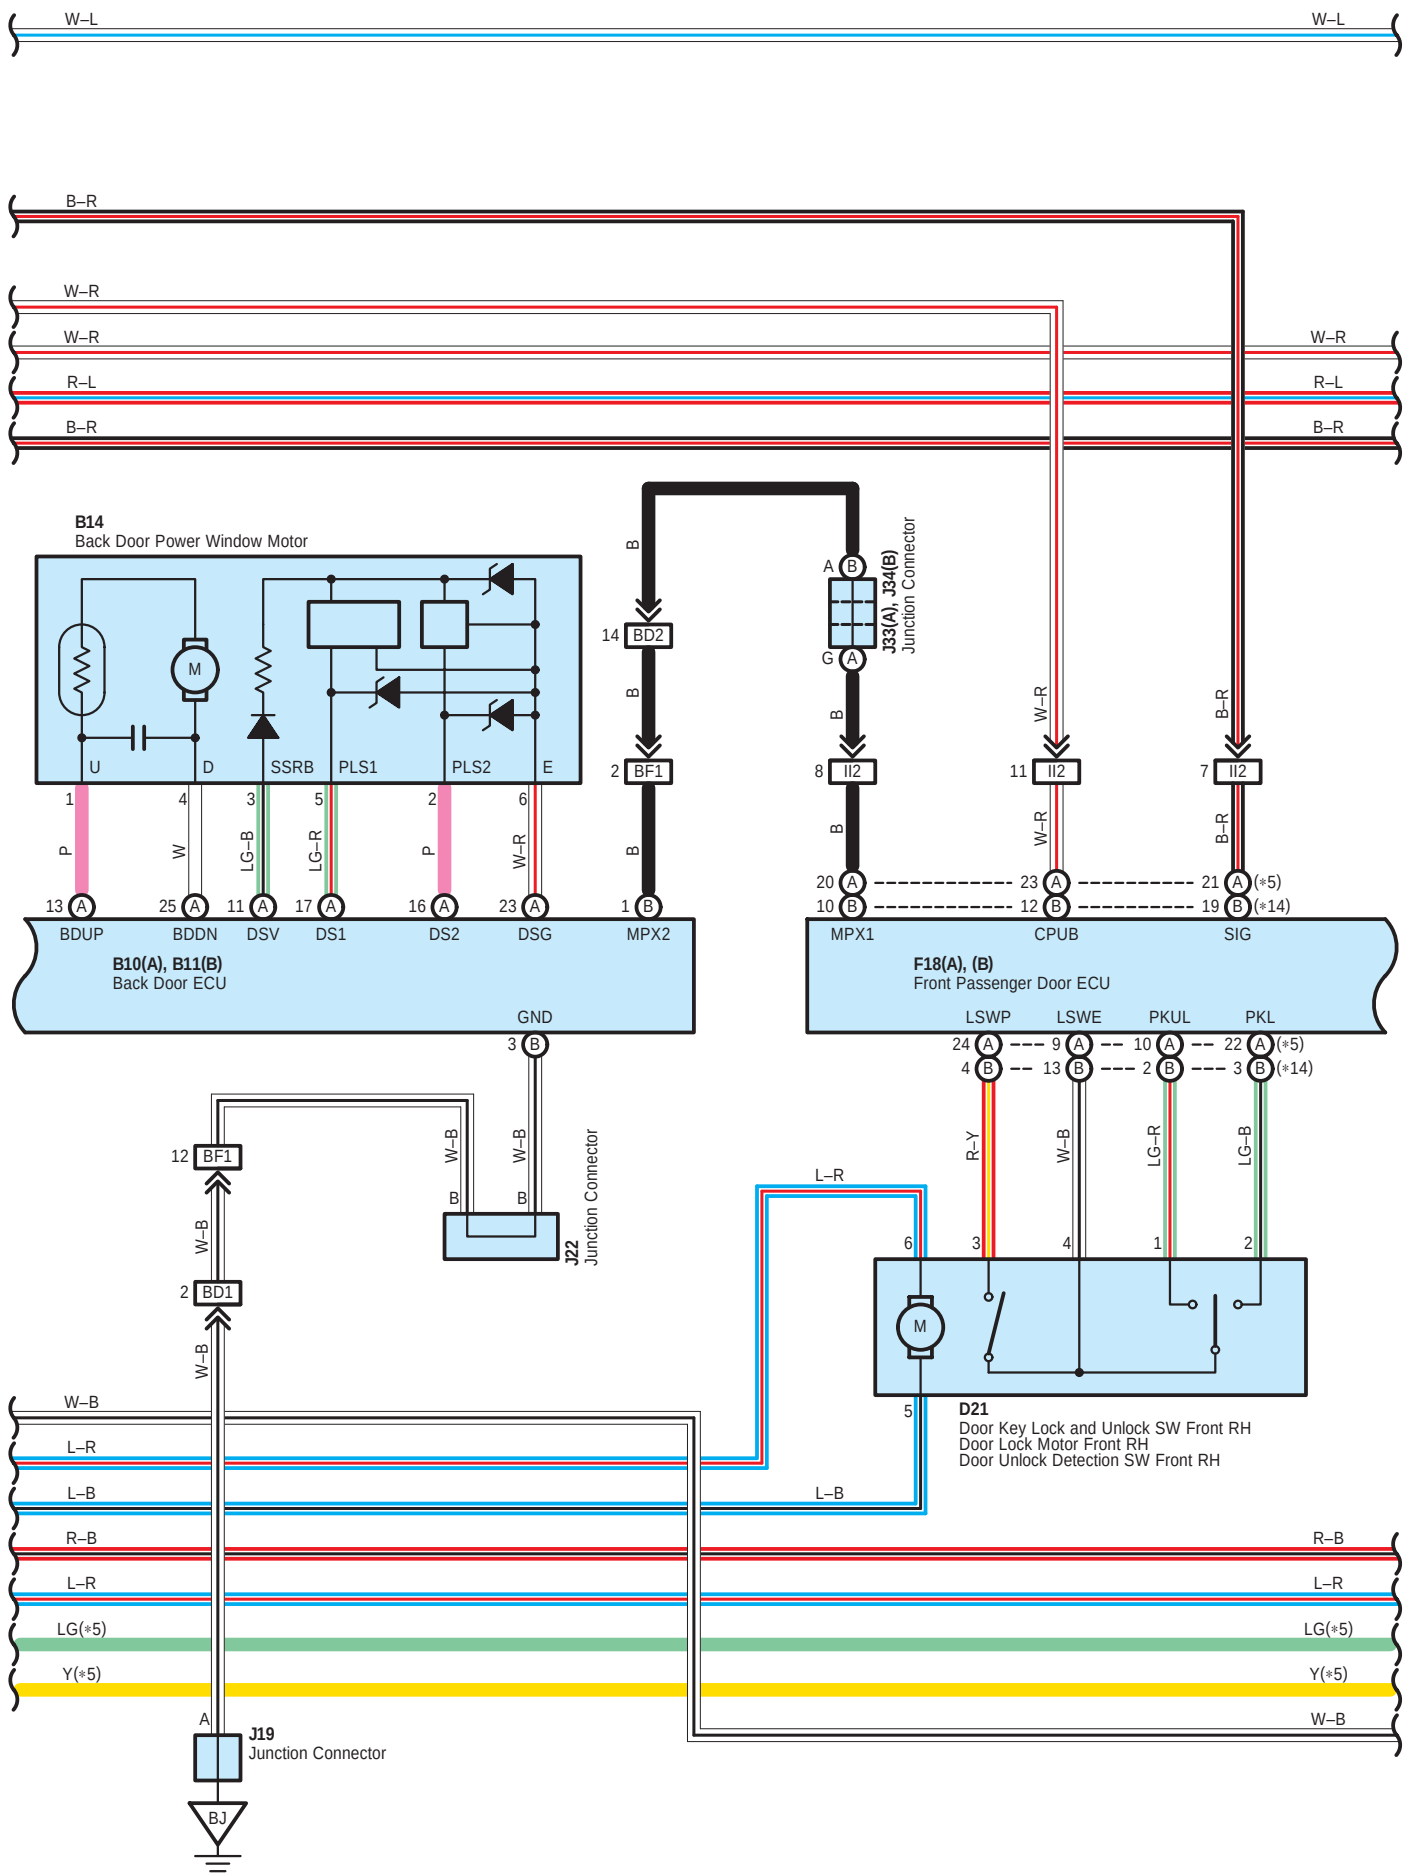

Multiplex Communication System – BEAN

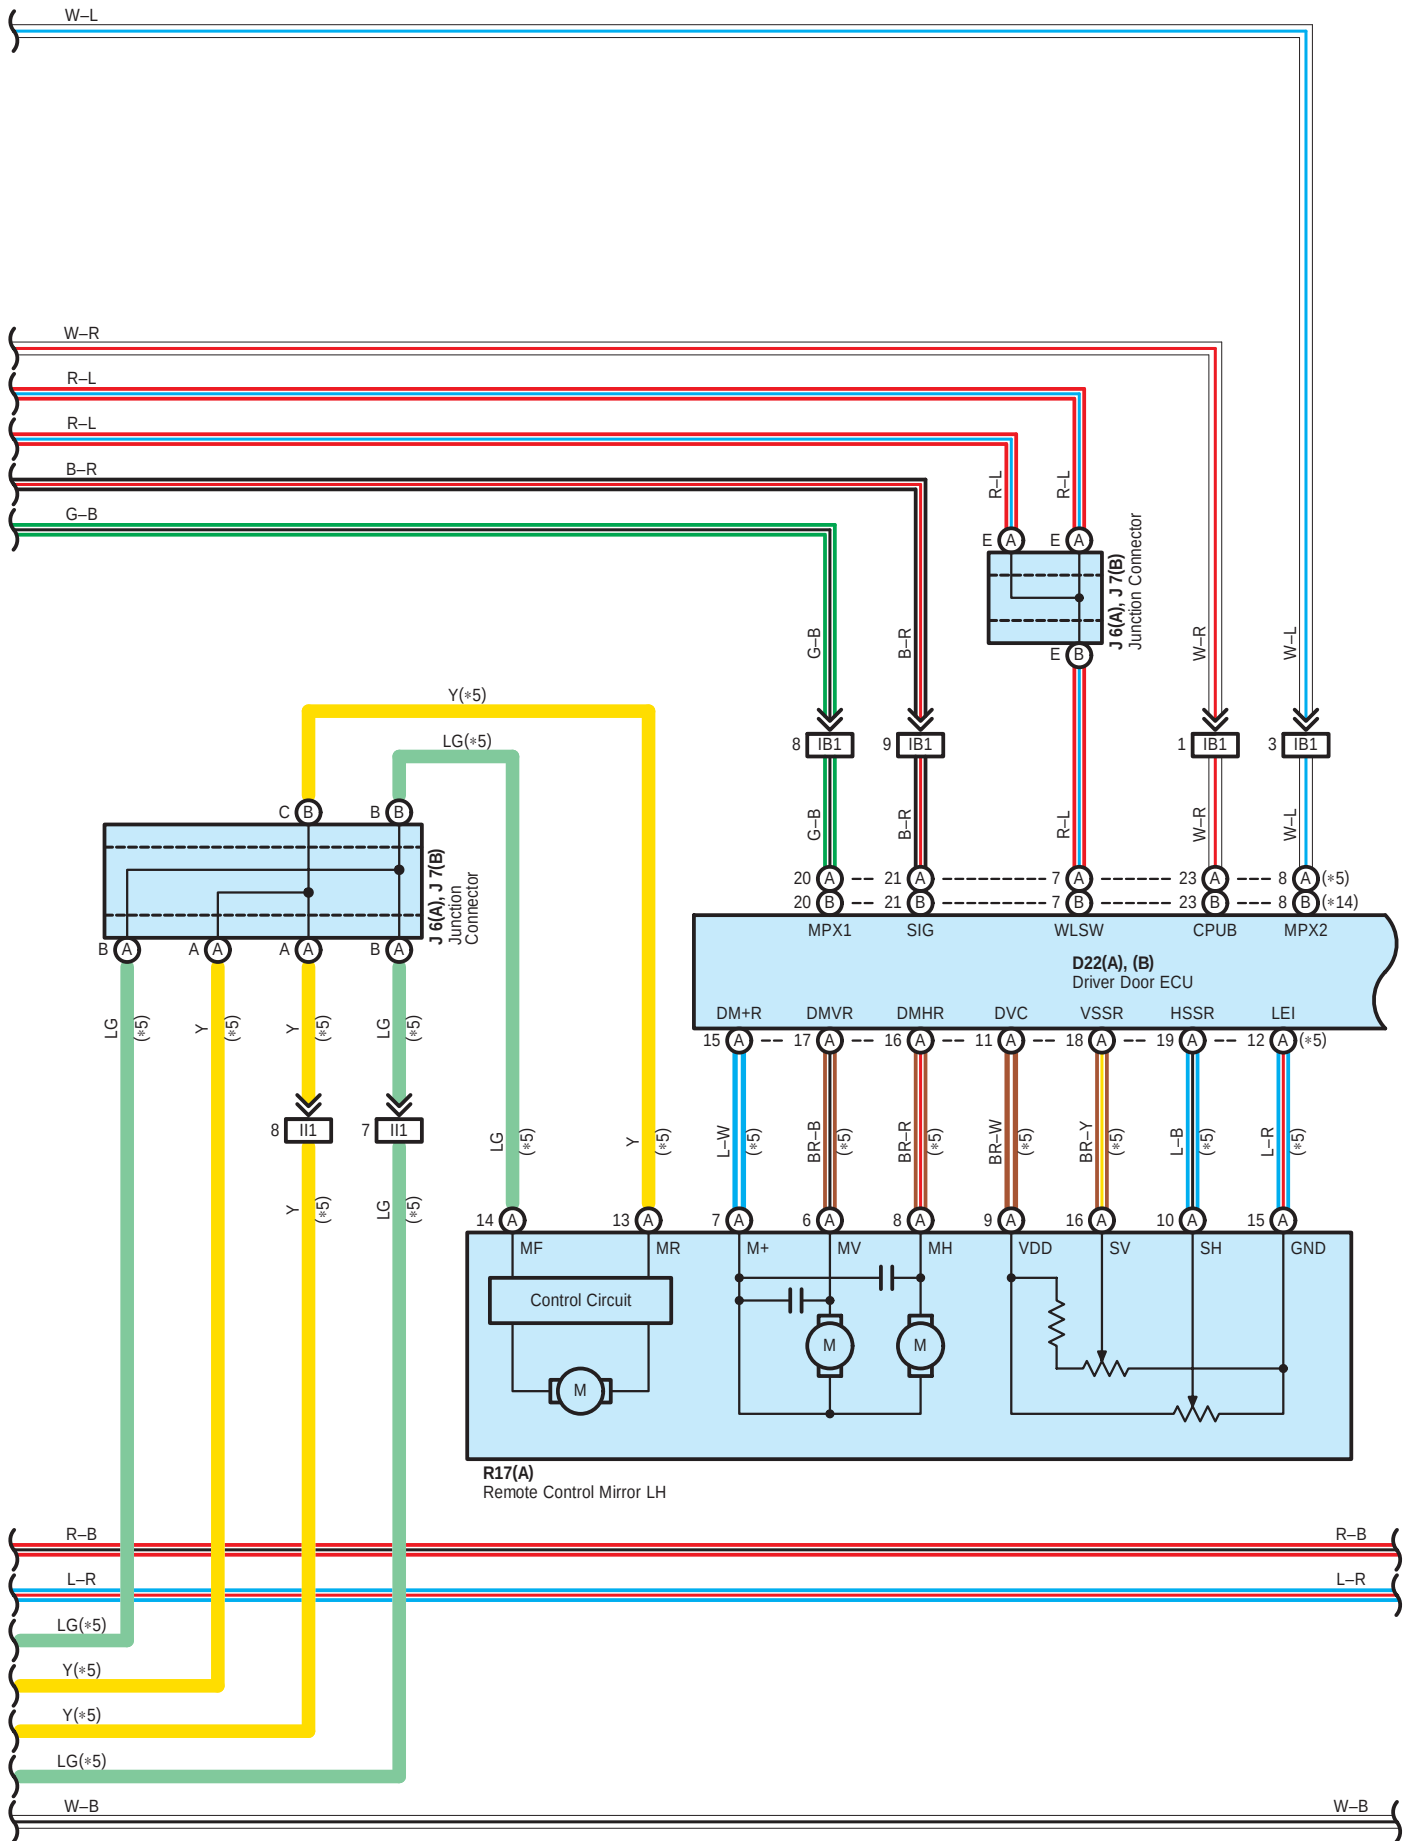

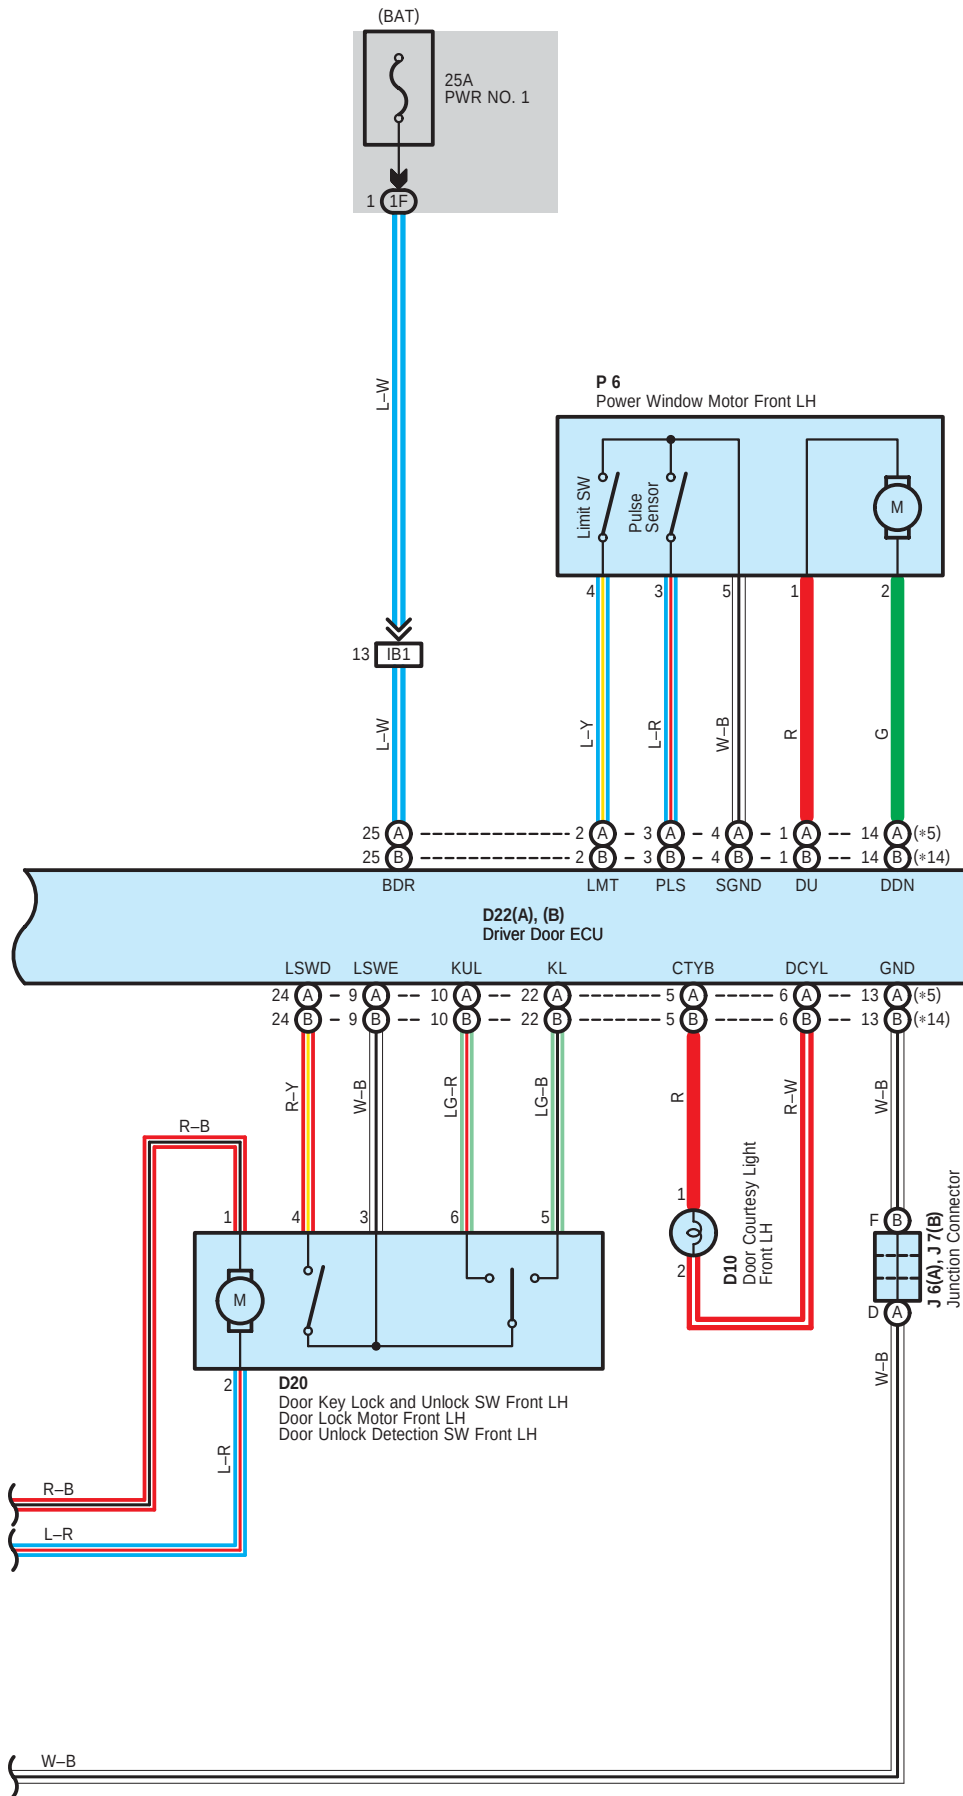

Multiplex Communication System – BEAN

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A20	42	F2	40	J44	A 44
A27	42	F10	22, 40	J45	B 44
B2	42	F18	A 46	J46	A 44
B5	A 42		B 46	J47	B 44
B6	B 42	G4	43	J48	A 44
B7	C 42	G5	43	J49	B 44
B9	46	H5	40	J50	41
B10	A 46	H6	40	J51	A 44
B11	B 46	H7	40	J52	B 44
B12	46	H8	40	L2	47
B13	46	I17	43	M6	48
B14	46	I19	43	O4	A 47
C5	A 42	J1	41	O5	B 47
C6	B 42	J2	41	P1	41
C8	42	J3	41	P2	45
C9	42	J4	41	P3	47
C10	42	J5	41	P4	47
D1	40	J6	A 44	P6	47
D6	43	J7	B 44	P7	47
D8	46	J8	44	P8	47
D9	46	J9	44	P9	47
D10	46	J10	A 44	R1	41
D11	46	J11	B 44	R5	A 45
D12	46	J12	44	R11	47
D13	46	J14	A 44	R16	47
D14	46	J15	B 44	R17	A 47
D15	46	J16	44	R18	A 47
D16	46	J18	44	S8	45
D17	46	J19	46	S19	47
D18	46	J21	46	S25	45
D19	46	J22	46	T1	41
D20	46	J28	41	T16	45
D21	46	J29	A 44	U1	45
D22	A 46	J30	B 44	V1	41
	B 46	J33	A 44	V6	47
D24	43	J34	B 44	V7	47
D25	43	J37	A 44	W1	41
E3	40	J38	B 44	W2	45
F1	40	J43	44		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	26	Engine Room R/B No.2 (Engine Compartment Left)
3	26	Engine Room R/B No.3 (Engine Compartment Left)

**: Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1B		
1D		
1E		
1F		
1G		
1H		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
1L		
1M	33	Roof Wire and Instrument Panel J/B (Lower Finish Panel)
2C	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		
2G		
2H		
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3B		
3C		
3D		
3E		
4C	38	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4D		

**: Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IA5		
IB1	51	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC4	51	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IG4	51	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
II1	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)
II2		
IL1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)
IN1	51	Floor No.2 Wire and Cowl Wire (Rear Console)
BA1	52	Rear Door No.2 Wire and Floor No.2 Wire (Center Pillar LH)
BC1	52	Rear Door No.1 Wire and Floor No.1 Wire (Center Pillar RH)
BD1	52	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BD2		
BF1	52	Back Door No.2 Wire and Back Door No.1 Wire (Left Side of Back Door)
BI2	54 (*1)	Floor No.2 Wire and Seat No.2 Wire (Under the Driver's Seat)

**: Ground Points**

Code	See Page	Ground Points Location
EA	50	Radiator Side Support RH
ED	50	Front Fender Apron LH
IE	51	Cowl Side Panel LH
IF	51	Instrument Panel Brace LH
IG	51	Cowl Side Panel RH
IM	51	Rear Console
BH	52	Center Pillar LH
BJ	52	Quarter Panel LH
BK	52	Center Pillar RH

* 1 : w/ Power Seat * 2 : w/o Power Seat