



Light Auto Turn Off System

* 1 : w/ Automatic Light Control

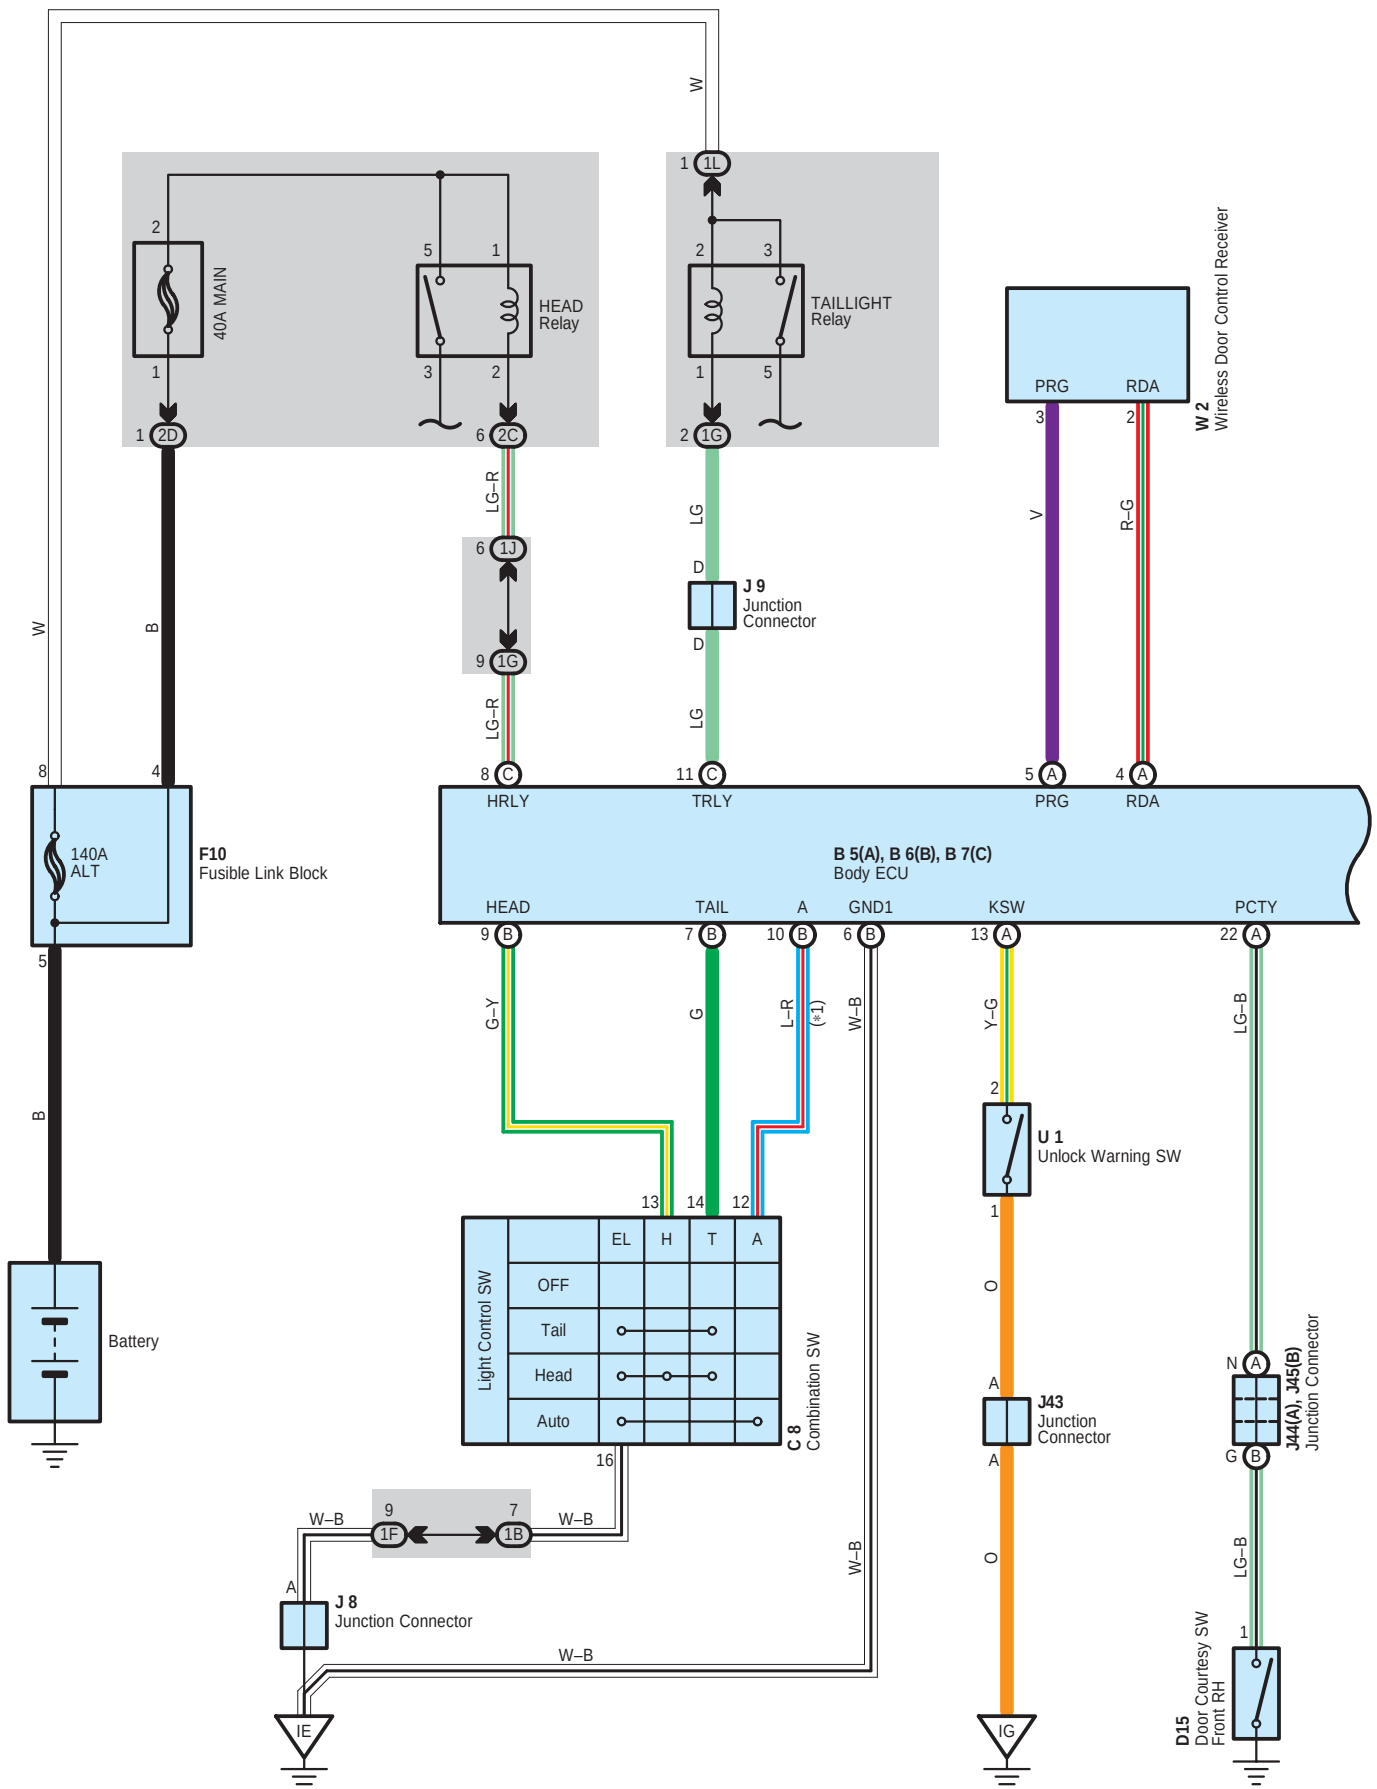

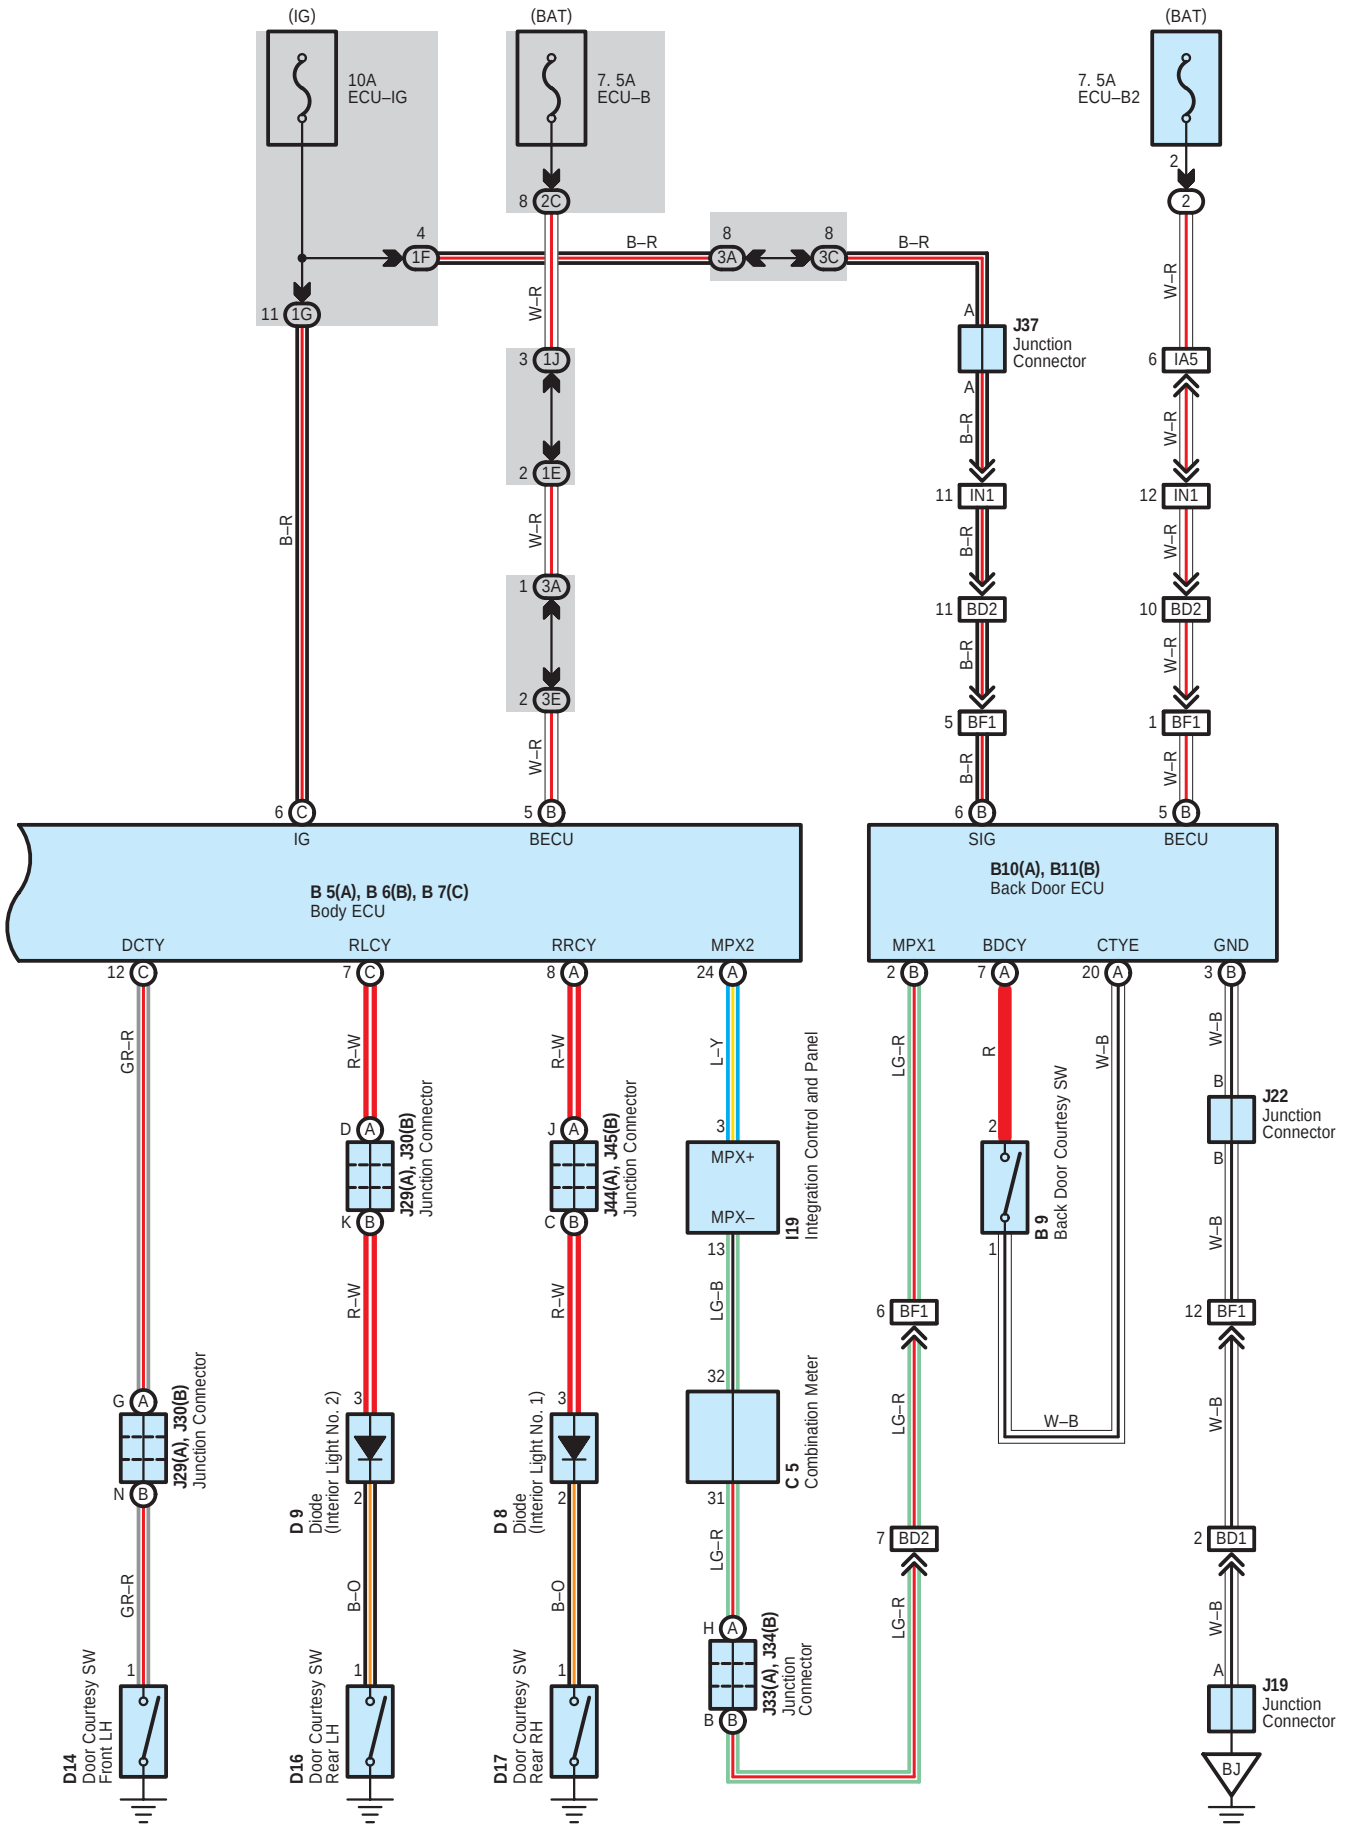

Light Auto Turn Off System

System Outline

With the light control SW at TAIL position, and the ignition SW turned to ACC or OFF position from ON or ST position, the tail lights will be turned off when the driver's door is opened.

When the ignition SW is turned to ACC or OFF position from ON or ST position with the headlights on, the headlights will be turned off 30 seconds after all the doors are closed.

The light goes off immediately when all the doors are locked using the wireless door lock.

○ : Parts Location

Code		See Page	Code	See Page	Code		See Page
B5	A	42	D14	46	J29	A	44
B6	B	42	D15	46	J30	B	44
B7	C	42	D16	46	J33	A	44
B9		46	D17	46	J34	B	44
B10	A	46	F10	22, 40	J37		44
B11	B	46	I19	43	J43		44
C5		42	J8	44	J44	A	44
C8		42	J9	44	J45	B	44
D8		46	J19	46	U1		45
D9		46	J22	46	W2		45

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1F		
1G		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1L		
2C	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2D		
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3C		
3E		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA5	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IN1	51	Floor No.2 Wire and Cowl Wire (Rear Console)
BD1	52	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BD2		
BF1	52	Back Door No.2 Wire and Back Door No.1 Wire (Left Side of Back Door)

▽ : Ground Points

Code	See Page	Ground Points Location
IE	51	Cowl Side Panel LH
IG	51	Cowl Side Panel RH
BJ	52	Quarter Panel LH

