


Key Reminder and Seat Belt Warning

* 1 : w/ Power Seat
* 2 : w/o Power Seat

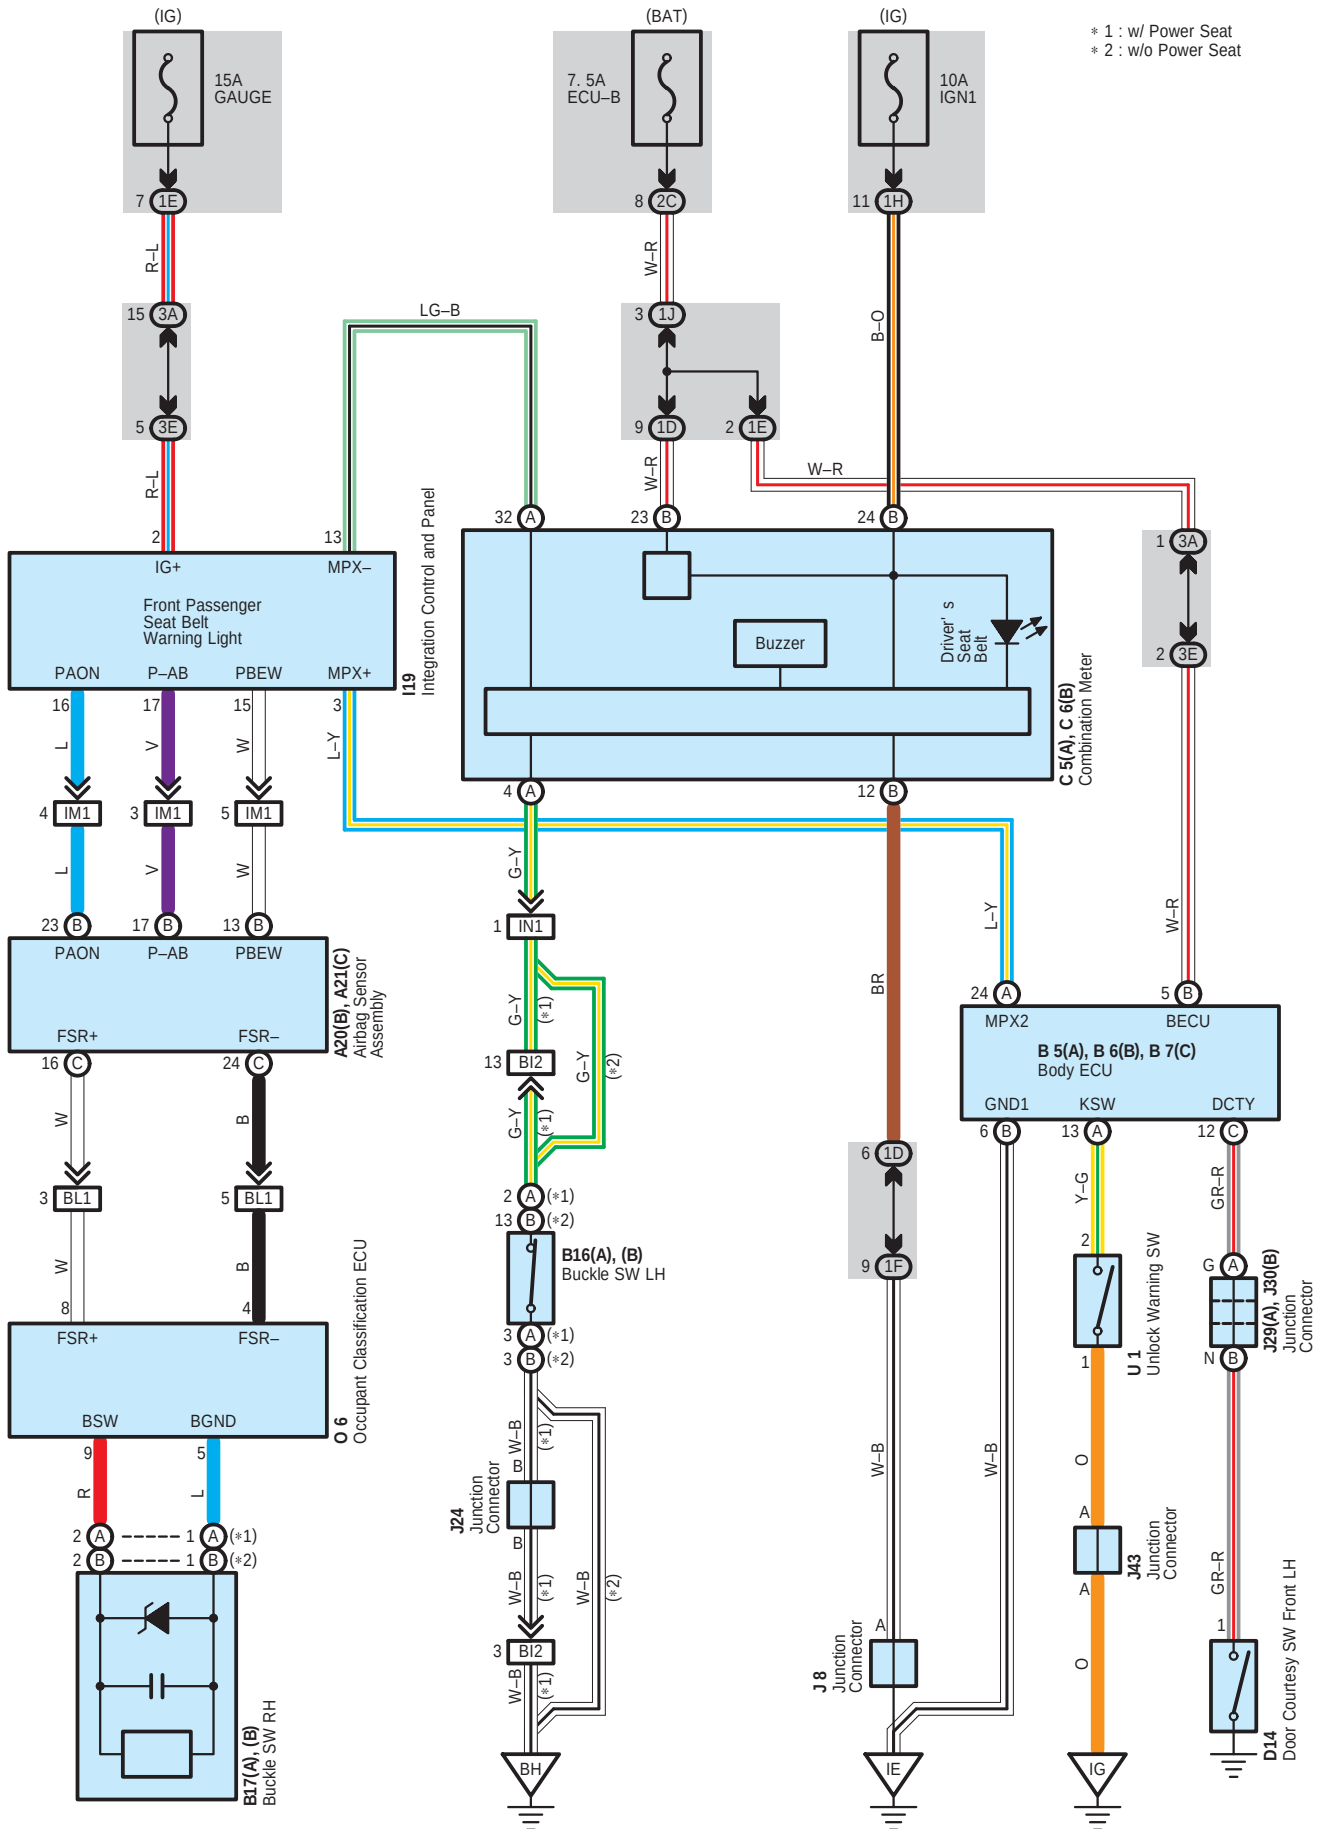

System Outline

1. Seat Belt Warning

In case the driver has not fastened the seat belt when the ignition SW is turned ON, a warning light flashes, and the warning buzzer goes on.

2. Key Reminder

In case the driver's door is opened with the key in the key cylinder and the ignition SW at ACC or OFF position, a warning buzzer goes on.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A20	B	42	B17	A	48 (*1)
A21	C	42		B	49 (*2)
B5	A	42	C5	A	42
B6	B	42	C6	B	42
B7	C	42	D14		46
B16	A	48 (*1)	I19		43
	B	46	J8		44
				J24	48 (*1)
				J29	A
				J30	B
				J43	44
				O6	48 (*1)
					49 (*2)
				U1	45

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1F		
1H		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
2C	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3E		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IM1	51	Cowl Wire and Cowl Wire (Instrument Panel Brace LH)
IN1	51	Floor No.2 Wire and Cowl Wire (Rear Console)
BI2	54 (*1)	Floor No.2 Wire and Seat No.2 Wire (Under the Driver's Seat)
BL1	54 (*1)	Seat No.1 Wire and Floor No.1 Wire (Under the Front Passenger's Seat)
	55 (*2)	

▽ : Ground Points

Code	See Page	Ground Points Location
IE	51	Cowl Side Panel LH
IG	51	Cowl Side Panel RH
BH	52	Center Pillar LH

* 1 : w/ Power Seat * 2 : w/o Power Seat