



Interior Light

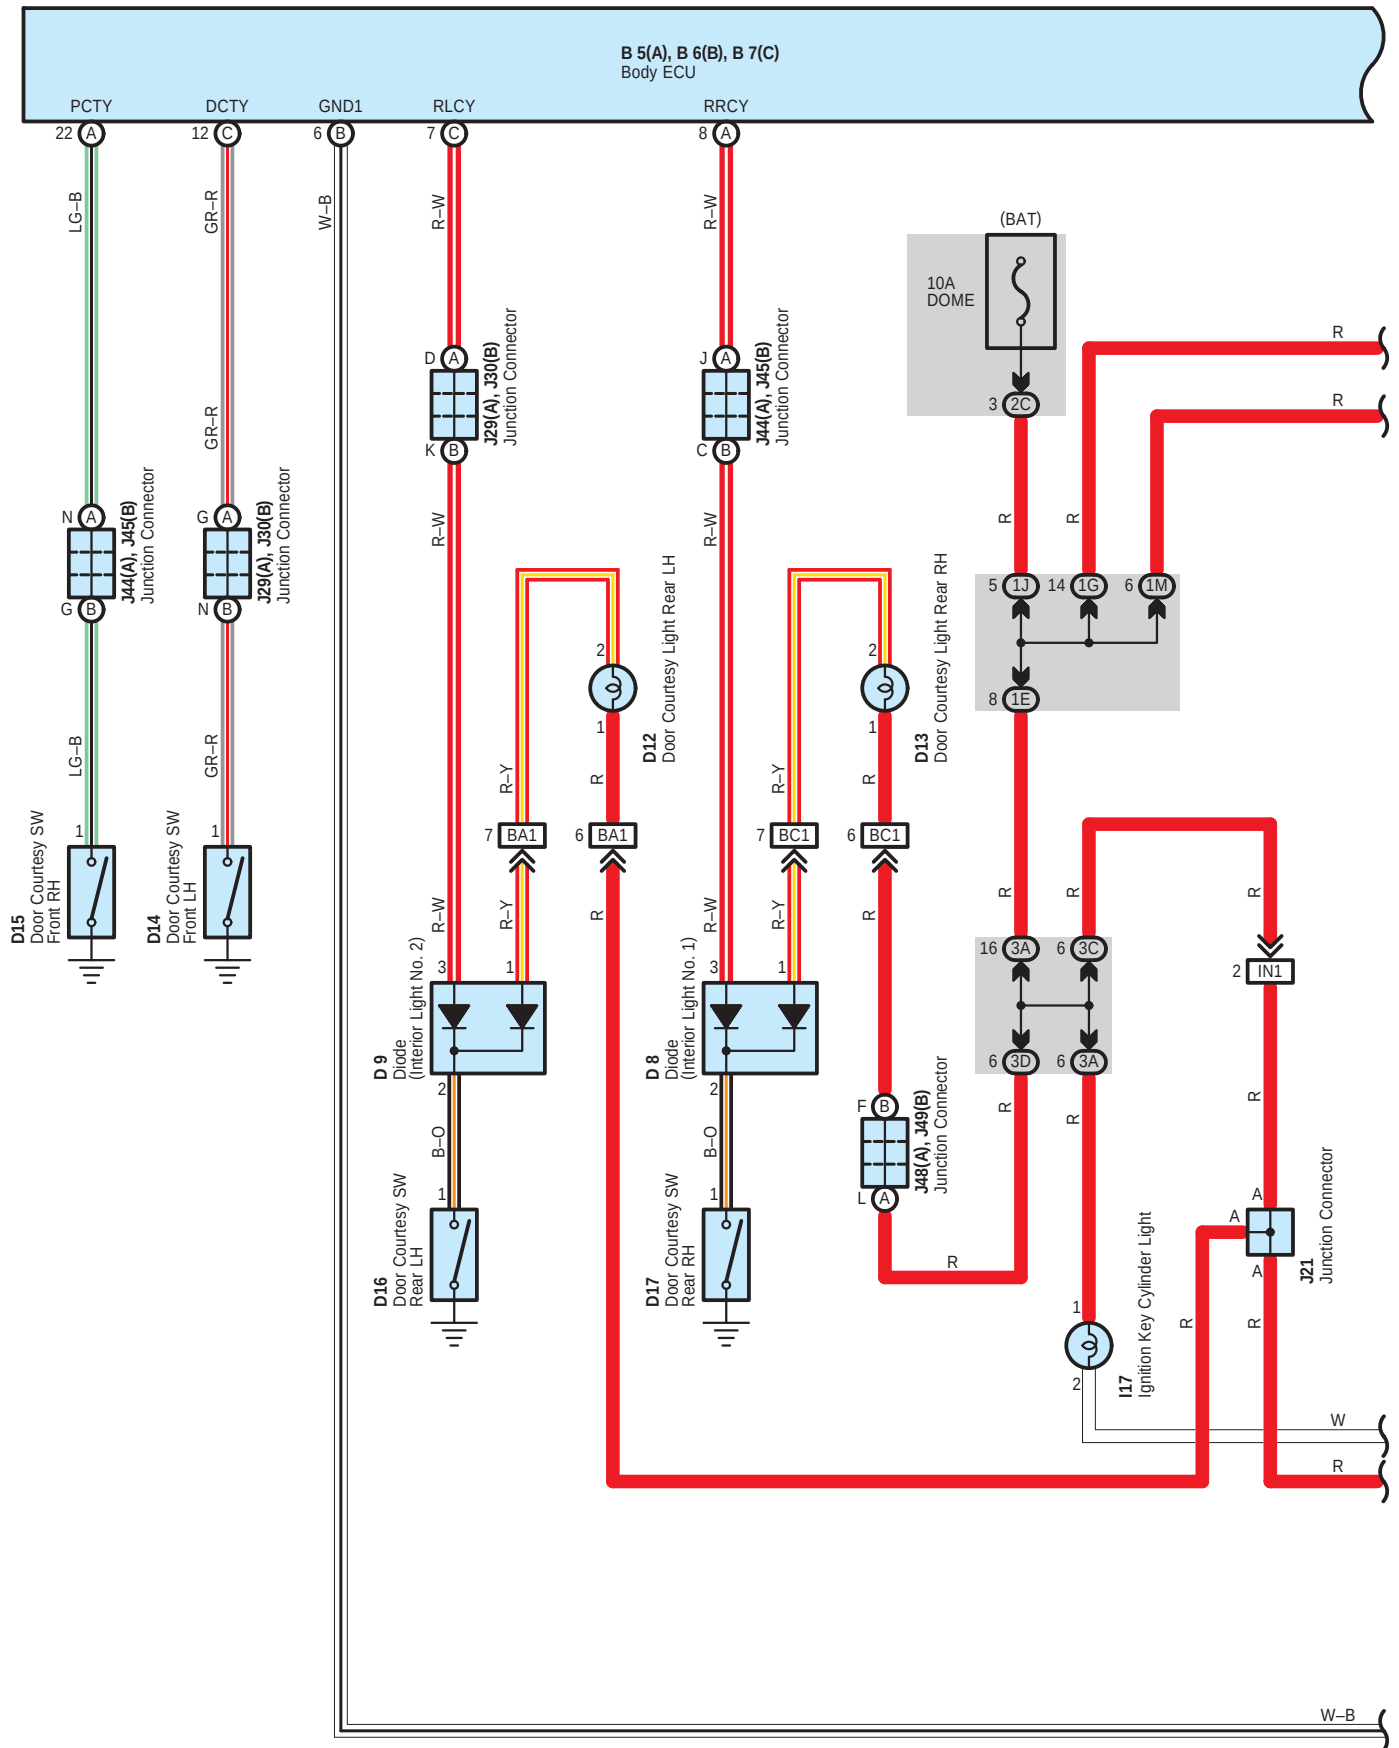

B 5(A), B 6(B), B 7(C)
Body ECU


- * 1 : w/o Sliding Roof, Rear Seat Entertainment System and Rear Seat Audio System
- * 2 : w/ Sliding Roof, Rear Seat Entertainment System or Rear Seat Audio System
- * 3 : w/ Sliding Roof w/o Rear Seat Entertainment System and Rear Seat Audio System
- * 4 : w/ Sliding Roof w/ Rear Seat Entertainment System or Rear Seat Audio System
- * 5 : Limited

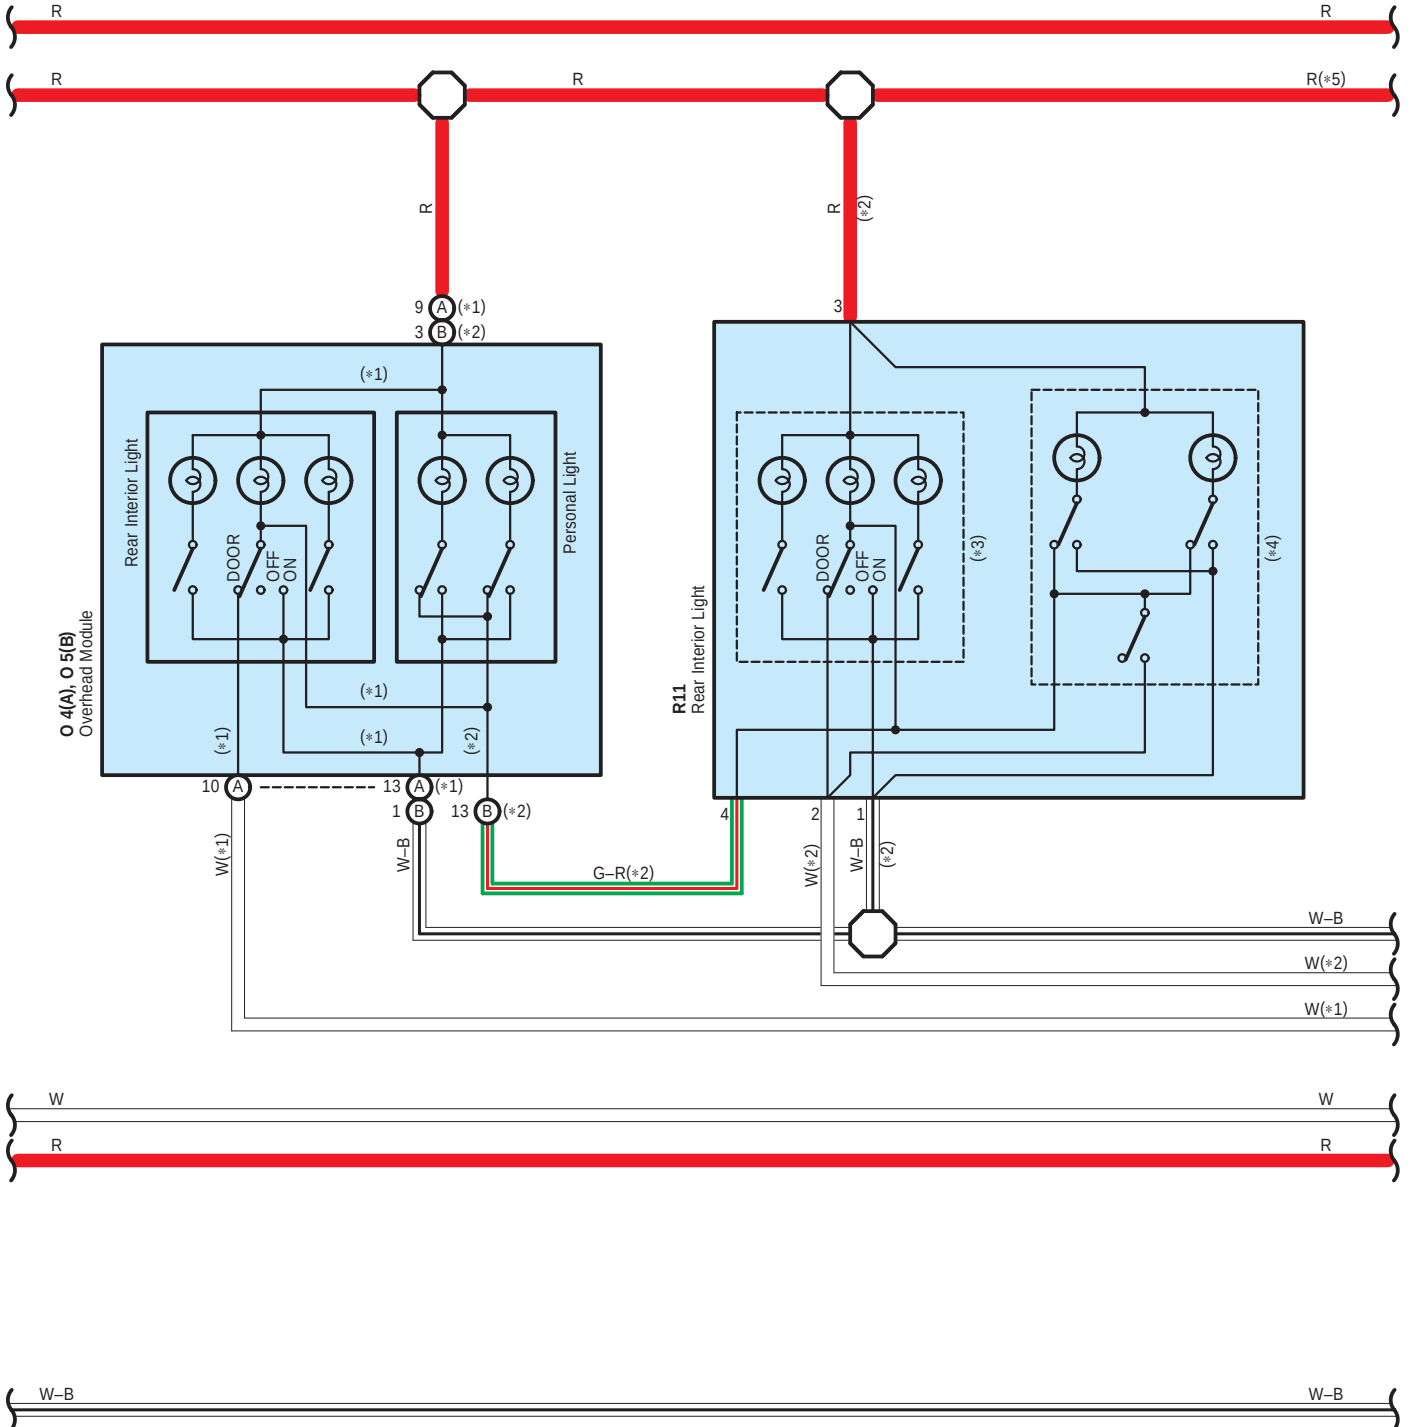

Interior Light

B 5(A), B 6(B), B 7(C)
Body ECU


- * 1 : w/o Sliding Roof, Rear Seat Entertainment System and Rear Seat Audio System
- * 2 : w/ Sliding Roof, Rear Seat Entertainment System or Rear Seat Audio System
- * 5 : Limited

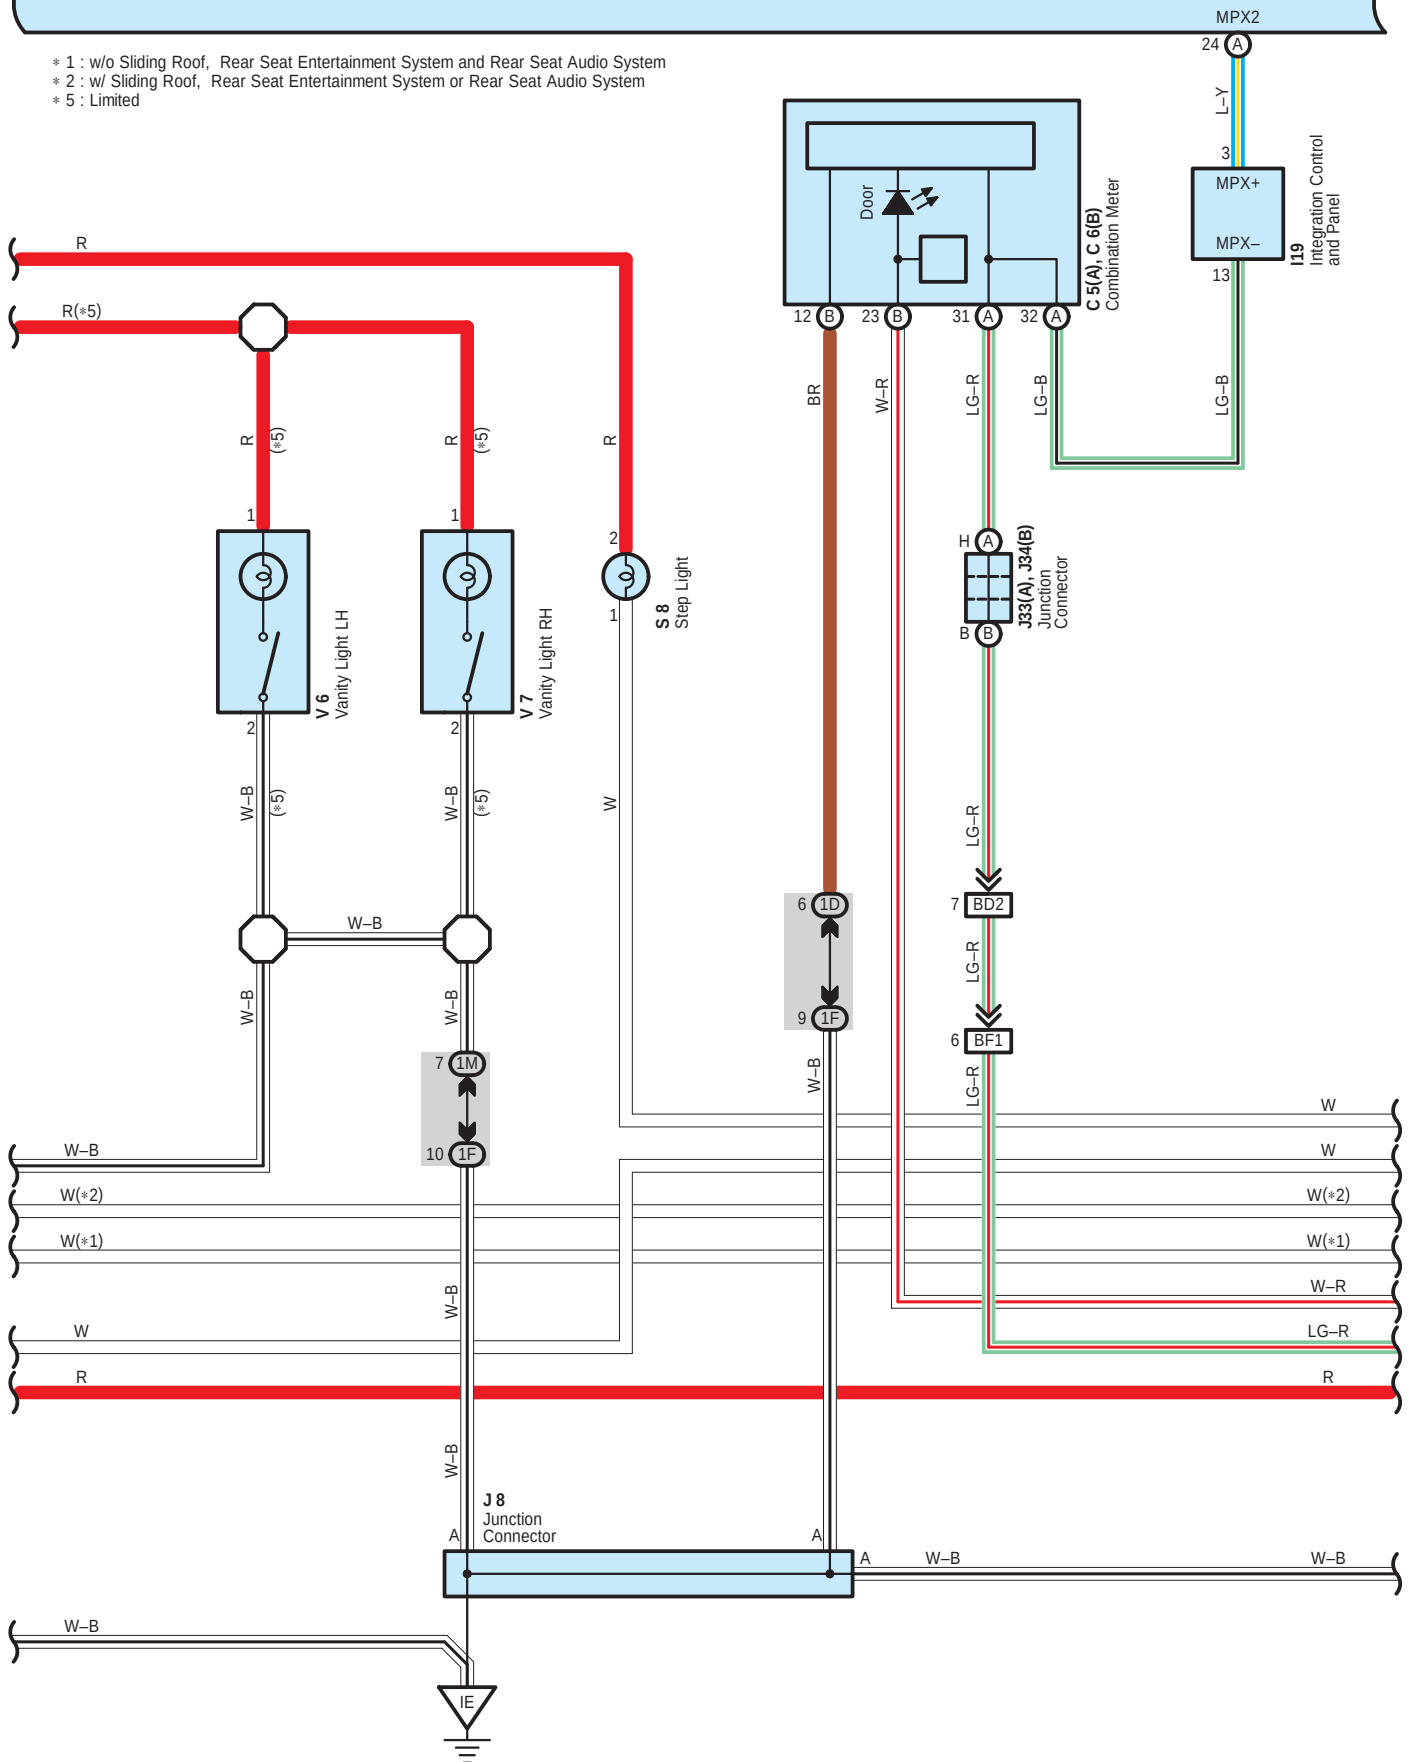



Interior Light

* 6 : w/ Driving Position Memory
 * 7 : w/o Driving Position Memory

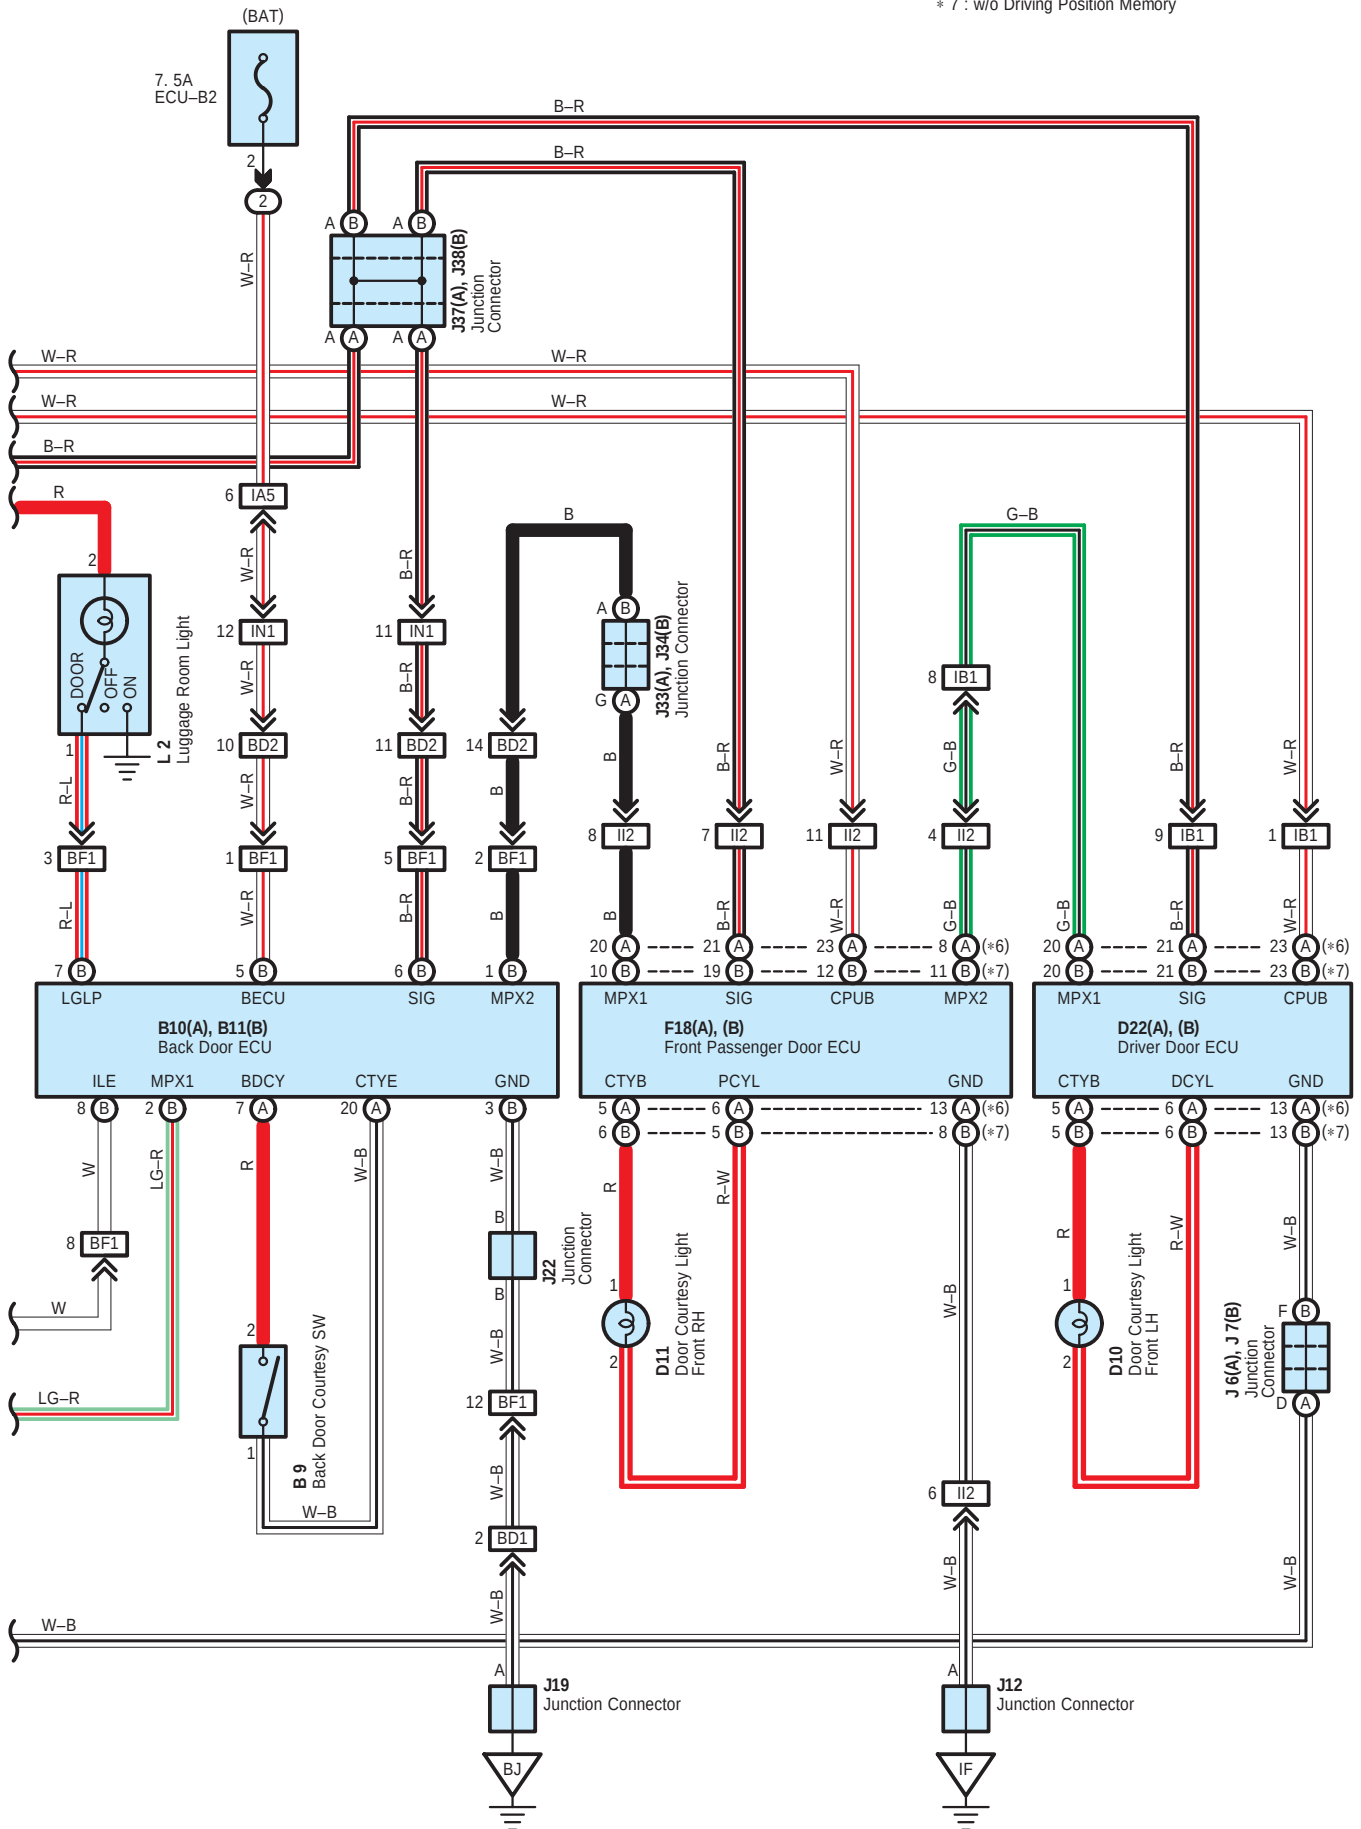

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
B5	A	42	D17		46	J34	B	44
B6	B	42	D22	A	46	J37	A	44
B7	C	42		B	46	J38	B	44
B9		46	F18	A	46	J43		44
B10	A	46		B	46	J44	A	44
B11	B	46	I17		43	J45	B	44
C5	A	42	I19		43	J48	A	44
C6	B	42	J6	A	44	J49	B	44
D8		46	J7	B	44	L2		47
D9		46	J8		44	O4	A	47
D10		46	J12		44	O5	B	47
D11		46	J19		46	R11		47
D12		46	J21		46	S8		45
D13		46	J22		46	V6		47
D14		46	J29	A	44	V7		47
D15		46	J30	B	44	W2		45
D16		46	J33	A	44			

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1F		
1G		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1M	33	Roof Wire and Instrument Panel J/B (Lower Finish Panel)
2C	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3C		
3D		
3E		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA5	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IB1	51	Front Door LH Wire and Cowl Wire (Left Kick Panel)
II2	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IN1	51	Floor No.2 Wire and Cowl Wire (Rear Console)
BA1	52	Rear Door No.2 Wire and Floor No.2 Wire (Center Pillar LH)
BC1	52	Rear Door No.1 Wire and Floor No.1 Wire (Center Pillar RH)
BD1	52	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BD2		
BF1	52	Back Door No.2 Wire and Back Door No.1 Wire (Left Side of Back Door)

 : Ground Points

Code	See Page	Ground Points Location
IE	51	Cowl Side Panel LH
IF	51	Instrument Panel Brace LH
IG	51	Cowl Side Panel RH
BJ	52	Quarter Panel LH