




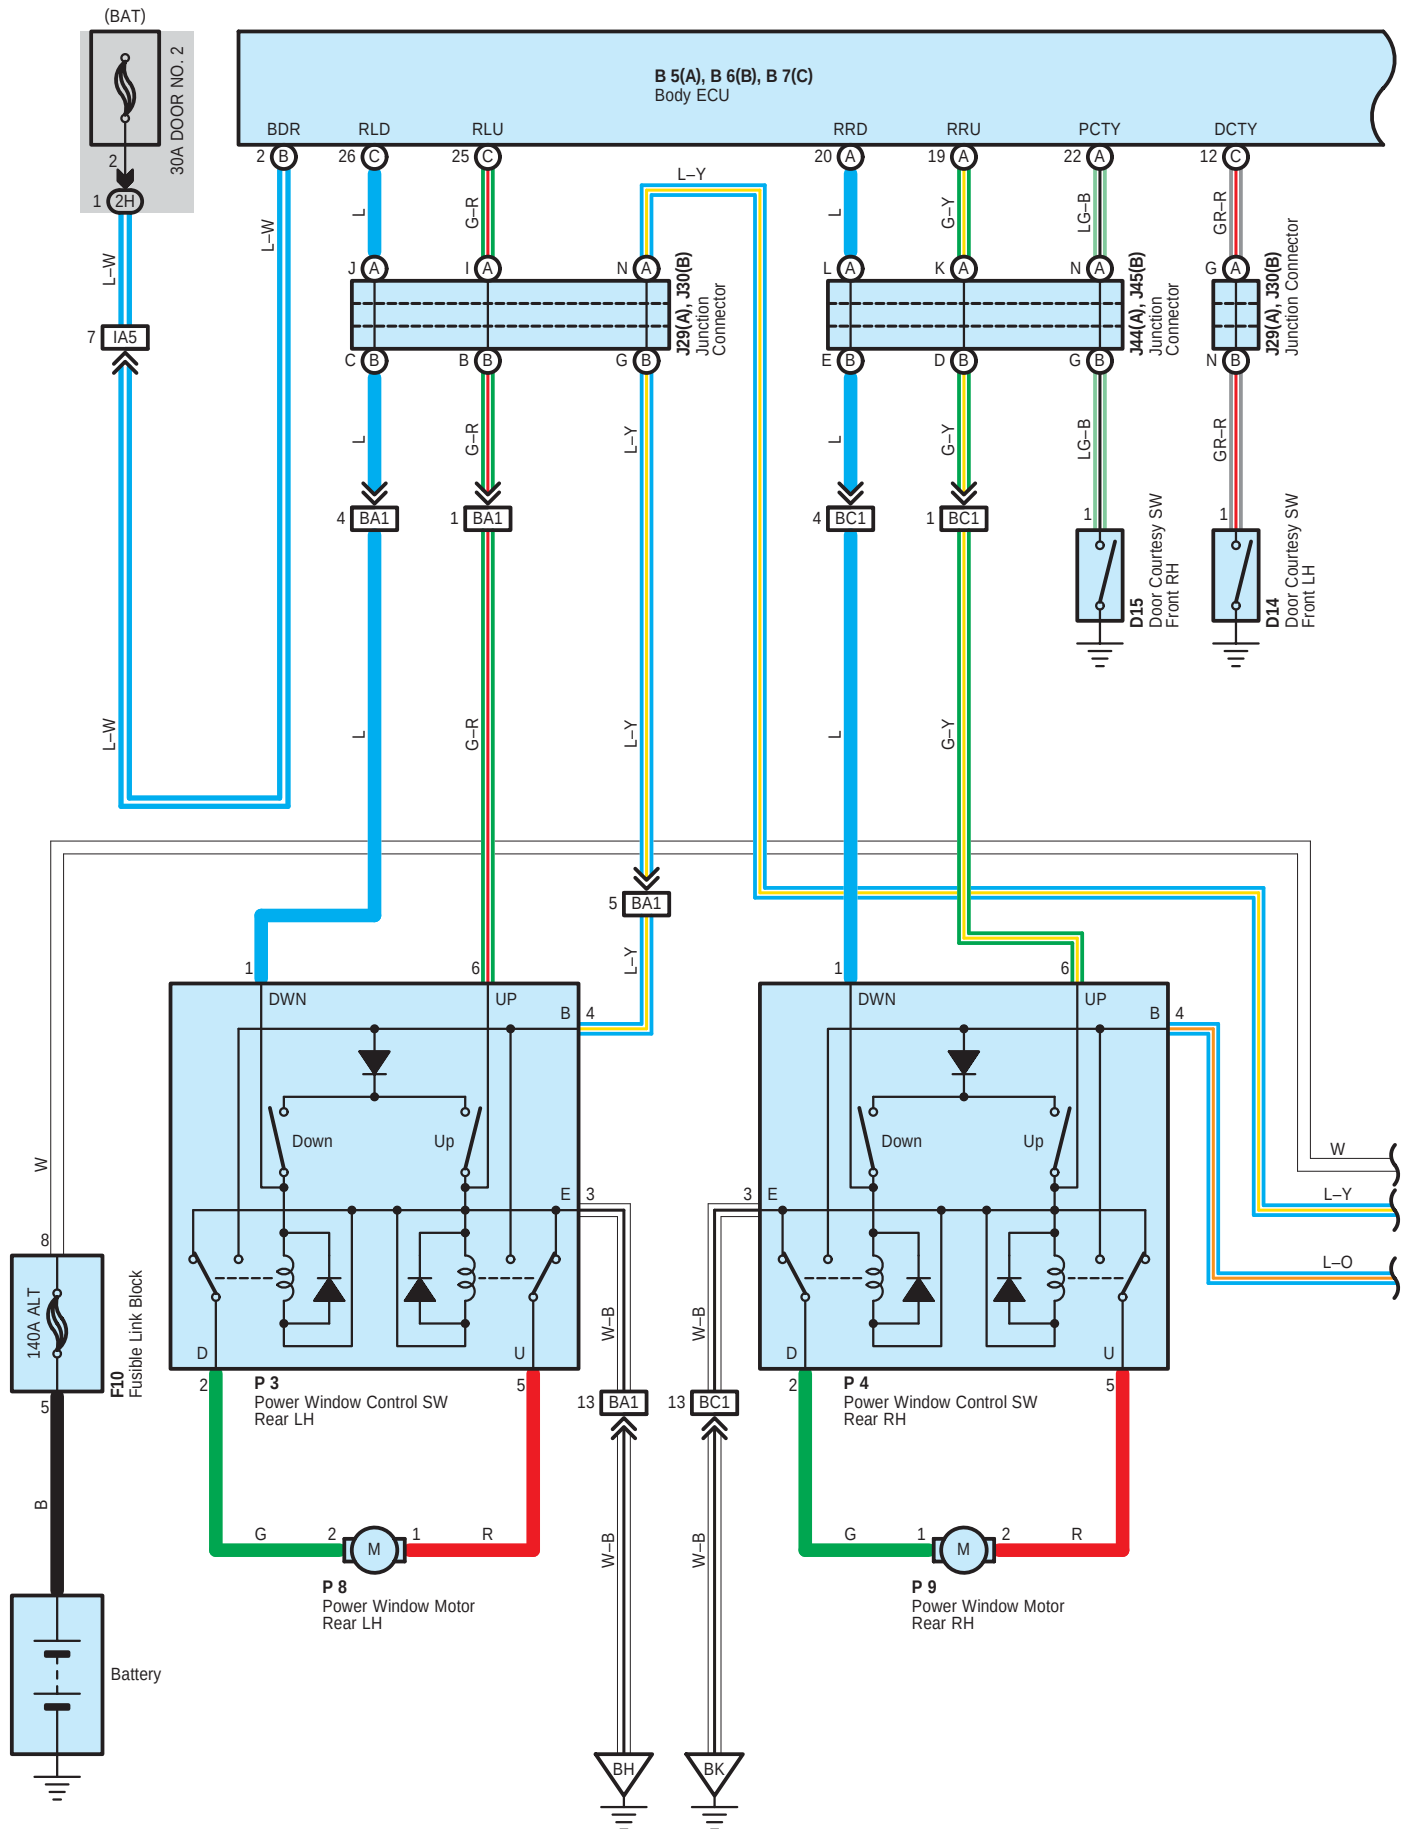

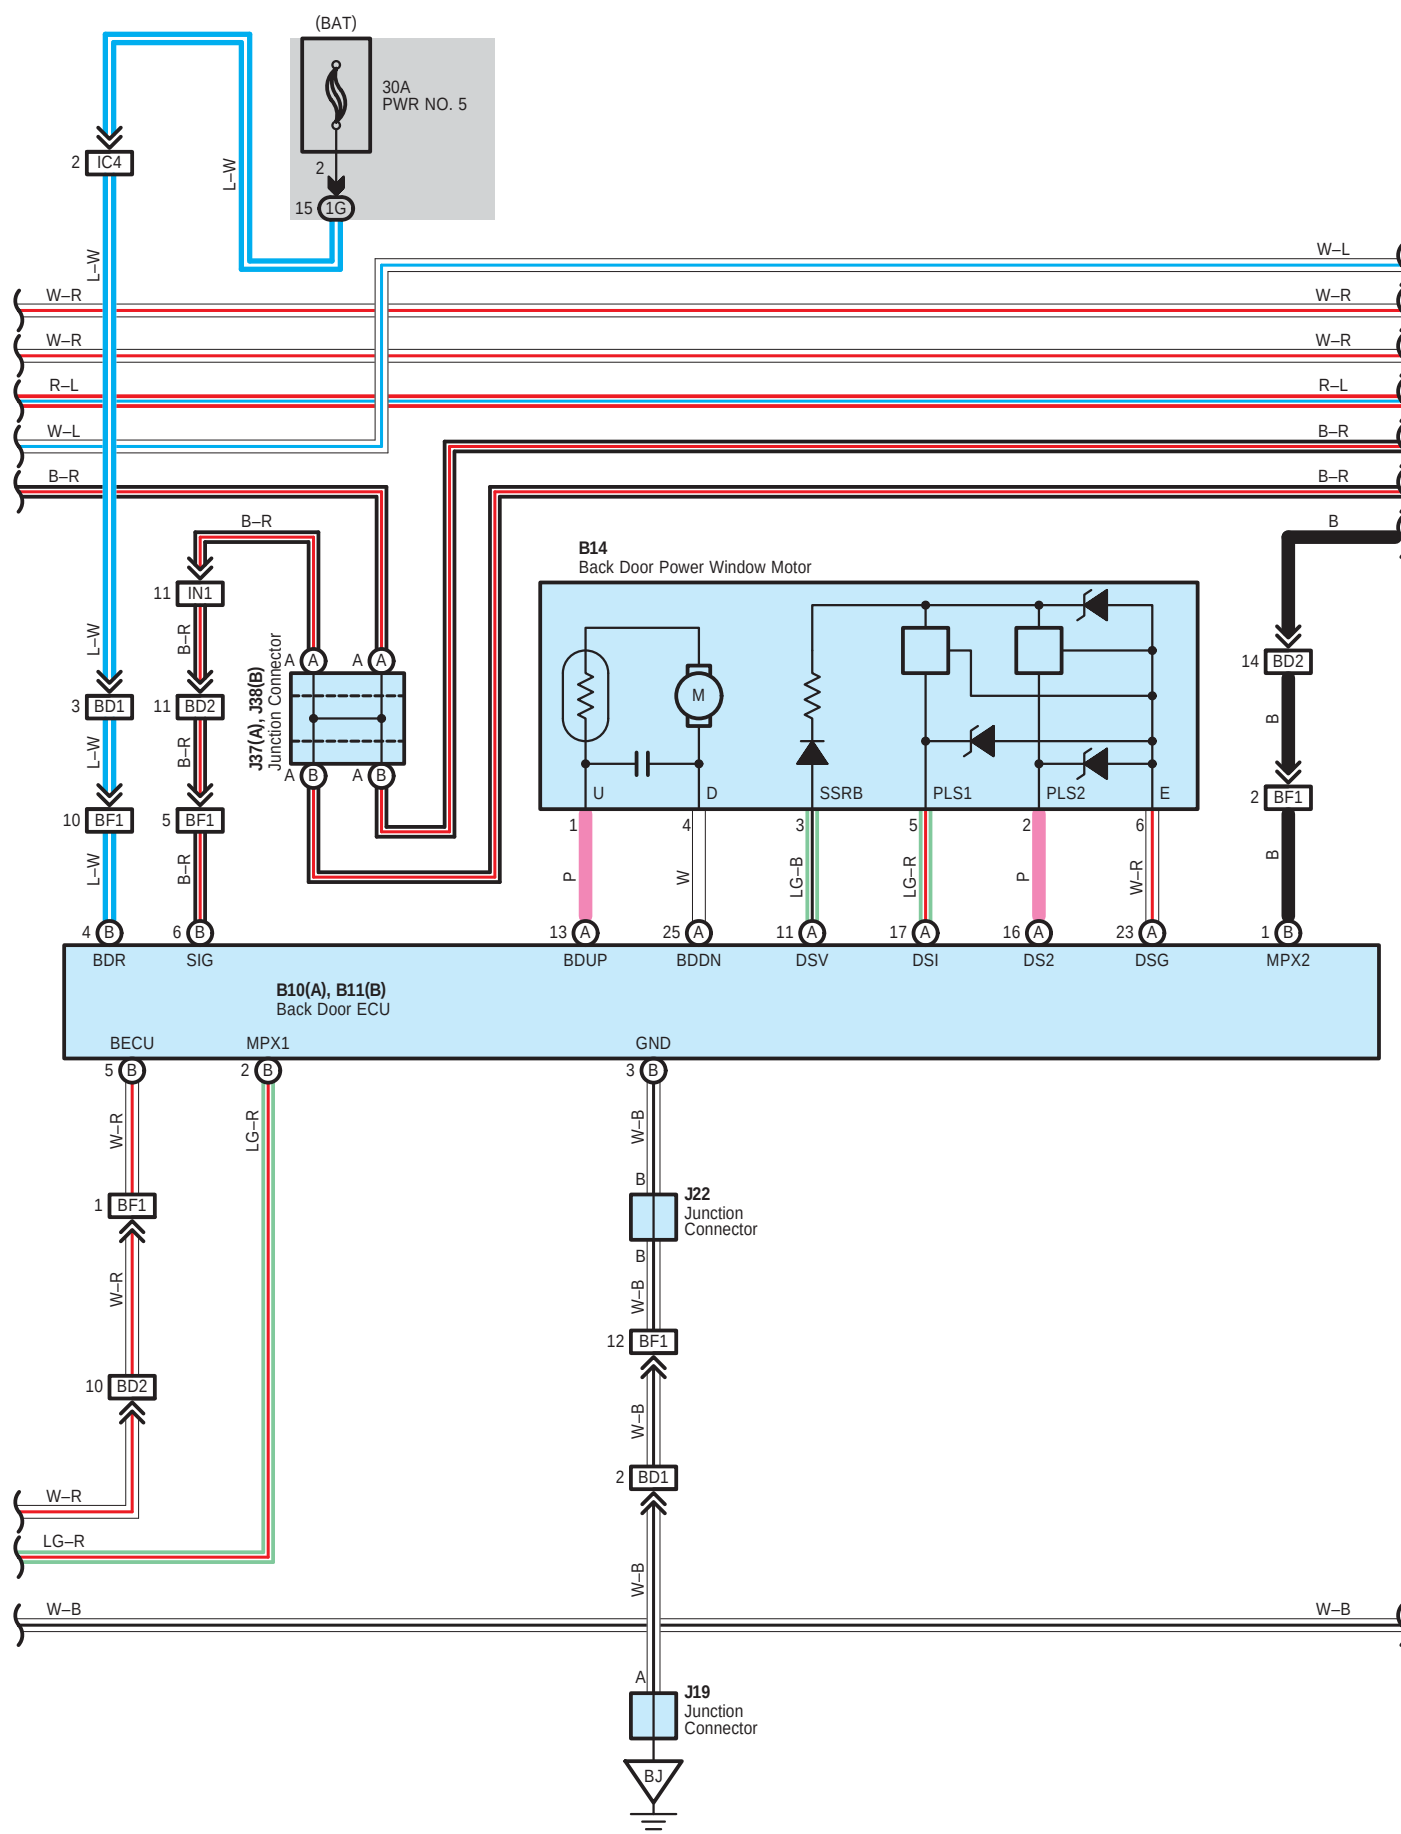

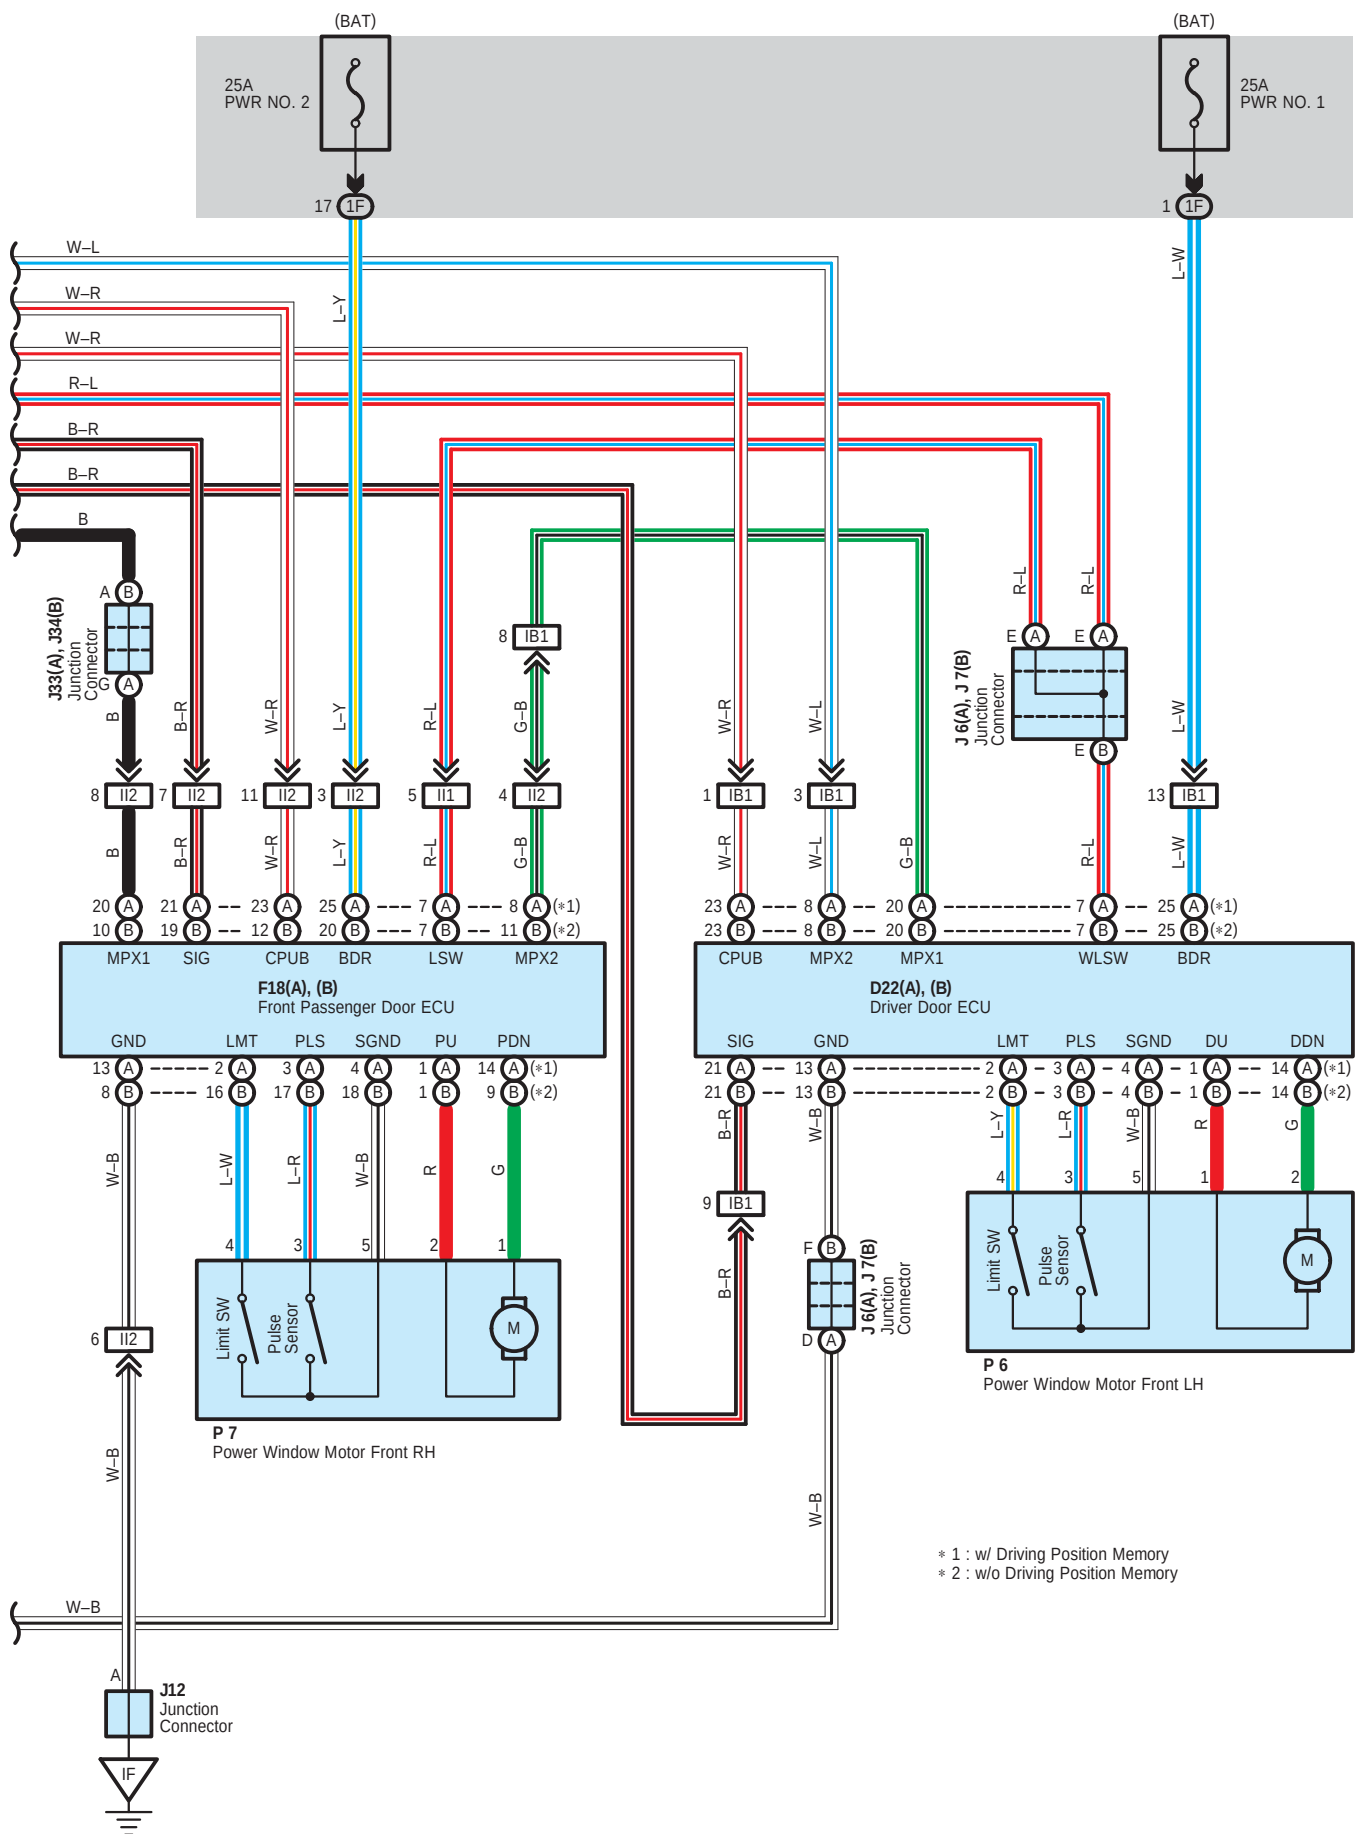

Power Window

System Outline

The power window motor will operate when the power window SW, remote control SW, or the key-linked SW is operated.

1. Power Window SW Manual/Automatic Operation

When the ignition SW is turned ON, or during key-off operation stand-by mode, the power window can be operated by the power window SW.

2. Remote Control SW Manual/Automatic Operation

When the ignition SW is turned ON, or during key-off operation stand-by mode, the power window can be operated by the master SW. The front passenger, rear left, right windows can be operated according to the remote control signals from the driver door ECU.

3. Key-Off Operation

With all the doors closed, within 43 seconds after the ignition switch has been turned to OFF from ON, the power window can be operated. However, if the front door is opened, the power window cannot be operated.

4. Jam Protection Function

When load is detected, the power window motor is rotated to the opposite direction.

The driver's seat, front passenger seat and back door power windows have this function.

5. Back Door Key Operation SW

When the back door key SW is operated to LOCK or UNLOCK side for more than approximately 0.75 seconds, the back door window can be opened/closed manually.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B2	42	F18	A	46	J37
B5	A 42		B	46	J38
B6	B 42	I19		43	J44
B7	C 42	J6	A	44	J45
B10	A 46	J7	B	44	J46
B11	B 46	J8		44	J47
B14	46	J12		44	P3
C5	42	J19		46	P4
D14	46	J22		46	P6
D15	46	J29	A	44	P7
D22	A 46	J30	B	44	P8
	B 46	J33	A	44	P9
F10	22, 40	J34	B	44	

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1F		
1G		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1L		
2C	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2H		
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3C		
3D		
3E		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA5	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IB1	51	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC4	51	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
II1	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)
II2		
IN1	51	Floor No.2 Wire and Cowl Wire (Rear Console)
BA1	52	Rear Door No.2 Wire and Floor No.2 Wire (Center Pillar LH)
BC1	52	Rear Door No.1 Wire and Floor No.1 Wire (Center Pillar RH)
BD1	52	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BD2		
BF1	52	Back Door No.2 Wire and Back Door No.1 Wire (Left Side of Back Door)

 : Ground Points

Code	See Page	Ground Points Location
IE	51	Cowl Side Panel LH
IF	51	Instrument Panel Brace LH
BH	52	Center Pillar LH
BJ	52	Quarter Panel LH
BK	52	Center Pillar RH