




Door Lock Control and Theft Deterrent

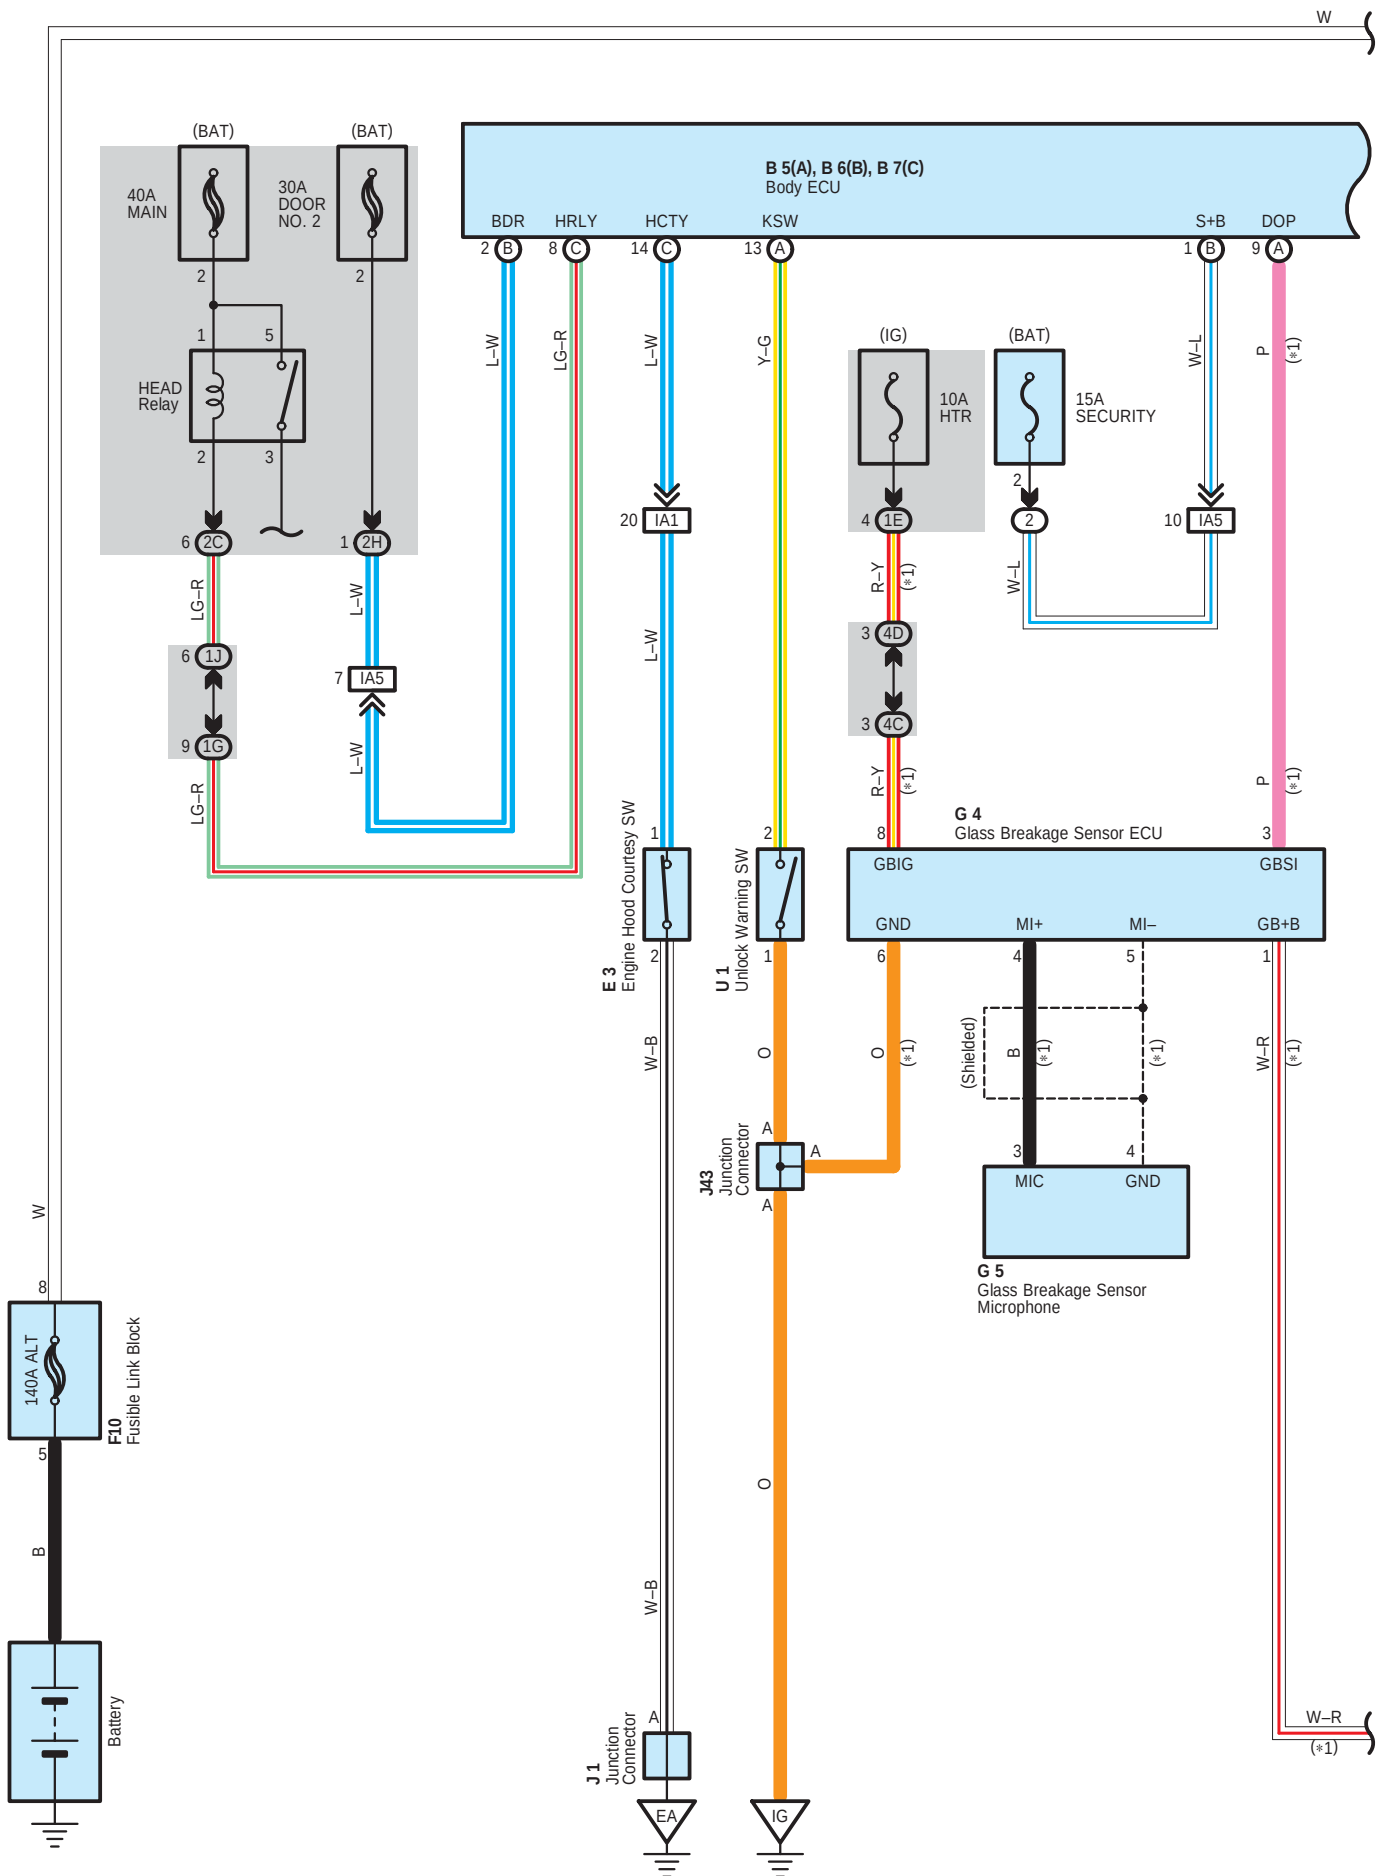

* 1 : w/ Glass Breakage Sensor

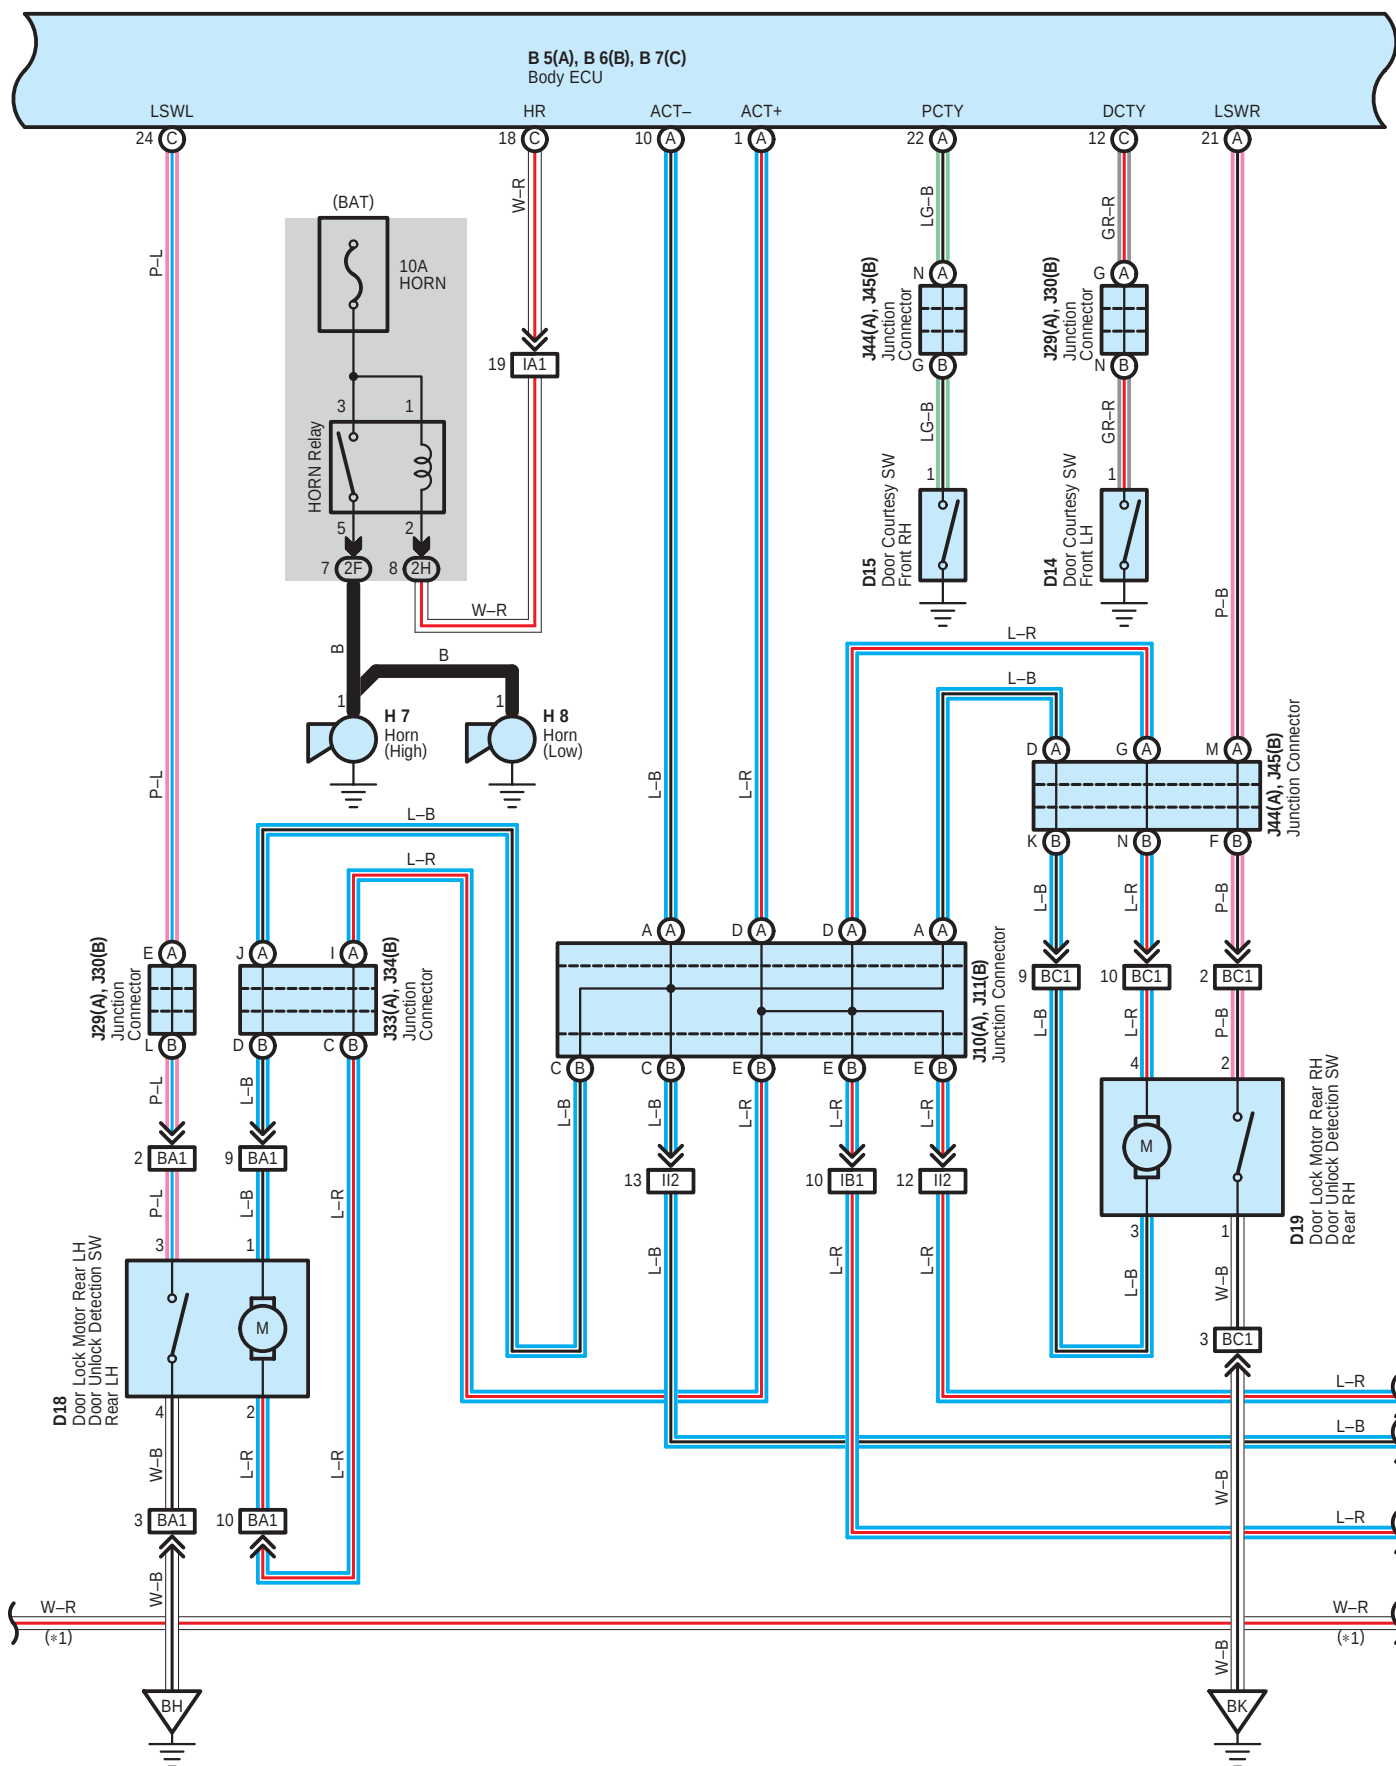



[illegible]

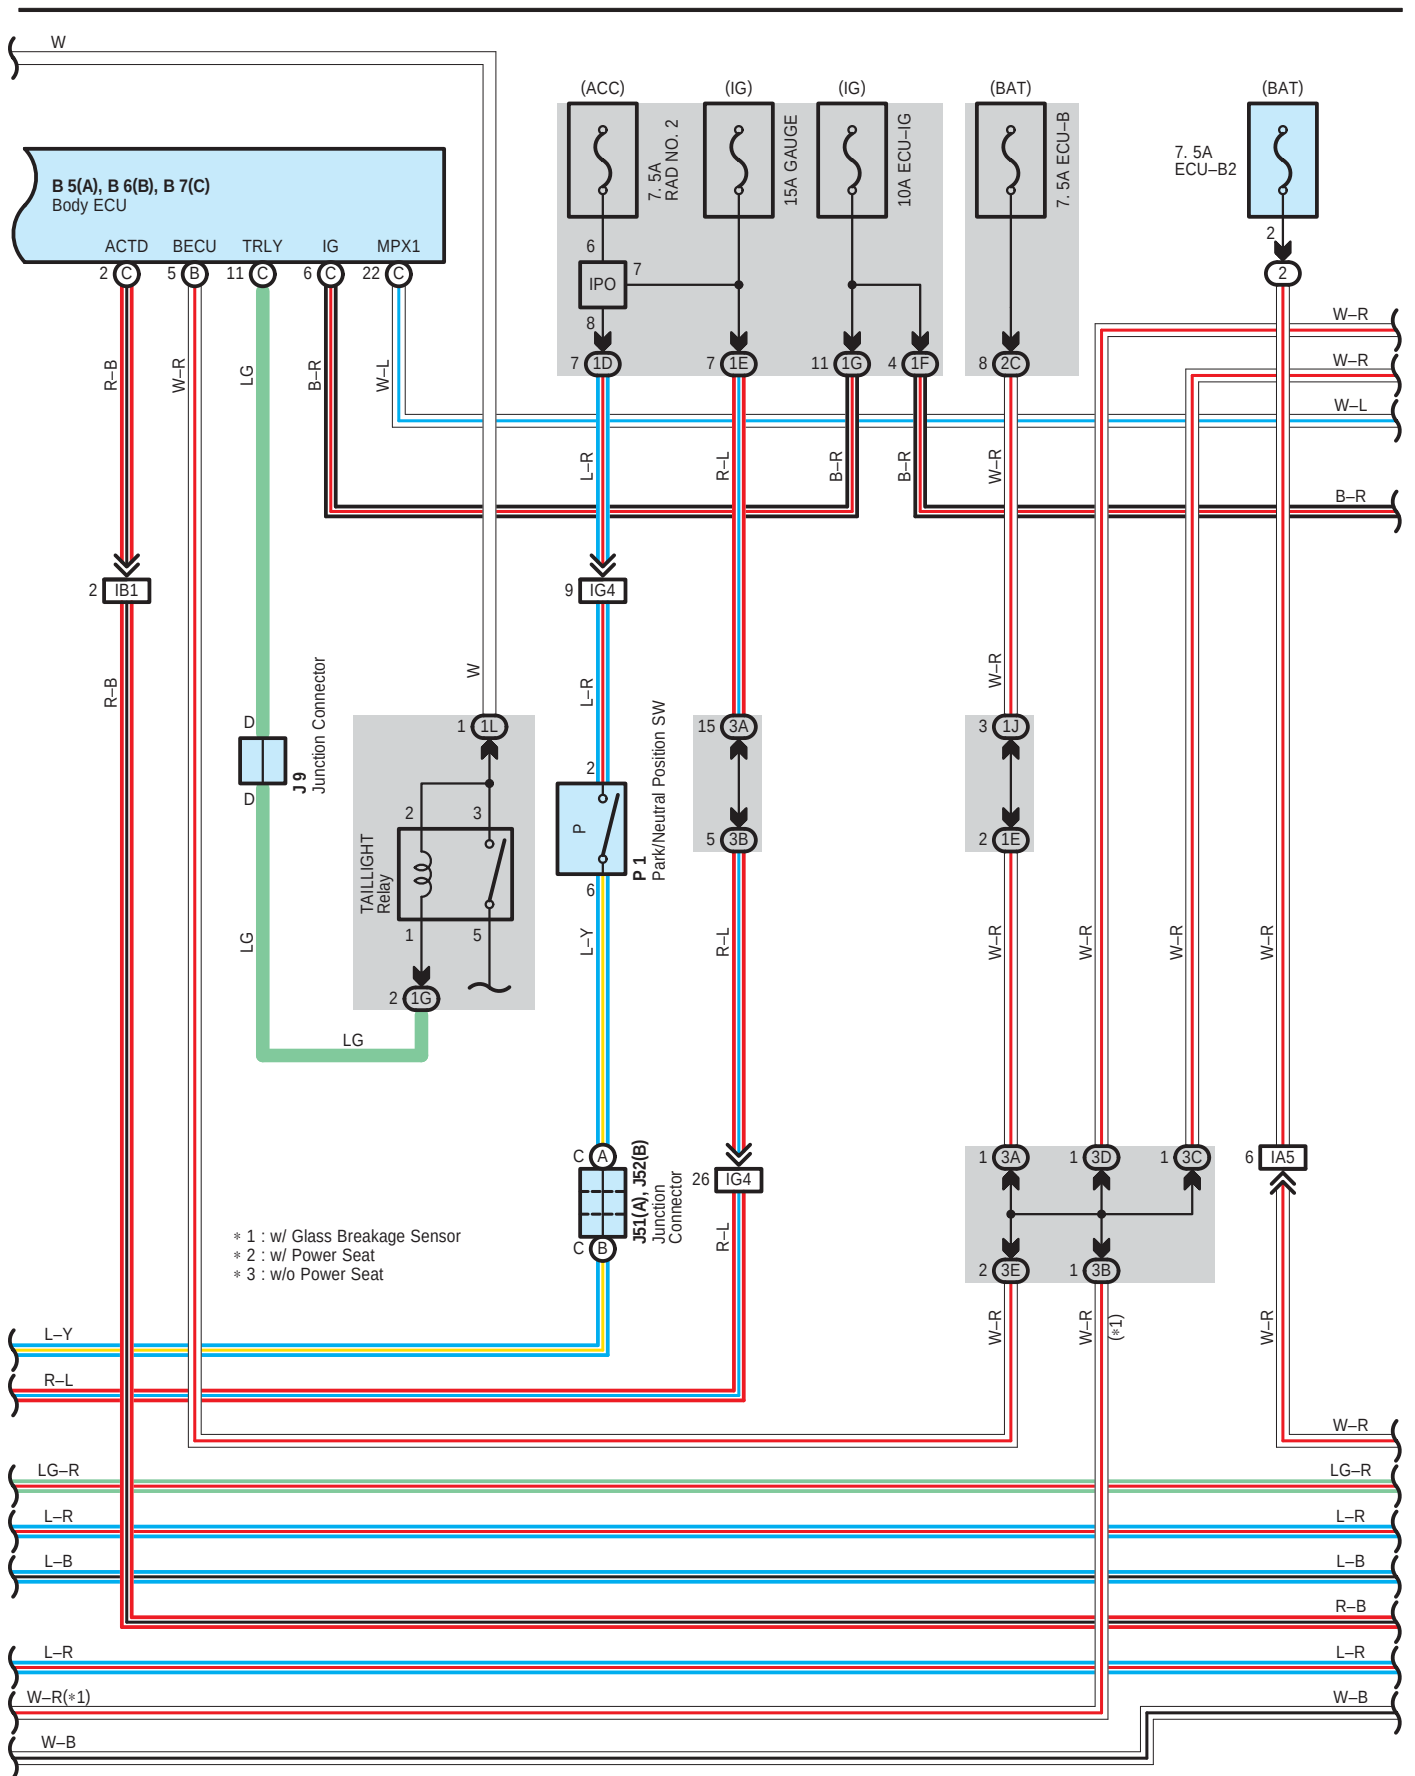

Door Lock Control and Theft Deterrent

* 4 : w/ Driving Position Memory
 * 5 : w/o Driving Position Memory

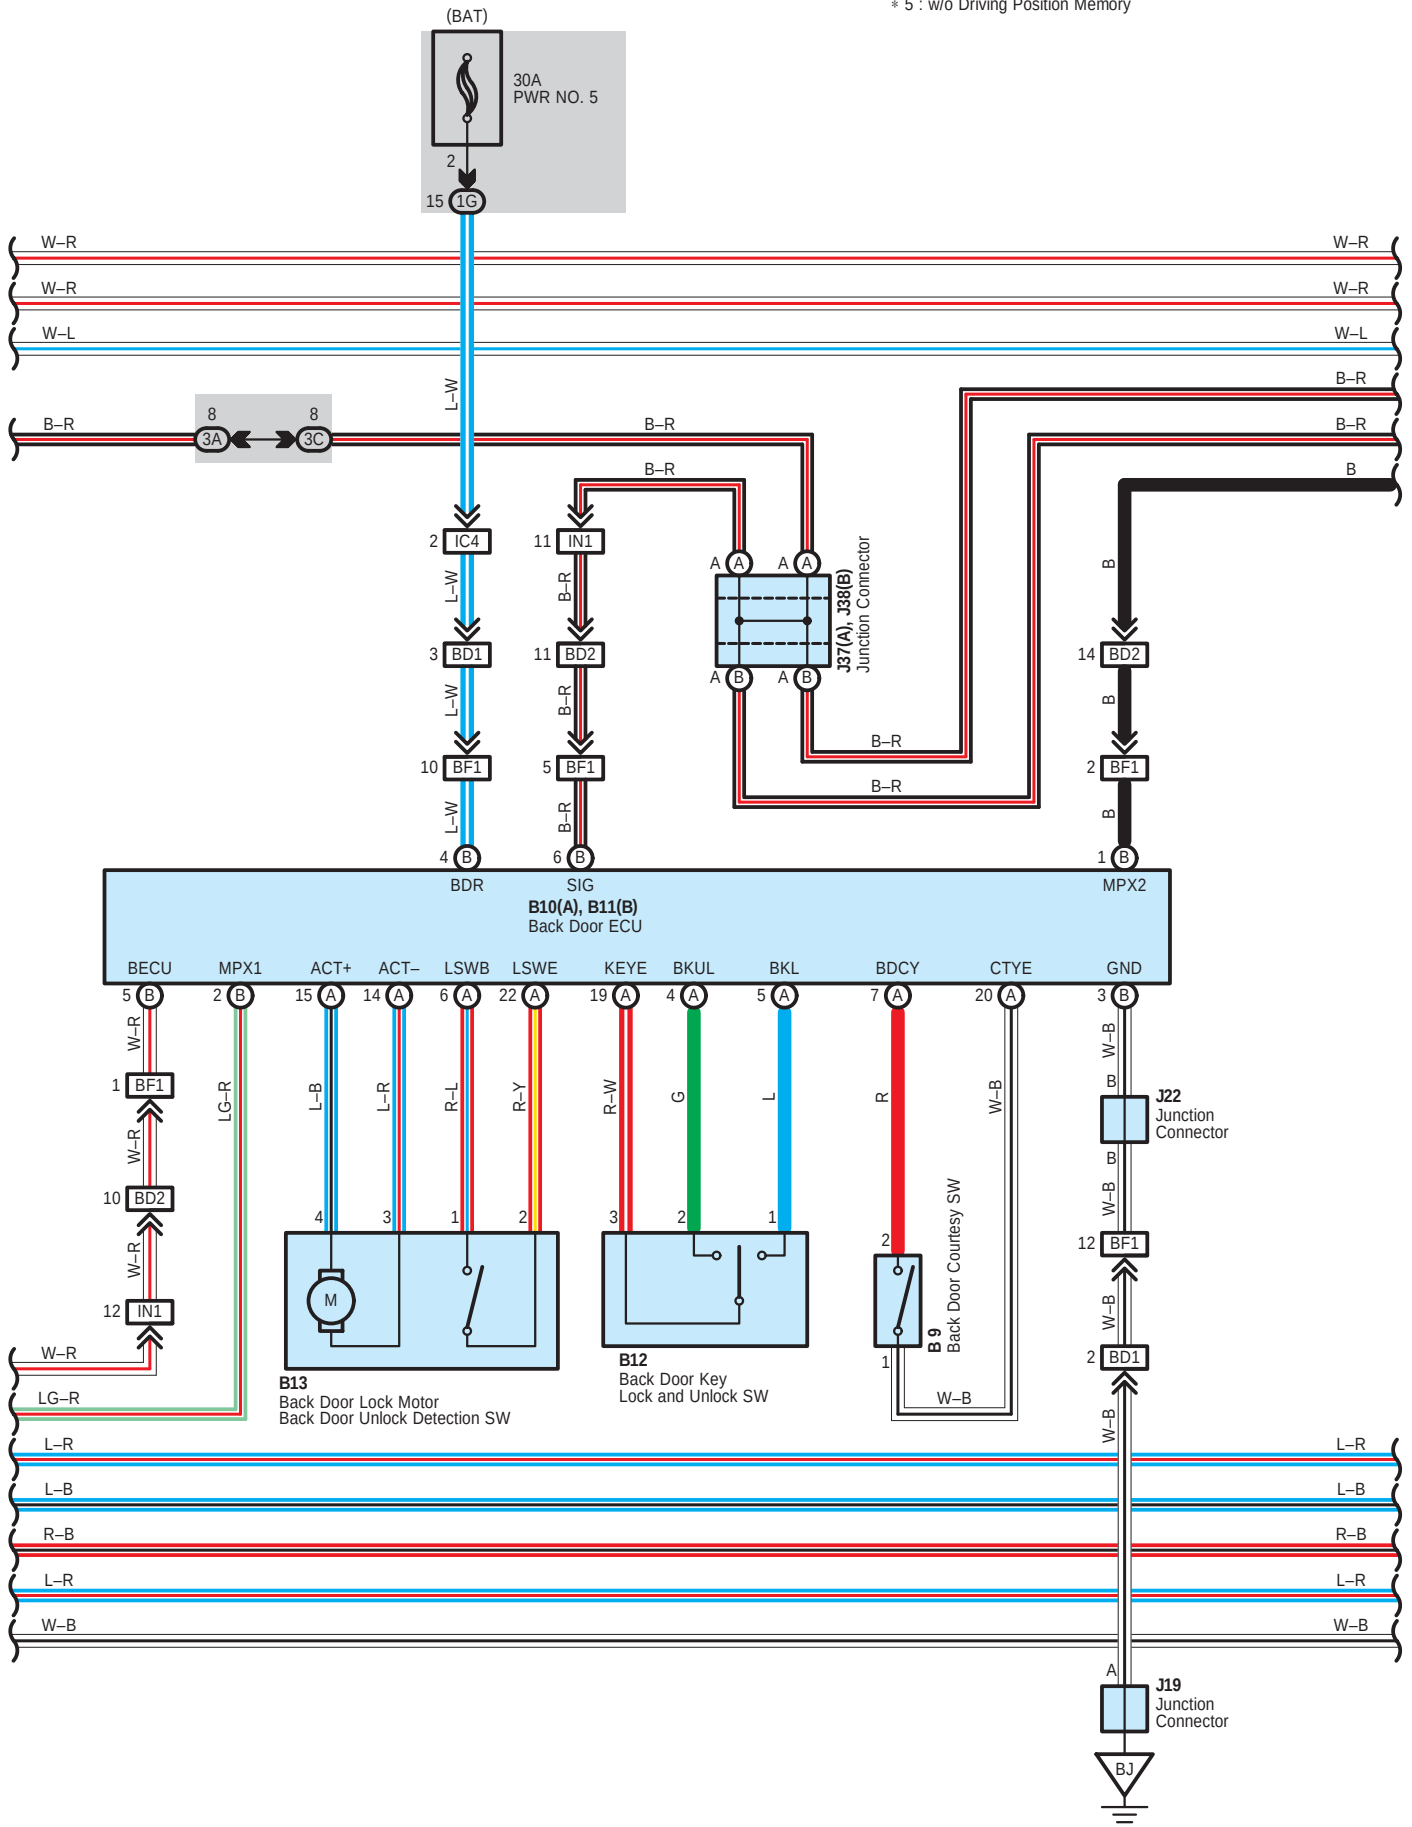

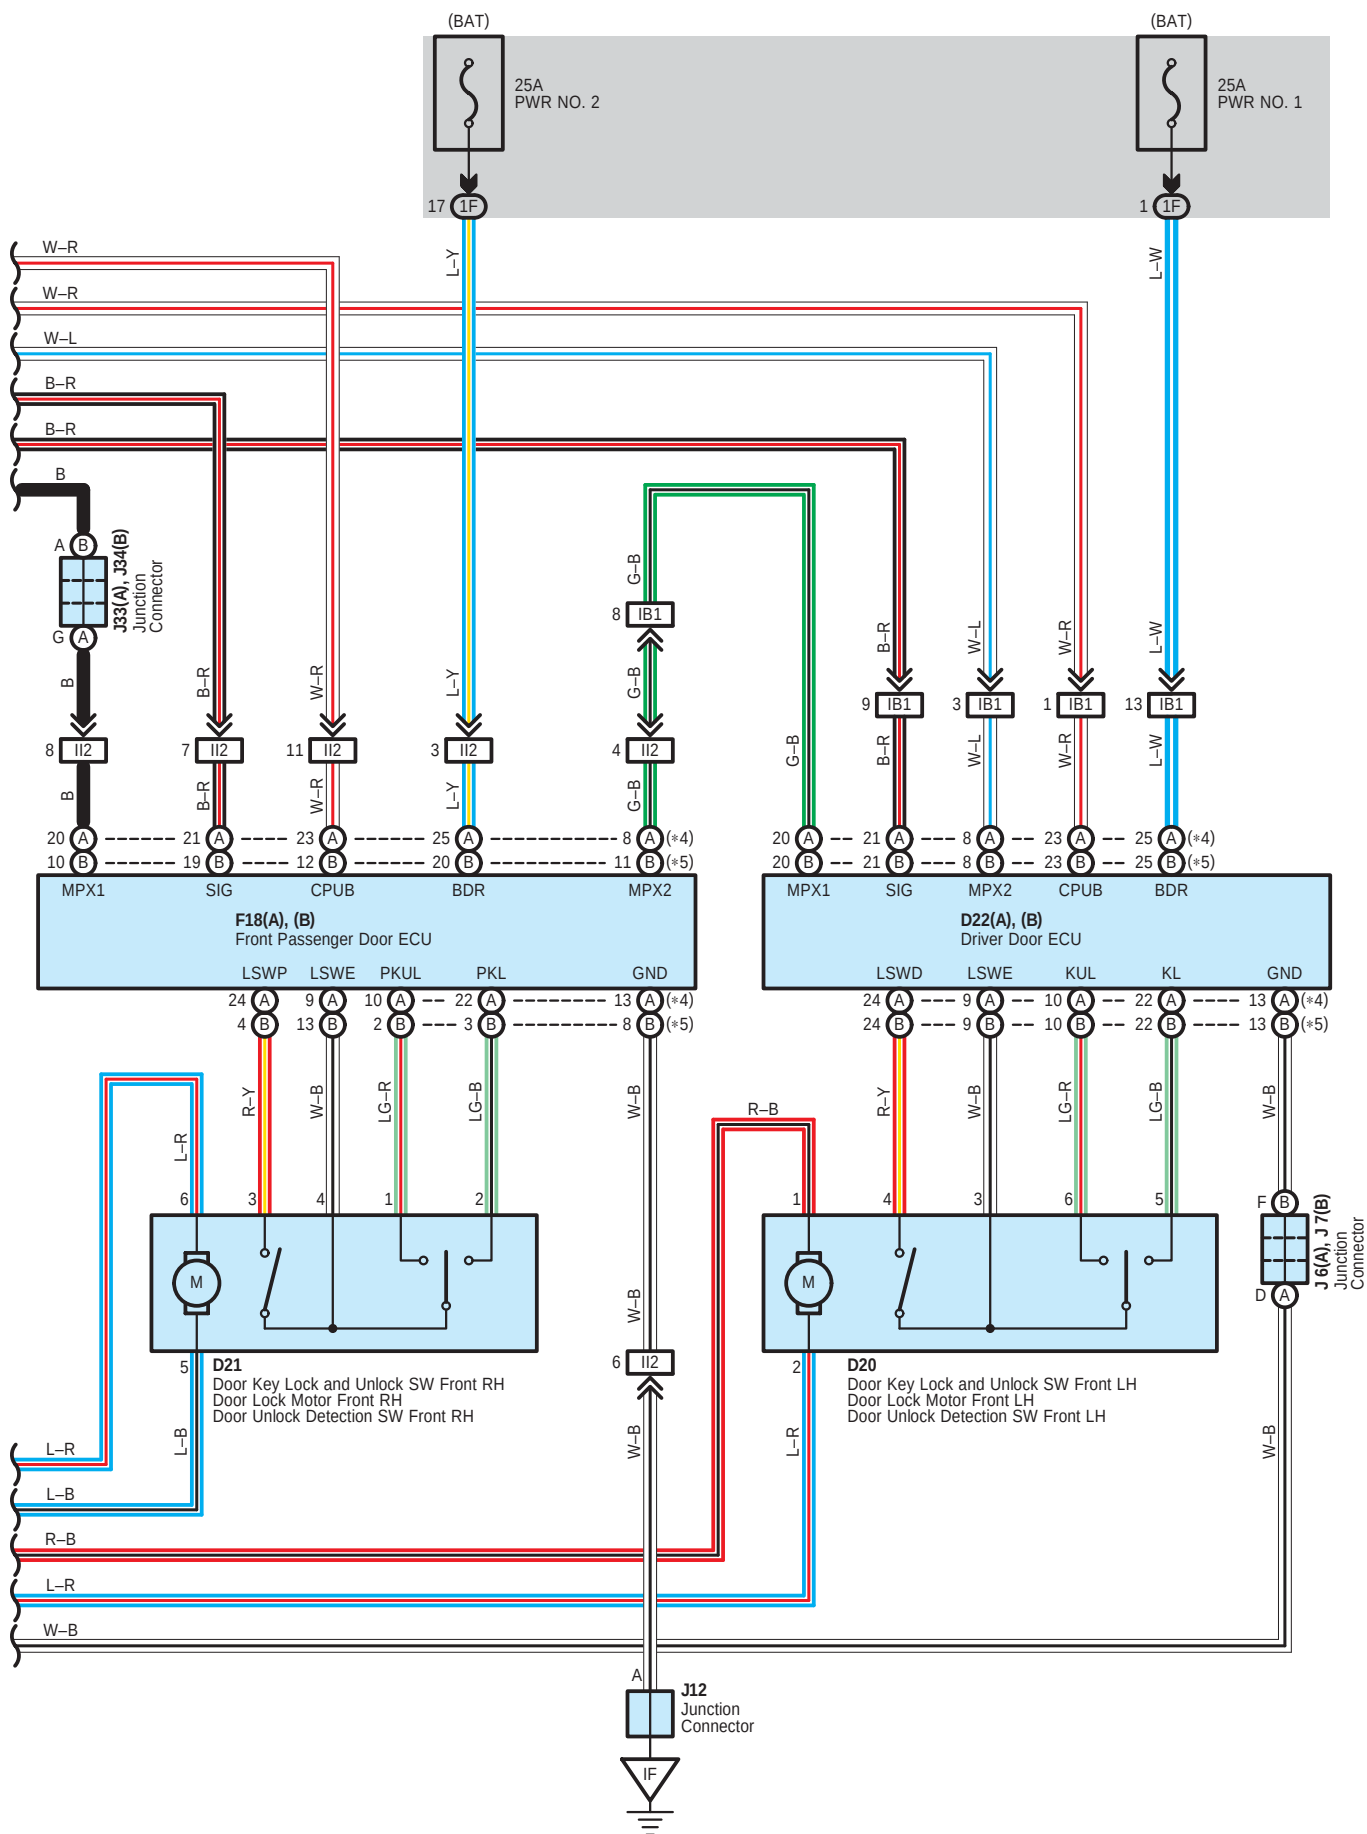

Door Lock Control and Theft Deterrent

System Outline

1. Manual Unlock Operation

When the door lock control SW of the driver's or passenger's side door is pushed to UNLOCK, the door lock will unlock.

2. Manual Lock Operation

When the door lock control SW of the driver's or passenger's side door is pushed to LOCK, the door lock will lock.

3. Door Key Unlock Operation

* Unlock operation from driver's side door

When the driver's side door is unlocked once using the ignition key, only the driver's side door is unlocked. If this operation is repeated within 3 seconds, all the other doors are unlocked.

* Unlock operation from front passenger's side door

When the front passenger's side door is unlocked using the ignition key, all the other doors are unlocked, too.

4. Automatic Door Lock

* The automatic door lock can be set and cancelled according to the customer's request. Automatic door lock corresponding to the shift

* When the shift lever is moved from the P range, the doors are automatically locked. Automatic door lock corresponding to vehicle speed

* When the vehicle speed becomes faster than 20km/h, the doors are locked automatically.

5. Automatic Door Unlock

* The automatic door unlock method can be selected by the customer. Automatic door unlock corresponding to ignition SW

* When the driver's door is opened within 10 seconds after the ignition SW is turned off, all the doors are unlocked automatically. Automatic door unlock corresponding to the shift lever

* When the shift lever is moved to the P range from other ranges, all the doors are automatically unlocked.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B5	A 42	D20	46	J12	44
B6	B 42	D21	46	J19	46
B7	C 42	D22	A 46	J22	46
B9	46		B 46	J24	48 (*1)
B10	A 46	E3	40	J29	A 44
B11	B 46	F10	22, 40	J30	B 44
B12	46	F18	A 46	J33	A 44
B13	46		B 46	J34	B 44
B16	A 48 (*1)	G4	43	J37	A 44
	B 46	G5	43	J38	B 44
C5	A 42	H7	40	J43	44
C6	B 42	H8	40	J44	A 44
D8	46	I19	43	J45	B 44
D9	46	J1	41	J51	A 44
D14	46	J6	A 44	J52	B 44
D15	46	J7	B 44	P1	41
D16	46	J8	44	T1	41
D17	46	J9	44	U1	45
D18	46	J10	A 44	V1	41
D19	46	J11	B 44		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	26	Engine Room R/B No.2 (Engine Compartment Left)

* 1 : w/ Power Seat * 2 : w/o Power Seat

**: Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1F		
1G		
1H		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1L		
2C	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		
2H		
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3B		
3C		
3D		
3E		
4C	38	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4D		

**: Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IA5		
IB1	51	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC4	51	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IG4	51	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
II2	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IN1	51	Floor No.2 Wire and Cowl Wire (Rear Console)
BA1	52	Rear Door No.2 Wire and Floor No.2 Wire (Center Pillar LH)
BC1	52	Rear Door No.1 Wire and Floor No.1 Wire (Center Pillar RH)
BD1	52	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BD2		
BF1	52	Back Door No.2 Wire and Back Door No.1 Wire (Left Side of Back Door)
BI2	54	Floor No.2 Wire and Seat No.2 Wire (Under the Driver 's Seat)

**: Ground Points**

Code	See Page	Ground Points Location
EA	50	Radiator Side Support RH
IE	51	Cowl Side Panel LH
IF	51	Instrument Panel Brace LH
IG	51	Cowl Side Panel RH
BH	52	Center Pillar LH
BJ	52	Quarter Panel LH
BK	52	Center Pillar RH