



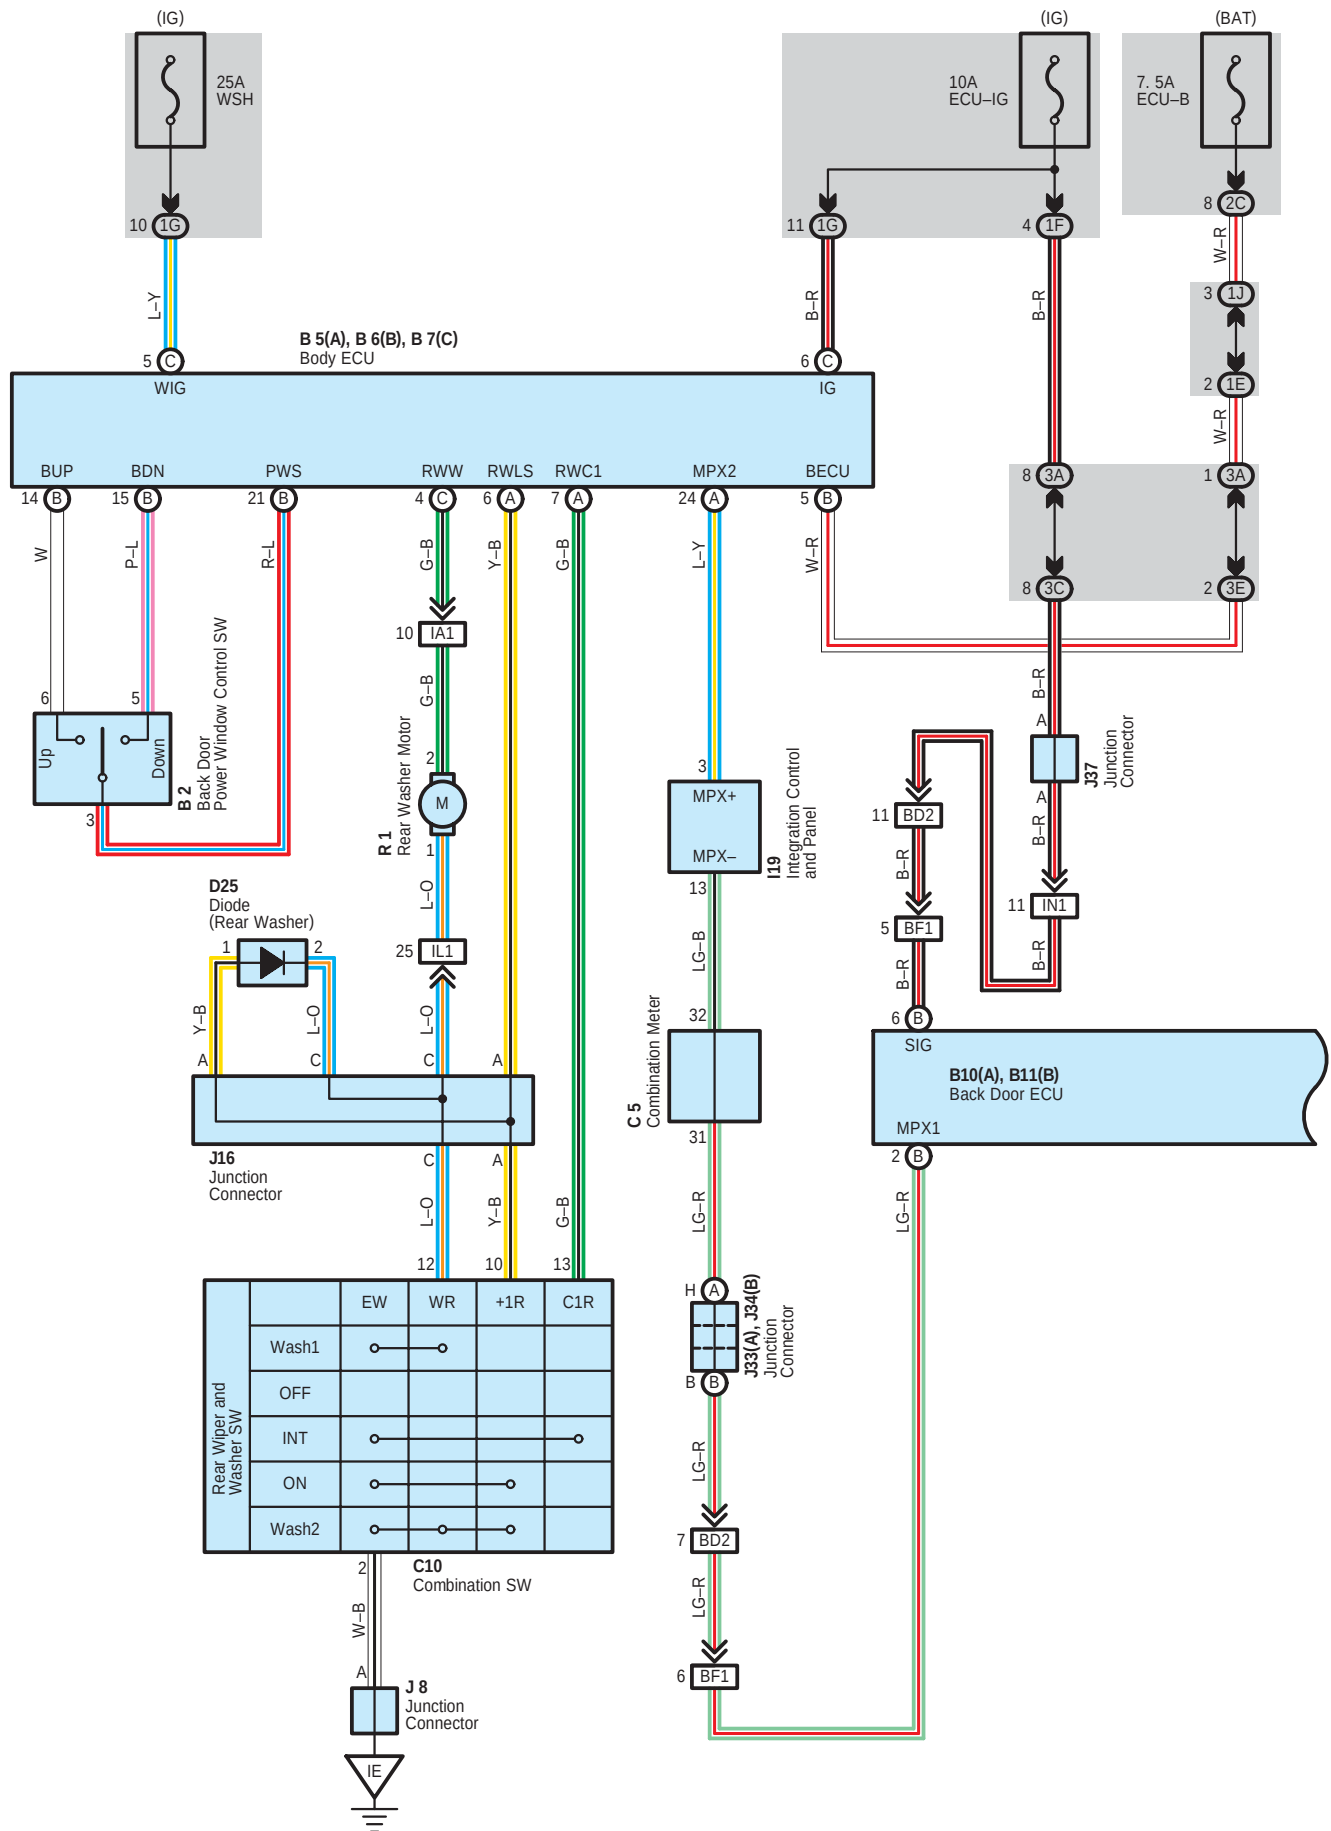

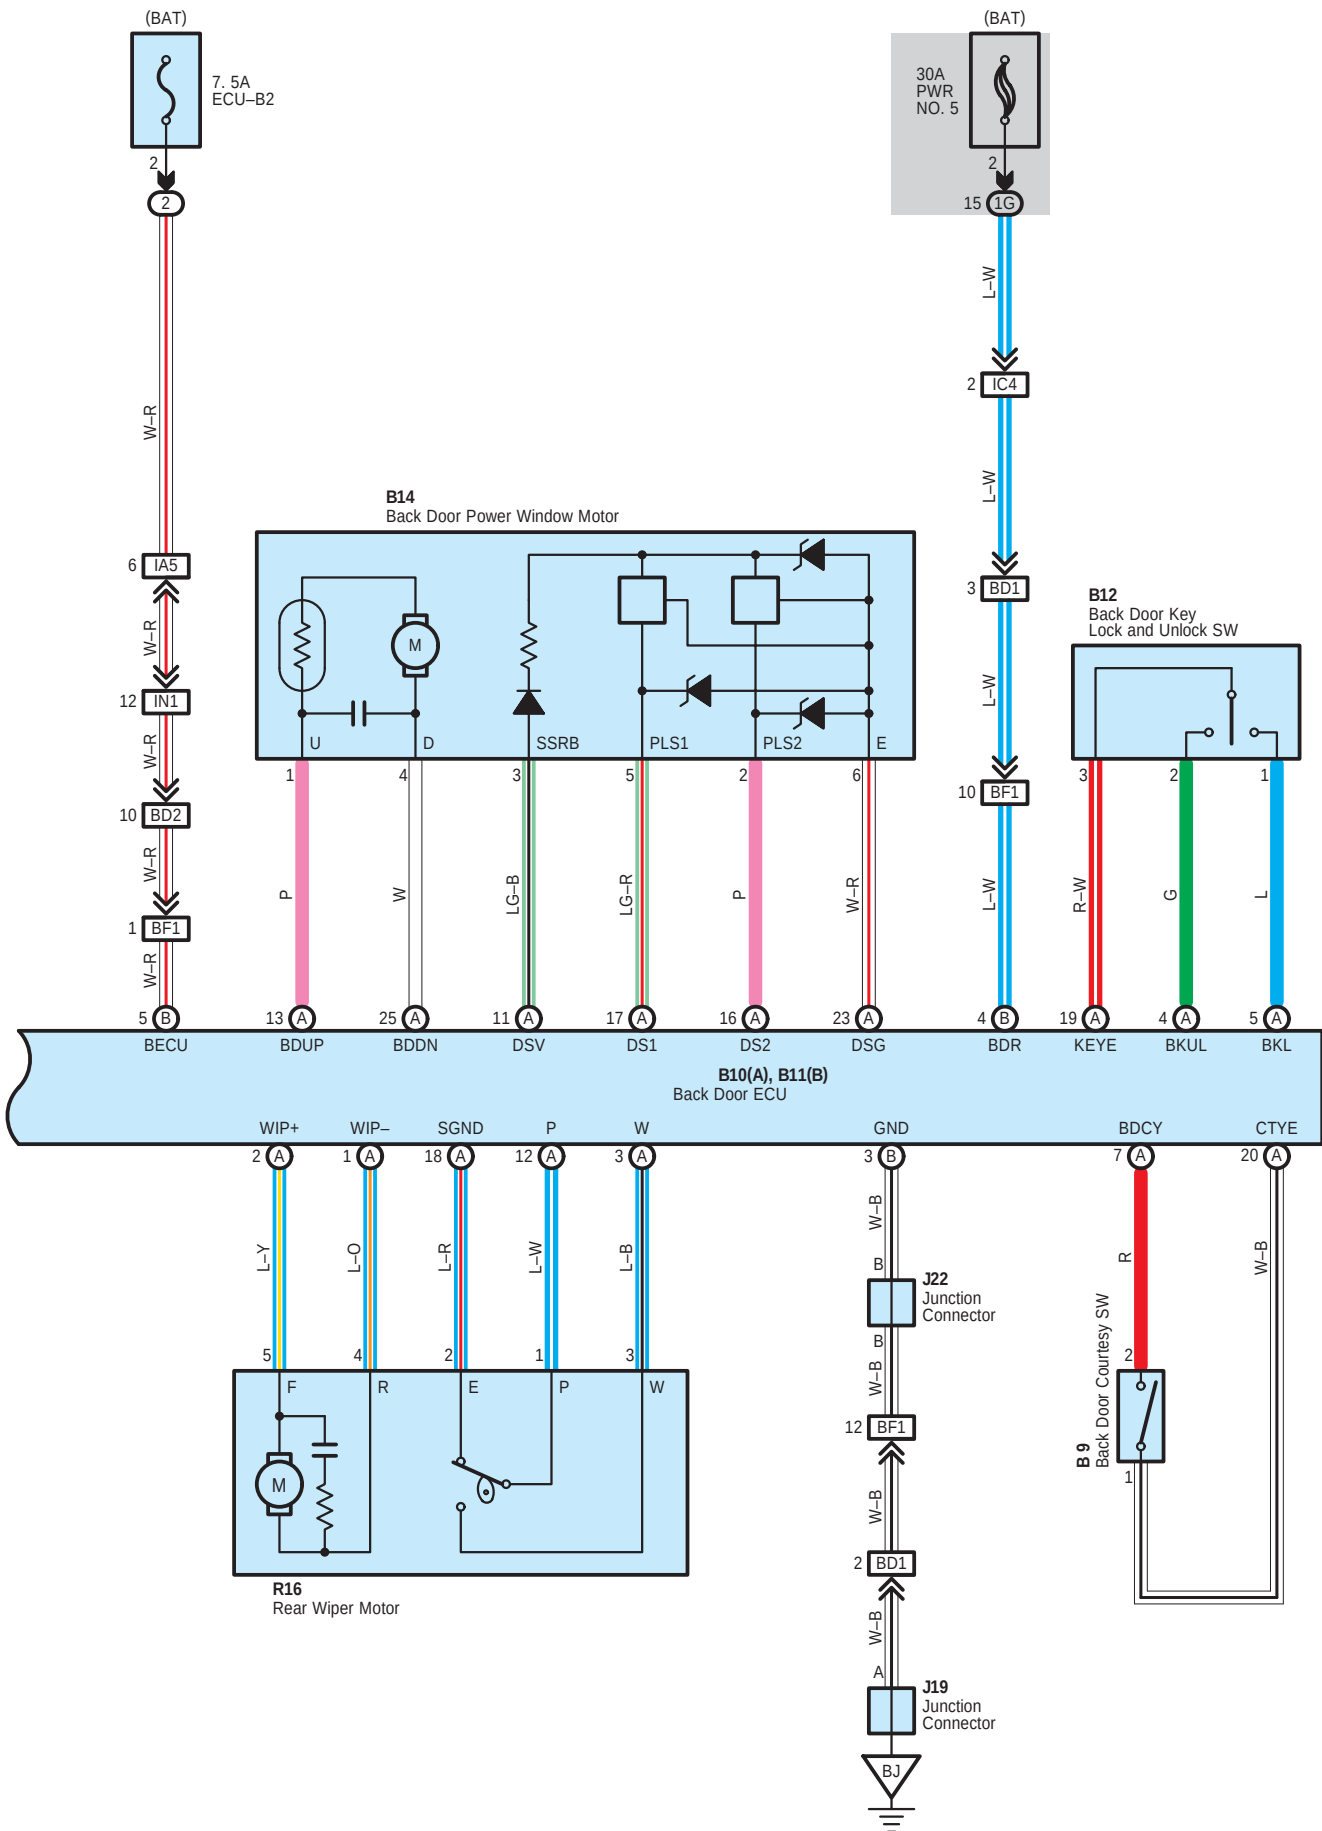

Rear Wiper and Washer

System Outline

The rear wiper motor is operated when the back door ECU receives a signal from the body ECU. After use, the motor will operate until the rear wiper is stored in position.

* ON position

The rear wiper motor will operate continuously.

* INT position

The rear wiper motor will operate continuously for the first three wipes then operates intermittently.

* Storage

The rear wiper will be stored when the following conditions are met during use:

* The rear wiper SW is turned to OFF from ON or INT position.

* Ignition SW is turned to OFF.

* Back door open.

* Back door power window control SW is turned ON.

* Back door key SW is turned ON.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B2	42	B14	46	J22	46
B5	A 42	C5	42	J33	A 44
B6	B 42	C10	42	J34	B 44
B7	C 42	D25	43	J37	44
B9	46	I19	43	R1	41
B10	A 46	J8	44	R16	47
B11	B 46	J16	44		
B12	46	J19	46		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1F		
1G		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
2C	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3C		
3E		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IA5		
IC4	51	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IL1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)
IN1	51	Floor No.2 Wire and Cowl Wire (Rear Console)
BD1	52	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BD2		
BF1	52	Back Door No.2 Wire and Back Door No.1 Wire (Left Side of Back Door)

▽ : Ground Points

Code	See Page	Ground Points Location
IE	51	Cowl Side Panel LH
BJ	52	Quarter Panel LH

