



## Accessory Meter and Garage Door Opener

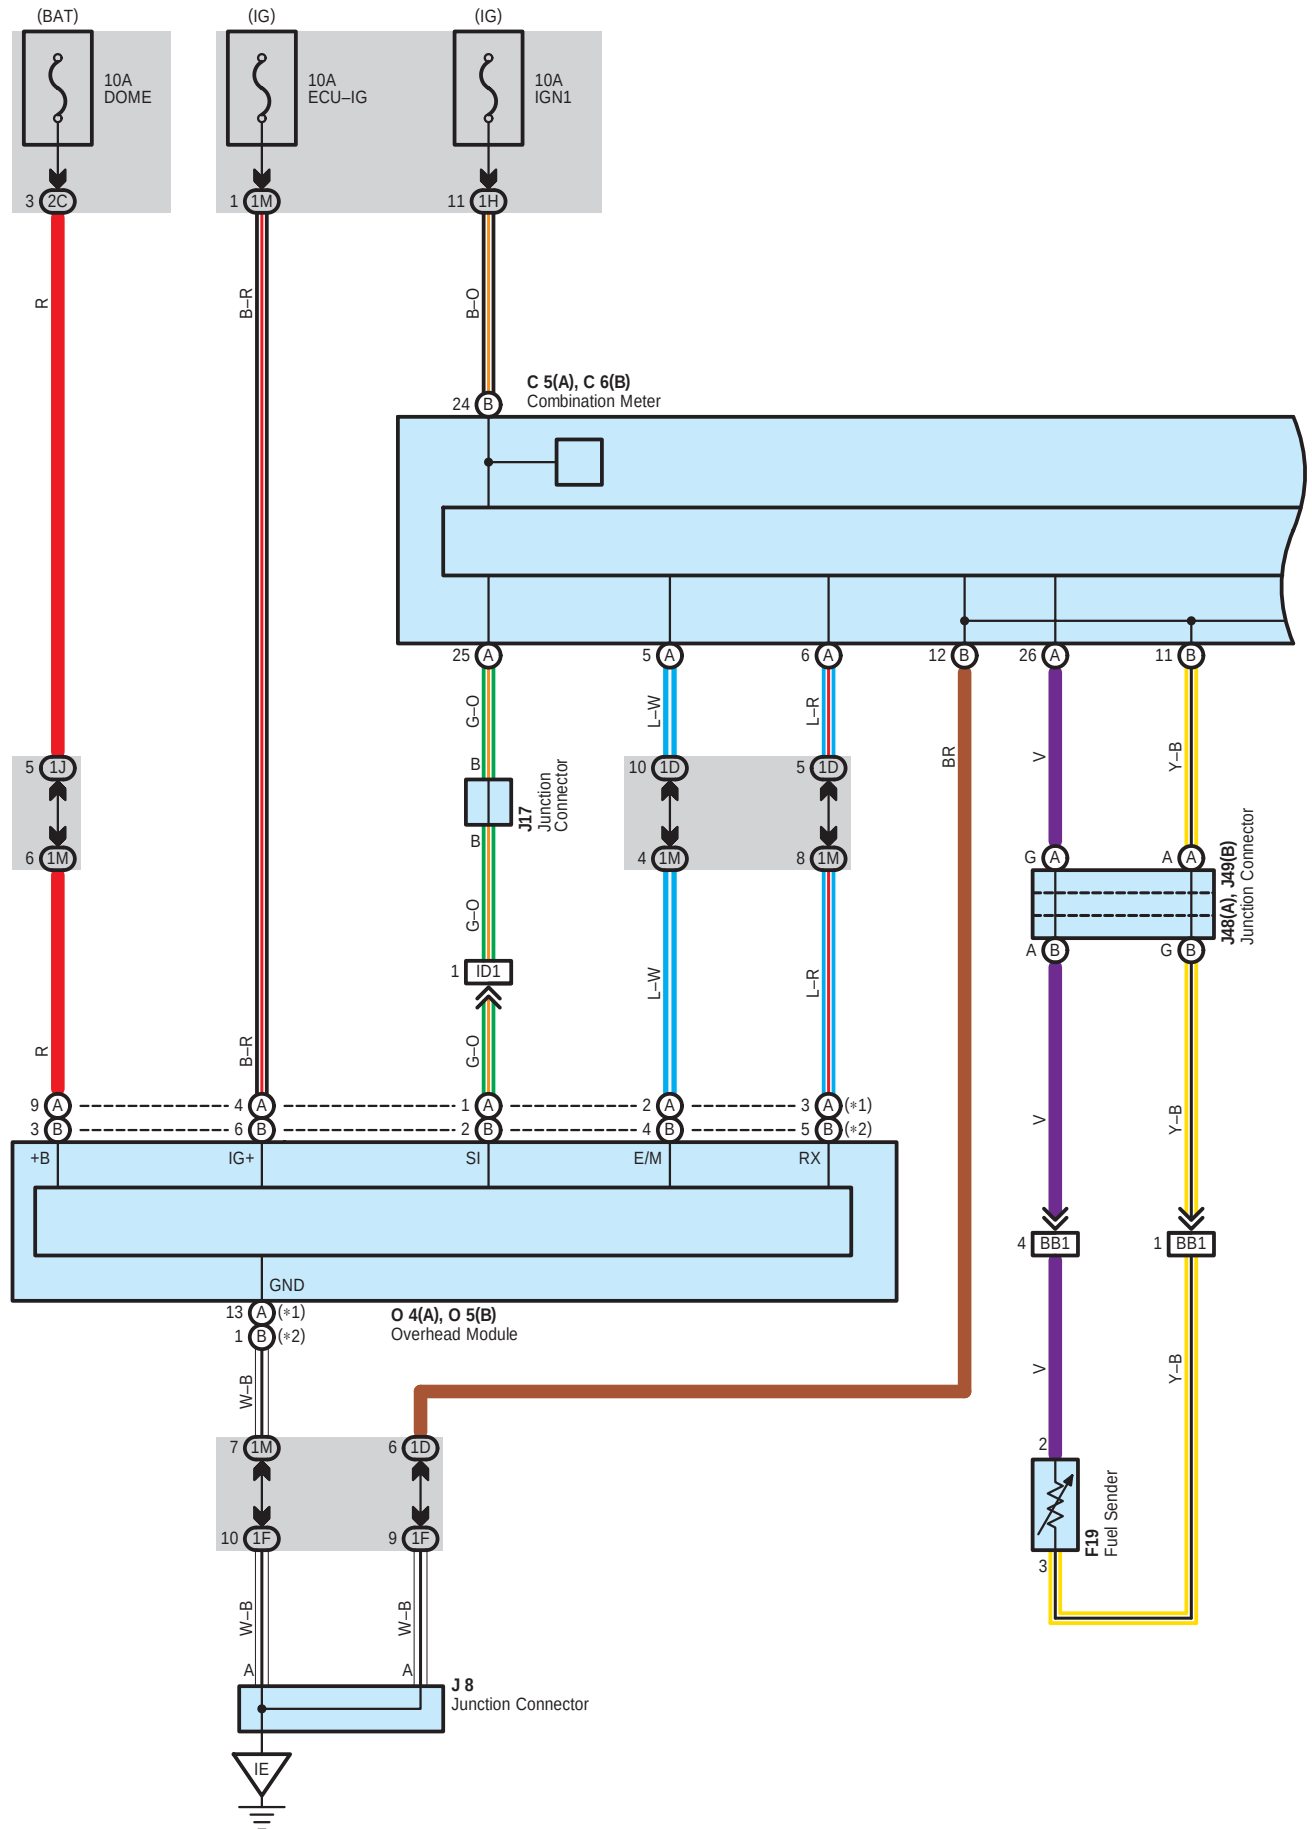

\* 1 : w/o Sliding Roof, Rear Seat Entertainment System and Rear Seat Audio System  
 \* 2 : w/ Sliding Roof, Rear Seat Entertainment System or Rear Seat Audio System

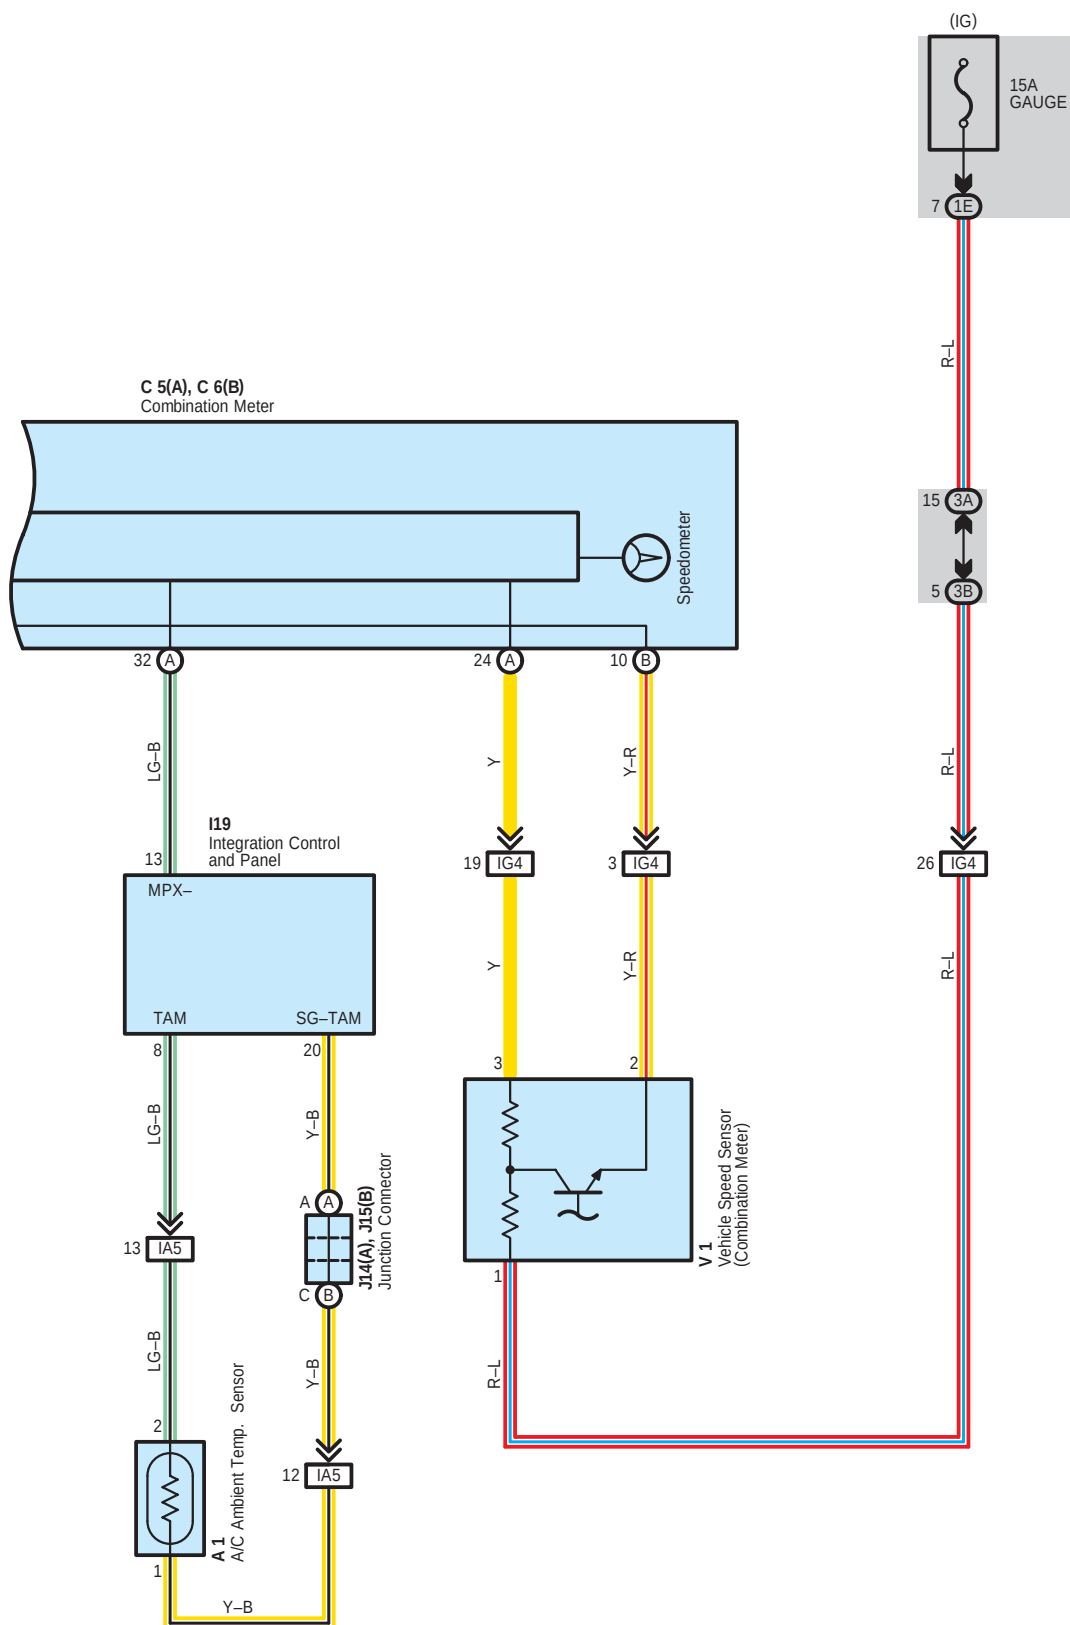

## Accessory Meter and Garage Door Opener

### : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| A1   | 40       | J8   | 44       | J49  | B 44     |
| C5   | A 42     | J14  | A 44     | O4   | A 47     |
| C6   | B 42     | J15  | B 44     | O5   | B 47     |
| F19  | 46       | J17  | 44       | V1   | 41       |
| I19  | 43       | J48  | A 44     |      |          |

### : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)                |
|------|----------|---------------------------------------------------------------------|
| 1D   | 33       | Cowl Wire and Instrument Panel J/B (Lower Finish Panel)             |
| 1E   |          |                                                                     |
| 1F   |          |                                                                     |
| 1H   |          |                                                                     |
| 1J   | 33       | Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel) |
| 1M   | 33       | Roof Wire and Instrument Panel J/B (Lower Finish Panel)             |
| 2C   | 29       | Engine Room Main Wire and Engine Room J/B (Engine Compartment Left) |
| 3A   | 36       | Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)            |
| 3B   |          |                                                                     |

### : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)        |
|------|----------|-------------------------------------------------------------------|
| IA5  | 51       | Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)          |
| ID1  | 51       | Cowl Wire and Roof Wire (Left Side of Instrument Panel)           |
| IG4  | 51       | Engine Wire and Cowl Wire (Right Side of Instrument Panel)        |
| BB1  | 52       | Frame Wire and Floor No.1 Wire (Under the Front Passenger's Seat) |

### : Ground Points

| Code | See Page | Ground Points Location |
|------|----------|------------------------|
| IE   | 51       | Cowl Side Panel LH     |

